Manual No.'10•SCM-SM-094

SERVICE MANUAL

INVERTER MULTI-SPLIT SYSTEM RESIDENTIAL AIR CONDITIONERS (Split system, air to air heat pump type)

(OUTDOOR UNIT) SCM40ZJ-S SCM45ZJ-S SCM50ZJ-S SCM60ZJ-S SCM71ZJ-S SCM80ZJ-S

(INDOOR UNIT)		
Wall mounted type	Floor standing type	Ceiling concealed type
SRK20ZJX-S	SRF25ZJX-S	SRR25ZJ-S
SRK25ZJX-S	SRF35ZJX-S	SRR35ZJ-S
SRK35ZJX-S	SRF50ZJX-S	SRR50ZJ-S
SRK50ZJX-S		SRR60ZJ-S
SRK60ZJX-S	Ceiling cassette-4wa	v compact type
SRK20ZJ-S	FDTC25VD	,
SRK25ZJ-S	FDTC35VD	
SRK35ZJ-S	FDTC50VD	
SRK50ZJ-S	FDTC60VD	

CONTENTS

1. OU	TLINE OF OPERATION CONTROL BY MICROCOMPUTER	5
1.1	SRK,SRF and SRR series	5
(1)	Operation control function by remote controller	5
(2)	Unit ON/OFF button	8
(3)	Auto restart function	9
(4)	Custom cord switching procedure	
(5)	Flap and louver control	10
(6)	Air outlet selection (SRF series only)	
(7)	3D auto operation (SRK series only)	12
(8)	Timer operation	13
(9)	Installation location setting (SRK series only)	
(10)	Determining the operating mode	
(11)	Drain motor (DM) control (SRR series only)	
1.2	FDTC series	
(1)	Remote controller (Option parts)	16
(2)	Operation control function by the wired remote controller	
(3)	Operation control function by the indoor controller	19
4 2	Outling of booting anarotion	20
	Outline of heating operation	
(1)	Summary	28
(1) (2)	Summary Operation of major functional components in heating mode	28 28
(1) (2) (3)	Summary Operation of major functional components in heating mode Hot keep operation	28 28 28
 (1) (2) (3) (4) 	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation	28 28 28 29
(1) (2) (3) (4) 1.4	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation Outline of cooling operation	28 28 28 29 30
(1) (2) (3) (4) 1.4 (1)	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation Outline of cooling operation Summary	28 28 29 30 30
 (1) (2) (3) (4) 1.4 (1) (2) 	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation Outline of cooling operation Summary Operation of major functional components in cooling mode	28 28 29 30 30 30
 (1) (2) (3) (4) 1.4 (1) (2) 1.5 	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation Outline of cooling operation Summary Operation of major functional components in cooling mode Outline of automatic operation	28 28 29 30 30 30 30
 (1) (2) (3) (4) 1.4 (1) (2) 1.5 (1) 	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation Outline of cooling operation Summary Operation of major functional components in cooling mode Outline of automatic operation SRK20~60ZJX-S,SRF and SRR series	28 28 29 30 30 30 30 30
 (1) (2) (3) (4) 1.4 (1) (2) 1.5 (1) (2) 	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation Outline of cooling operation Summary Operation of major functional components in cooling mode Outline of automatic operation SRK20~60ZJX-S,SRF and SRR series SRK20~60ZJ-S series	28 28 29 30 30 30 30 30 30
 (1) (2) (3) (4) 1.4 (1) (2) (1) (2) (3) 	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation Outline of cooling operation Summary Operation of major functional components in cooling mode Outline of automatic operation SRK20~60ZJX-S,SRF and SRR series SRK20~60ZJ-S series FDTC series	28 28 29 30 30 30 30 30 31 31
 (1) (2) (3) (4) 1.4 (1) (2) (1) (2) (3) 1.6 	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation Outline of cooling operation Summary Operation of major functional components in cooling mode Outline of automatic operation SRK20~60ZJX-S,SRF and SRR series SRK20~60ZJ-S series FDTC series Operation permission/prohibition control	28 28 29 30 30 30 30 30 31 31
 (1) (2) (3) (4) 1.4 (1) (2) (1) (2) (3) 	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation Outline of cooling operation Summary Operation of major functional components in cooling mode Outline of automatic operation SRK20~60ZJX-S,SRF and SRR series SRK20~60ZJS series FDTC series Operation permission/prohibition control The operation mode is switched over between Permission and Prohibition	28 28 29 30 30 30 30 31 31 31 32
 (1) (2) (3) (4) 1.4 (1) (2) (1) (2) (3) 1.6 (1) 	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation Outline of cooling operation Summary Operation of major functional components in cooling mode Outline of automatic operation SRK20~60ZJX-S,SRF and SRR series SRK20~60ZJ-S series FDTC series Operation permission/prohibition control The operation mode is switched over between Permission and Prohibition by releasing the jumper wire (J3) on the indoor PCB	28 28 29 30 30 30 30 31 31 31 32
 (1) (2) (3) (4) 1.4 (1) (2) (1) (2) (3) 1.6 	Summary Operation of major functional components in heating mode Hot keep operation Defrosting operation Outline of cooling operation Summary Operation of major functional components in cooling mode Outline of automatic operation SRK20~60ZJX-S,SRF and SRR series SRK20~60ZJS series FDTC series Operation permission/prohibition control The operation mode is switched over between Permission and Prohibition	28 28 29 30 30 30 30 31 31 31 32 32


1.7	External control (remote display)/control of input signal	32
(1)	External control (remote display) output	32
(2)	Control of input signal	32
1.8	Protective control function	33
(1)	Frost prevention control	33
(2)	Cooling overload protective control	
(3)	Cooling high pressure control	
(4)	Cooling low outdoor temperature protective control	
(5)	Heating high pressure control	
(6)	Heating overload protective control	35
(7)	Heating low outdoor temperature protective control	36
(8)	Freezing cycle system protective control	36
(9)	Crankcase heater	
(10)	Inching prevention	
(11)	Compressor overheat protection	37
(12)	Current safe	37
(13)	Current cat	38
(14)	Outdoor unit failure	38
(15)	Indoor fan motor protection	38
(16)	Discharge pipe sensor disconnection protection control	38
(17)	Regulation of outdoor air flow	38
(18)	Serial signal transmission error protection	39
(19)	Rotor lock	39
(20)	Outdoor fan motor protection	39
(21)	Outdoor fan control at low outdoor temperature	39
(22)	Outdoor unit fan control at overload	40
	INTENANCE DATA	
2.1	SRK,SRF and SRR series	
(1)	Cautions	
(2)	Items to check before troubleshooting	
(3)	Troubleshooting procedure (If the air conditioner does not run at all)	41
(4)	Troubleshooting procedure (If the air conditioner runs)	
(5)	Self-diagnosis table	
(6)	Service mode (Trouble mode access function)	
(7)	Inspection procedures corresponding to detail of trouble	
(8)	Phenomenon observed after shortcircuit, wire breakage on sensor	56

(9)	Charling the indeer electrical equipment	57
· · /	Checking the indoor electrical equipment	
(10)	How to make sure of wireless remote controller	
(11)	Outdoor unit inspection points	
2.2	FDTC series	63
2.2.1	Diagnosing of microcomputer circuit	63
(1)	Selfdiagnosis function	63
(2)	Troubleshooting procedure	66
(3)	Troubleshooting at the indoor unit	66
(4)	Check of anomalous operation deta with the remote controller	70
(5)	Inverter checker for diagnosis of inverter output	71
(6)	Outdoor unit inspection points	72
2.2.2	Troubleshooting flow	75
(1)	List of troubles	75
(2)	Troubleshooting	76
	-	
3. ELE	ECTRICAL WIRINGS	116
	ECTRICAL WIRINGS	
3.1		116
3.1 3.2	Outdoor units	116 119
3.1 3.2 4. PIP	Outdoor units	116 119 124
3.1 3.2 4. PIP 5. API	Outdoor units ndoor units ING SYSTEMS PLICATION DATAS	116 119 124 127
3.1 3.2 4. PIP 5. API 5.1 In	Outdoor units Indoor units ING SYSTEMS PLICATION DATAS Installation of outdoor unit	116 119 124 127 127
3.1 3.2 4. PIP 5. API 5.1 In (1)	Outdoor units	116 119 124 127 127 127
3.1 (3.2) 4. PIP 5. API 5.1 I (1) (2)	Outdoor units	116 119 124 127 127 127 131
3.1 (3.2 (4. PIP 5. API 5.1 ((1) (2) (3)	Outdoor units	 116 119 124 127 127 131 135
3.1 (3.2 (4. PIP 5. API 5.1 ((1) (2) (3) 5.2 (Outdoor units	 116 124 127 127 131 135 139
3.1 (3.2 (4. PIP 5. API 5.1 ((1) (2) (3) 5.2 ((1)	Outdoor units Indoor units ING SYSTEMS ING SYSTEMS PLICATION DATAS Indoor unit Installation of outdoor unit Indools SCM40ZJ-S,45ZJ-S Models SCM50ZJ-S,60ZJ-S Indools SCM71ZJ-S,80ZJ-S Installation of indoor unit Indools SCM71ZJ-S,80ZJ-S Models SCM71ZJ-S,80ZJ-S Indoor unit Mall mounted type (SRK) Indoor unit	 116 124 127 127 131 135 139 139
3.1 (3.2 (4. PIP 5. API 5.1 ((1) (2) (3) 5.2 ((1) (2)	Outdoor units	116 124 127 127 131 135 139 139 147
3.1 (3.2 (4. PIP 5. API 5.1 ((1) (2) (3) 5.2 ((1)	Outdoor units Indoor units ING SYSTEMS ING SYSTEMS PLICATION DATAS Indoor unit Installation of outdoor unit Indools SCM40ZJ-S,45ZJ-S Models SCM50ZJ-S,60ZJ-S Indools SCM71ZJ-S,80ZJ-S Installation of indoor unit Indools SCM71ZJ-S,80ZJ-S Models SCM71ZJ-S,80ZJ-S Indoor unit Mall mounted type (SRK) Indoor unit	116 124 127 127 127 131 135 139 139 147 151

■Table of models

Capacity	20	25	35	50	60
Wall mounted type (SRK-ZJX-S)	0	0	0	0	0
Wall mounted type (SRK-ZJ-S)	0	0	0	0	
Floor standing type (SRF)		0	0	0	
Ceiling concealod type (SRR)		0	0	0	0
Ceiling cassette-4way compact type (FDTC)		0	0	0	0
Outdoor unit to be combined (SCM)	SCM40ZJ-S,45ZJ-S,50ZJ-S,60ZJ-S,71ZJ-S,80ZJ-S				


How to read the model name

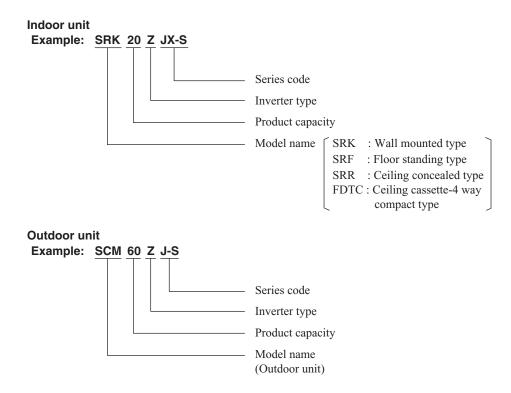

1 OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER


1.1 SRK, SRF and SRR series

(1) Operation control function by remote control

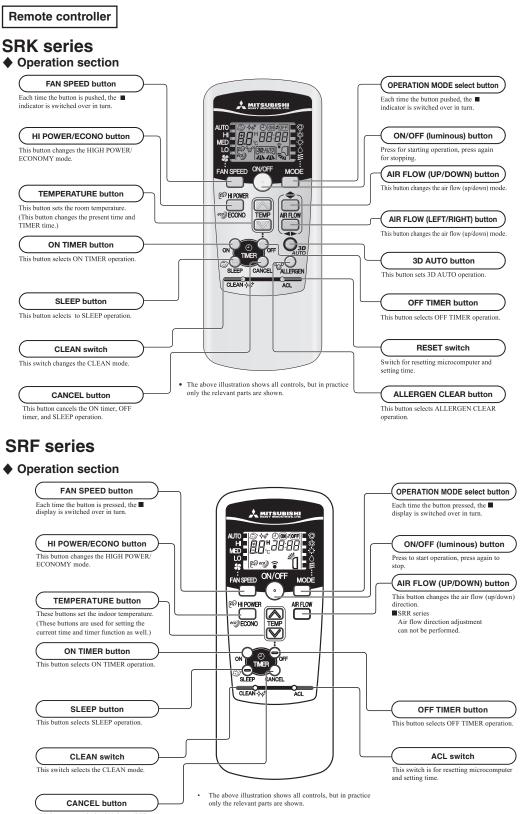

This button cancels the ON timer, OFF timer, and SLEEP operation.


SRR series

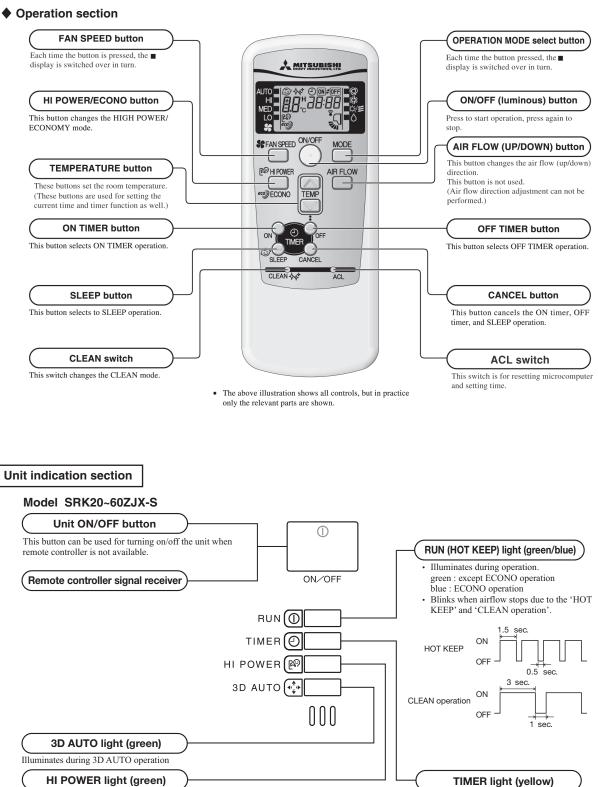


Illuminates during HIGH POWER operation.

Illuminates during TIMER operation.


Model SRK20~50ZJ-S

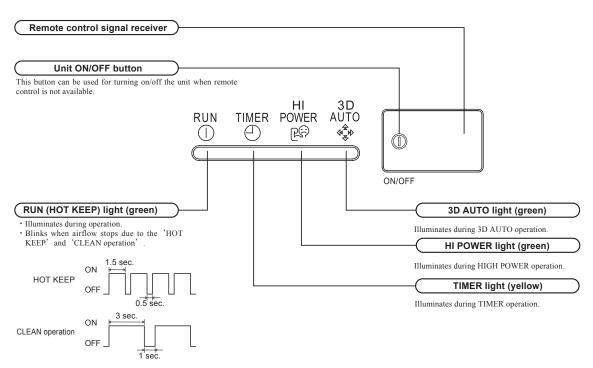

Model SRF25~50ZJX-S

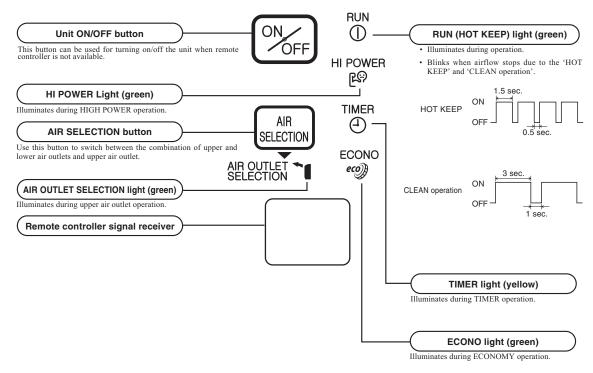

Model SRR25~60ZJ-S

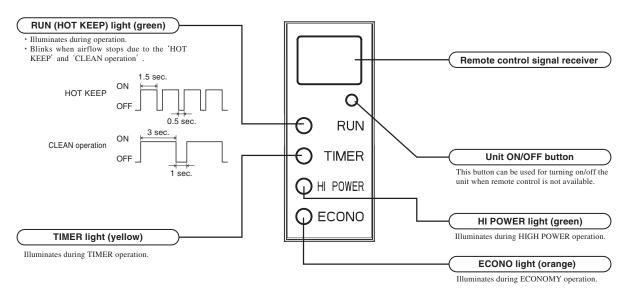

(2) Unit ON/OFF button

When the remote controller batteries become weak, or if the remote controller is lost or malfunctioning, this button may be used to turn the unit on and off.

(a) Operation


Push the button once to place the unit in the automatic mode. Push it once more to turn the unit off.

(b) Details of operation

The unit will go into the automatic mode in which it automatically determines, from indoor temperature (as detected by sensor), whether to go into the cooling, thermal dry or heating modes.


Function operation mode	Indoor temperature setting	Fan speed	Flap/Louver	Timer Switch
Cooling	About 24°C			
Thermal dry	About 25°C	Auto	Auto	Continuous
Heating	About 26°C			

Model SRK20~60ZJX-S




Unit ON/OFF button

Model SRF25~50ZJX-S

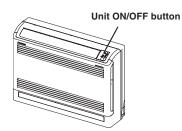


Model SRK20~50ZJ-S



Unit ON/OFF button


Model SRR25~60ZJ-S

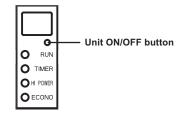

(3) Auto restart function

- (a) Auto restart function records the operational status of the air-conditioner immediately prior to be switched off by a power cut, and then automatically resumes operations after the power has been restored.
- (b) The following settings will be cancelled:
 - 1) Timer settings
 - 2) HIGH POWER operations
- Notes (1) Auto restart function is set at on when the air-conditioner is shipped from the factory. Consult with your dealer if this function needs to be switched off. (2) When power failure ocurrs, the timer setting is cancelled. Once power is resumed, reset the timer.
 - (3) If the jumper wire (J170 or JA1) "AUTO RESTART" is cut, auto restart is disabled. (See the diagram at right)
- ModelSRK20~60ZJX-S SRF25~50ZJX-S SRR25~60ZJ-S

• Model SRK20~50ZJ-S

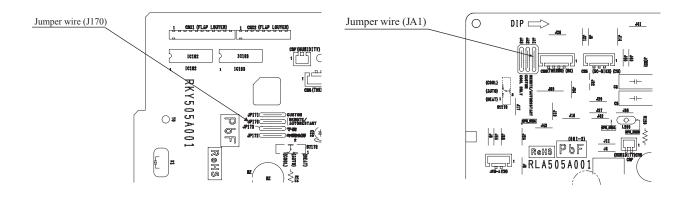

(4) Custom cord switching procedure

If two wireless remote controller are installed in one room, in order to prevent wrong operation due to mixed signals, please modify the printed circuit board in the indoor unit's controlbox and the remote controller using the following procedure. Be sure to modify both boards. If only one board is modified, receiving (and operation) cannot be done.


(a) Modifying the indoor printed circuit board

Take out the printed circuit board from the control box and cut off jumper wire (J171 or JA2) using wire cutters.

After cutting of the jumper wire, take measures to prevent contact with the other the lead wires, etc.

 ModelSRK20~60ZJX-S SRF25~50ZJX-S SRR25~60ZJ-S

• Model SRK20~50ZJ-S

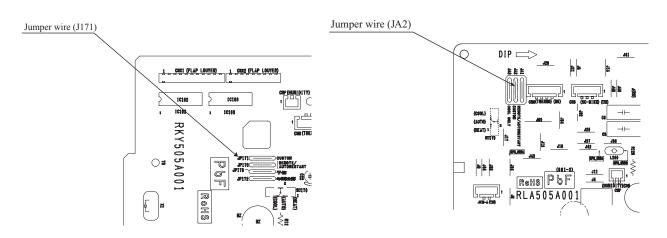

(b) Modifying the wireless remote controller

- 1) Remove the battery.
- 2) Cut the jumper wire shown in the figure at right.




(5) Flap and louver control (SRK and SRF series only)

SRK series

Control the flap and louver by AIRFLOW \clubsuit (UP/DOWN) and \clubsuit (LEFT/RIGHT) button on the wireless remote controller.


(a) Flap

Each time when you press the AIRFLOW \blacklozenge (UP/DOWN) button the mode changes as follows.

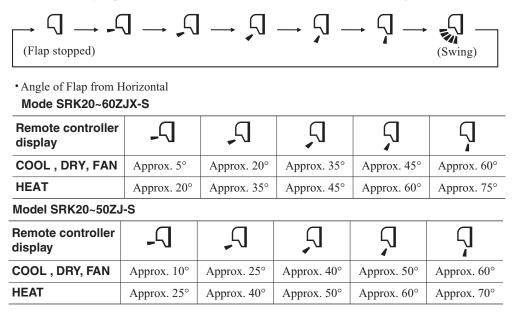

(b) Louver

Each time when you press the AIRFLOW (LEFT/RIGHT) button the mode changes as follows.

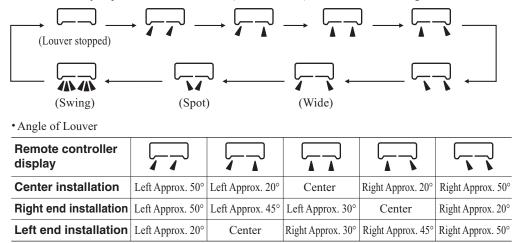

(c) Swing


1) Swing flap

2) Swing louver

Louver moves in left and right directions continuously.

directions continuously.

Flap moves in upward and downward

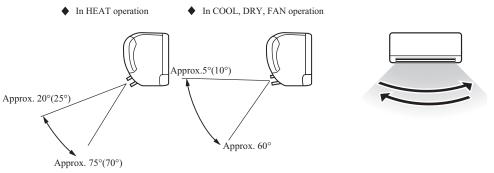

Note (1) value in () are for the model SRK20~50ZJ-S.

(d) Memory flap (Flap or Louver stopped)

When you press the AIRFLOW (UP/DOWN or LEFT/RIGHT) button once while the flap or louver is operating, it stops swinging at the position. Since this angle is memorized in the microcomputer, the flap or louver will automatically be set at this angle when the next operation is started.

(e) When not operating

The flap returns to the position of air flow directly below, when operation has stopped.

SRF series

Control the flap by AIRFLOW **\$** (UP/DOWN) button on the wireless remote controller.

(a) Flap

Each time when you press the AIRFLOW \clubsuit (UP/DOWN) button the mode changes as follows.

$$\xrightarrow[(Flap stopped)]{} \xrightarrow[(Flap stopped)]{} \xrightarrow[(Swing)]{} \xrightarrow$$

• Angle of Flap from Horizontal

Remote controller display	ď	Ď	Ĩ	٦ [°]	٢]
COOL , DRY, FAN	Approx. 60°	Approx. 50°	Approx. 38°	Approx. 21.5°	Approx. 12°
HEAT	Approx. 44°	Approx. 32°	Approx. 21.5°	Approx. 12°	Approx. 5°

(b) Swing


1) Swing flap

Flap moves in upward and downward directions continuously.

```
♦ In HEAT operation
♦ In COOL, DRY, FAN operation
```

Approx.44° Approx.5°

Approx.60°



When you press the AIRFLOW button once while the flap is operating,Ion. Since this angle is mem-orized in the microcomputer, the flap will automatically be set at this andis started.


(d) When not operating

The flap returns to the position of air flow directly below, when operation has stopped.

(6) Air outlet selection (SRF series only)

- (a) AIR SELECTION button can switch between the combination of upper and lower air outlets and upper air outlet. Not operable while the air conditioner is OFF.
 - 1) Each time the AIR SELECTION button is pressed. The combination of the upper and lower air outlets and the upper air outlet can be switched.
 - 2) When the upper air outlet is selected, AIR OUTLET SELECTION light on the unit display area will light green.

Upper and lower air outlets -	────→ Upper air outlet ───
AIR OUTLET SELECTION light : OFF	AIR OUTLET SELECTION light : ON

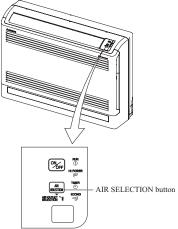


(b) Auto air outlet selection

1) COOL, DRY operation

- a) In case both lower and upper outlets operation is selected in Cooling or Dry operation, both outlets will be kept for sixty minutes after the start or until indoor temperature is below the setting point. And then the air outlet will change to the upper outlet. That state will be maintained until switch is turned off.
- b) In case both outlets operation with Auto fan speed mode is selected, the upper outlet will be kept for ten minutes after the start or until indoor temperature is close to reaching the setting point. And then the air outlet will change to both outlets in order to spread comfort air to every corner.

2) HEAT operation

- a) In case both lower and upper outlets operation with Auto fan speed mode is selected, the lower outlet will be kept for twenty minutes after the start or until indoor temperature is close to reaching the setting point. And then the air outlet will change to both outlets. That state will be maintained until the switch is turned off.
- b) Automatic adjustment of lower air outlet direction prevents stirring up of warm air and keeps optimum comfort at floor level.

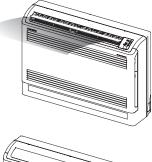



(7) 3D auto operation (SRK series only)

Control the flap and louver by 3D AUTO button on the wireless remote controller. Air flow selection and air flow direction are automatically controlled, allowing the entire indoor to efficiently conditioned.

- (a) During Cooling and Heating (Including auto cooling and heating)
 - 1) Air flow selection is determined according to indoor temperature and setting temperature.

Operation mode	Air flow selection				
Operation mode	AUTO			MED	LO
At cooling	Indoor temp. – Setting temp. >5°C	Indoor temp. – Setting temp. $\leq 5^{\circ}C$			
At cooling	HIGH POWER	AUTO	ні	MED	LO
At booting	Setting temp. – Indoor temp. >5°C	Setting temp. – Indoor temp. $\leq 5^{\circ}C$		MED	LU
At heating	HIGH POWER	AUTO			

2) Air flow direction is controlled according to the indoor temperature and setting temperature.

a) When 3D auto operation starts

	Cooling Heating		
Flap	Up/down Swing		
Louver	Wide (fixed) Center (fixed)		

b) When Indoor temp. – Setting temp. is ≤ 5°C during cooling and when Setting temp. – Indoor temp. is ≤ 5°C during heating, the system switches to the following air flow direction control. After the louver swings left and right symmetrically for 3 cycles, control is switched to the control in c).

	Cooling	Heating	
Flap	Horizontal blowing (Fixed)	Slant forwardl blowing (Fixed)	
Louver	Left/right Swing		

c) After the flap swings for 5 cycles, control is switched to the control in d).

	Cooling	Heating
Flap	Up/down Swing	
Louver	Center (Fixed)	

d) For 5 minutes, the following air flow direction control is carried out.

	Cooling	Heating			
Flap	Horizontal blowing (Fixed)	Slant forwardl blowing (Fixed)			
Louver	Wide (Fixed)				

e) After 5 minutes have passed, the air flow direction is determined according to the indoor temperature and setting temperature.

Operation mode	Air flow direction contorol						
At cooling	Indoor temp. – Setting temp. $\leq 2^{\circ}C$	$2^{\circ}C < Indoor temp Setting temp. \leq 5^{\circ}C$	Indoor temp. – Setting temp. $> 5^{\circ}C$				
At cooling	The control in d) continues.	Control returns to the control in b).	Control returns to the control in a).				
At booting	Setting temp. – Indoor temp. $\leq 2^{\circ}C$	$2^{\circ}C < Setting temp Indoor temp. \leq 5^{\circ}C$	Setting temp. – Indoor temp. $> 5^{\circ}C$				
At heating	The control in d) continues.	Control returns to the control in b).	Control returns to the control in a).				

(b) During DRY Operation (including auto DRY operation)

Air flow selection	According to DRY operation.
Flap	Horizontal blowing (Fixed)
Louver	Wide (Fixed)

(8) Timer operation

(a) Comfortable timer setting (ON timer)

If the timer is set at ON when the operation select switch is set at the cooling or heating, or the cooling or heating in auto mode operation is selected, the comfortable timer starts and determines the starting time of next operation based on the initial value of 15 minutes and the relationship between the indoor temperature at the setting time (temperature of room temperature sensor) and the setting temperature.

(b) Sleep timer operation

Pressing the SLEEP button causes the temperature to be controlled with respect to the set temperature.

(c) OFF timer operation

The Off timer can be set at a specific time (in 10-minute units) within a 24-hour period.

(9) Installation location setting (SRK series only)

When the indoor unit is installed at the end of a room, control the air flow direction so that it is not toward the side walls. If you set the remote controller installation position, keep it so that the air flow is within the range shown in the following figure.

(a) Setting

1) If the air conditioning unit is running, press the ON/OFF button to stop.

The installation location setting cannot be made while the unit is running.

The installation location display illuminates.


3) Setting the air-conditioning installation location.

Press the AIR FLOW (LEFT/RIGHT) button and adjust to the desired location.

Each time the AIR FLOW (LEFT/RIGHT) button is pressed, the

indicator is switched in the order of:




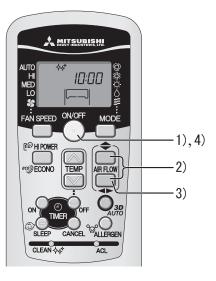

4) Press the ON/OFF button.

The air-conditioner's installation location is set.

Press within 60 seconds of setting the installation location (while the installation location setting display illuminates).

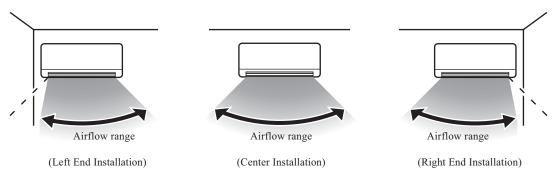


(10) Determining the operating mode

The cooling and heating operating modes are the remote controller mode that have been previously determined.

If a mode differing from these is selected after this, the selected mode will appear in the display of the remote controller, but only the fan will operate.

Furnels		First operation		Second operation			NT /	
Example	Selected Mode	Remote Controller Display	Operation	Selected Mode Remote Controller Display		Operation	Notes	
1	Cooling	Cooling	Cooling	Heating	Heating	Fan ⁽¹⁾	Different mode is	
2	Heating	Heating	Heating	Cooling	Cooling	Fan	only fan operation	

Note (1) If the display shows heating and the operation is fan, Hot Keep will operate. **Example of operating pattern**

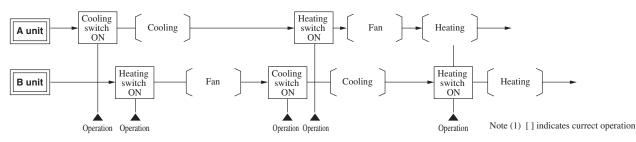

(11) Drain motor (DM) control (SRR series only)

(a) Drain motor (DM) is operated during the cooling or dehumidifying mode operations and simultaneously wity the compressor ON. The DM continues to operate for 5 minutes after the operation stop, anomalous stop, thermostat stop or when it was switched from the cooling and dehumidifying operations to the fan or heating operation.

Indoor unit operation mode						
	Stop ⁽¹⁾	Cooling	Dehumidifying	Fan ⁽²⁾	Heating	Note (1) Including the stop from the cooling, dehumiditying, fan
Compressor ON			Control A			(2) Including the "Fan" operation according to the
Compressor OFF			Control B		-	mismatch of operation modes

1) Control A

- a) If the float switch detects any anomalous draining condition, the unit stops with the anomalous stop and the drain pump starts. After detecting the anomalous condition, the drain motor comtinues to be ON.
- b) It keeps operating while the float switch is detecting the anomalous condition.
- 2) Control B

If the float switch detects any anomalous drain condition, the drain motor is turned ON for 5 minutes, and at 10 seconds after the drain motor OFF it checks the float switch. If it is normal, the unit is stopped under the normal mode or, if there is any anomalous condition, displayed by the flashing of display lights and the drain motor is turned ON. (The ON condition is maintained during the drain detection.)


1.2 FDTC series


(1) Remote controller (Option parts)

(a) Wired remote controller

The figure below shows the remote controller with the cover opened. Note that all the items that may be displayed in the liquid crystal display area are shown in the figure for the sake of explanation


Characters displayed with dots in the liquid crystal display area are abbreviated.



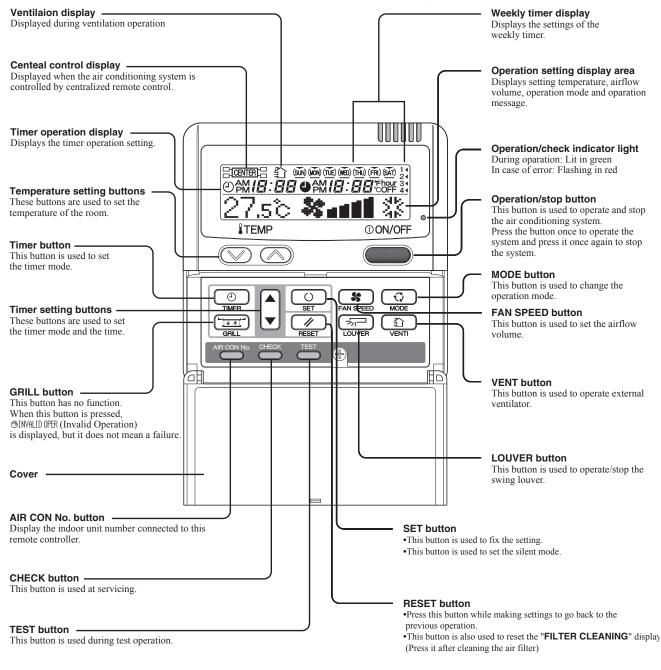

* All displays are described in the liguid crystal display for explanation.

(b) Wireless remote controller

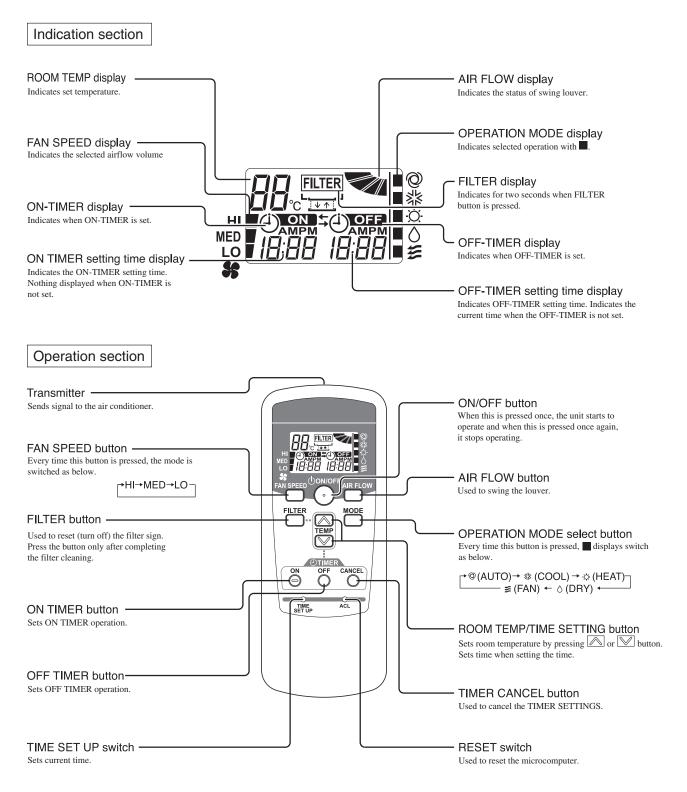

* All displays are described in the liquid crystal display for explanation

(2) Operation control function by the wired remote controller

(a) Switching sequence of the operation mode switches of remote controller



(b) [CPU reset]

This functions when "CHECK" and "GRILL" buttons on the remote controller are pressed simultaneously. Operation is same as that of the power supply reset.

(c) [Power failure compensation function]...Electric power supply failure

- This becomes effective if "Power failure compensation effective" is selected with the setting of remote controller function.
- Since it memorizes always the condition of remote controller, it starts operation according to the contents of memory no sooner than normal state is recovered after the power failure. Although the auto swing stop position and the timer mode are cancelled, the weekly timer setting is restored with the holiday setting for all weekdays.

After recovering from the power failure, it readjusts the clock and resets the holiday setting for each weekday so that the setting of weekly timer becomes effective.

- Content memorized with the power failure compensation are as follows.
- Note (1) Items[®], *O* and [®] are memorized regardless whether the power failure compensation is effective or not while the setting of silent mode is cancelled regardless whether the power failure compensation is effective or not.
 - ① At power failure Operating/stopped


If it had been operating under the off timer mode, sleep timer mode, the state of stop is memorized. (Although the timer mode is cancelled at the recovery from power failure, the setting of weekly timer is changed to the holiday setting for all weekdays.)


- ② Operation mode
- ③ Airflow volume mode
- ④ Room temperature setting
- ⑤ Louver auto swing/stop

However, the stop position (4-position) is cancelled so that it returns to Position (1).

- (6) "Remote controller function items" which have been set with the remote controller function setting ("Indoor function items" are saved in the memory of indoor unit.)
- ⑦ Upper limit value and lower limit value which have been set with the temperature setting control
- Is Sleep timer and weekly timer settings (Other timer settings are not memorized.)

[Parts layout on remote controller PCB]

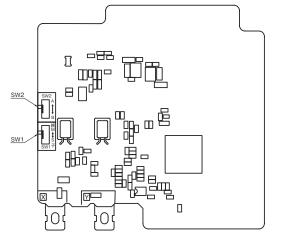


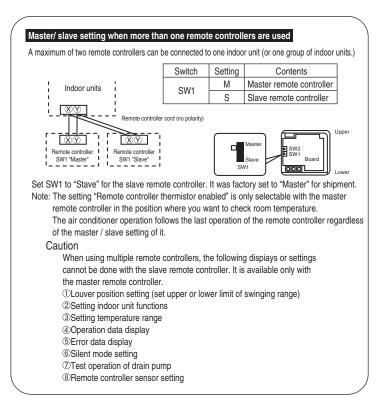

(3) Operation control function by the indoor controller

(a) Auto operation

If "Auto" mode is selected by the remote controller, the heating and the cooling are automatically switched according to the difference between outdoor air temperature and setting temperature and the difference between setting temperature and return air temperature. (When the switching of cooling mode \leftrightarrow heating mode takes place within 3 minutes, the compressor does not operate for 3 minutes by the control of 3-minute timer.) This will facilitate the cooling/heating switching operation in intermediate seasons and the adaptation to unmanned operation at stores, etc.



Room temperature (detected with ThI-A) [deg]

Note (1) Room temperature control during auto cooling/auto heating is performed according to the room temperature setting temperature. (DIFF: ±1 deg)

(2) If the indoor heat exchanger temperature rises to 59°C or higher during heating operation, it is switched automatically to cooling operation. In addition, for 1 hour after this switching, the heating operation is not performed, regardless of the temperature shown at right.



Heating operation stopped (cooling)

Indoor heat exchanger temperature (°C)

(b) Operations of functional items during cooling/heating

Operation	Coc	oling		Heating			
Functional item	Thermostat ON	Thermostat OFF	Fan	Thermostat ON	Thermostat OFF	Hot start (Defrost)	Dehumidify
Compressor	0	×	×	0	×	0	O/×
4-way valve	×	×	×	0	0	\bigcirc (×)	×
Outdoor unit fan	0	×	×	0	×	$\bigcirc(\times)$	O/×
Indoor unit fan	0	0	0	O/×	O/×	O/×	O/×
Louver motor	O/×			0/× 0/× 0/×		O/×	
Drain pump ⁽³⁾	0	× ⁽²⁾	\times ⁽²⁾		$O/\times^{(2)}$		Thermostat ON: O Thermostat OFF: X ⁽²⁾

Note (1) \bigcirc : Operation \times : Stop \bigcirc/\times : Turned \bigcirc ON/OFF by the control other than the room temperature control.

(2) ON during the drain motor delay control.

(3) Drain pump ON setting may be selected with the indoor unit function setting of the wired remote controller.

(c) Dehumidifying operation

2)

1) When the humidity sensor is not provided

Return air temperature thermistor [Thi-A (by the remote controller when the remote controller thermistor is enabled)] controls the indoor temperature environment simultaneously.

- a) Operation is started in the cooling mode. When the difference between the return air temperature and the setting temperature is 2°C or less, the indoor unit fan tap is brought down by one tap. That tap is retained for 3 minutes after changing the indoor unit fan tap.
- b) If the return air temperature exceeds the setting temperature by 3°C during defrosting operation, the indoor unit fan tap is raised. That tap is retained for 3 minutes after changing the indoor unit fan tap.
- c) If the thermostat OFF is established during the above control, the indoor unit fan tap at the thermostat ON is retained so far as the thermostat is turned OFF.
- d) After stopping the cooling operation, the indoor unit continues to run at Lo for 15 seconds.
- When the humidity thermistor is provided [Optional]
 - a) Operation starts in the cooling mode, and the target relative temperature is determined based on the setting temperature. If the humidity detected by the humidity thermistor becomes lower than the target relative temperature, the indoor unit fan tap is retained.
 - b) Anything other than a) above is same as the item 1) above.

(d) Timer operation

1) Sleep timer

Set the duration of time from the present to the time to turn off the air-conditioner.

It can be selected from 10 steps in the range from "OFF 1 hour later" to "OFF 10 hours later". After the sleep timer setting, the remaining time is displayed with progress of time in the unit of hour.

2) OFF timer

Time to turn OFF the air-conditioner can be set in the unit of 10 minutes.

3) ON timer

Time to turn ON the air-conditioner can be set. Indoor temperature can be set simultaneously.

4) Weekly timer

Timer operation (ON timer, OFF timer) can be set up to 4 times a day for each weekday.

5) Timer operations which can be set in combination

Item Item	Sleep timer	Sleep timer OFF timer		Weekly timer
Sleep timer		×		×
OFF timer	×		0	×
ON timer	0	0		×
Weekly timer	×	×	×	


Note (1) \bigcirc : Allowed \times : Not

(e) Remote controller display during the operation stop

- 1) "Centralized control ON" is displayed always on the LCD under the "Center/Remote" and "Center" modes during the operation stop (Power ON). This is not displayed under the "Remote" mode.
- 2) If this display is not shown under the "Center/Remote" mode, check if the indoor unit power switch is turned on or not.

(f) Hot start (Cold draft prevention at heating)

At the startup of heating operation, at resetting of the thermostat, during defrost operation and at returning to heating, the indoor fan is controlled by the indoor heat exchanger temperature (detected with Thi-R) for preventing the cold draft.

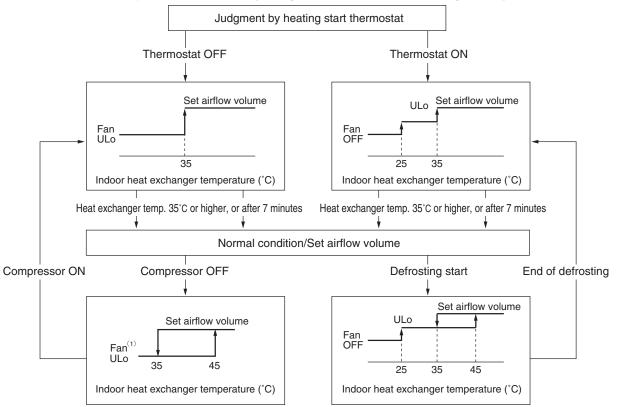

Note (1) Heating preparation is displayed during the hot start (when the compressor is operating and the indoor fan does not provide the set airflow volume).

(g) Hot keep

Hot keep control is performed at the start of the defrost control.

- 1) Control
 - a) When the indoor heat exchanger temperature (detected with Thi-R1 or R2) drops to 35°C or lower, the speed of indoor fan is changed to the lower tap at each setting.
 - b) During the hot keep, the louver horizontal control signal is transmitted.
- 2) Ending condition

When the indoor fan is at the lower tap at each setting, it returns to the set airflow volume as the indoor heat exchanger temperature rises to 45°C or higher.

(h) Fan control during the heating thermostat OFF

When the heating thermostat is turned OFF, the setting of the fan control is selectable using the indoor function of wired remote controller [🔆 FAN CONTROL].

1) Low fan speed (Factory default)

If the indoor heat exchanger temperature drops below 35°C with the heating thermostat OFF, the indoor fan operate at the lower speed tap at each setting.

2) Set fan speed

Even if the indoor heat exchanger temperature drops below 35°C with the heating thermostat OFF, the indoor fan continues to run at the set airflow volume.

3) Intermittence

If the indoor heat exchanger temperature drops below 35° C with the heating thermostat OFF, the indoor fan operates at the lower speed tap at each setting and, when the indoor heater exchanger temperature drops below 25° C, the indoor fan stops for 5 minutes. Then the fan runs at the low speed tap for 2 minutes, and the judgment is made by the thermostat.

4) Fan OFF

If the indoor heat exchanger temperature drops below 35°C with the heating thermostat OFF, the indoor fan is turned OFF. The same applies also when the remote controller sensor is effective.

(i) Filter sign

As the operation time (Total ON time of ON/OFF switch) accumulates to 180 hours (1), "FILTER CLEANING" is displayed on the remote controller. (This is displayed when the unit is in trouble and under the centralized control, regardless of ON/OFF) Note (1) Time setting for the filter sign can be made as shown below using the indoor function of wired remote controller "FILTER SIGN SET". (It is set at 1 at the shipping from factory.)

Filter sign setting	Function
TYPE 1	Setting time: 180 hrs (Factory default)
TYPE 2	Setting time: 600 hrs
TYPE 3	Setting time: 1,000 hrs
TYPE 4	Setting time: 1,000 hrs (Unit stop) (2)

(2) After the setting time has elapsed, the "FILTER CLEANING" is displayed and, after operating for 24 hours further (counted also during the stop), the unit stops.

(j) Auto swing control

- 1) Louver control
 - a) Press the "LOUVER" button to operate the swing louver when the air conditioner is operating.
 "SWING ------" is displayed for 3 seconds and then the swing louver moves up and down continuously.
 - b) To fix the swing louver at a position, press one time the "LOUVER" button while the swing louver is moving so that four stop positions are displayed one after another per second.
 When a desired stop position is displayed, press the "LOUVER" button again. The display stops, changes to show

c) Louver operation at the power on with a unit having the louver 4-position control function

the "STOP 1 -----" for 5 seconds and then the swing louver stops.

The louver swings one time automatically (without operating the remote controller) at the power on.

This allows inputting the louver motor (LM) position, which is necessary for the microcomputer to recognize the louver position.

Note (1) If you press the "LOUVER" button, the swing motion is displayed on the louver position LCD for 10 second. The display changes to the "SWING $\frac{1}{2}$ " display 3 seconds later.

2) Automatic louver level setting during heating

At the hot start with the heating thermostat OFF, regardless whether the auto swing switch is operated or not (auto swing or louver stop), the louver takes the level position (In order to prevent the cold start). The louver position display LCD continues to show the display which has been shown before entering this control.

3) Louver-free stop control

When the louver-free stop has been selected with the indoor function of wired remote controller " $=_{71}$ " POSITION", the louver motor stops when it receives the stop signal from the remote controller. If the auto swing signal is received from the remote controller, the auto swing will start from the position where it was before the stop.

- Note (1) When the indoor function of wired remote controller " $=_{n}$ POSITION" has been switched, switch also the remote control function " $=_{n}$ POSITION" in the same way.
- 4) Individual flap (louver) control system

Regarding FDTC model, the individual flaps (louvers) for 4 directions can be controlled to swing within the ranges between upper limit and lower limit selected with wired remote controller respectively.

For detail setting method, refer to ⑦ in page 160 for FDTC.

Note (1) This function is not able to be set with wireless remote controller or simple remote controller (RCH-E3)

(k) Compressor inching prevention control

1) 3-minute timer

When the compressor has been stopped by the thermostat, remote controller operation switch or anomalous condition, its restart will be inhibited for 3 minutes. However, the 3-minute timer is invalidated at the power on the electric power source for the unit.

- 2) 3-minute forced operation timer
 - Compressor will not stop for 3 minutes after the compressor ON. However, it stops immediately when the unit is stopped by means of the ON/OFF switch or by when the thermister turned OFF the change of operation mode.
 - If the thermostat is turned OFF during the forced operation control of heating compressor, the louver position (with the auto swing) is returned to the level position.

Note (1) The compressor stops when it has entered the protective control.

(I) Drain motor

 Drain motor (DM) is operated during the cooling or dehumidifying mode operations and simultaneously with the compressor ON. The DM continues to operate for 5 minutes after the operation stop, anomalous stop, thermostat stop or when it was switched from the cooling and dehumidifying operations to the fan or heating operation.

	I	ndoor unit ope	eration mode			
	Stop (1)	Cooling	Dehumidifying	Fan (2)	Heating	Note (1) Including the stop from the cooling, dehumidifying, fan
Compressor ON		Control A				and heating, and the anomalous stop (2) Including the "Fan" operation according to the
Compressor OFF		Control B				mismatch of operation modes

- a) Control A
 - i) If the float switch detects any anomalous draining condition, the unit stops with the anomalous stop (displays E9) and the drain pump starts. After detecting the anomalous condition, the drain motor continues to be ON.
 - ii) It keeps operating while the float switch is detecting the anomalous condition.
- b) Control B

If the float switch detects any anomalous drain condition, the drain motor is turned ON for 5 minutes, and at 10 seconds after the drain motor OFF it checks the float switch. If it is normal, the unit is stopped under the normal mode or, if there is any anomalous condition, E9 is displayed and the drain motor is turned ON. (The ON condition is maintained during the drain detection.)

- 2) Drain motor (DM) interlock control
 - a) Start conditions

Depending on the function setting by the remote controller, the drain motor is turned ON under either one of the following conditions.

- i) During heating mode operation (Both the thermostat ON/OFF)
- ii) During heating mode operation (Both the thermostat ON/OFF) + Fan operation
- iii) Fan operation
- b) End conditions

The drain motor is turned OFF 5 minutes after the stop of operations i) to iii) above.

(m) Operation check/drain pump test run operation mode

- 1) If the power is turned on by the dip switch (SW7-1) on the indoor PCB when electric power source is supplied, it enters the mode of operation check/drain pump test run. It is ineffective (prohibited) to change the switch after turning power on.
- 2) When the communication with the remote controller has been established within 60 seconds after turning power on by the dip switch (SW7-1) ON, it enters the operation check mode. Unless the remote controller communication is established, it enters the drain pump test run mode.

Note (1) To select the drain pump test run mode, disconnect the remote controller connector (CNB) on the indoor PCB to shut down the remote controller communication.

3) Operation check mode


There is no communication with the outdoor unit but it allows performing operation in respective modes by operating the remote controller.

4) Drain pump test run mode

As the drain pump test run is established, the drain pump only operates and during the operation protective functions by the microcomputer of indoor unit become ineffective.

(n) Cooling, dehumidifying frost protection

1) To prevent frosting during cooling mode or dehumidifying mode operation, the of compressor speed is reduced if the indoor heat exchanger temperature (detected with Thi-R) drops to 1.0 °C or lower at 4 minutes after the start of compressor operation. If the indoor unit heat exchanger temperature is 1.0 °C or lower after 20 seconds, the compressor speed is reduced further. If it becomes 2.5 °C or higher, the control terminates. When the indoor heat exchanger temperature has become as show below after reducing the compressor speed, it is switched to the fan operation. For the selection of indoor fan speed, refer to item 2).



2) Selection of indoor fan speed

If it enters the frost prevention control during cooling operation (excluding dehumidifying), the indoor unit fan speed is switched.

- a) When the indoor return air detection temperature (detected with ThI-A) is 23°C or higher and the indoor heat exchanger temperature (detected with ThI-R) detects the compressor frequency drop start temperature A°C+1°C, of indoor unit fan speed is increased by 20rpm.
- b) If the phenomenon of i) above is detected again after the acceleration of indoor unit fan, indoor unit fan speed is increased further by 20rpm.

Note (1) Indoor unit fan speed can be increased by up to 2 taps.

• Compressor frequency	drop start temp	perature
Item	Symbol	А

Item	A
Temperature - Low (Factory default)	1.0
Temperature - High	2.5

Note (1) Frost prevention temperature setting can be selected with the indoor unit function setting of the wired remote controller.

٦

(o) Heating overload protection

 If the indoor heat exchanger temperature (detected with Thi-R) at 63°C or higher is detected for 2 seconds continuously, the compressor stops. When the compressor is restarted after a 3-minute delay, if a temperature at 63°C or higher is detected for 2 seconds continuously within 60 minutes after initial detection and if this is detected 5 times consecutively, the compressor stops with the anomalous stop (E8). Anomalous stop occurs also when the indoor heat exchanger temperature at 63°C or higher is detected for 6 minutes continuously.



If, after second detection of heating overload protection up to fourth, the indoor fan is set at Me and Lo taps when the compressor is turned ON, the indoor fan speed is increased by 1 tap.

(p) Anomalous fan motor

2)


After starting the fan motor, if the fan motor speed is 200rpm or less is detected for 30 seconds continuously and 4 times within 60 minutes, then fan motor stops with the anomalous stop (E16).

(q) Plural unit control – Control of 16 units group by one remote controller

1) Function

One remote controller switch can control a group of multiple number of unit (Max. 16 indoor units). "Operation mode" which is set by the remote controller switch can operate or stop all units in the group one after another in the order of unit No.⁽¹⁾. Thermostat and protective function of each unit function independently.

Note (1) Unit No. is set by SW2 on the indoor unit control PCB. Unit No. setting by SW2 is necessary for the indoor unit only.

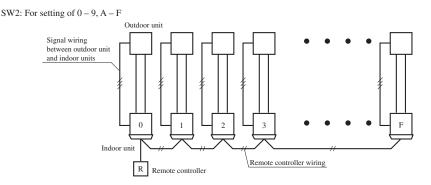

(2) Unit No. may be set at random unless duplicated, it should be better to set orderly like 0, 1, 2..., F to avoid mistake.

2) Display to the remote controller

- a) Center or each remote controller basis, heating preparation: the youngest unit No. among the operating units in the remote mode (or the center mode unless the remote mode is available) is displayed.
- b) Inspection display, filter sign: Any of unit that starts initially is displayed.
- c) Confirmation of connected units

Pressing "AIR CON No." button on the remote controller displays the indoor unit address. If " \blacktriangle " " \checkmark " button is pressed at the next, it is displayed orderly starting from the unit of youngest No.

- d) In case of anomaly
 - i) If any anomaly occurs on a unit in a group (a protective function operates), that unit stops with the anomalous stop but any other normal units continue to run as they are.
 - ii) Signal wiring procedure

Signal wiring between indoor and outdoor units should be made on each unit same as the normal wiring. For the group control, lay connect with sires wiring between rooms using terminal blocks (X, Y) of remote controller.

Connect the remote controller communication wire separately from the power supply wire or wires of other electric devices (AC220V or higher).

(r) High ceiling control

In the case of indoor unit installed in a higher ceiling room, the airflow volume mode control can be changed with the wired remote controller indoor unit function "FAN SPEED SET".

Fan tap		Indoor unit airflow setting						
		8adi - 8ad - 8ad - 8ad	\$601 - \$600 - \$600	\$11-\$1 0	8al - 8al			
I FAN SPEED SET I	STANDARD	PHi - Hi - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Me			
	HIGH SPEED1, 2	PHi - PHi - Hi - Me	PHi - Hi - Me	PHi - Me	PHi - Hi			

Note (1) Factory default is Standard.

(2) At the hot-start and heating thermostat OFF, or other, the indoor unit fan is operated at the low speed tap of each setting.

(3) This function is not able to be set with wireless remote controller or simple remote controller (RCH-E3)

(s) Abnormal temperature thermistor (return air/indoor heat exchanger) wire/short-circuit detection

1) Broken wire detection

When the return air temperature thermistor detects -50° C or lower or the heat exchanger temperature thermistor detect -50° C or lower for 5 seconds continuously, the compressor stops. After a 3-minute delay, the compressor restarts but, if it is detected again within 60 minutes after the initial detection for 6 minutes continuously, stops again (the return air temperature thermistor: E7, the heat exchanger temperature thermistor: E6).


2) Short-circuit detection

If the heat exchanger temperature thermistor detects 70°C or higher for 5 seconds continuously at 2 minutes and 20 seconds after the compressor ON during cooling operation, the compressor stops (E6).

Operation permission/prohibition (t)

(In case of adopting card key switches or commercially available timers)

When the indoor function setting of wired remote controller for "Operation permission/prohibition" is changed from "Invalid (Factory default)" to "Valid", following control becomes effective.

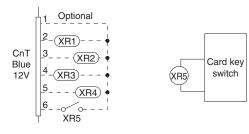

		Normal operationOperation permission/prohi(Factory default)"Valid" (Local setting)		<u>^</u>
	ON	OFF	ON	OFF
CnT-6	Operation	Stop	Operation permission*1	Operation prohibition (Unit stops)

*1 Only the "LEVEL INPUT" is acceptable for external input, however when the indoor function setting of "Level input (Factory default)" or "Pulse input" is selected by the function for "External input" of the wired remote controller, operation status will be changed as follows.

In case of "Level input" setting	In case of "Pulse input" setting
Unit operation from the wired remote controller becomes available*(1)	Unit starts operation *(2)

- *(1) In case that "Operation permission/prohibition mode" setting is "Valid" and "External input" setting is "Level input (Factory default)";
 - ① When card key switch is ON (CnT-6 ON: Operation permission), start/stop operation of the unit from the wired remote controller becomes available.
 - (2) When card key switch is OFF (CnT-6 OFF: Operation prohibition), the unit stops operation in conjunction with OFF signal, and start/stop operation of the unit from the wired remote controller becomes not available.
- *(2) In case that "Operation permission/prohibition mode" setting is "Valid" and "External input" setting is "Pulse input (Local setting)";
 - (1)When card key switch is ON (Operation permission), the unit starts operation in conjunction with ON signal. and also start/stop operation of the unit from the wired remote controller becomes available.
 - When card key switch is OFF (Operation prohibition), the unit stops operation in conjunction with OFF signal, and (2)start/stop operation of the unit from the wired remote controller becomes not available.
- This function is invalid only at "Center mode" setting done by central controller. (3)

(u) External input/output control (CnT)

1

Be sure to connect the wired remote controller to the indoor unit. Without wired remote controller remote operation by CnT is not possible to perform.

CnT Blue 12V	$\begin{array}{c} 1 & \text{Optional} \\ 2 - (XR1) \\ 3 (XR2) \\ 4 - (XR3) \\ 5 (XR4) \\ 6 \\ \end{array}$	 Operation output Heating output Thermostat ON output Error output Remote operation input 	(CnT-2: XR1) (CnT-3: XR2) (CnT-4: XR3) (CnT-5: XR4) (CnT-6: No-voltage contactor)
	6 XR5	Skemote operation input	(Cn1-6: No-voltage contactor)

1) Output for external control (remote display)

Following output connectors (CnT) are provided on the indoor control PCB for monitoring operation status.

- (1) **Operation output:** Outputs DC12V signal for driving relay during operation
- 2 Heating output: Outputs DC12V signal for driving relay during heating operation
- (3) **Thermostat ON output:** Outputs DC12V signal for driving relay when compressor is operating.
- ④ Error output: Outputs DC12V signal for driving relay when anomalous condition occurs.

2) Remote operation input

Remote operation input connector (CnT-6) is provided on the indoor control PCB.

However remote operation by CnT-6 is not effective, when "Center mode" is selected by center controller.


In case of plural unit (twin, triple, double twin), remote operation input to CnT-6 on the slave indoor unit is invalid.

Only the "LEVEL INPUT" is acceptable for external input, however when the indoor function setting of "Level input (Factory default)" or "Pulse input" is selected by the function for "External input" of the wired remote controller, operation status will be changed as follows.

a) In case of "Level input" setting (Factory default)

Input signal to CnT-6 is OFF \rightarrow ON unit ON Input signal to CnT-6 is ON \rightarrow OFF unit OFF

Operation is not inverted.

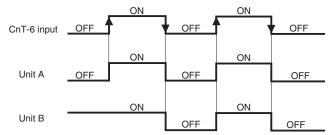


Note: The latest operation has priority

It is available to operate/stop by remote controller or center controller

b) In case of "Pulse input" setting (Local setting)


It is effective only when the input signal to CnT-6 is changed OFF \rightarrow ON, and at that time unit operation [ON/OFF] is inverted.

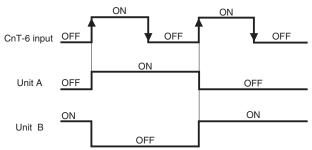

3) Remote operation

a) In case of multiple units (Max. 16 indoor units group) are connected to one wired remote controller

When the indoor function setting of wired remote controller for "External control set" is changed from "Individual (Factory default)" to "For all units", all units connected in one wired remote controller system can be controlled by external operation input.

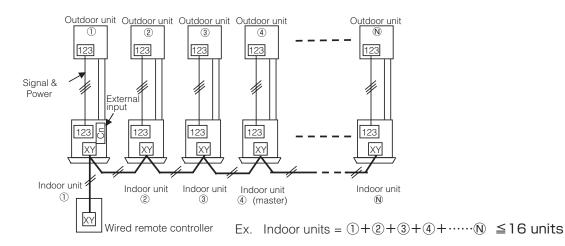

	Individual operation	on (Factory default)	All units operation	on (Local setting)
	ON	OFF	ON	OFF
CnT-6	Only the unit directly connected to the remote controller can be operated.	Only the unit directly connected to the remote controller can be stopped opeartion.	All units in one remote controller system can be operated.	All units in one remote controller system can be stopped operation.
	Unit ① only	Unit ① only	Units $\widehat{1} - \widehat{\mathbb{N}}$	Units $\widehat{1} - \widehat{\mathbb{N}}$

When more than one indoor unit (Max. 16 indoor units) are connected in one wired remote controller system:

- (1) With the factory default, external input to CnT-6 is effective for only the unit ①.
- (2) When setting "For all unit" (Local setting), all units in one remote controller system can be controlled by external input to CnT-6 on the indoor unit ①.
- (3) External input to CnT-6 on the other indoor unit than the unit ① is not effective.

(v) Fan control at heating startup

1) Start conditions

At the start of heating operation, if the difference of setting temperature and return air temperature is 5°C or higher after the end of hot start control, this control is performed.


- 2) Contents of control
 - a) Sampling is made at each minute and, when the indoor unit heat exchanger temperature (detected with Thi-R) is 37°C or higher, present number of revolutions of indoor unit fan speed is increased by 10min⁻¹.
 - b) If the indoor unit heat exchanger temperature drops below 37°C at next sampling, present number of revolutions of indoor unit fan speed is reduced by 10min⁻¹.

3) End conditions

Indoor fan speed is reduced to the setting airflow volume when the compressor OFF is established and at 30 minutes after the start of heating operation.

(w) Room temperature detection temperature compensation during heating

With the standard specification, the compressor is turned ON/OFF with the thermostat setting temperature. When the thermostat is likely to turn OFF earlier because the unit is installed at the ceiling where warm air tends to accumulate, the setting can be changed with the wired remote controller indoor unit function " \Re SP OFFSET". The compressor and the heater are turned ON/OFF at one of the setting temperature +3, +2 or +1°C in order to improve the feeling of heating. The setting temperature, however, has the upper limit of 30°C.



(x) Return air temperature compensation

This is the function to compensate the deviation between the detection temperature by the return air temperature thermistor and the measured temperature after installing the unit.

- 1) It is adjustable in the unit of 0.5°C with the wired remote controller indoor unit function "RETURN AIR TEMP".
- +1.0°C, +1.5°C, +2.0°C -1.0°C, -1.5°C, -2.0°C
- Compensated temperature is transmitted to the remote controller and the compressor to control them. Note (1) The detection temperature compensation is effective on the indoor unit thermistor only.

1.3 Outline of heating operation

(1) Summary

(a) Capacity control

1) Indoor unit SRK 20~60 ZJX-S models only

Model	SCM40ZJ-S	SCM45ZJ-S	SCM50ZJ-S	SCM60ZJ-S	SCM71ZJ-S	SCM80ZJ-S		
Capacity	1.4 ~ 6.9 kW	1.4 ~ 7.4 kW	1.4 ~ 7.5 kW	1.5 ~ 7.8 kW	1.5 ~ 9.4 kW	1.5 ~ 9.8 kW		
) Indoor unit excent SBK 20~60 7.1X-S models								

2) Indoor unit except SRK 20~60 ZJX-S models

Model	SCM40ZJ-S	SCM45ZJ-S	SCM50ZJ-S	SCM60ZJ-S	SCM71ZJ-S	SCM80ZJ-S
Capacity	1.4 ~ 6.7 kW	1.4 ~ 7.2 kW	1.4 ~ 7.3 kW	1.5 ~ 7.6 kW	1.5 ~ 9.1 kW	1.5 ~ 9.5 kW

Capacity control is within the range shown above. If demand capacity of the indoor units exceeds the maximum capacity of

the outdoor unit, the demand capacity will be proportionally distributed.

(b) Outdoor compressor speed control

Indoor compressor command total speed value	Decision speed
0 rps	0 rps
A rps or less	A rps
More than A rps, but B rps or less	A rps to B rps
More than B rps	B rps

• Values of A, B

Item	SCM40ZJ-S	SCM45ZJ-S	SCM50ZJ-S	
Α	30 rps	30 rps	30 rps	
В	100 rps	120 rps	120 rps	
В	100 rps	120 rps	120 rps	

Item	Model	SCM60ZJ-S	SCM71ZJ-S	SCM80ZJ-S
•	Two connection	40 rps		
Α	More than three connection	30 rps		
B	One connection	90 rps		
В	More than two connection	120 rps		

(2) Operation of major functional components in heating mode

Functional components			Thermostat OFF (All indoor units)	Thermostat OFF (Some of indoor units)	Fan, stop, abnormal stop (Some of indoor units)	Failure (Outdoor unit)
Command speed		Multi-operation rpm calculated based on the rpm required for each indoor unit		0 (Thermostat off units) (Fan, stop, abnormal stop units)		0 (All units)
Indoor	Fixed	According to mode switching	Hot Keep	According to mode switching		Hot Keep
unit fan	Automatic	According to command speed	Hot Keep	According to	According to command speed	
Outdoor	unit fan	According to outdoor unit speed	OFF	According to ou	According to outdoor unit speed	
Electroni expansio		According to decision speed	According to stop mode	de According to heating stop unit control (Thermostat off units) (Fan, stop, abnormal stop units)		According to stop mode
Compres	sor	ON	OFF	ON	ON	OFF

(3) Hot keep operation


If the hot keep operation is selected during the heating operation, the indoor fan is controlled based on the temperature of the indoor unit heat exchanger (Th2) to prevent blowing of cool wind.

Note (1) Refer to the FDTC series by 21 page.

(4) Defrosting operation

- (a) Starting conditions (Defrosting operation can be started only when all of the following conditions are met.)
 - After start of heating operation
 When it elapsed 40 minutes. (Accumulated compressor operation time)
 - 2) After end of defrosting operation
 - When it elapsed 40 minutes. (Accumulated compressor operation time)
 - Outdoor heat exchanger temperature (Th1)
 When the temperature has been below -2°C for 3 minutes continuously.
 - 4) The condition of outdoor air temperature (Th2) and the outdoor heat exchanger temperature (Th1)


(Th2)−(Th1) ≧ 0.44 × (Th2) + A			
Th2	A		
—2 °C ≦ Th2	4		
—15 °C ≦ Th2 < —2 °C	6		
Th2 < −15 °C	6		

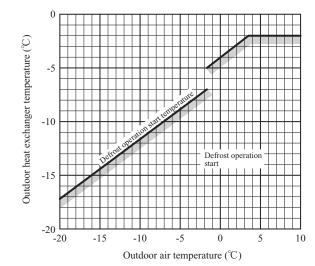

5) During continuous compressor operation

In addition, when the speed command from the indoor controller of the indoor unit during heating operation has counted 0 rps 10 times or more and all conditions of 1), 2), 3) and 5) above and the outdoor air temperature is 3° C or less are satisfied (note that when the temperature for outdoor heat exchanger sensor (Th1) is -2° C or less: 62 rps or more, -2° C or less: less than 62 rps), defrost operation is started.

- (b) Ending conditions (Operation returns to the heating cycle when either one of the following is met.)
 - 1) Outdoor heat exchanger sensor (Th1) temperature: 20°C or higher
 - 2) Outdoor heat exchanger sensor (Th1) temperature : 2 min. as for 10°C (model 71, 80 : 1 min. as for 18°C)
 - 3) Continued operation time of defrosting \rightarrow For more than 12 minutes and 50 seconds



X Depends on an operation condition, the time can be longer than 7 minutes.

1.4 Outline of cooling operation

(1) Summary

(a) Capacity control

1) Indoor unit SRK xx ZJX-S models only

Model	SCM40ZJ-S	SCM45ZJ-S	SCM50ZJ-S	SCM60ZJ-S	SCM71ZJ-S	SCM80ZJ-S
Capacity	1.8 ~ 5.9 kW	1.8 ~ 6.4 kW	1.8 ~ 7.1 kW	1.8 ~ 7.5 kW	1.8 ~ 8.8 kW	1.8 ~ 9.2 kW

2) Indoor unit except SRK xx ZJX-S models

Model	SCM40ZJ-S	SCM45ZJ-S	SCM50ZJ-S	SCM60ZJ-S	SCM71ZJ-S	SCM80ZJ-S
Capacity	1.8 ~ 5.8 kW	1.8 ~ 6.3 kW	1.8 ~ 6.9 kW	1.8 ~ 7.3 kW	1.8 ~ 8.3 kW	1.8 ~ 8.7 kW

Capacity control is within the range shown above. If demand capacity of the indoor units exceeds the maximum capacity of

the outdoor unit, the demand capacity will be proportionally distributed.

(b) Outdoor compressor speed control

Indoor compressor command total speed value	Decision speed				
0 rps	0 rps				
A rps or less	A rps				
More than A rps, but B rps or less	A rps to B rps				
More than B rps	B rps				

• Values of A, B

Model	SCM40ZJ-S	SCM45ZJ-S	SCM50ZJ-S	SCM60ZJ-S	SCM71ZJ-S	SCM80ZJ-S
Α	30 rps	30 rps	30 rps	20 rps	20 rps	20 rps
В	100 rps	120 rps				

(2) Operation of major functional components in cooling mode


Functional components	Operation	Cooling	Thermostat OFF (All indoor units)	Thermostat OFF (Some of indoor units)	Fan, stop, abnormal stop (Some of indoor units)	Failure (Outdoor unit)				
Commar	ommand speed Multi-operation rpm calculated based on the rpm required for each indoor unit				0 (Fan, stop, abnormal stop units)	0 (All units)				
Indoor	Fixed		According to mode switching							
unit fan	Automatic	According to command speed	According to mode switching	According to mode switching According to command speed						
Outdoor	unit fan	According to outdoor unit speed	OFF	According to ou	tdoor unit speed	OFF				
Electron		According to decision speed	According to stop mode	All closed All closed (Thermostat off units) (Fan, stop, abnormal stop units)		According to stop mode				
Compres	ompressor ON		OFF	ON	ON	OFF				

1.5 Outline of automatic operation

(1) SRK 20~60ZJX-S, SRF and SRR series

(a) Determination of operation mode

The unit checks the indoor air temperature and the outdoor air temperature after operating the indoor and outdoor blowers for 20 seconds, determines the operation mode and the indoor air temperature setting correction value, and then enters in the automatic operation.

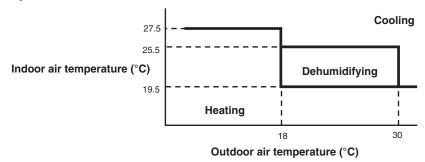

Unit : °C

Unit : °C

Unit : °C

- (b) The unit checks the temperature every hour after the start of operation and, if the result of check is not same as the previous operation mode, changes the operation mode.
- (c) When the unit is started again within one hour after the stop of automatic operation or when the automatic operation is selected during heating, cooling or dehumidifying operation, the unit is operated in the previous operation mode.
- (d) Setting temperature can be adjusted within the following range. There is the relationship as shown below between the signals of the wireless remote controller and the setting temperature.

SRF series

				Sigr	nals of v	vireless	remote	control	(Display)				
		-6	-5	-4	-3	-2	-1	±0	+1	+2	+3	+4	+5	+6
Setting	Cooling	18	19	20	21	22	23	24	25	26	27	28	29	30
temperature	Dehumidifying	18	19	20	21	22	23	24	25	26	27	28	29	30
-	Heating	20	21	22	23	24	25	26	27	28	29	30	31	32


SRK, SRR series

	Signals of wireless remote control (Display)													
		-6	-5	-4	-3	-2	-1	±0	+1	+2	+3	+4	+5	+6
Setting	Cooling	18	19	20	21	22	23	24	25	26	27	28	29	30
temperature	Dehumidifying	19	20	21	22	23	24	25	26	27	28	28	30	31
	Heating	20	21	22	23	24	25	26	27	28	29	30	31	32

(2) SRK 20~50ZJ-S series

(a) Determination of operation mode

The unit checks the indoor air temperature and setting temperature and the outdoor air temperature, determines the operation mode, and then begins in the automatic operation.

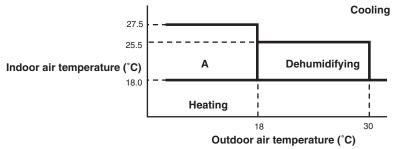

- (b) The unit checks the temperature every hour after the start of operation and, if the result of check is not same as the previous operation mode, changes the operation mode.
 - 1) If the setting temperature is changed with the remote controller, the operation mode is judged immediately.
 - 2) When both the indoor and the outdoor air temperatures are in the range "A", cooling or heating is switched depending on the difference between the setting temperature and the indoor air temperature.
 - 3) When the operation mode has been judged following the change of setting temperature with the remote controller, the hourly judgment of operation mode is cancelled.
- (c) When the unit is started again within one hour after the stop of automatic operation or when the automatic operation is selected during heating, cooling or dehumidifying operation, the unit is operated in the previous operation mode.
- (d) Setting temperature can be adjusted within the following range. There is the relationship as shown below between the signals of the wireless remote controller and the setting temperature.

		Signals of wireless remote controller (Display)												
		-6	-5	-4	-3	-2	-1	±0	+1	+2	+3	+4	+5	+6
Setting temperature	Cooling	18	19	20	21	22	23	24	25	26	27	28	29	30
	Dehumidifying	19	20	21	22	23	24	25	26	27	28	29	30	31
	Heating	20	21	22	23	24	25	26	27	28	29	30	31	32

(3) FDTC series

Refer to page 19.

1.6 Operation permission/prohibition control

(Refer to the FDTC series by 25 page)

The air conditioner operation is controlled by releasing the jumper wire (J3) on the indoor PCB and inputting the external signal into the CnT.

Note (1) Please install the separately-sold Interface kit (SC-BIK-E). Remove the jumper wire (J1 or J3) from the Interface kit circuit board.

(1) The operation mode is switched over between Permission and Prohibition by releasing the jumper wire (J3)

on the indoor PCB.

When the jumper wire (J3) is short circuited	When the jumper wire (J3) is released
Normal operation is enable (when shipping)	Permission / Prohibition mode
When CnT input is set to ON, the operation starts	When Cnt input is set to ON, the operation mode is
and if the input is set to OFF, the operation stops.	changed to permission and if input is set to OFF the
For the CnT and remote control inputs, the input	operation is prohibited.
which is activated later has priority and can start and	
stop the operation.	

(2) In the case of CnT input ON (Operation permission)

- (a) The air conditioner can be operated or stopped by the remote control signal.
 - (When the "CENTER" mode is set, the operation can be controlled only by the center input.)
- (b) When the CnT input is changed from OFF to ON, the air conditioner operation mode is changed depending on the status
 - of the jumper wire (J1) on the indoor control board.

When the jumper wire (J1) is short circuited	When the jumper wire (J1) is released
The signal (1) above starts the air conditioner.	When the CnT input is set to ON, the air conditioner
(Shipping status)	starts operation. After that, the operation of the air conditioner depends on (a) above. (Local status)

(3) In the case of CnT input OFF (Operation prohibition)

- (a) Air-conditioner is unable to control the operation/stop, ect. in accordance with signals from the remote controller signal wire.
- (b) Air-conditioner stops as it changes CnT input $ON \rightarrow OFF$.

1.7 External control (remote display)/control of input signal

(Refer to the FDTC series by 25 page)

(1) External control (remote display) output

Following output connectors (CNT) are provided on the printed circuit board of indoor unit.

Note (1) Please install the separately-sold Interface kit (SC-BIK-E). The output connector (CNT) is located on the circuit board of the Interface kit.

- Operation output: Power to engage DC 12V relay (provided by the customer) is outputted during operation.
- Heating output: Power to engage DC 12V relay (provided by the customer) is outputted during the heating operation.
- **Compressor OPERATION output:** Power to engage DC 12V relay (provided by the customer) is outputted while the compressor is operating.
- MALFUNCTION output: When any error occurs, the power to engage DC 12V relay (provided by the customer) is outputted.


(2) Control of input signal

Control of input signal (switch input, timer input) connectors (CNT) are provided on the printed circuit board of indoor unit. However, when the operation of air conditioner is under the Center Mode, the remote control by CnT is invalid.

(a) Level input

If the factory settings (Jumper wire J1 EXTERNAL INPUT on the PCB of indoor unit) are set, or "LEVEL INPUT" is selected in the wired remote control's indoor unit settings.

- 1) Input signal to CnT OFF \rightarrow ON - - Air conditioner ON
- 2) Input signal to CnT ON \rightarrow OFF - - Air conditioner OFF

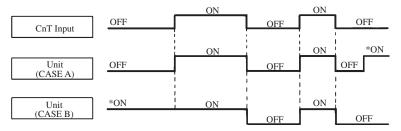


Note (1) The ON with the * mark indicates an ON operation using the remote control unit switch, etc.

(b) Pulse input

When Jumper wire J1 on the PCB of indoor unit is cut at the field or "PULSE INPUT" is selected in the wired remote control's indoor unit settings.

Input signal to CnT becomes valid at OFF \rightarrow ON only and the motion of air conditioner [ON/OFF] is inverted.

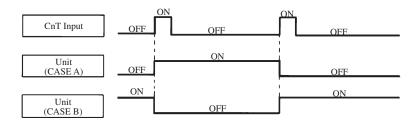

1.8 Protective control function


(1) Frost prevention control (During cooling or dehumidifying)

(a) Operating conditions

- 1) Indoor heat exchanger temperature (Th2) is lower than 2.5°C.
- 2) 8 minutes after reaching the compressor command speed except 0 rps.

(b) Detail of anti-frost operation

Operation mode	Protective control	Reset
Compressor operation	Forced outage	Operation instruction
Indoor fan	Depends on operation mode	Depends on operation mode




temperature (°C)

(c) Reset conditions: The indoor heat exchanger temperature (Th2) is 8°C or higher.

(2) Cooling overload protective control

Item	SCM 40~80 ZJ-S					
Outdoor air temperature	41°C or more	47°C or more				
Lower limit speed	30 rps	40 rps				



Outdoor air temperature (°C)

(b) Detail of operation

The lower limit of compressor command speed is set to 30 or 40 rps and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to 30 or 40 rps. However, when the thermo becomes OFF, the speed is reduced to 0 rps.

- (c) Reset conditions: When either of the following condition is satisfied.
 - 1) The outdoor air temperature is lower than 40°C.
 - 2) The compressor command speed is 0 rps.

(3) Cooling high pressure control

- (a) **Purpose:** Prevents anomalous high pressure operation during cooling.
- **(b) Detector:** Outdoor heat exchanger sensor (Th1)
- (c) Detail of operation:

(Example) Fuzzy After lapse of 30 sec. or over⁽³⁾ After lapse of 30 sec. or over⁽³⁾ After lapse of 30 sec. or over⁽³⁾ Speed 30 rps 0rps 53 58 60 Outdoor heat exchanger temperature (°C)

(1) When the outdoor heat exchanger temperature is in the range of 58~60°C, the compressor command speed is reduced by 8 rps at each 20 seconds.

- (2) When the temperature is 60°C or higher, the compressor is stopped.
 - (3) When the outdoor heat exchanger temperature is in the range of 53~58°C, if the compressor command speed is been maintained and the operation has continued for more than 30 seconds at the same speed, it returns to the normal cooling operation.

(4) Cooling low outdoor temperature protective control

(a)Operating conditions: When the outdoor air temperature (Th2) is 22°C or lower continues for 20 seconds while com-

pressor command speed is other than 0 rps.


(b) Detail of operation:

Notes

① The lower limit of compressor command speed is set to B or D rps and even if the speed becomes lower than B or D

rps, the speed is kept to B or D rps. However, when the thermo becomes OFF, the speed is reduced to 0 rps.

(2) The upper limit of compressor command speed is set to A or C rps, the speed is kept to A or C rps.

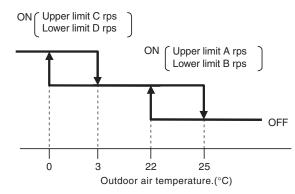

• Values of $A \sim D$

Model	SCM40ZJ-S	SCM45ZJ-S	SCM50ZJ-S	SCM60ZJ-S	SCM71ZJ-S	SCM80ZJ-S
Α	75 rps					
В	35 rps	35 rps	35 rps	30 rps	30 rps	30 rps
С	60 rps					
D	45 rps	45 rps	45 rps	40 rps	40 rps	40 rps

(c) Reset conditions: When the either of the following condition is satisfied

(1) When the outdoor air temperature (Th2) becomes 25° C or higher.

(2) When the compressor command speed is 0rps.

(5) Heating high pressure control

(a) Indoor unit side

- 1) Start condition: When the indoor heat exchanger temperature (Th2) has become higher than the start temperature for 1 minute continuously.
- 2) Contents of control: Compressor stop

Indoor air temp.(Th1)	Release temperature	Start temperature
Th1 ≦ 24°C	48.5°C	62°C
24°C < Th1≦27°C	47.5°C	61°C
27°C < Th1	46.5°C	60°C

3) Release condition: When the indoor heat exchanger temperature (Th2) has become lower than the release tempera-

ture.

(b) Outdoor unit side

- 1) Start condition: When the indoor heat exchanger temperature (Th2) has risen to a specified temperature while the compressor is turned on.
- 2) Compressor command speed is controlled according to the zones of indoor heat exchanger temperature as shown by the following table.

	Th2 < P1	P1 ≦ Th2 < P2	P2 ≦ Th2 < P3	P3 ≦ Th2
Protection control speed (NP)	Normal	Retention	NP-4rps	NP-8rps
Sampling time (s)	Normal	20	20	20

Model SCM40~50

• Model SCM40~50 Unit: °C					
NP Th2	P1	P2	P3		
10 ≦ NP < 115	45	52	57.5		
115 ≦ NP < 120	45 ~ 43	52 ~ 50	57.5 ~ 55		
120 ≦ NP	43	50	55		

• Model SCM60~80 Unit: °C					
NP Th2	P1	P2	P3		
10 ≦ NP < 90	45	52	57		
90 ≦ NP < 100	45 ~ 44.5	52 ~ 49.5	57 ~ 54		
100 ≦ NP < 110	44.5 ~ 44	49.5 ~ 47.5	54 ~ 51		
110 ≦ NP < 120	44 ~ 43	47.5 ~ 45	51 ~ 48		
120 ≦ NP	43	45	48		

(6) Heating overload protective control

(a) Indoor unit side

- 1) Operating conditions : When the outdoor air temperature (Th2) is 17°C or higher continues for 30 seconds while the compressor command speed other than 0 rps.
- 2) Detail of operation : The indoor fan is stepped up by 1 speed step. [Upper limit 8th (SRF, SRR:9th, FDTC:4th) speed]
- 3) Reset conditions : The outdoor air temperature (Th2) is lower than 16°C.

(b) Outdoor unit side


1) Operating conditions : When the outdoor air temperature (Th2) is 10°C or 17 °C (model 60 ~ 80:13°C or 17 °C)

or higher continues for 30 seconds while the compressor command speed other than 0 rps.

2) Detail of operation

- a) Taking the upper limit of compressor command speed range at A or C, if the output speed obtained with the fuzzy calculation exceeds the upper limit, the upper limit value is maintained.
- b) The lower limit of compressor command speed is set to B or D and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to B or D. However, when the thermo becomes OFF, the speed is reduced to 0 prs.
- c) Inching prevention control is activated and inching prevention control is carried out with the minimum speed set at B or D.


3) Reset conditions: The outdoor air temperature (Th2) is lower than 8° C (model $60 \sim 80:11^{\circ}$ C).



Note(1) Value in () are for the model SCM40, 45.

(7) Heating low outdoor temperature protective control

- (a) **Operating conditions:** When the outdoor air temperature (Th2) is lower than 4°C or higher continues for 30 seconds while the compressor command speed is other than 0 rps.
- (b) **Detail of operation:** The lower limit compressor command speed is change as shown in the figure below.



- (c) **Reset conditions:** When either of the following condition is satisfied.
 - 1) The outdoor air temperature (TH2) becomes 6°C.
 - 2) The compressor command speed is 0 rps.

(8) Freezing cycle system protective control

- (a) Starting condition: This control starts when the following conditions are met.
 - When it has elapsed 30 minutes after the compressor was changed from OFF to ON in the cooling operation mode for more than 5 minutes.
 - 2) When the compressor command speed has met the following conditions.
 - 3) When the indoor air temperature of running indoor unit (Th1) and the indoor heat exchanger temperature (Th2) have met the following condition even on one unit.

Unit	Compressor command speed	Indoor air temperature (Th1, ℃)	Indoor air temperature (Th1) and indoor heat exchanger temperature (Th2)	Duration
1	40 (60) rps		Th1 - 4 < Th2	
2	50 (70) rps	$10 \leq \text{Th} 1 \leq 40$	1111 - 4 < 1112	5 minute
3	60 (80) rps	$10 \equiv 1111 \equiv 40$	Th1 - 3 < Th2	5 minute
4	70 rps		Th1 - 2 < Th2	

Note (1) Value in () are for the model 40 - 50.

(b) Contents of control

- 1) Stop the compressor and delay the start, and then restarts.
- 2) Compressor stops by the abnormal stop when the compressor stop has occurred 3 times in one hour.

(9) Crankcase heater

(a) Operating conditions (When all the conditions below are satisfied)

① After the operation mode is changed to stop and the compressor command speed becomes 0 rps continuously for 30 minutes.

(2) When the temperature detected by the outdoor air temperature (Th2) is 10°C or lower after the compressor stops.

(b) Detail of operation

The crankcase heater operates, warming up the compressor, then refrigerant begins circulating smoothly when the cooler starts its heating operation, and heating begins.

(c) Restoration conditions

When the temperature detected by the outdoor air temperature (Th2) reaches 12°C or higher, or the operation mode changes from stop to cooling or heating.

(10) Inching prevention


When the compressor becomes to the thermo operation within 5 minutes since operation start or becomes dehumidifying operation, the operation is continued with the compressor command speed of minimum rps forcibly.

(11) Compressor overheat protection

(a) **Purpose:** It is designed to prevent deterioration of oil, burnout of motor coil and other trouble resulting from the compressor overheat.

(b) Detail of operation

1) Speeds are controlled with temperature detected by the sensor (Th3) mounted on the discharge pipe.

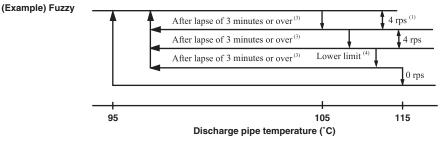

- Notes (1) When the discharge pipe temperature is in the range of $105 \sim 115^{\circ}$ C, the speed is reduced by 4 rps.
 - (2) When the discharge pipe temperature is raised and continues operation for 20 seconds without changing, then the speed is reduced again by 4 rps.
 (3) If the discharge pipe temperature is in the range of 95~105°C even when the compressor command speed is maintained for 3 minutes when the temperature is in the range of 95~105°C, the speed is raised by 1 rps and kept at that speed for 3 minutes. This process is repeated until the command speed is reached.
 - (4) Lower limit speed

Model	Item	Cooling	Heating
Lower limit speed	$40 \sim 50$	32 rps	32 rps
Lower mint speed	60 ~ 80	25 rps	32 rps

2) If the temperature of 115°C is detected by the sensor on the discharge pipe, then the compressor will stop immediately. When the discharge pipe temperature drops and the time delay of 3 minutes is over, the unit starts again within 1 hour but there is no start at the third time.

(12) Current safe

- (a) **Purpose:** Current is controlled not to exceed the upper limit of the setting operation current.
- (b) Detail of operation: Input current to the converter is monitored with the current sensor fixed on the printed circuit board of the outdoor unit and, if the operation current value reaches the limiting current value, the compressor command speed is reduced.

If the mechanism is actuated when the compressor command speed is less than 30 rps, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(c) Current safe control value: Set this using the jumper wire (J1 or J2) on the outdoor PCB. Control starts when it exceeds the control value.

1) Switching with jumper wire

		Jumper	wire (J2)
		Short-circuit (At shipping from factory)	Short-circuit
	Short-circuit (At shipping from factory)	Current safe ①	Current safe (2)
Jumper wire (J1)	Open	Current safe ③	Current safe ③

2) Control value

						Unit: A
Model	Current safe ①		Current safe (2)		Current safe 3	
	Cooling	Heating	Cooling	Heating	Cooling	Heating
SCM 40, 45, 50ZJ - S	10.0	12.0	10.0	10.0	7.5	7.5
SCM 60ZJ - S	11.0	14.0	10.0	10.0	7.5	7.5
SCM 71, 80ZJ - S	13.0	16.0	10.0	10.0	7.5	7.5

(13) Current cut

- (a) **Purpose:** Inverter is protected from overcurrent.
- (b) Detail of operation: Output current from the inverter is monitored with a shunt resistor and, if the current exceeds the setting value, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(14) Outdoor unit failure

This is a function for determining when there is trouble with the outdoor unit during air conditioning.

The compressor is stopped if any one of the following in item (a), (b) is satisfied. Once the unit is stopped by this function, it is not restarted.

- (a) When the input current is measured at 1 A or less for 3 continuous minutes or more.
- (b) If the compressor command sends a 0 rps signal to the indoor unit 3 times or more within 20 minutes of the power being turned on.

(15) Indoor fan motor protection (Refer to the FDTC series by 23 page)

When the air conditioner is operating and the indoor fan motor is turned ON, if the indoor fan motor has operated at 300 (SRF:150) rpm or under for more than 30 seconds, the unit enters first in the stop mode and then stops the entire system.

(16) Discharge pipe sensor disconnection protection control

- (a) When the compressor command speed is other than 0 rps.
 - 1) Th3(10)–Th3(0) < 8 °C, and Th3(10)–Th2(10) < 5 °C

The compressor command speed is set on A rps for 5 minutes. After 5 minutes, the compressor command speed is set on B rps for 5 minutes.

2) $Th_{3}(20) - Th_{3}(15) < 5 \circ C$:

The compressor command speed is set on 0 rps.

(b) Once the unit is stopped by this function, it is not restarted.

Notes (1) Th3(X): After compressor operation, the discharge pipe sensor temperature after X minutes.

(2) Th2(X): After compressor operation, the outdoor air sensor temperature after X minutes.

• Values of A, B

Model	SCM40ZJ-S	SCM45ZJ-S	SCM50ZJ-S	SCM60ZJ-S	SCM71ZJ-S	SCM80ZJ-S
Α	30 rps	30 rps	30 rps	20 rps	20 rps	20 rps
В	60 rps					

(17) Regulation of outdoor air flow

(a) The fan operates as follows according to the compressor command speed. (Except during defrost.)

♦SCM40~60ZJ-S

	Coo	oling	Heating		
	Model 40: Less than 40	Model 40: 40 or more	Model 40: Less than 56	Model 40: 56 or more	
	Model 45: Less than 40	Model 45: 40 or more	Model 45: Less than 56	Model 45: 56 or more	
Compressor speed (rps)	Model 50: Less than 48	Model 50: 48 or more	Model 50: Less than 61	Model 50: 61 or more	
	Model 60: Less than 48	Model 60: 48or more	Model 60: Less than 61	Model 60: 61 or more	
Outdoor fan speed 5th speed		6th speed	5th speed	6th speed	

♦SCM71, 80 ZJ-S

	Cooling				Heating			
Compressor speed (rps)	Less than 31	More than 31 but 46 or less	More than 46 but 66 or less	66 or more	Less than 31	More than 31 but 66 or less	More than 66 but 85 or less	85 or more
Outdoor fan speed	3rd speed	4th speed	5th speed	6th speed	3rd speed	4th speed	5th speed	6th speed

(b) If the outdoor unit's fan speed drops, the outdoor fan is run for 1 minute at that speed.

(18) Serial signal transmission error protection

- (a) **Purpose:** Prevents malfunction resulting from error on the indoor \leftrightarrow outdoor signals.
- (b) Detail of operation: If the compressor is operating and a serial signal cannot be received from the indoor control with outdoor control having serial signals continues for 7 minute and 35 seconds, the compressor is stopped.

After the compressor has been stopped, it will be restarted after the compressor start delay if a serial signal can be received again from the indoor control.

(19) Rotor lock

If the motor for the compressor does not turn after it has been started, it is determined that a compressor lock has occurred and the compressor is stopped.

(20) Outdoor fan motor protection

If the outdoor fan motor has operated at 75 rpm or under for more than 30 seconds, the compressor and fan motor are stopped.

(21) Outdoor fan control at low outdoor temperature

Cooling

- (a) **Operating conditions:** When the outdoor air temperature (Th2) is 22°C or lower continues for 30 seconds while the compressor command speed is other than 0 rps.
- (b) Detail of operation: After the outdoor fan operates at A speed for 60 seconds; the corresponding outdoor heat

exchanger temperature shall implement the following controls.

• Value of A				
	Outdoor fan			
Outdoor air temperature > 10°C	2nd speed			
Outdoor air temperature ≦ 10°C	1st speed			

1) Outdoor heat exchanger temperature (Th1) $\leq 22^{\circ}$ C

After the outdoor fan speed drops (down) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is lower than 22°C, gradually reduce the outdoor fan speed by 1 speed.

•]	lower	limit	speed
-----	-------	-------	-------


	Lower limit speed
Outdoor air temperature > 16°C	2nd speed
Outdoor air temperature ≦ 16°C	1st speed

- 22°C < Outdoor heat exchanger temperature (Th1) ≤ 40°C
 After the outdoor fan speed maintains at A speed for 20 seconds; if the outdoor heat exchanger temperature is 22°C~
 40°C, maintain outdoor fan speed.
- 3) Outdoor heat exchanger tempeature (Th1) > 40°C After the outdoor fan speed rises (up) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is higher than 40°C, gradually increase outdoor fan speed by 1 speed. (Upper limit 4th (model 71,80:3rd) speed)
- (c) Reset conditions: When either of the following conditions is satisfied
 - 1) The outdoor air temperature (Th2) is 24°C or higher.
 - 2) The compressor command speed is 0 rps.

- Heating
- (a) **Operating conditions:** When the outdoor air temperature (Th2) is 3°C or lower continues for 30 seconds while the compressor command speed is other than 0 rps.
- (b) Detail of operation: The outdoor fan is stepped up by 1 speed. (Upper limit 7th speed)
- (c) Reset conditions: When either of the following conditions is satisfied
 - 1) The outdoor air temperature (Th2) is 5°C or higher.
 - 2) The compressor command speed is 0 rps.


(22) Outdoor unit fan control at overload

- Cooling
- (a) Start condition: When the outdoor air temperature (Th2) has risen higher than 41°C for 30 seconds continuously while the compressor is operating.



Outdoor air temperature(°C)

- (b) Contents of control: The outdoor unit fan tap is brought up by 3 steps (Higher limit is 6th tap.)
- (c) Release condition: When the compressor is turned off or the outdoor heat exchanger temperature (Th1) has dropped lower than 40°C.
- Heating
- (a) Start condition: When the outdoor air temperature (Th2) has risen higher than 13°C for 30 seconds continuously while the compressor is operating.



Outdoor heat exchanger temperature(°C)

- (b) Contents of control: The outdoor unit fan tap is brought down by 3 steps (Lower limit is 2nd tap.)
- (c) Release condition: When the compressor is turned off or the outdoor heat exchanger temperature (Th1) has dropped lower than 10°C.

2 MAINTENANCE DATA

2.1 SRK, SRF and SRR series

(1) Cautions

- (a) If you are disassembling and checking an air conditioner, be sure to turn off the power before beginning. When working on indoor units, let the unit sit for about 1 minute after turning off the power before you begin work. When working on an outdoor unit, there may be an electrical charge applied to the main circuit (electrolytic condenser), so begin work only after discharging this electrical charge (to DC 10 V or lower).
- (b) When taking out printed circuit boards, be sure to do so without exerting force on the circuit boards or package components.
- (c) When disconnecting and connectors, take hold of the connector housing and do not pull on the lead wires.

(2) Items to check before troubleshooting


- (a) Have you thoroughly investigated the details of the trouble which the customer is complaining about?
- (b) Is the air conditioner running? Is it displaying any self-diagnosis information?
- (c) Is a power supply with the correct voltage connected?
- (d) Are the control lines connecting the indoor and outdoor units wired correctly and connected securely?
- (e) Is the outdoor unit's service valve open?

(3) Troubleshooting procedure (If the air conditioner does not run at all)


If the air conditioner does not run at all, diagnose the trouble using the following troubleshooting procedure. If the air conditioner is running but breaks down, proceed to troubleshooting step (4).

Important When all the following conditions are met, we say that the air conditioner will not run at all.

- (a) The RUN light does not light up.
- (b) The flaps do not open.
- (c) The indoor unit fan motors do not run.
- (d) The self-diagnosis display does not function.

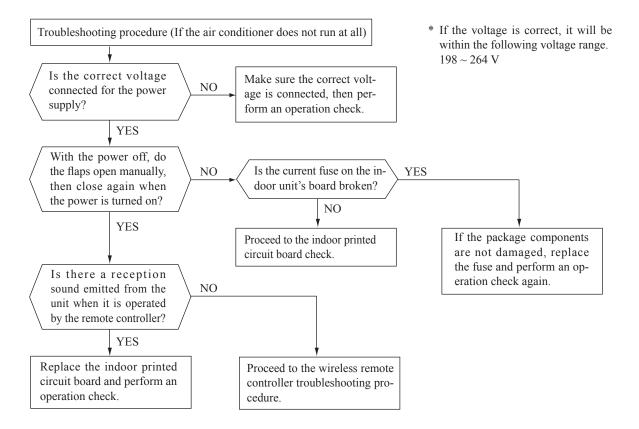

(4) Troubleshooting procedure (If the air conditioner runs)

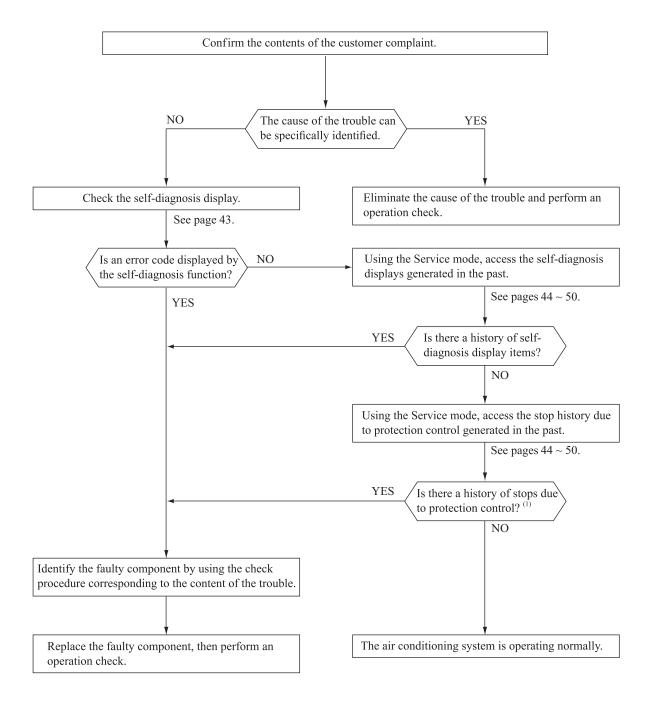

Note (1) Even in cases where only intermittent stop data are generated, the air conditioning system is normal. However, if the same protective operation recurs repeatedly (3 or more times), it will lead to customer complaints. Judge the conditions in comparison with the contents of the complaints.

(5) Self-diagnosis table

When this air conditioner performs an emergency stop, the reason why the emergency stop occurred is displayed by the flashing of display lights. If the air conditioner is operated using the remote controller 3 minutes or more after the emergency stop, the trouble display stops and the air conditioner resumes operation. ⁽¹⁾

Indoor unit d RUN light	display panel TIMER light	Outdoor main PCB Red LED	Wired ⁽²⁾ remote controller display	Description of trouble	Cause	Display (flashing) condition
1 time flash	ON	Stays OFF	_	Heat exchanger sensor 1 error	 Broken heat exchanger sensor 1 wire, poor connector connection Indoor PCB is faulty 	When a heat exchanger sensor 1 wire disconnection is detected while operation is stopped. (If a temperature of -28° C or lower is detected for 15 seconds, it is judged that the wire is disconnected.) (Not displayed during operation.)
2 times flash	ON	Stays OFF	_	Room temperature sensor error	 Broken room temperature sensor wire, poor connector connection Indoor PCB is faulty 	When a room temperature sensor wire disconnection is detected while operation is stopped. (If a temperature of -45° C or lower is detected for 15 seconds, it is judged that the wire is disconnected.) (Not displayed during operation.)
3 times flash	ON	Stays OFF	_	Heat exchanger sensor 2 error	Broken heat exchanger sensor 2 wire, poor connector connection Indoor PCB is faulty	When a heat exchanger sensor 2 wire disconnection is detected while operation is stopped. (If a temperature of -28° C or lower is detected for 15 seconds, it is judged that the wire is disconnected.) (Not displayed during operation.)
4 times flash	ON	Stays OFF	E 9	Drain ⁽³⁾ trouble	 Defective drain pump (DM), broken drain pump wire Anomalous float switch operation Defective indoor PCB faulty 	If the float switch OPEN is defected for 3 seconds continuously or if float switch connector or wire is disconnected.
6 times flash	ON	Stays OFF	E 16	Indoor fan motor error	• Defective fan motor, poor connector connection	When conditions for turning the indoor unit's fan motor on exist during air conditioner operation, an indoor unit fan motor speed of 300 (SRF : 150) rpm or lower is measured for 30 seconds or longer. (The air conditioner stops.)
Keeps flashing	1 time flash	8 times flash	E 38	Outdoor air temperature sensor error	 Broken outdoor air temp. sensor wire, poor connector connection Outdoor main PCB is faulty 	-55° C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. Or -55° C or higher is detected for within 20 seconds after power ON. (The compressor is stopped.)
Keeps flashing	2 times flash	8 times flash	E 37	Outdoor heat exchanger sensor error	 Broken heat exchanger sensor wire, poor connector connection Outdoor main PCB is faulty 	-55° C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. Or -55° C or higher is detected for within 20 seconds after power ON. (The compressor is stopped.)
Keeps flashing	4 times flash	8 times flash	E 39	Discharge pipe sensor error	 Broken discharge pipe sensor wire, poor connector connection Outdoor main PCB is faulty 	-25°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. (The compressor is stopped.)
Keeps flashing	5 times flash	8 times flash	E 53	Outdoor suction pipe sensor error	 Broken suction pipe sensor wire, poor connector connection Outdoor sub PCB is faulty 	−55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. Or −55°C or higher is detected for within 20 seconds after power ON. (The compressor is stopped)
ON	1 time flash	1 time flash	E 42	Current cut	Compressor locking, open phase on compressor output, short circuit on power transistor, service valve is closed	The compressor output current exceeds the set value during compressor start. (The air conditioner stops.)
ON	2 times flash	2 times flash	E 59	Trouble of outdoor unit	Broken compressor wire Compressor blockage	When there is an emergency stop caused by trouble in the outdoor unit, or the input current value is found to be lower than the set value. (The air conditioner stops.)
ON	3 times flash	3 times flash	E 58	Current safe stop	 Overload operation Overcharge Compressor locking 	When the compressor command speed is lower than the set value and the current safe has operated. (the compressor stops)
ON	4 times flash	1 time flash	E 51	Power transistor error	Broken power transistor	When the power transistor is judged breakdown while compressor starts. (The compressor is stopped.)
ON	5 times flash	5 times flash	E 36	Over heat of compressor	Gas shortage, defective discharge pipe sensor, service valve is closed	When the value of the discharge pipe sensor exceeds the set value. (The air conditioner stops.)
ON	6 times flash	6 times flash	E 5	Error of signal transmission	• Defective power supply, Broken signal wire, defective indoor/outdoor sub PCB	When there is no signal between the indoor PCB and outdoor PCB for 10 seconds or longer (when the power is turned on), or when there is no signal for 7 minute 35 seconds or longer (during operation)(the compressor is stopped).
ON	7 times flash	Keeps flashing	E 48	Outdoor fan motor error	• Defective fan motor, poor connector connection	When the outdoor unit's fan motor speed continues for 30 seconds or longer at 75 rpm or lower. (3 times) (The air conditioner stops.)
ON	Keeps flashing	2 times flash	E 35	Cooling high pressure protecton	 Overload operation, overcharge Broken outdoor heat exchange sensor wire Service valve is closed 	When the value of the outdoor heat exchanger sensor exceeds the set value.
2 times flash	2 times flash	7 times flash	E 60	Rotor lock	 Defective compressor Open phase on compressor Defective outdoor PCB 	If the compressor motor's magnetic pole positions cannot be correctly detected when the compressor starts. (The air conditioner stops.)
5 times flash	ON	2 times flash	E 47	Active filter voltage error	• Defective active filter	When the wrong voltage connected for the power supply. When the outdoor main PCB is faulty
7 times flash	ON	2 times flash	E 57	Refrigeration cycle system protective control	Service valve is closed.Refrigerant is insufficient	When refrigeration cycle system protective control operates.
-	_	4 times flash	E 45	Outdoor sub PCB communication error	 Outdoor sub PCB fauly Poor connection of wire between outdoor sub PCB – main PCB Communication error for 15 minutes: Detected more that 4 times 	
_	_	Stays OFF	E 1	Error of wired remote controller wiring	Broken wired remote controller wire, defective indoor PCB	The wired remote controller wire Y is open. The wired remote controller wires X and Y are reversely connected. Noise is penetrating the wired remote controller lines. The wired remote controller or indoor PCB is faulty. (The communications circuit is faulty.)
Notae (1)T	·			d using the rem	ata aantrallar far 2 minutas afta	

Notes (1)The air conditioner cannot be restarted using the remote controller for 3 minutes after operation stops. (2)The wired remote controller is optional parts. (3)SRR series only.


(6) Service mode (Trouble mode access function)

This air conditioner is capable of recording error displays and protective stops (service data) which have occurred in the past. If self-diagnosis displays cannot be confirmed, it is possible to get a grasp of the conditions at the time trouble occurred by checking these service data.


Term	Explanation
Service mode	The service mode is the mode where service data are displayed by flashing of the display lights when the operations in item (b) below are performed with the indoor controller.
Service data	These are the contents of error displays and protective stops which occurred in the past in the air conditioner system. Error display contents and protective stop data from past anomalous operations of the air conditioner system are saved in the indoor unit controller's non-volatile memory (memory which is not erased when the power goes off). There are two types of data, self-diagnosis data and stop data, described below.
Self-diagnosis data	These are the data which display the reason why a stop occurred when an error display(self- diagnosis display) occurred in an indoor unit. Data are recorded for up to 5 previous occurrences. Data which are older than the 5th previous occurrence are erased. In addition, data on the temperature of each sensor (room temperature, indoor heat exchanger, outdoor heat exchanger, outdoor air temperature, discharge pipe), remote controller information (operation switching, fan speed switching) are recorded when trouble occurs, so more detailed information can be checked.
Stop data	These are the data which display the reason by a stop occurred when the air conditioning system performed protective stops, etc. in the past. Even if stop data alone are generated, the system restarts automatically. (After executing the stop mode while the display is normal, the system restarts automatically.) Data for up to 10 previous occasions are stored. Data older than the 10th previous occasion are erased. (Important) In cases where transient stop data only are generated, the air conditioner system may still be normal. However, if the same protective stop occurs frequently (3 or more times), it could lead to customer complaints.

(a) Explanation of terms

(b) Service mode display procedure

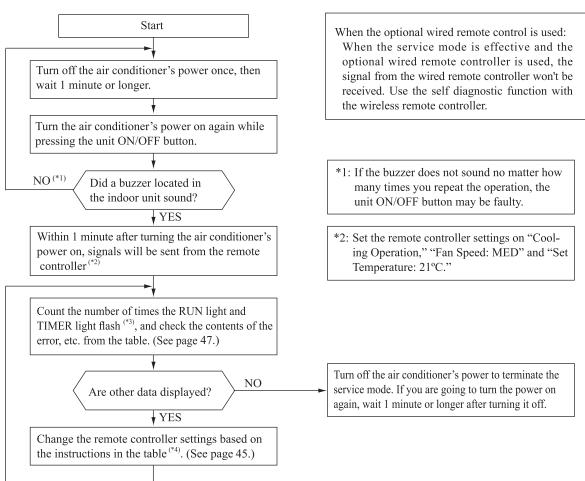

*3: To count the number of flashes in the service mode, count the number of flashes after the light lights up for 1.5 second initially (start signal). (The time that the light lights up for 1.5 second (start signal) is not counted in the number of flashes.)

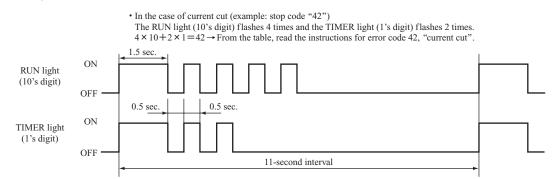

*4: When in the service mode, when the remote controller settings (operation switching, fan speed switching, temperature setting) are set as shown in the following table and sent to the air conditioner unit, the unit switches to display of service data.

1) Self-diagnosis data

What are Self-.......These are control data (reasons for stops, temperature at each sensor, remote controller information) diagnosis Data? from the time when there were error displays (abnormal stops) in the indoor unit in the past.

Data from up to 5 previous occasions are stored in memory. Data older than the 5th previous occasion are erased. The temperature setting indicates how many occasions previous to the present setting the error display data are and the operation switching and fan speed switching data show the type of data.

Remote controller setting		Ocatoria of output data
Operation switching	Fan speed switching	Contents of output data
	MED	Displays the reason for stopping display in the past (error code).
		Displays the room temperature sensor temperature at the time the error code was displayed in the past.
		Displays the indoor heat exchanger sensor temperature at the time the error code was displayed in the past.
LO I		Displays the remote controller information at the time the error code was displayed in the past.
MED		Displays the outdoor air temperature sensor temperature at the time the error code was displayed in the past.
Heating	HI	Displays the outdoor heat exchanger sensor temperature at the time the error code was displayed in the past.
	AUTO	Displays the discharge pipe sensor temperature at the time the error code was displayed in the past.

Remote controller setting	Indicates the number of occasions previous to the present
Temperature setting	the error display data are from.
21°C	1 time previous (previous time)
22°C	2 times previous
23°C	3 times previous
24°C	4 times previous
25°C	5 times previous

Only for indoor heat exchanger sensor 2

Remote controller setting	Indicates the number of occasions previous to the present				
Temperature setting	the error display data are from.				
26°C	1 time previous (previous time)				
27°C	2 times previous				
28°C	3 times previous				
29°C	4 times previous				
30°C	5 times previous				

(Example)

Remo	te controller	setting	
Operation switching	Fan speed switching	Temperature setting	Displayed data
		21°C	Displays the reason for the stop (error code) the previous time an error was displayed.
	22°C		Displays the reason for the stop (error code) 2 times previous when an error was displayed.
Cooling	MED	23°C	Displays the reason for the stop (error code) 3 times previous when an error was displayed.
		24°C	Displays the reason for the stop (error code) 4 times previous when an error was displayed.
		25°C	Displays the reason for the stop (error code) 5 times previous when an error was displayed.


2) Stop data

Remo	te controller s	setting						
Operation switching	Fan speed switching	Temperature setting	Displayed data					
		21°C	Displays the reason for the stop (stop code) the previous time when the air conditioner was stopped by protective stop control.					
		22°C	Displays the reason for the stop (stop code) 2 times previous when the air conditioner was stopped by protective stop control					
	; LO	23°C	Displays the reason for the stop (stop code) 3 times previous when the air conditioner was stopped by protective stop control.					
		24°C	Displays the reason for the stop (stop code) 4 times previous when the air conditioner was stopped by protective stop control.					
Cooling		25°C	Displays the reason for the stop (stop code) 5 times previous when the air conditioner was stopped by protective stop control.					
Cooning		26°C	Displays the reason for the stop (stop code) 6 times previous when the air conditioner was stopped by protective stop control.					
		27°C	Displays the reason for the stop (stop code) 7 times previous when the air conditioner was stopped by protective stop control.					
		28°C	Displays the reason for the stop (stop code) 8 times previous when the air conditioner was stopped by protective stop control.					
		29°C	Displays the reason for the stop (stop code) 9 times previous when the air conditioner was stopped by protective stop control.					
		30°C	Displays the reason for the stop (stop code) 10 times previous when the air conditioner was stopped by protective stop control.					

service	shes when in mode	Stop coad					
RUN light	TIMER light (1's digit)	or Error coad	Error content	Cause	Occurrence conditions	Error display	Aut
	OFF	0	Normal	_	-	-	-
OFF	5 time flash	05	Can not receive signals for 35 seconds (if communications have recovered)	Power supply is faulty. Power supply cables and signal lines are improperly wired. Indoor or outdoor sub PCB are faulty	When 35 seconds passes without communications signals from either the outdoor unit or the indoor unit being detected correctly.	0	-
	5 time flash	35	Cooling high pressure control	Cooling overload operation. Outdoor unit fan speed drops. Outdoor heat exchanger sensor is short circuit.	When the outdoor heat exchanger sensor's value exceeds the set value.		С
	6 time flash	36	Compressor overheat 110°C	Refrigerant is insufficient. Discharge pipe sensor is faulty. Service valve is closed.	When the discharge pipe sensor's value exceeds the set value.	(2 times)	С
3 time flash	7 time flash	37	Outdoor heat exchanger sensor is abnormal	Outdoor heat exchanger sensor wire is disconnected. Connector connections are poor. Outdoor main PCB is faulty	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. 0r-55°C higher is detected for 5 seconds continuously within 20 seconds after power ON.	(3 times)	С
	8 time flash 38 Outdoor air temperature sensor is abnormal Outdoor air temperature sensor port Outdoor air temperature sensor disconnected. Connector connections are poor. Outdoor main PCB is faulty		-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after intial detection of this anomalous temperature. Or-55°C higher is detected for 5 seconds continuously within 20 seconds after power ON.	(3 times)	С		
	9 time flash	39	Discharge pipe sensor is abnormal (anomalous stop)	Discharge pipe sensor wire is disconnected. Connector connections are poor. Outdoor main PCB is faulty	-25°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after intial detection of this anomalous temperature.	(3 times)	С
4 time	2 time flash	42	Current cut	Compressor lock. Compressor wiring short circuit. Compressor output is open phase. Outdoor main PCB is faulty Service valve is closed. Electronic expansion valve is faulty. Compressor is faulty.	Compressor start fails 42 times in succession and the reason for the final failure is current cut.		С
flash	5 time flash	45	Anomalous outdoor sub PCB commuication	Outdoor sub PCB fauly. Poor connection of wire between outdoor sub PCB-main PCB.	Communication error for 15 minutes: Detected more than 15 seconds 4 times.		С
	7 time flash	47	Active filter voltage error	Defective active filter.	When the wrong voltage connected for the power supply. When the outdoor main PCB is faulty.		-
	8 time flash	48	Outdoor unit's fan motor is abnormal	Outdoor fan motor is faulty. Connector connections are poor. Outdoor main PCB is faulty.	When a fan speed of 75 rpm or lower continues for 30 seconds or longer.		С
	1 time flash	51	Short circuit in the power transistor (high side) Current cut circuit breakdown	Outdoor main PCB is faulty Power transistor is damaged.	When it is judged that the power transistor was damaged at the time the compressor started.	0	-
	3 time flash	53	Suction pipe sensor is abnormal	Suction pipe sensor wire is disconnected. Connector connections are poor. Outdoor sub PCB is faulty.	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. 0r-55°C higher is detected for 5 seconds continuously within 20 seconds after compressor ON.	(3 times)	С
5 time flash	7 time flash	57	Refrigeration cycle system protective control	Service valve is closed. Refrigerant is insufficient.	When refrigeration cycle system protective control operates.	(3 times)	C
·	8 time flash	58	Current safe	Refrigerant is overcharge. Compressor lock. Overload operation.			С
	9 time flash	59	Compressor wiring is unconnection Voltage drop	Compressor wiring is disconnected. Power transistor is damaged. Power supply construction is defective. Outdoor main PCB is faulty. Compressor is faulty.	When the current is 1A or less at the time the compressor started. When the power supply voltage drops during operation.	0	С
	OFF	60	Rotor lock	Compressor is faulty. Compressor output is open phase. Electronic expansion valve is faulty. Overload operation. Outdoor main PCB is faulty.	After the compressor starts, when the compressor stops due to rotor lock.	(2 times)	C
6 time flash	1 time flash	61	Connection lines between the indoor and outdoor units are faulty	Connection lines are faulty. Indoor or outdoor sub PCB are faulty.	When 10 seconds passes after the power is turned on without communications signals from the indoor or outdoor unit being detected correctly.	0	_
	2 time flash	62	Serial transmission error	Indoor or outdoor sub PCB are faulty. Noise is causing faulty operation.	outdoor unit being detected correctly. When 7 minute 35 seconds passes without communications signals from either the outdoor unit or the indoor unit being detected correctly.		_
	OFF	80	Indoor unit's fan motor is abnormal	Indoor fan motor is faulty. Connector connections are poor. Indoor PCB is faulty.	When the indoor unit's fan motor is detected to be running at 300 (SRF : 150) rpm or lower speed with the fan motor in the ON condition while the air conditioner is running.	0	_
	2 time flash	82	Indoor heat exchanger sensor is abnormal (anomalous stop)	Indoor heat exchanger sensor wire is disconnected. Connector connections are poor	When a temperature of -28° C or lower is sensed continuously for 40 minutes during heating operation. (the compressor stops).	0	_
8 time flash	4 time flash	84	Anti-condensation control	High humidity condition. Humidity sensor is faulty.	Anti-condensation prevention control is operating.	-	
	5 time flash	85	Anti-frost control	Indoor unit fan speed drops. Indoor heat exchanger sensor is broken wire.	When the anti-frost control operates and the compressor stops during cooling operation.	_	C
	6 time flash	86	Heating high pressure control	Heating overload operation. Indoor unit fan speed drops. Indoor heat exchanger sensor is short circuit.	When high pressure control operates during heating operation and the compressor stops.	-	0

(c) Error code, stop code table (Assignment of error codes and stop codes is done in common for all models.)

Note (1) The number of flashes when in the Service Mode do not include the 1.5 second period when the lights light up at first (starting signal). (See the example shown below.)

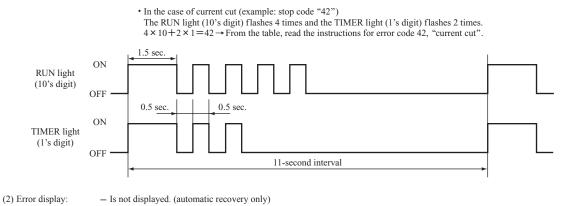

 (a) Auto Recovery:
 (b) bisplayed, the error display shows the number of times that an auto recovery occurred for the same reason has reached the number of times in (). If no () is displayed, the error display shows that the trouble has occurred once.
 (3) Auto Recovery:
 (3) Auto recovery occurs.

(d) Remote controller information tables

1) Operation switching


		1	· · · ·
2) Fan	sneed	switching
_	/ I ull	speca	Switching

isplay pattern when in service mode	Operation switching	Display pattern when in service mode
RUN light Operation switching)	when there is an abnormal stop	TIMER light (Fan speed switching)
0	AUTO	0
1	DRY	2
2	COOL	3
3	FAN	4
4	HEAT	6
		7

* If no data are recorded (error code is normal), the information display in the remote controller becomes as follows.

Remote controller setting	Display when error code is normal.
Operation switching	AUTO
Fan speed switching	AUTO

(Example): Operation switching, fan speed switching, cooling HI

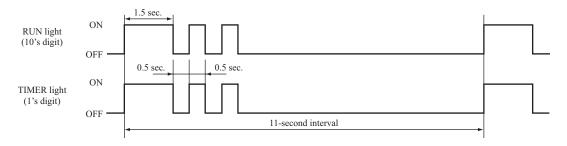


_				1						Ur	nits: °C
	TIMER light (1's digit)										
RUN lig (10's dig Buzzer sound	ht git)	0	1	2	3	4	5	6	7	8	9
,	6	-60	-61	-62	-63	-64					
	5	-50	-51	-52	-53	-54	-55	-56	-57	-58	-59
	4	-40	-41	-42	-43	-44	-45	-46	-47	-48	-49
Yes (sounds for 0.1 second)	3	-30	-31	-32	-33	-34	-35	-36	-37	-38	-39
	2	-20	-21	-22	-23	-24	-25	-26	-27	-28	-29
	1	-10	-11	-12	-13	-14	-15	-16	-17	-18	-19
	0		-1	-2	-3	-4	-5	-6	-7	-8	-9
	0	0	1	2	3	4	5	6	7	8	9
	1	10	11	12	13	14	15	16	17	18	19
	2	20	21	22	23	24	25	26	27	28	29
	3	30	31	32	33	34	35	36	37	38	39
No	4	40	41	42	43	44	45	46	47	48	49
(does not sound)	5	50	51	52	53	54	55	56	57	58	59
	6	60	61	62	63	64	65	66	67	68	69
	7	70	71	72	73	74	75	76	77	78	79
	8	80	81	82	83	84	85	86	87	88	89
	9	90	91	92	93	94	95	96	97	98	99

(e) Room temperature sensor, indoor heat exchanger sensor, outdoor air temperature sensor, outdoor heat exchanger sensor , suction pipe sensor table

* If no data are recorded (error code is normal), the display for each sensor becomes as shown below.

Sensor name	Sensor value displayed when the error code is normal
Room temperature sensor	-64°C
Indoor heat exchanger sensor	-64°C
Outdoor air temperature sensor	-64°C
Outdoor heat exchanger sensor	-64°C
Outdoor suction pipe sensor	-64°C

(Example) Room temperature, indoor heat exchanger, outdoor air temperature, outdoor heat exchanger, outdoor suction pipe : "-9°C"

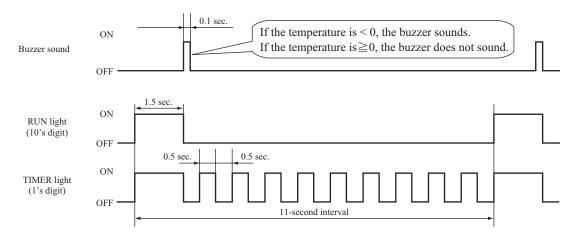

(f) Discharge pipe sensor table


										Uni	ts: °C
RUN lig (10's di Buzzer sound	TIMER light (1's digit) ht git)	0	1	2	3	4	5	6	7	8	9
3		-60	-62	-64							
Yes	2	-40	-42	-44	-46	-48	-50	-52	-54	-56	-58
(sounds for 0.1 second)	1	-20	-22	-24	-26	-28	-30	-32	-34	-36	-38
	0		-2	-4	-6	-8	-10	-12	-14	-16	-18
	0	0	2	4	6	8	10	12	14	16	18
	1	20	22	24	26	28	30	32	34	36	38
	2	40	42	44	46	48	50	52	54	56	58
No	3	60	62	64	66	68	70	72	74	76	78
(does not sound)	4	80	82	84	86	88	90	92	94	96	98
	5	100	102	104	106	108	110	112	114	116	118
	6	120	122	124	126	128	130	132	134	136	138
	7	140	142	144	146	148	150				

* If no data are recorded (error code is normal), the display for each sensor becomes as shown below.

Sensor name	Sensor value displayed when the error code is normal
Discharge pipe sensor	-64°C

(Example) Discharge pipe temperature: "122°C"

* In the case of discharge pipe data, multiply the reading value by 2. (Below, $61 \times 2 = (122^{\circ}C)$)

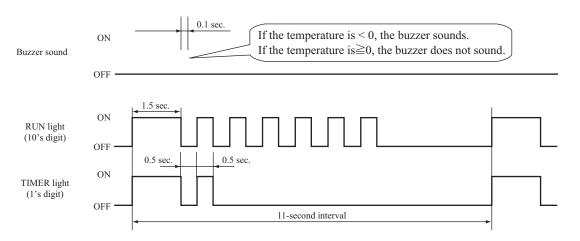



Service data record form

Customer				Model				
Date of inv	estigation							
Machine na	me							
Content of	complaint				-			
Remote controller settings		settings			Display results			Display conter
Temperature setting	Operation switching	Fan speed switching	Content of displayed d	ata	Buzzer (Yes/No.)	RUN light (Times)	TIMER light (Times)	Display conter
		MED	Error code on previous occasion.					
	Cooling	HI	Room temperature sensor on previous occasi	on.				
		AUTO	Indoor heat exchanger sensor 1 on previous of	ccasion.				
21		LO	Remote controller information on previous of	ccasion.				
		MED	Outdoor air temperature sensor on previous o	ccasion.				
	Heating	HI	Outdoor heat exchanger sensor on previous o	ccasion.				
		AUTO	Discharge pipe sensor on previous occasion.					
26	Cooling	AUTO	Indoor heat exchanger sensor 2 on previous of	ccasion.				
		MED	Error code on second previous occasion.					
	Cooling	HI	Room temperature sensor on second previous	occasion.				
		AUTO	Indoor heat exchanger sensor 1 on second prev	ious occasion.				
22		LO	Remote controller information on second pre-	vious occasion.				
		MED	Outdoor air temperature sensor on second pre-	vious occasion.				
	Heating	HI	Outdoor heat exchanger sensor on second pre	vious occasion.				
		AUTO	Discharge pipe sensor on second previous oc	casion.				
27	Cooling	AUTO	Indoor heat exchanger sensor 2 on second oc					
		MED	Error code on third previous occasion.					
	Cooling	HI	Room temperature sensor on third previous o	ccasion.				
		AUTO	Indoor heat exchanger sensor 1 on third previ	ous occasion.				
23		LO	Remote controller information on third previo					
	Heating	MED	Outdoor air temperature sensor on third previ					
		HI	Outdoor heat exchanger sensor on third previ					
		AUTO	Discharge pipe sensor on third previous occas					
28	Cooling	AUTO	Indoor heat exchanger sensor 2 on third occas					
		MED	Error code on fourth previous occasion.					
	Cooling	HI	Room temperature sensor on fourth previous	occasion.				
		AUTO	Indoor heat exchanger sensor 1 on fourth pre-					
24		LO	Remote controller information on fourth prev					
		MED	Outdoor air temperature sensor on fourth pre-					
	Heating	HI	Outdoor heat exchanger sensor on fourth prev					
		AUTO	Discharge pipe sensor on fourth previous occ					
29	Cooling	AUTO	Indoor heat exchanger sensor 2 on fouth occa					
		MED	Error code on fifth previous occasion.					
	Cooling	HI	Room temperature sensor on fifth previous of	casion.				
	-	AUTO	Indoor heat exchanger sensor 1 on fifth previo					
25		LO	Remote controller information on fifth previo					
		MED	Outdoor air temperature sensor on fifth previo					
	Heating	HI	Outdoor heat exchanger sensor on fifth previo					
		AUTO	Discharge pipe sensor on fifth previous occas					
30	Cooling	AUTO	Indoor heat exchanger sensor 2 on fifth occas					
21			Stop code on previous occasion.					
21			Stop code on second previous occasion.					
22			Stop code on third previous occasion.					
23			Stop code on fourth previous occasion.					
25		Stop code on fifth previous occasion.						
23	Cooling	Lo	Stop code on sixth previous occasion.					
26			Stop code on sixth previous occasion.					
27								
28			Stop code on eighth previous occasion.					
30			Stop code on ninth previous occasion.					
			Stop code on tenth previous occasion.					Examinar
Judgment								Examiner

Note (1) In the case of indoor heat exchanger sensor 2, match from 26 to 30 the temperature setting of remote controller. (Refor to page 45)


(7) Inspection procedures corresponding to detail of trouble

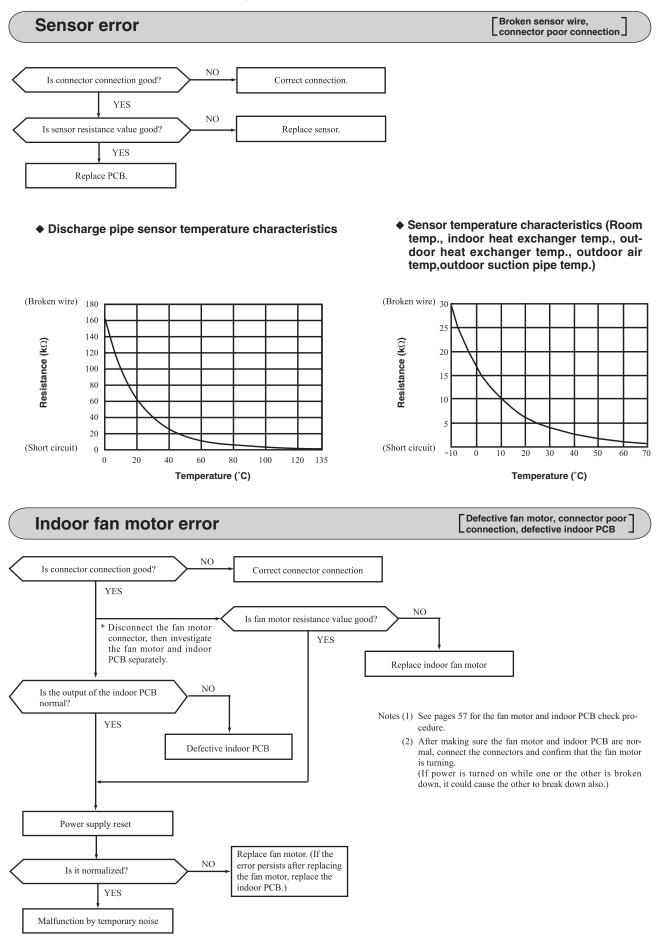


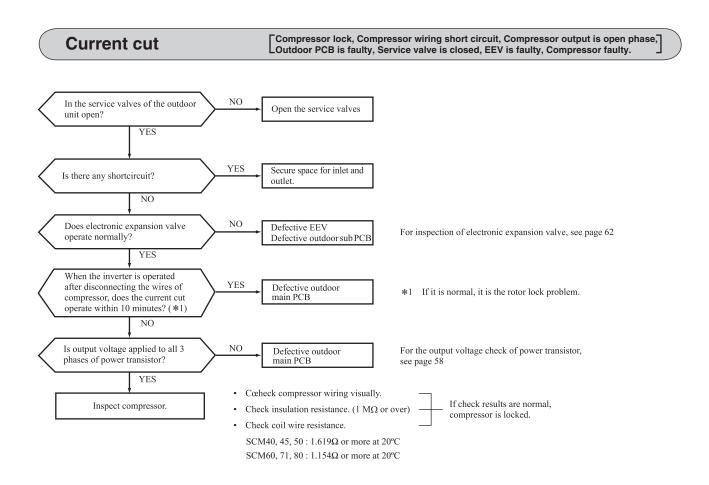


Current safe stop


Overload operation, compressor lock, overcharge

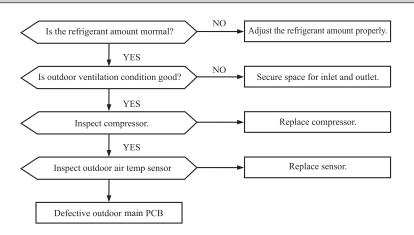


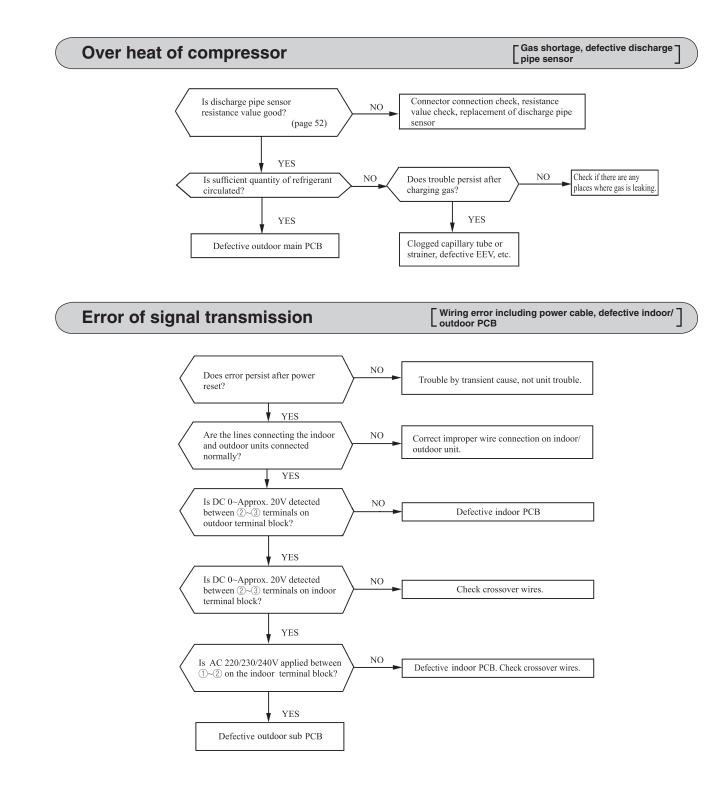


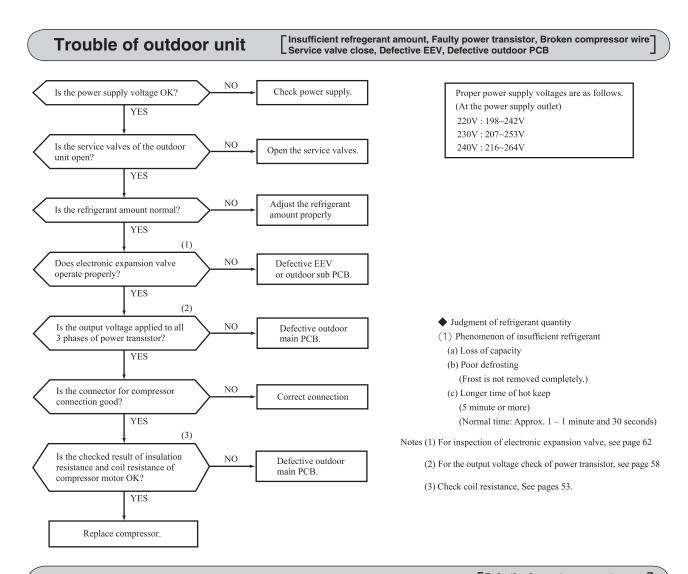

Outdoor fan motor error



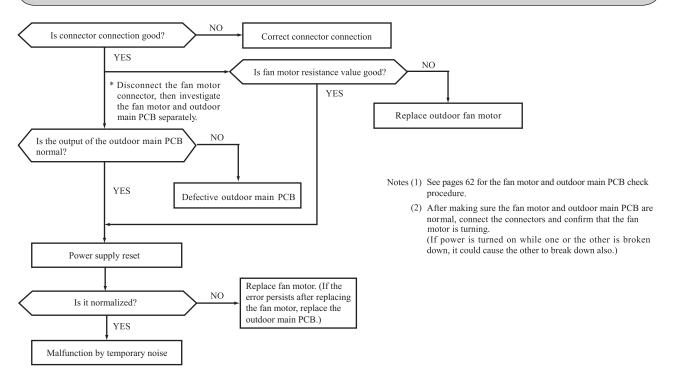

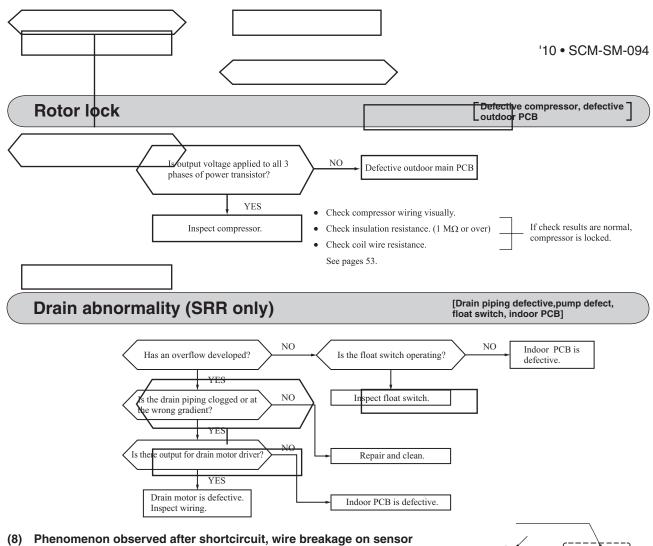


(a) Indoor	unit		
Sensor	Operation	Pheno	menon ② o
Sensor	mode	Shortcircuit	Disconnected wire
Room temperature Cooling		Release of continuous compressor operation command.	Continuous compressor operation command is not released.
sensor	Heating	Continuous compressor operation command is not released.	Release of continuous compressor operation command.
Heat exchanger sensor	Cooling	System can be operated normally.	Continiuous compressor operation command is not released. (Anti-frosting)
	Heating	High pressure control mode (Compressor stop command)	Hot keep (Indoor fan stop)
Humidity sensor ⁽¹⁾	Cooling	Refer to the table below.	Refer to the table below.
	Heating	Normal system operation is possible.	

Note (1) SRK35, 50ZJ-S, 50, 60ZJX-S, SRF25, 35, 50ZJX-S only

Humidity sensor operation

Failu	ire mode	Control input circuit resding	Air conditioning system operation		
cted.	1 Disconnected wire				
Disconnected wire	② Disconnected wire	Humidity reading is 0%	Anti-condensation control is not done.		
Disc	12 Disconnected wire				
Short Circuit	1 and 2 are shot circuited	Humidity reading is 100%	Anti-condensation control keep doing.		

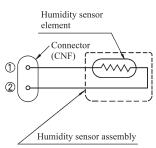


Remark: Do not perform a continuity check of the humidity sensor with a tester. If DC current is applied, it could damage the sensor.

(b) Outdoor unit

Concer	Operation	Phenomenon			
Sensor	mode	Shortcircuit	Disconnected wire		
Heat exchanger	Cooling	System can be operated normally.	Compressor stop.		
sensor	Heating	Defrosting is not performed.	Defrosting is performed for 10 minutes at approx. 40 minutes.		
Ourdoor air	Cooling	System can be operated normally.	Compressor stop.		
temperature sensor	Heating	Defrosting is not operated.	Defrosting is performed for 10 minutes at approx. 40 minutes.		
		Compressor overload protection is disabled. (Can be operated.)	Compressor stop		

(9) Checking the indoor electrical equipment

(a) Indoor PCB check procedure

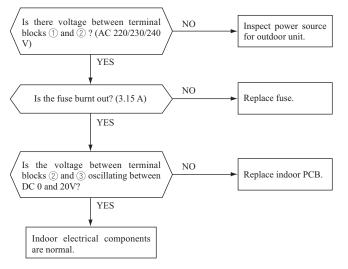


(b) Indoor unit fan motor check procedure

This is a diagnostic procedure for determining if the indoor unit's fan motor or the indoor PCB is broken down.

1) Indoor PCB output check

- a) Turn off the power.
- b) Remove the front panel, then disconnect the fan motor lead wire connector.
- c) Turn on the power. If the unit operates when the ON/OFF button is pressed, if trouble is detected after the voltages in the following figure are output for approximately 30 seconds, it means that the indoor PCB is normal and the fan motor is broken down.

If the voltages in the following figure are not output at connector pins No. (1), (4) and (5), the indoor PCB has failed and the fan motor is normal.

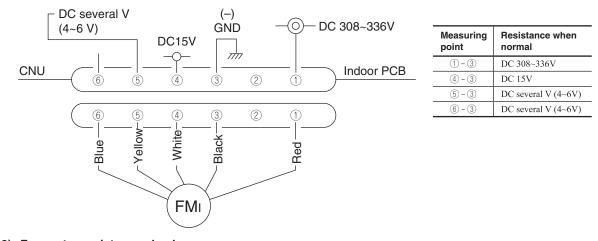

2) Fan motor resistance check

Measuring point	Resistance when normal
1) - 3) (Red - Black)	20 M Ω or higher
④-③ (White - Black)	$20 \mathrm{k}\Omega$ or higher

Notes (1) Remove the fan motor and measure it without power connected to it.

(2) If the measured value is below the value when the motor is normal, it means that the fan motor is faulty.

(C) Power transistor inspection procedure


[Use a tester with a needle indicator for the inspection. (Do not use a digital tester. Check in the AC 300 volt range.)]

(1) If there is a self-diagnosis display, inspect the compressor system (burns, wiring mistakes, etc.) If no problems are found, check the output of the power transistor.


(2) Output inspection procedure


Disconnect the terminals for the compresseor.

If an output such as the one shown in the figure on the below can be measured, the power transistor and the circuit board for the outdoor unit are normal.

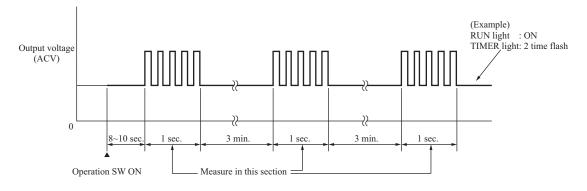

(10) How to make sure of wireless remote controller

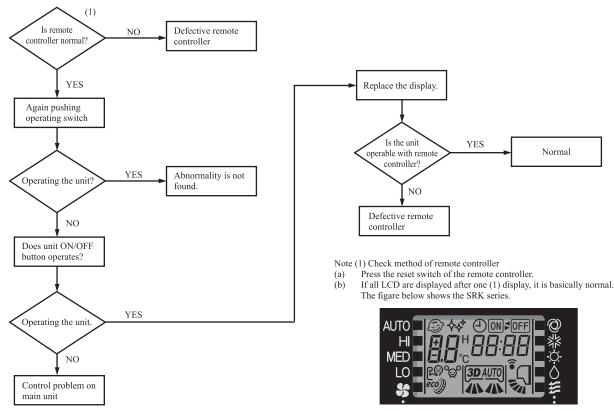

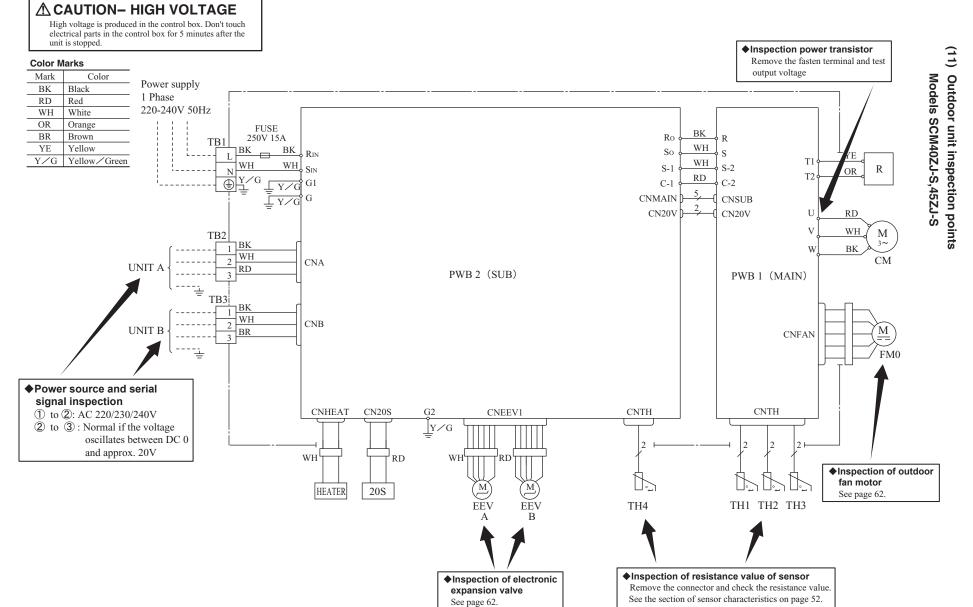




- 59 -

▲ CAUTION- HIGH VOLTAGE

High voltage is produced in the control box. Don't touch electrical parts in the control box for 5 minutes after the unit is stopped.


Color Marks



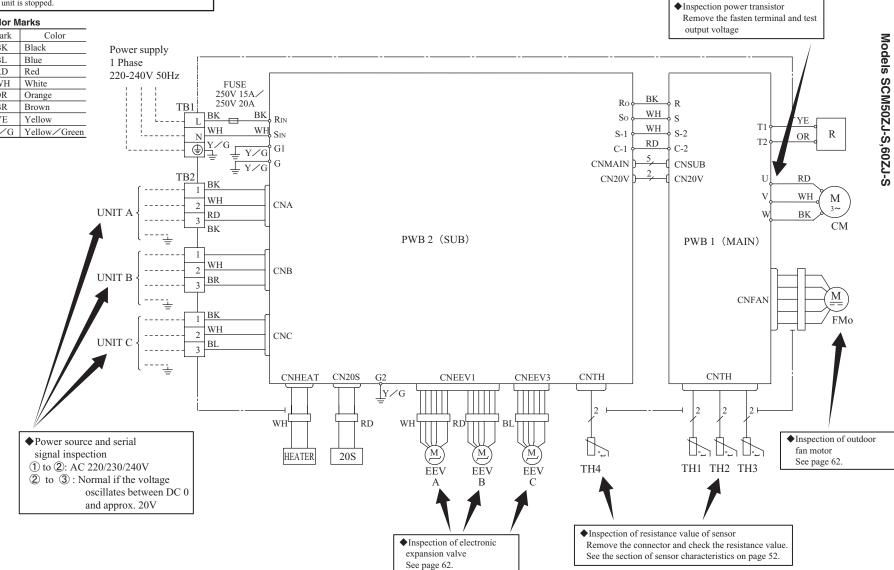

▲ CAUTION- HIGH VOLTAGE

High voltage is produced in the control box. Don't touch electrical parts in the control box for 5 minutes after the unit is stopped.

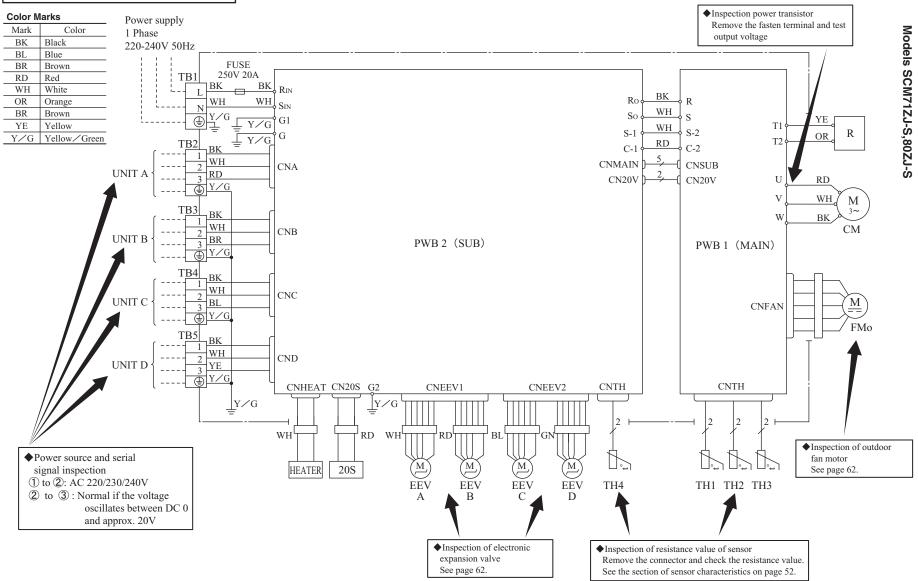


(a) Inspection of electronic expansion valve

Electronic expansion valve operates for approx. 10 seconds after the power on, in order to determine its aperture. Check the operating sound and voltage during the period of time. (Voltage cannot be checked during operation in which only the aperture change occurs.)

1) If it is heard the sound of operating electronic expansion valve, it is almost normal.

2) If the operating sound is not heard, check the output voltage.



Approx. 5 V is detected for 10 seconds after the power on.

3) If voltage is detected, the outdoor sub PCB is normal.

4) If the expansion valve does not operate (no operating sound) while voltage is detected, the expansion valve is defective.

Inspection of electronic expansion valve as a separate unit

Measure the resistance between terminals with an analog tester.

Measuring point	Resistance when normal
1-6	
1-4	$46\pm4\Omega$
1-3	(at 20°C)
1-5]

(b) Outdoor unit fan motor check procedure


• When the outdoor unit fan motor error is detected, diagnose which of the outdoor unit fan motor or outdoor main PCB is defective.

- Diagnose this only after confirming that the indoor unit is normal.
- (1) Outdoor main PCB output check
 - 1) Turn off the power.
 - 2) Disconnect the outdoor unit fan motor connector CNFAN.

3) When the outdoor unit is operated by inserting the power supply plug and pressing (ON) the backup switch for more than 5 seconds, if the voltage of pin No. ② in the following figure is output for 30 seconds at 20 seconds after turning "ON" the backup switch, the outdoor main PCB is normal but the fan motor is defective.

If the voltage is not detected, the outdoor main PCB is defective but the fan motor is normal.

Note (1) The voltage is output 3 times repeatedly. If it is not detected, the indoor unit displays the error message.

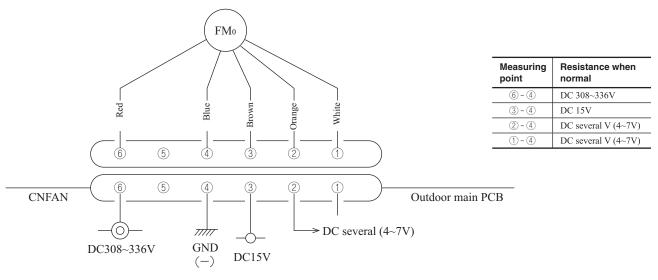

2) Fan motor resistance check

Measuring point	Resistance when normal
6 - 4 (Red - Black)	20 M Ω or higher
③ - ④ (White - Black)	$20 \mathrm{k}\Omega$ or higher

Notes (1) Remove the fan motor and measure it without power connected to it.(2) If the measured value is below the value when the motor is normal, it means that the fan motor is faulty.

2.2 FDTC series

2.2.1 Diagnosing of microcomputer circuit

(1) Selfdiagnosis function

(a) Check indicator table

Whether a failure exists or not on the indoor unit and outdoor unit can be know by the contents of remote controller error code, indoor/outdoor unit green LED (power pilot lamp and microcomputer normality pilot lamp) or red LED (check pilot lamp). (i) Indoor unit

Remote co	ontroller	Indoor co	ontrol PCB	Outdoor main PCB				Reference																		
Error code	Red LED	Red LED	Green LED (1)	Red LED	Location of trouble	Description of trouble	Repair method	page																		
		Stays OFF	Keeps flashing	Stays OFF	_	Normal operation	_	_																		
No-indication	Stays OFF	Stays OFF	Stays OFF	Stays OFF	Indoor unit power supply	Power OFF, broken wire/blown fuse, broken transformer wire	Repair	83																		
		*	Keeps		Remote controller wires	Poor connection, breakage of remote controller wire * For wire breaking at power ON, the LED is OFF.	Repair																			
		3 times flash	flashing	Stays OFF	Remote controller	Defective remote controller PCB	Replacement of remote controller	84																		
(B) WAIT INSPEC		Stays OFF	Keeps flashing	Stays OFF	Indoor-outdoor units connection wire	Poor connection, breakage of indoor-outdoor units connection wire	Repair	$85 \sim 89$																		
INSPEC	.11/0	-	nasning		Remote controller	Improper setting of master and slave by remote controller																				
F I		Stays OFF	* Keeps	Stays OFF	Remote controller wires (Noise)	Poor connection of remote controller signal wire (White) * For wire breaking at power ON, the LED is OFF intrusion of noise in remote controller wire	Repair	- 90																		
			flashing		Remote controller indoor con- trol PCB	*• Defective remote controller or indoor control PCB (defective communication circuit)?	Replacement of remote controller or PCB																			
		2 times flash	Keeps flashing	6 times flash	Indoor-outdoor units connection wire	Poor connection of wire between indoor-outdoor units during operation (disconnection, loose connection) Anomalous communication between indoor-outdoor units by noise, etc.	Repair																			
ES		2 times	Keeps	6 times	(Noise)	CPU-runaway on outdoor control PCB	Power reset or Repair																			
		flash	flashing			flash	Outdoor control PCB	*• Occurrence of defective outdoor control PCB on the way of power supply (defective communication circuit)?	Replacement of PCB	91																
		2 times flash	Keeps flashing	6 times flash	Outdoor control PCB	Defective outdoor control PCB on the way of power supply	Replacement																			
	-		nasining	inasii	Fuse	Blown fuse																				
EБ		1 time Keeps flash flashing Stays C				Stays OFF	Indoor heat exchanger tempera- ture thermistor	 Defective indoor heat exchanger temperature thermistor (defective element, broken wire, short-circuit) Poor contact of temperature thermistor connector 	Replacement, repair of temper- ature thermistor	92																
			nasning	flashing	Indoor control PCB	*• Defective indoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB																			
Ε7		1 time flash	Keeps flashing	Stays OFF	Indoor return air temperature thermistor	Defective indoor return air temperature thermistor (defective element, broken wire, short- circuit) Poor contact of temperature thermistor connector	Replacement, repair of temper- ature thermistor	93																		
	Keeps flashing	iidsii	nasning		Indoor control PCB	*- Defective indoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB																			
					Installation or operating condi- tion	Heating over-load (Anomalously high indoor heat exchanger temperature)	Repair	_																		
E8		1 time flash		Keeps flashing	Stays OFF	Indoor heat exchanger tempera- ture thermistor	Defective indoor heat exchanger temperature thermistor (short-circuit)	Replacement of temperature thermistor	94																	
					Indoor control PCB	*• Defective indoor control PCB (Defective temperature thermistor input circuit)?	Replacement of PCB																			
					Drain trouble	Defective drain pump (DM), broken drain pump wire, disconnected connector	Replacement, repair of DM																			
29		1 time	Keeps	Stays OFF	Float switch	Anomalous float switch operation (malfunction)	Repair	95																		
		flash flashing	flash flashing	n flashing	h flashing	sh flashing	ash flashing	lash flashing	flash flashing	flash flashing	flash flashing	flash flashing	flash flashing	flash flashing	flash flashing	flash flashing	flash flashing	n flashing	flashing	flashing	flashing	g Stays Off	Indoor control PCB	*• Defective indoor control PCB (Defective float switch input circuit) *• Defective indoor control PCB (Defective DM drive output circuit)?	Replacement of PCB	, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
		L			Option	Defective optional parts (At optional anomalous input setting)	Repair																			
E 10		Stays OFF	Keeps flashing	Stays OFF	Number of connected indoor units	• When multi-unit control by remote controller is performed, the number of units is over	Repair	96																		
E 16		Stays OFF	Keeps flashing	Stays OFF	Fan motor	Defective fan motor	Replacement, repair	. 97																		
		1 time	Keeps		Indoor control PCB	Defective indoor control PCB	Replacement																			
E 19 c 20		flash	flashing	Stays OFF	Indoor control PCB	Improper operation mode setting	Repair	98																		
<u>228</u>		Stays OFF	Keeps flashing	Stays OFF	Remote controller temperature thermistor	Broken wire of remote controller temperature thermistor	Repair	99																		

Note (1) Normal indicator lamp (Indoor unit: Green) extinguishes (or lights continuously) only when CPU is anomalous. It keeps flashing in any trouble other than anomalous CPU.

(2) * mark in the Description of trouble means that, in ordinary diagnosis, it cannot identify the cause definitely, and, if the trouble is repaired by replacing the part, it is judged consequently that the replaced part was defective.

(ii) Outdoor unit

Remote co	ontroller	Indoor co	ntrol PCB	Outdoor main PCB				Reference
Error code	Red LED	Red LED	Green LED	Red LED	Location of trouble	Description of trouble	Repair method	page
					Installation, operation status	Higher outdoor heat exchanger temperature	Repair	
E35		Stays OFF	Keeps flashing	2 times flash	Outdoor heat exchanger temperature sensor	Defective outdoor heat exchanger temperature sensor	Replacement, repair of temperature sensor	100
					Outdoor main PCB	*• Defective outdoor main PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
					Installation, operation status	Higher discharge temperature	Repair	
E 36		Stays OFF	Keeps flashing	5 times flash	Discharge pipe temperature sensor	Defective discharge pipe temperature sensor	Replacement, repair of temperature sensor	101
					Outdoor main PCB	*• Defective outdoor main PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
ЕЗЛ		Stays OFF	Keeps	8 times	Outdoor heat exchanger temperature sensor	Defective outdoor heat exchanger temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	102
			flashing	flash	Outdoor main PCB	*• Defective outdoor main PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
E 38		Stays OFF	Keeps flashing	8 times flash	Outdoor air temperature sensor	Defective outdoor air temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	103
			nasning	nasn	Outdoor main PCB	*• Defective outdoor main PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
E 3 9		Stays OFF	Keeps	8 times	Discharge pipe temperature sensor	Defective discharge pipe temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	104
	Keeps		flashing	flash	Outdoor main PCB	*• Defective outdoor main PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
ЕЧ2	flashing	Stays OFF	Keeps	1 time	Outdoor main PCB, compressor	Current cut (Anomalous compressor over-current)	Replacement of PCB	105 · 106
			flashing	flash	Installation, operation status	Service valve closing operation	Repair	
EYS		Stay OFF	Keeps	4 times	Outdoor main PCB	Anomalous outdoor main PCB commuication	Replacement of	107
			flashing	flash	Outdoor sub PCB	Anomalous outdoor sub PCB commuication	PCB	
ЕЧЛ		Stays OFF	Keeps flashing	2 times flash	Outdoor sub PCB	Defective active filter	Repair PCB replacement	108
E48		Stays OFF	Keeps	Keeps	Fan motor	Defective fan motor	Replacement	109
			flashing	flashing	Outdoor main PCB	Defective outdoor main PCB		
ES 1		Stays OFF	Keeps flashing	1 time flash	Power transistor error (outdoor main PCB)	Power transistor error	Replacement of PCB	110
E5 3		Stays OFF	Keeps flashing	8 times flash	Outdoor suction pipe sensor	Defective suction pipe temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	111
			nasning	nasn	Outdoor sub PCB	Defective outdoor sub PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
			Keeps	2 times	Operation status	Shortage in refrigerant quantity	Repair	
E57		Stays OFF	flashing	flash	Installation status	Service valve closing operation	Service valve opening check	112
E 58		Stays OFF	Keeps flashing	3 times flash	Overload operation Overcharge Compressor locking	• Current safe stop	Replacement	113
E59		Stays OFF	Keeps flashing	2 times flash	Compressor, outdoor main PCB	Anomalous compressor startup	Replacement	114
E60		Stays OFF	Keeps flashing	7 times flash	Compressor	Anomalous compressor rotor lock	Replacement	115

Note (1) * mark in the Description of trouble means that, in ordinary diagnosis, it cannot identify the cause definitely, and, if the trouble is repaired by replacing the part, it is judged consequently that the replaced part was defective.

(iv) Display sequence of error codes or inspection indicator lamps

Occurrence of one kind of error

Displays are shown respectively according to errors.

Section	Category of display
Error code on remote controller	• Displays the error of higher priority (When plural errors are persisting)
Red LED on indoor control PCB	Е І Е Е 10 - Е ЗЕ ЬО
Red LED on outdoor main PCB	• Displays the present errors. (When a new error has occurred after the former error was reset.)

Error detecting timing

Section	Error description	Error code	Error detecting timing
	Drain trouble (Float switch activated)	69	Whenever float switch is activated after 30 second had past since power ON.
	Communication error at initial operation	"''BWAIT'B''	No communication between indoor and outdoor units is established at initial operation.
	Remote controller communication circuit error	ΕI	Communication between indoor unit and remote controller is interrupted for mote than 2 minutes continuously after initial communication was established.
Indoor	Communication error during operation	ES	Communication between indoor and outdoor units is interrupted for mote than 2 minutes continuously after initial communication was established.
	Excessive number of connected indoor units by controlling with one remote controller	E 10	Whenever excessively connected indoor units is detected after power ON.
	Return air temperature thermistor anomaly	67	-50°C or lower is detected for 5 seconds continuously within 60 minutes after initial detection of this anomalous temperature.
	Indoor heat exchanger temperature thermistor anomaly	66	-50°C or lower is detected for 5 seconds continuously within 60 minutes after initial detection of this anomalous temperature. Or 70°C or higher is detected for 5 seconds continuously.
	Outdoor air temperature sensor anomaly	638	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous sensor. Or -55°C or higher is detected for 5 seconds continuously within 20 seconds after power ON.
Outdoor	Outdoor heat exchanger temperature sensor anomaly	637	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous sensor. Or -55°C or lower is detected for 5 seconds continuously within 20 seconds after power ON.
	Discharge pipe temperature sensor anomaly	639	-25°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous sensor.
	Suction pipe temperature sensor anomaly	853	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous sensor. Or -55°C or higher is detected for 5 seconds continuously within 20 seconds after power ON.

Error log and reset

Error indicator	Memorized error log	Reset
Remote controller display	• Higher priority error is memorized.	• Stop the unit by pressing the ON/OFF
Red LED on indoor control PCB	• Not memorized.	switch of remote controller.If the unit has recovered from anomaly, it
Red LED on outdoor main PCB	• Memorizes a mode of higher priority.	can be operated.

Resetting the error log

• Resetting the memorized error log in the remote controller

Holding down "CHECK" button, press "TIMER" button to reset the error log memorized in the remote controller.


• Resetting the memorized error log

The remote controller transmits error log erase command to the indoor unit when "VENTI" button is pressed while holding down "CHECK" button.

Receiving the command, the indoor unit erase the log and answer the status of no error.

(2) Troubleshooting procedure

When any trouble has occurred, inspect as follows. Details of respective inspection method will be described on later pages.



(3) Troubleshooting at the indoor unit

With the troubleshooting, find out any defective part by checking the voltage (AC, DC), resistance, etc. at respective connectors at around the indoor PCB, according to the inspection display or operation status of unit (the compressor does not run, fan does not run, the 4-way valve does not switch, etc.), and replace or repair in the unit of following part.

(a) Replacement part related to indoor PCB's

Control PCB, power supply PCB, temperature thermistor (return air, indoor heat exchanger), remote controller switch and fuse

Note (1) With regard to parts of high voltage circuits and refrigeration cycle, judge it according to ordinary inspection methods.

(b) Instruction of how to replace indoor control PCB

SAFETY PRECAUTIONS
Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the replacement in order to protect yourself.
 The precautionary items mentioned below are distinguished into two levels, WARNING and CAUTION.
Both mentions the important items to protect your health and safety so strictly follow them by any means.
WARNING Wrong installation would cause serious consequences such as injuries or death.
△ CAUTION Wrong installation might cause serious consequences depending on circumstances.
After completing the replacement, do commissioning to confirm there are no anomaly.
<u> </u>
Replacement should be performed by the specialist.
If you replace the PCB by yourself, it may lead to serious trouble such as electric shock or fire.
Replace the PCB correctly according to these instructions.
Improper replacement may cause electric shock or fire.
Shut off the power before electrical wiring work.
Replacement during the applying the current would cause the electric shock, unit failure or improper running.
It would cause the damage of connected equipment such as fan motor,etc.
• Fasten the wiring to the terminal securely, and hold the cable securely so as not to apply unexpected stress on the terminal.
Loose connections or hold could result in abnormal heat generation or fire.
Check the connection of wiring to PCB correctly before turning on the power, after replacement.
Defectiveness of replacement may cause electric shock or fire.
△ CAUTION
In connecting connector onto the PCB, connect not to deform the PCB. It may cause breakage or malfunction.
Insert connecter securely, and hook stopper. It may cause fire or improper running.
Bundle the cables together so as not to be pinched or be tensioned. It may cause malfunction or electric shock for disconnection or deformation.

Control PCB

1 S PSB012D931F

Replace and set up the PCB according to this instruction.

Set to an appropriate address and function using switch on PCB.					
Select the same setting with the removed PCB.					
	item switch Content of control				
	Address	SW2	Plural indoor units control by 1 remote controller		
	Test run	SW7-1	_	Normal	
	restruit	3007-1	0	Operation check/drain motor test run	
O:ON -:OFF					

② Set to an appropriate capacity using the model selector switch(SW6).

Select the same capacity with the PCB removed from the unit.

SW6	-1	-2	-3	-4	SW6
25VD	0	-	-	-	
35VD	-	0	_	-	
50VD	0	-	0	-	
60VD	0	0	0	-	
					Example setting fro 25V

③ Replace the PCB


1. Fix the PCB so as not to pitch the cords.

2. Connect connectors to the PCB. Connect a cable connector with the PCB connector of the same color.

3.Do not pass CPU surrounding about wirings.

Control PCB

Parts mounting are different by the kind of PCB.

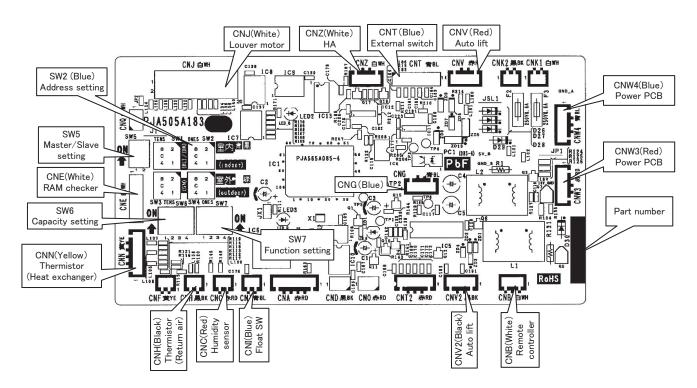


PSB012D953A

• Power PCB

This PCB is a general PCB. Replace the PCB according to this instruction.

1 Replace the PCB (refer to right dwg.)

- 1. Unscrew terminal of the wiring(yellow/green) soldered to PCB from the box.
- 2. Cut the band that binds the wiring (red and blue) from connector CNW1 and CNW2, and the wiring (yellow/green) from PCB (T2/T3). (Note 1) (However, do not cut the band that binds only the red and blue wirings.)
- 3. Replace the PCB only after all the wirings connected to the connector are removed.
- 4. Fix the board such that it will not pinch any of the wires.
- 5. Reconnect the wirings to the PCB. Wiring connector color should match with the color of connector of the PCB. (Note 2)
- 6. Let the wiring (red and blue) pass beneath the (yellow/green) wiring and bind together with band.
- 7. Screw back the terminal of wiring (yellow/green) from PCB(T1, T2/T3), that was removed in 1.
- In that case, do not place the crimping part of the wiring under the PCB. (Note 1): It might not be applicable on some models.
- (Note 2): After replacing PCB, connection between capacitor assy and connector CNP is no longer needed.

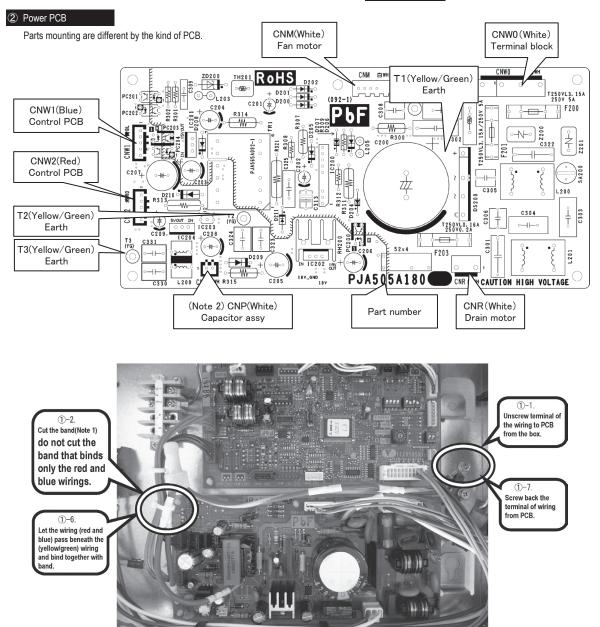

•DIP switch setting list

Switches	Description			efault setting	Remarks
SW2	Address No. setting at plural indoor units control by 1 R/C				0-F
SW6-1					
SW6-2	Model selection			nodel	See table 1
SW6-3				liouei	
SW6-4					
SW7-1	Test run, Drain motor Normal*/Test run			Normal	
SW7-2	Reserved				keep OFF
SW7-3	Powerful mode Valid*/Invalid			Valid	
SW7-4	Reserved				keep OFF
JSL1	Superlink terminal spare Normal*/switch to spare				

* Default setting

Table 1: Indoor unit model selection with SW6-1-SW6-4 0: OFF 1:ON

0: OFF 1:ON				
	25VD	35VD	50VD	60VD
SW6-1	1	0	1	1
SW6-2	0	1	0	1
SW6-3	0	0	1	1
SW6-4	0	0	0	0

(4) Check of anomalous operation data with the remote controller

Operation data can be checked with remote control unit operation.

- ① Press the CHECK button. The display change " OPER DATA
- ② Press the ◯◯ (SET) button while " OPER DATA ♥" is displayed.

T"

③ When only one indoor unit is connected to remote controller, "DATALDADING" is displayed (blinking indication during data loading).

Next, operation data of the indoor unit will be displayed. Skip to step ⑦.

④ When plural indoor units is connected, the smallest address number of indoor unit among all connected indoor unit is displayed.

[Example]:

" ⊕\$ SELECT I/U " (blinking 1 seconds) → " I/U000 ▲ " blinking.

- Select the indoor unit number you would like to have data displayed with the button.
- 6 Determine the indoor unit number with the O (SET) button.

(The indoor unit number changes from blinking indication to continuous indication)

" I/U000 " (The address of selected indoor unit is blinking for 2 seconds.)

↓

"DATA LDADING" (A blinking indication appears while data loaded.) Next, the operation data of the indoor unit is indicated.

⑦ Upon operation of the button, the current operation data is displayed in order from data number 01.

The items displayed are in the above table.

*Depending on models, the items that do not have corresponding data are not displayed.

- To display the data of a different indoor unit, press the <u>AIR CON NO.</u> button, which allows you to go back to the indoor unit selection screen.
- Pressing the OON/OFF button will stop displaying data.

Pressing the *(RESET)* button during remote control unit operation will undo your last operation and allow you to go back to the previous screen.

OIf two (2) remote controllers are connected to one (1) inside unit, only the master controller is available for trial operation and confirmation of operation data. (The slave remote controller is not available.)

Number		Data Item
01	***	(Operation Mode)
02	SET TEMP`c	(Set Temperature)
03	RETURN AIRర	(Return Air Temperature)
04	⊠SENSOR°	(Remote Controller Thermistor Tempeature)
05	THI-R1ి	(Indoor Heat Exchanger Thermistor / U Bend)
06	THI-R2°	(Indoor Heat Exchanger Thermistor /Capillary)
07	THI-R3c	(Indoor Heat Exchanger Thermistor /Gas Header)
08	I/U FANSPEED	(Indoor Unit Fan Speed)
09	DEMANDHz	(Frequency Requirements)
10	ANSWERHz	(Response Frequency)
11	I/U EEVP	(Pulse of Indoor Unit Expansion Value)
12	TOTAL I/U RUN	H (Total Running Hours of The Indoor Unit)
21	OUTDOORර්	(Outdoor Air Temperature)
22	tho-Rtc	(Outdoor Heat Exchanger Thermistor)
23	THO-R2ზ	(Outdoor Heat Exchanger Thermistor)
24	COMPHz	(Compressor Frequency)
25	HPMPa	(High Pressure)
26	LPMPa	(Low Pressure)
27	Td°	(Discharge Pipe Temperature)
28	<u> </u>	(Comp Bottom Temperature)
29	CTAMP	(Current)
30	TARGET SH°c	(Target Super Heat)
31	SHč	(Super Heat)
32	č	(Discharge Pipe Super Heat)
33	PROTECTION No	(Protection State No. of The Compressor)
34	0/UFANSPEED	(Outdoor Unit Fan Speed)
35	63H1	(63H1 On/Off)
36	DEFROST	(Defrost Control On/Off)
37	TOTAL COMP RUN_	H (Total Running Hours of The Compressor)
38	0/UEEV1P	(Pulse of The Outdoor Unit Expansion Valve EEVC)
39	0/UEEV2P	(Pulse of The Outdoor Unit Expansion Valve EEVH)

ON

O OFF

Cyclically


(5) Inverter checker for diagnosis of inverter output

Checking method

- (a) Setup procedure of checker.
 - 1) Power OFF (Turn off the breaker).
 - 2) Remove the terminal cover of compressor and disconnect the wires (U, V, W) from compressor.
 - 3) Connect the wires U (Red), V (White) and W (Black) of the checker to the terminal of disconnected wires (U, V, W) from compressor respectively.
- (b) Operation for judgment.
 - 1) Power ON and start check operation on cooling or heating mode.
 - 2) Check ON/OFF status of 6 LED's on the checker.
 - 3) Judge the PCB by ON/OFF status of 6 LED's on the checker.

, -	-					
ON/OFF status of LED	If all of LED are ON/OFF according to following pattern	If all of LED stay OFF or some of LED are ON/OFF				
Outdoor main PCB	Normal	Anomalous				
Power ON 3 min. Comparing this period, ON/OFF status of LED is repeated cyclically according to following pattern						
Start of	heck operation Sto	pp check operation				
	k operation within about 2minutes	1 1				
<pre>{Inverter Checker</pre>		(LED ON/OFF pattern))			
		LED2 LED3 LED4 LED5	$ \begin{array}{c} \text{ED1} \\ \text{DLED2} \\ \text{DS} \\ \text{DS} \\ \text{DD} \\ \text{DD} \\ \text{DD} \\ \text{DED5} \\ \text{DED6} $			


Faston terminal W W W Connect to the terminal of the wires which are disconnected from compressor.

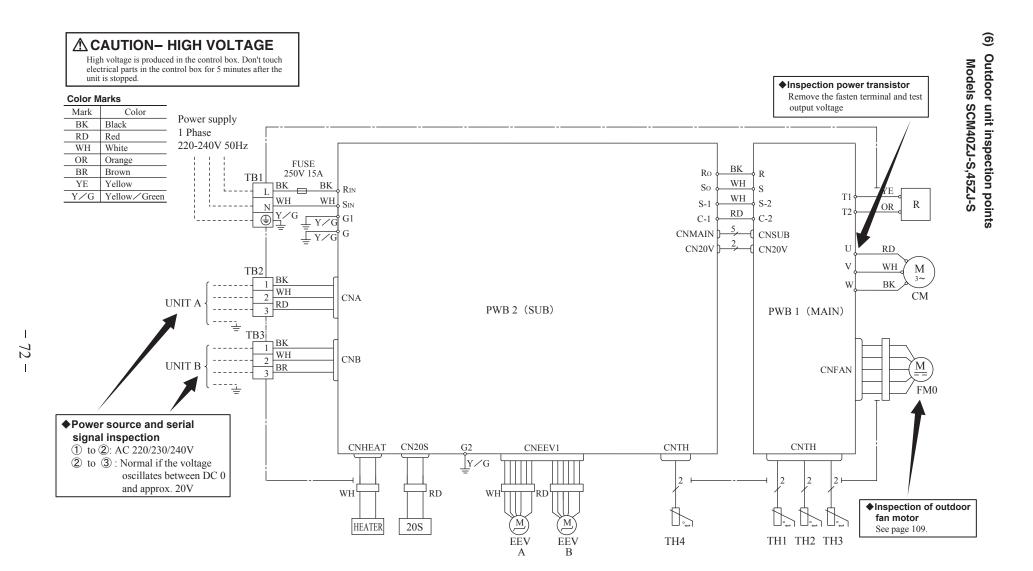

▲ CAUTION- HIGH VOLTAGE

High voltage is produced in the control box. Don't touch electrical parts in the control box for 5 minutes after the unit is stopped.


and approx. 20V

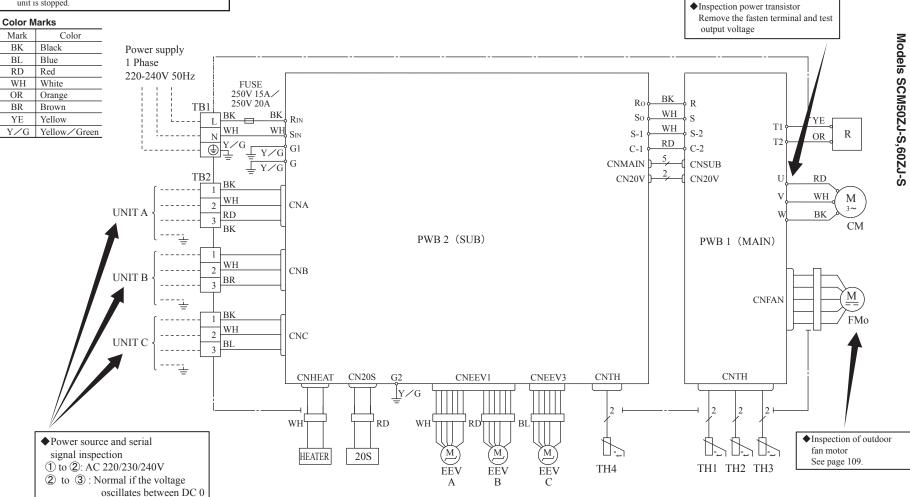

▲ CAUTION- HIGH VOLTAGE

High voltage is produced in the control box. Don't touch electrical parts in the control box for 5 minutes after the unit is stopped.

and approx. 20V

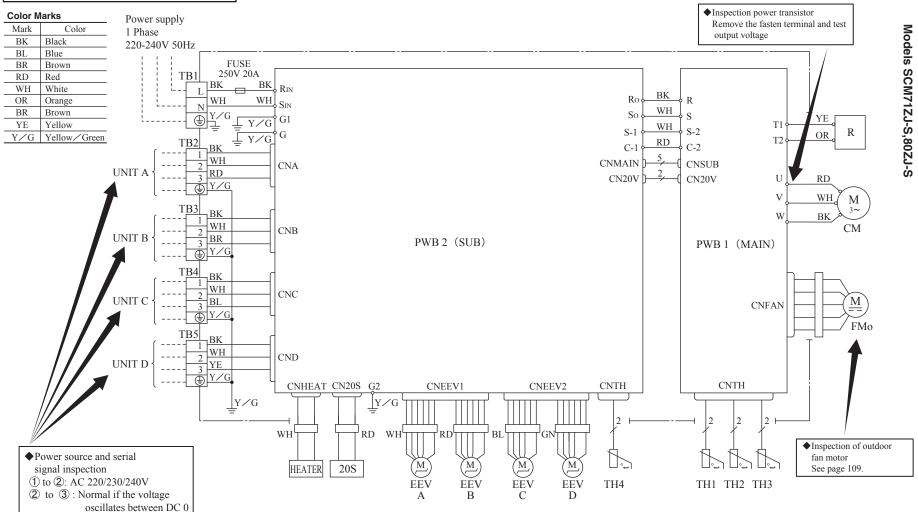



2.2.2 Troubleshooting flow (1) List of troubles


No.	Remote controller display	Description of trouble	Reference page
1	None	Operates but does not cool.	76
2	None	Operates but does not heat.	77
3	None	Earth leakage breaker activated	78
4	None	Excessive noise/vibration (1/3)	79
5	None	Excessive noise/vibration (2/3)	80
6	None	Excessive noise/vibration (3/3)	81
7	None	Louver motor failure	82
8	None	Power supply system error (Power supply to indoor control PCB)	83
9	None	Power supply system error (Power supply to remote controller)	84
10	INSPECT I/U	INSPECT I/U (When 1 or 2 remote controllers are connected)	85
11	INSPECT I/U	INSPECT I/U (Connection of 3 units or more remote controllers)	86
12	டூwait டூ	Communication error at initial operation	87~89
13	E1	Remote controller communication circuit error	90
14	E5	Communication error during operation	91
15	E6	Indoor heat exchanger temperature thermistor anomaly	92
16	E7	Return air temperature thermistor anomaly	93
17	E8	Heating overload operation	94
18	E9	Drain trouble	95
19	E10	Excessive number of connected indoor units (more than 17 units) by controlling with one remote controller	96
20	E16	Indoor fan motor anomaly	97
21	E19	Indoor unit operation check, drain motor check setting error	98
22	E28	Remote controller temperature thermistor anomaly	99
23	E35	Cooling overload operation	100
24	E36	Discharge pipe temperature error	101
25	E37	Outdoor heat exchanger temperature sensor anomaly	102
26	E38	Outdoor air temperature sensor anomaly	103
27	E39	Discharge pipe temperature sensor anomaly	104
28	E42	Current cut	105, 106
29	E45	Outdoor sub PCB communication error	107
30	E47	Active filter voltage error	108
31	E48	Outdoor fan motor anomaly	109
32	E51	Power transistor anomaly	110
33	E53	Suction pipe temperature error	111
34	E57	Insufficient refrigerant amount or detection of service valve closure	112
35	E58	Current safe stop	113
36	E59	Compressor startup failure	114
37	E60	Anomalous compressor rotor lock	115

(2) Troubleshooting


_						0
μ	Error code	LED	Green	Red	Content	
	Remote controller: None	Indoor	Keeps flashing	Stays OFF	Operates but does not cool	
		Outdoor	_	Stays OFF	Operates but does not coor	

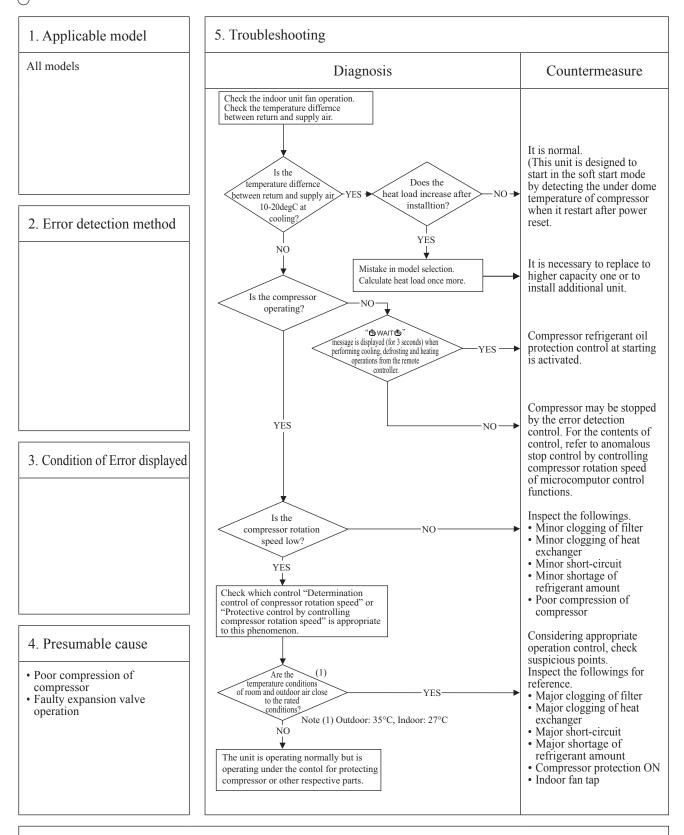




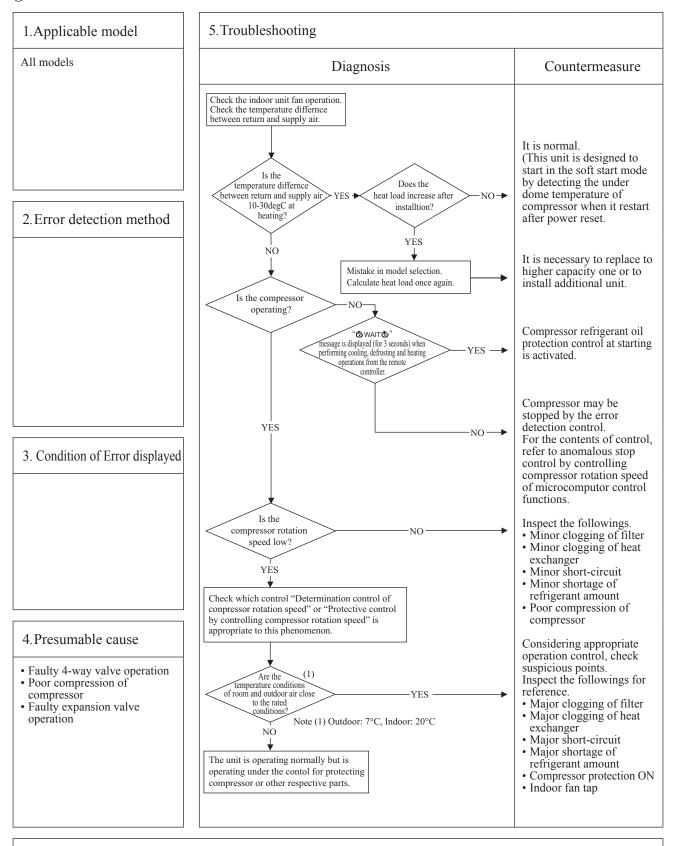




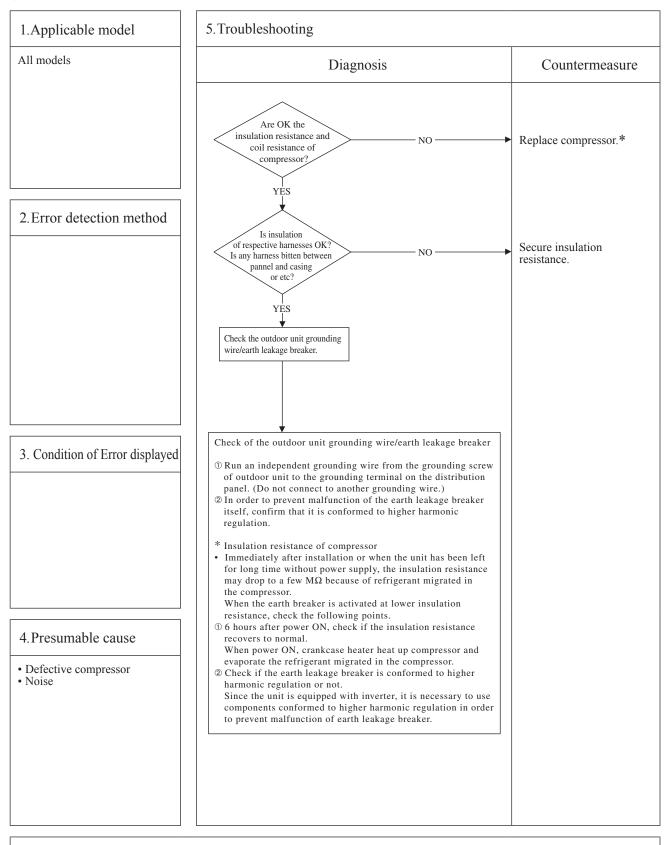


_					M	Л
β	Error code	LED	Green	Red	Content	
	Remote controller: None	Indoor	_	_	Excessive noise/vibration (1/3)	
		Outdoor	-	-	Excessive noise/violation (1/3)	

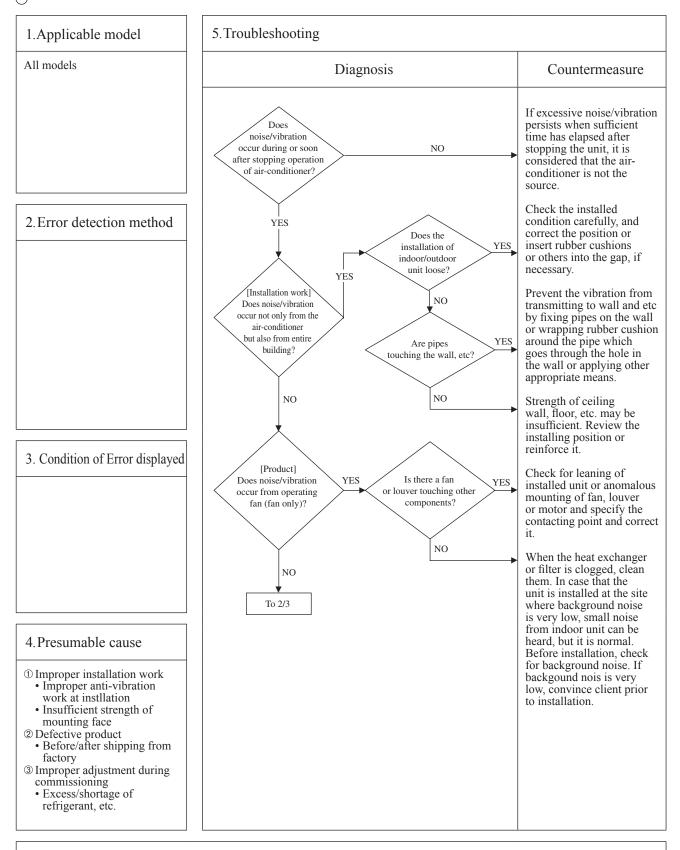


						Ð
μ	Error code	LED	Green	Red	Content	
	Remote controller: None	Indoor	-	_	Excessive noise/vibration (2/3)	
		Outdoor	_	_		J
L						

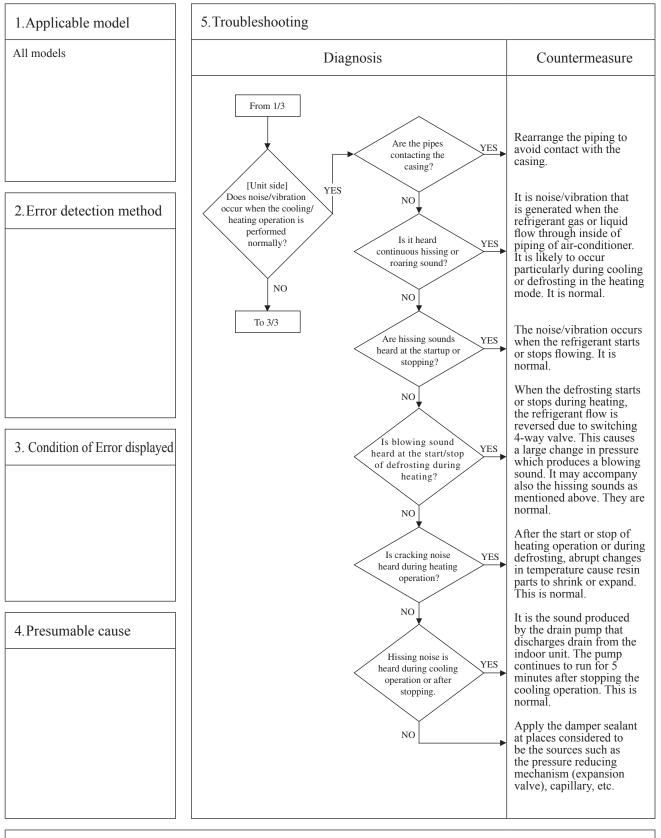

						A
F	Error code	LED	Green	Red	Content	
	Remote controller: None	Indoor	-	-	Excessive noise/vibration (3/3)	
		Outdoor	-	_	Excessive noise/vioration (5/5)	
L	<u></u>					

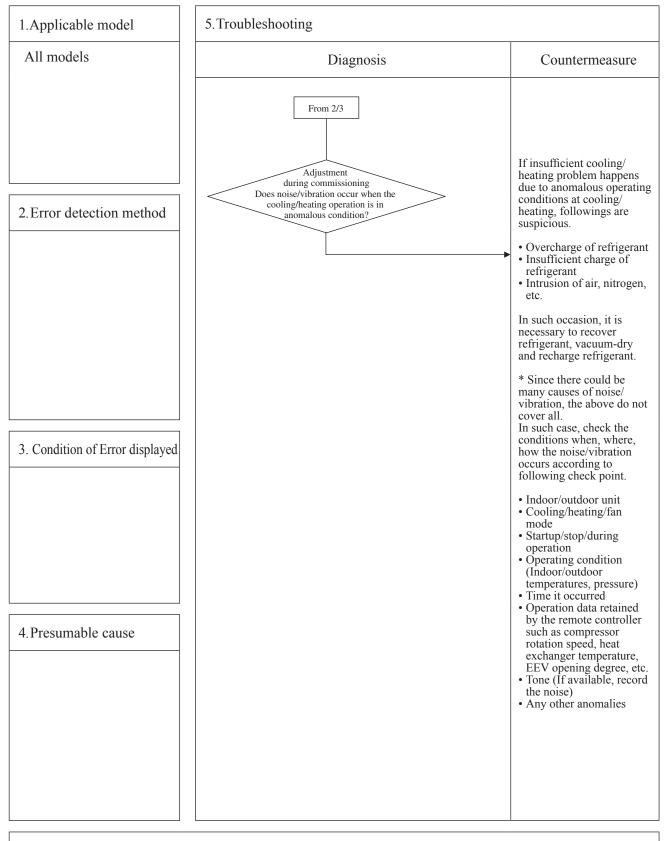


							0
ſ	Error code	LED	Green	Red	Content		
	Remote controller: None	Indoor	Keeps flashing	Stays OFF	I	Louver motor failure	
		Outdoor	-	Stays OFF	1		

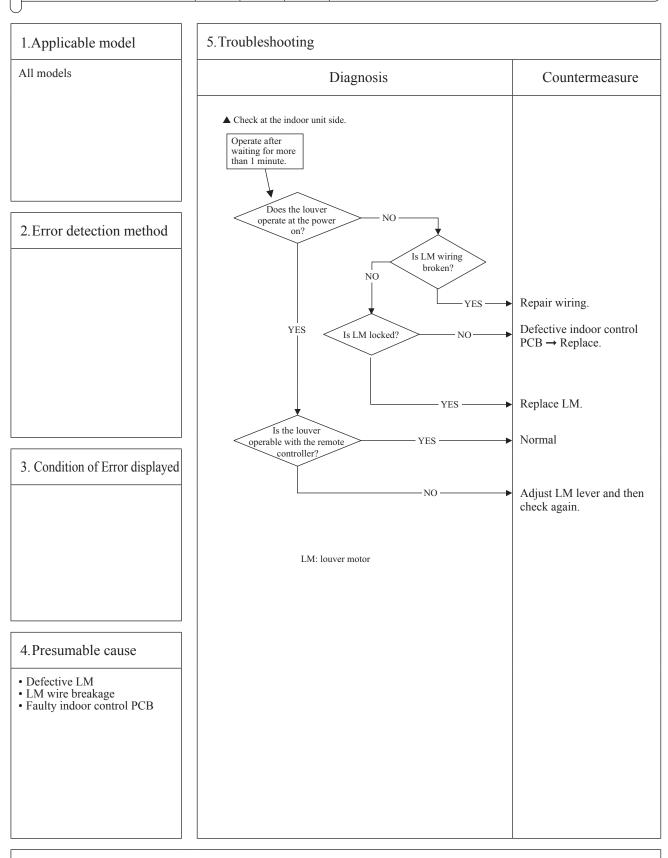


M

ſ	Error code	LED	Green	Red	Content Power supply system error
	Remote controller: None	Indoor	Stays OFF	Stays OFF	(Deriver supply system entri (Deriver supply to indeer control DCD)
		Outdoor	_	Stays OFF	(Power supply to indoor control PCB)

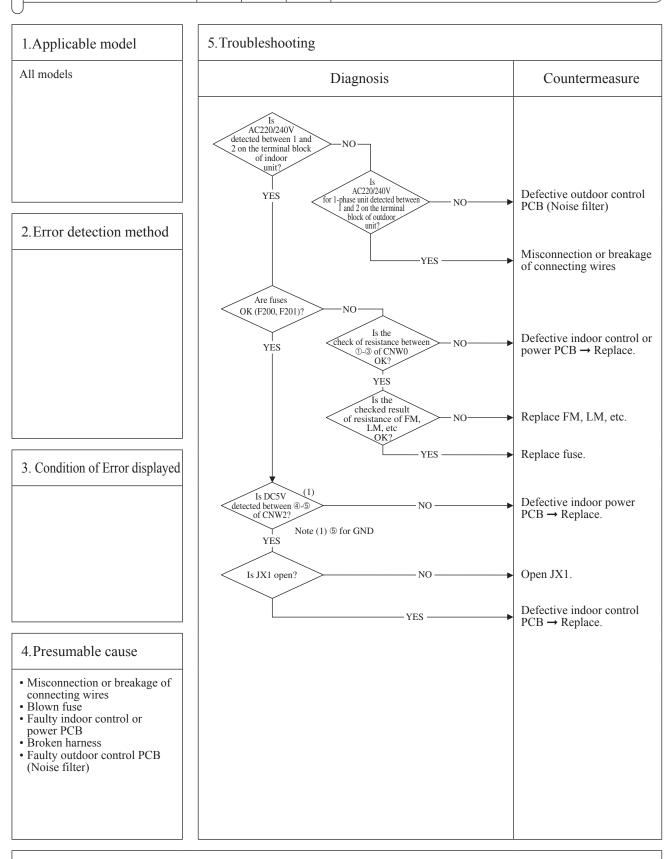


M

μ	Error code	LEI	Green	Red	Content Dower supply system error
	Remote controller:	None Indo	r Keeps flashin	g Stays OFF	(Power supply to remote controller)
		Outdo	or –	Stays OFF	(Tower suppry to remote controller)

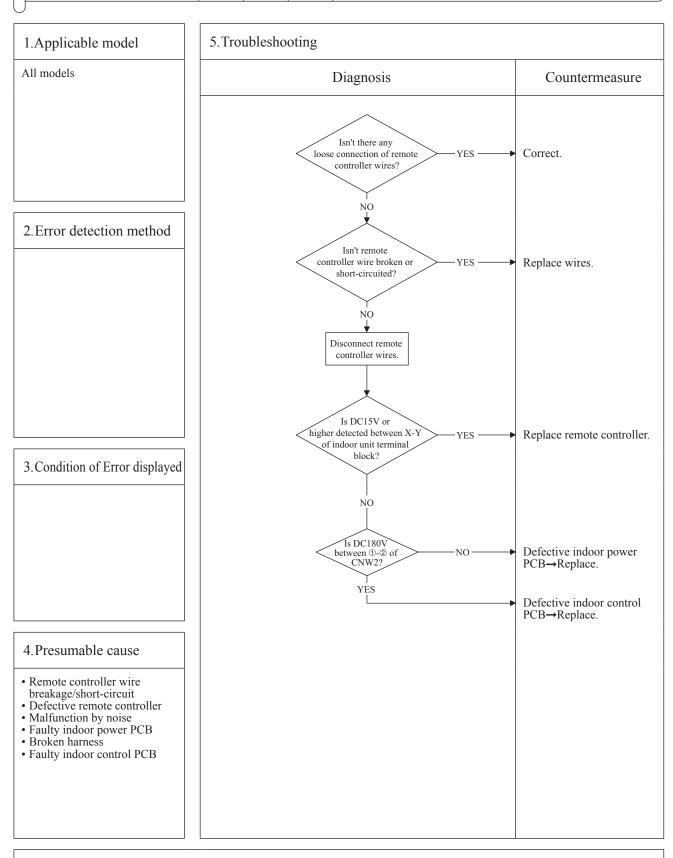

A


p	Error code	LED	Green	Red	Content
	Remote controller: INSPECT I/U	Indoor	Keeps flashing	Stays OFF	
		Outdoor	-	Stays OFF	(When 1 or 2 remote controllers are connected)
L)				

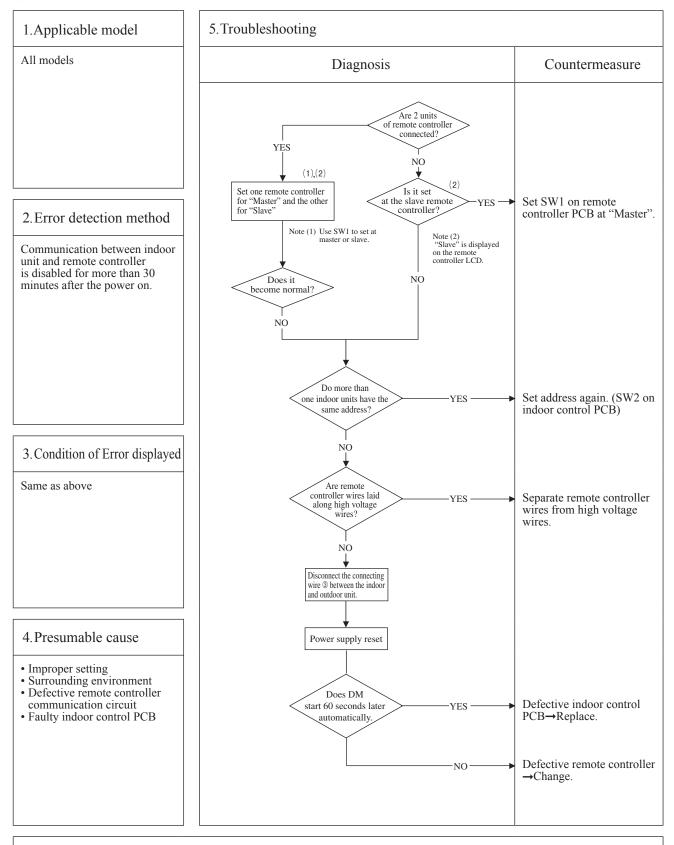

Note: If any error is detected 30 minutes after displaying "OWAITO" on the remote controller, the display changes to "INSPECT I/U".

M


β	Error code	LED	Green	Red	Content
	Remote controller: INSPECT I/U	Indoor	Keeps flashing	Stays OFF	INSPECT I/U
		Outdoor	_	Stays OFF	(Connection of 3 units or more remote controller)

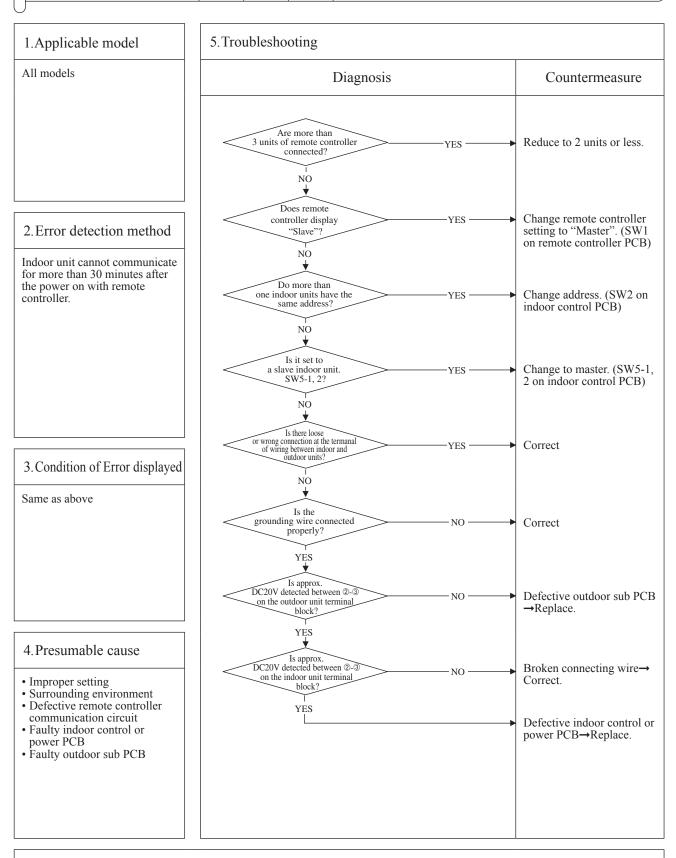


Note: If any error is detected 30 minutes after displaying ""WAIT"" on the remote controller, the display changes to "INSPECT I/U".


M

μ	Error code	LED	Green	Red	Content
	Remote controller: "WAIT"	Indoor	Keeps flashing	Stays OFF	
		Outdoor	_	Stays OFF	initial operation $(1/3)$

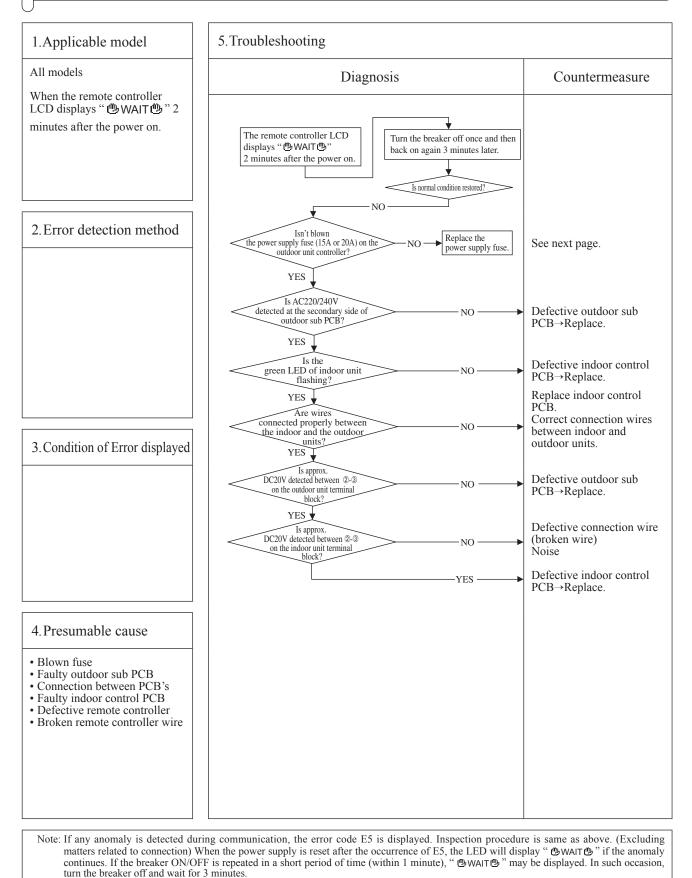



- 87 -



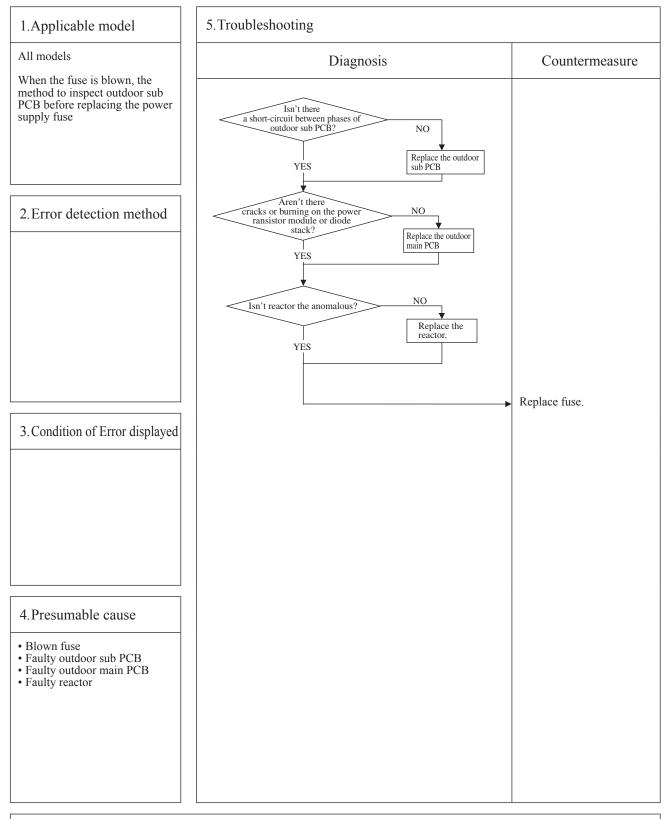


_							Ð
μ	Error code	LED	Green	Red	Content		
	Remote controller: 🖱 WAIT 🖱	Indoor	Keeps flashing	Stays OFF		Communication error at $(2/2)$	
		Outdoor	-	Stays OFF		initial operation $(3/3)$	
L	J						

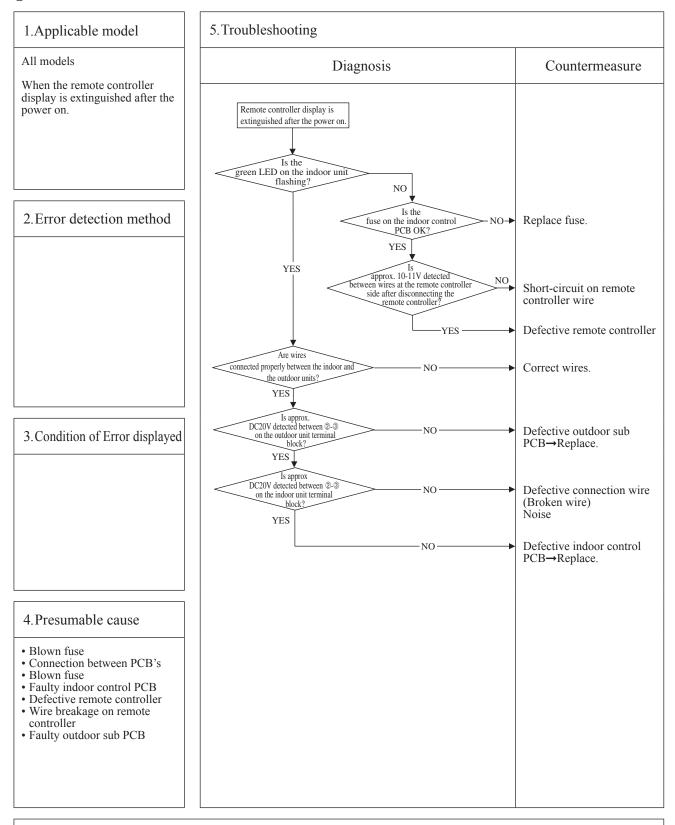


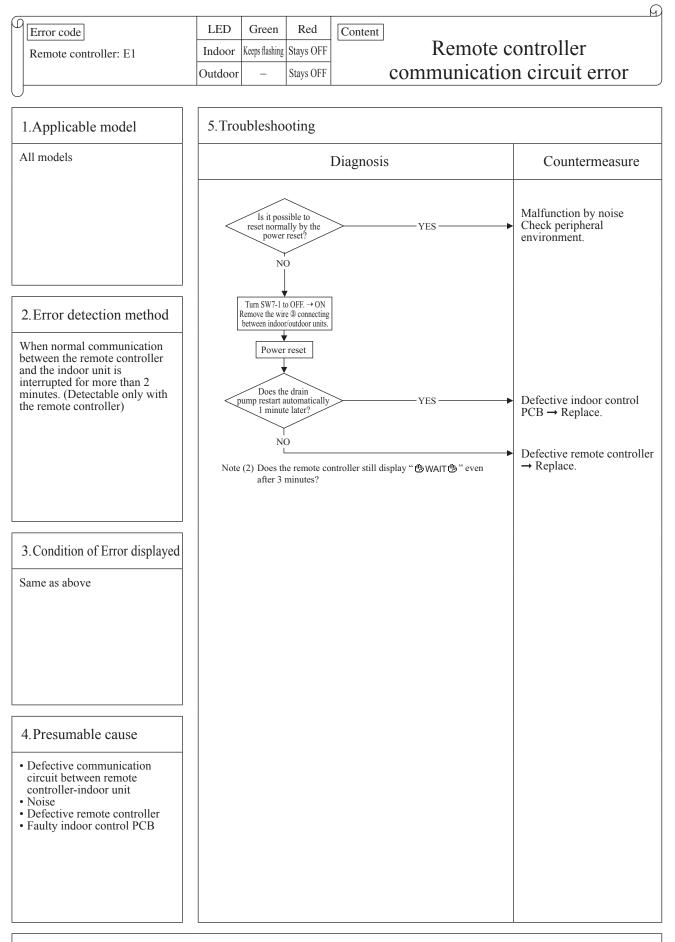



Note: If the indoor unit cannot communicate normally with the remote controller for 180 seconds, the indoor contnrol PCB starts to reset automatically.


						G
ſ	9	Error code	LED	Green	Red	Content
		Remote controller: E5	Indoor	Keeps flashing	2 times flash	Communication error during operation
			Outdoor	_	6 times flash	communication error during operation
l	J					

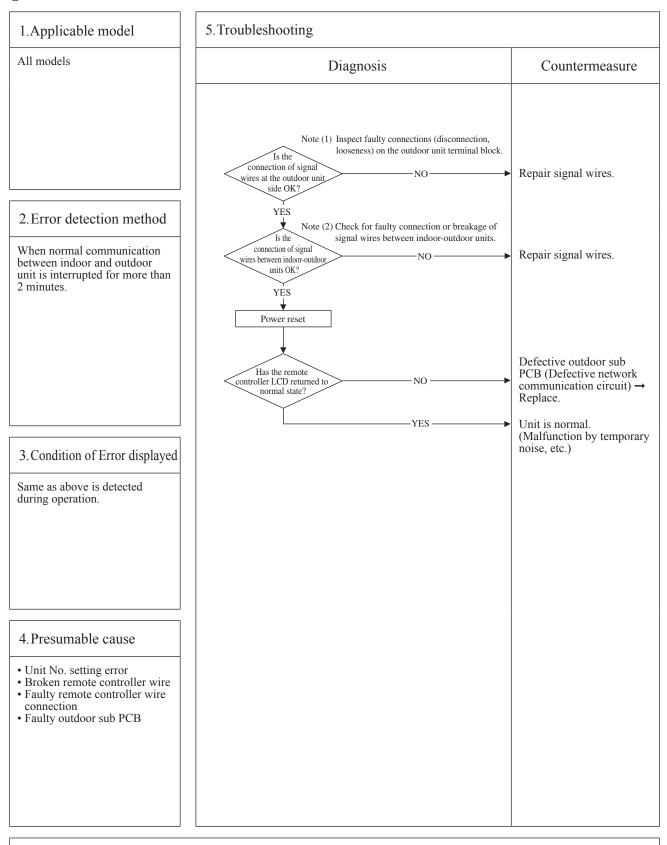




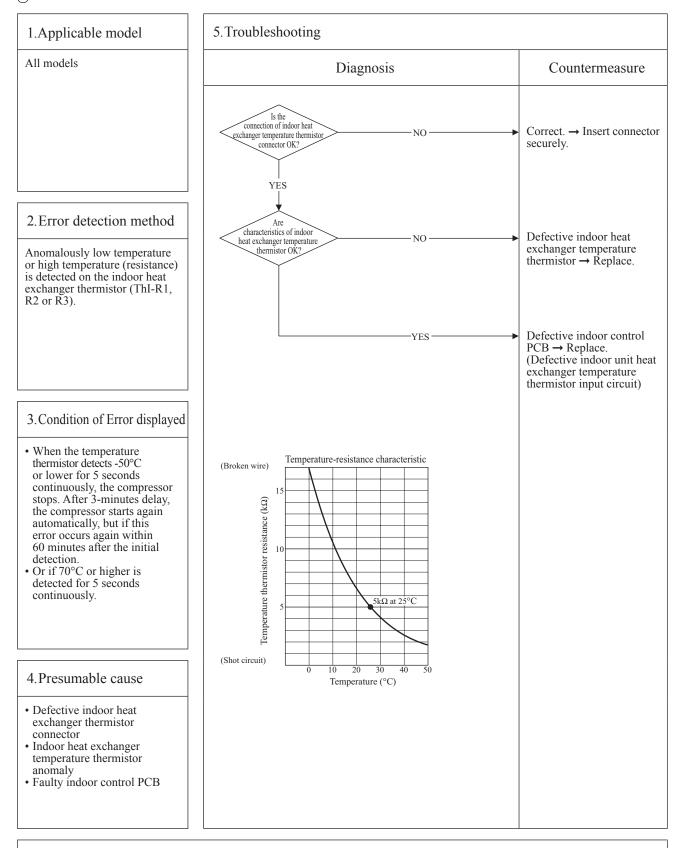



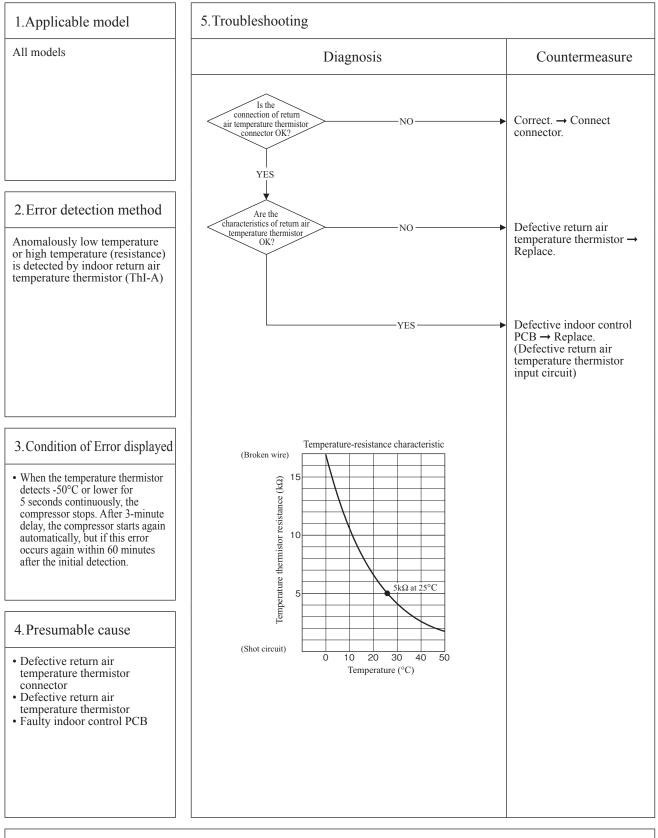


_						Ð
ρ	Error code	LED	Green	Red	Content	
	Remote controller: E8	Indoor	Keeps flashing	1 time flash	Heating overload operation	
		Outdoor	-	Stays OFF	fleating overload operation	J
L						_

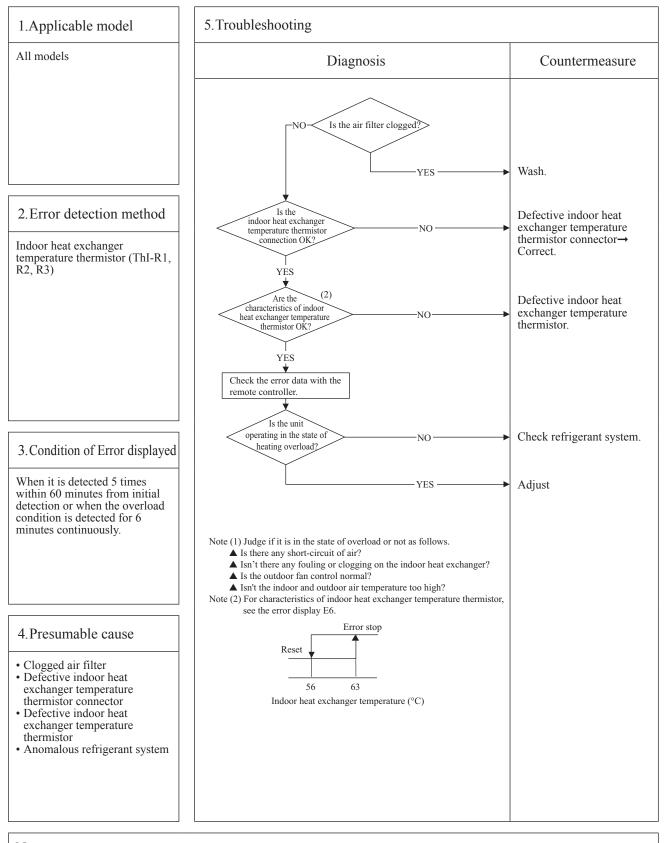


Note: During heating operation; After starting compressor, compressor rotation speed is decreased by detecting indoor heat exchanger temperature (ThI-R) in order to control high pressure.



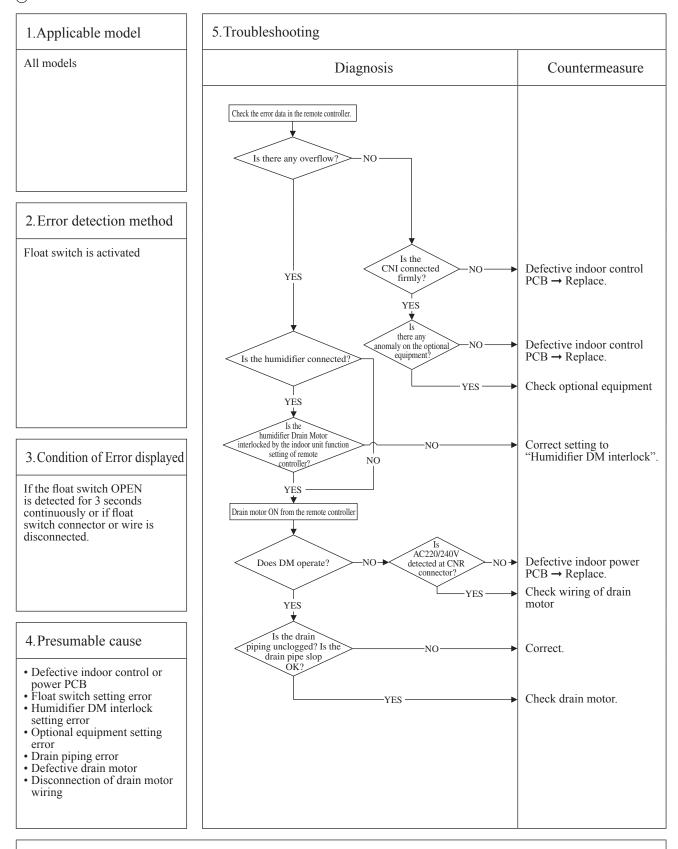


Note: When this error occurred at power ON, disconnection of wire or connector of the float switch is suspected. Check and correct it (or replace it, if necessary).


					Q
ſ	Error code	LED	Green	Red	Content Excessive number of connected
	Remote controller: E10	Indoor	Keeps flashing	Stays OFF	
		Outdoor	-	Stays OFF	by controlling with one remoto controller

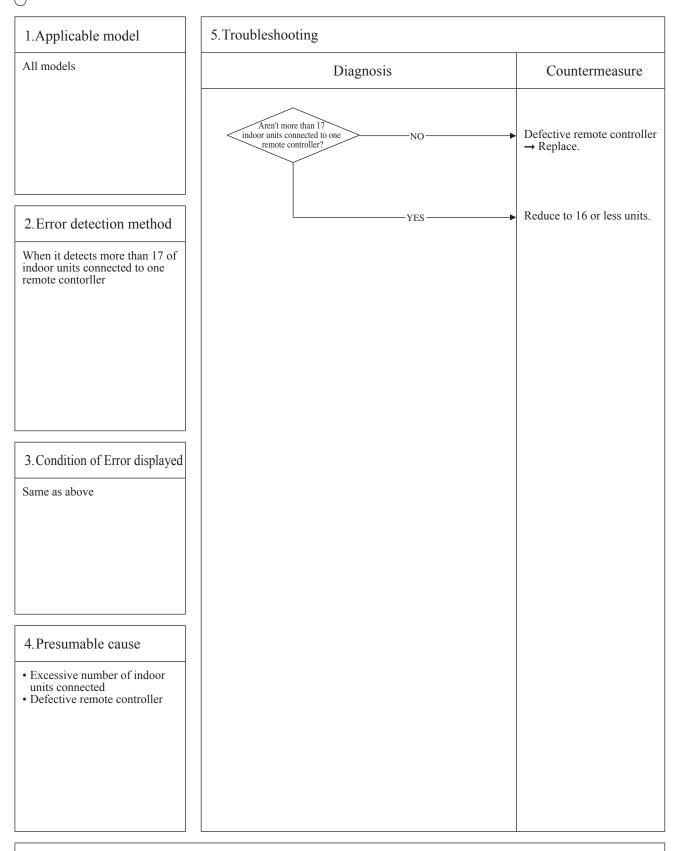

_						D
μ	Error code	LED	Green	Red	Content	
	Remote controller: E16	Indoor	Keeps flashing	Stays OFF	Indoor fan motor anomaly	
		Outdoor	-	Stays OFF	motor ran motor anomary	J
L)				•	-

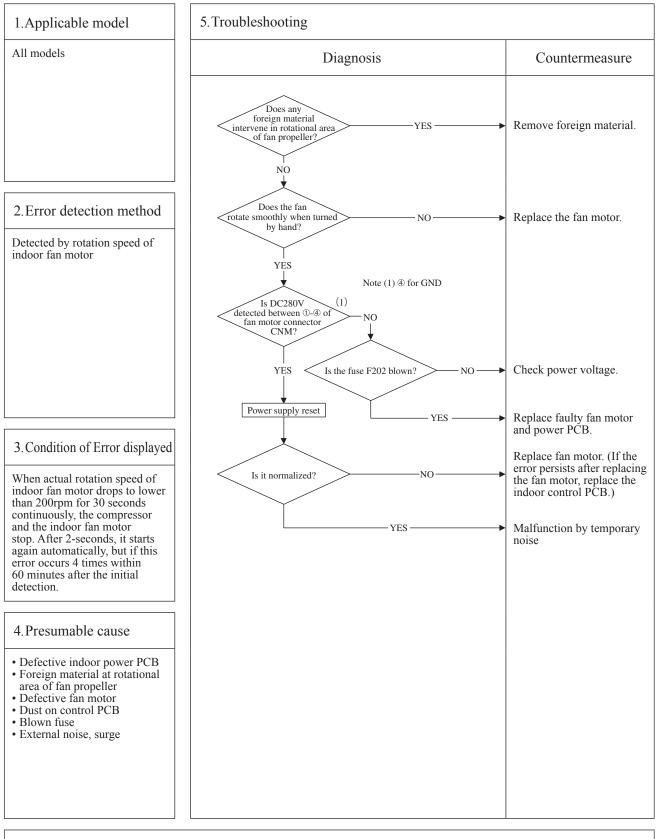


					G
F	Error code	LED	Green	Red	Content Indoor unit operation check,
	Remote controller: E19	Indoor	Keeps flashing	1 time flash	I ,
		Outdoor	_	Stays OFF	drain motor check setting error

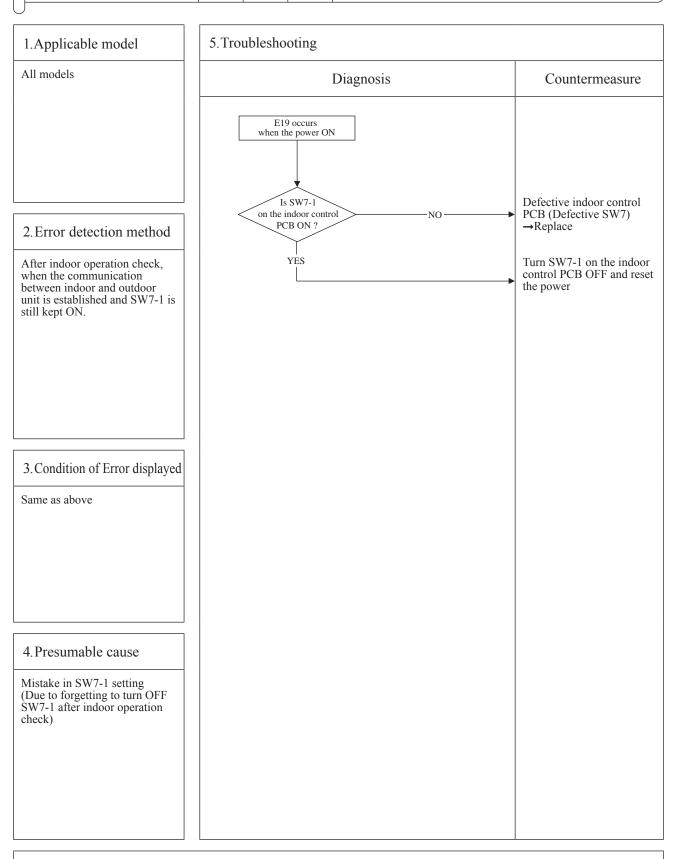



M

ſ	Error code	LED	Green	Red	Content
	Remote controller: E28	Indoor	Keeps flashing	Stays OFF	
		Outdoor	-	Stays OFF	temperature thermistor anomaly
L	J				

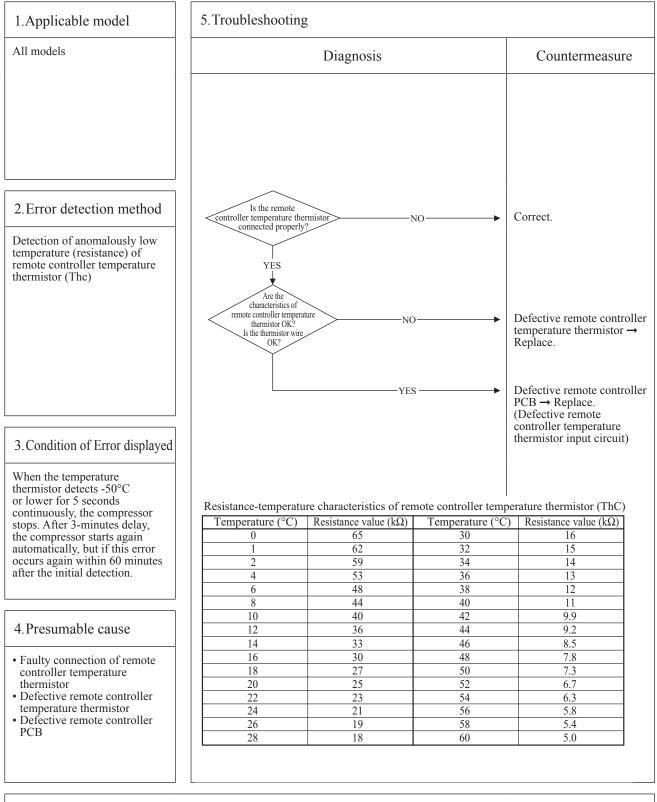



Note: After 10 seconds has passed since remote controller thermistor was switched from valid to invalid, E28 will not be displayed even if the thermistor harness is disconnected. At same time the thermistor, which is effective, is switched from remote controller thermistor to indoor return air temperature thermistor. Even though the remote controller thermistor is set to be Effective, the return air temperature displayed on remote controller for checking still shows the value detected by indoor return air temperature thermistor, not by remote controller temperature thermistor.




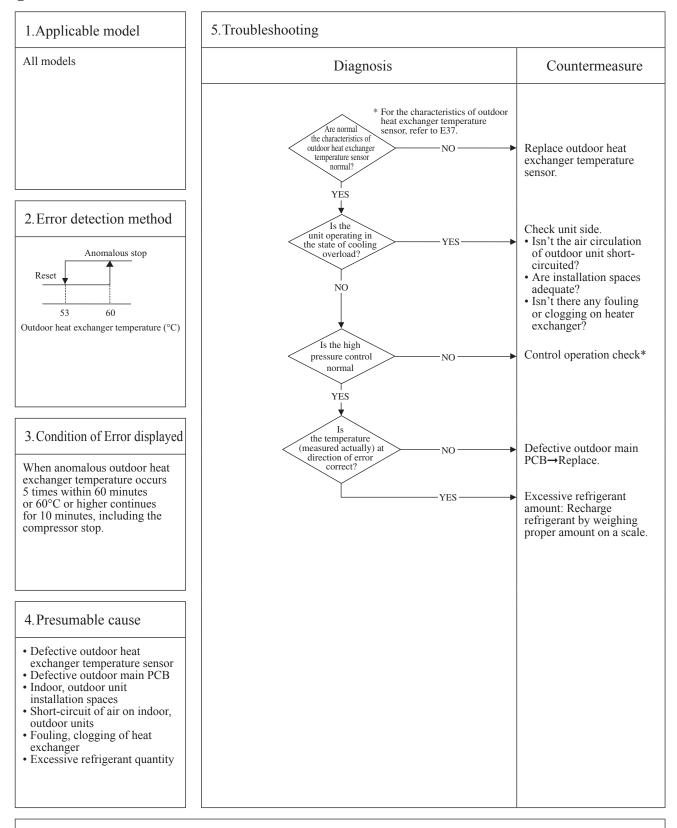


_						A
ρ	Error code	LED	Green	Red	Content	
	Remote controller: E36	Indoor	Keeps flashing	Stays OFF	Discharge pipe temperature error	
		Outdoor	-	5 times flash	Disentinge pipe temperature error	

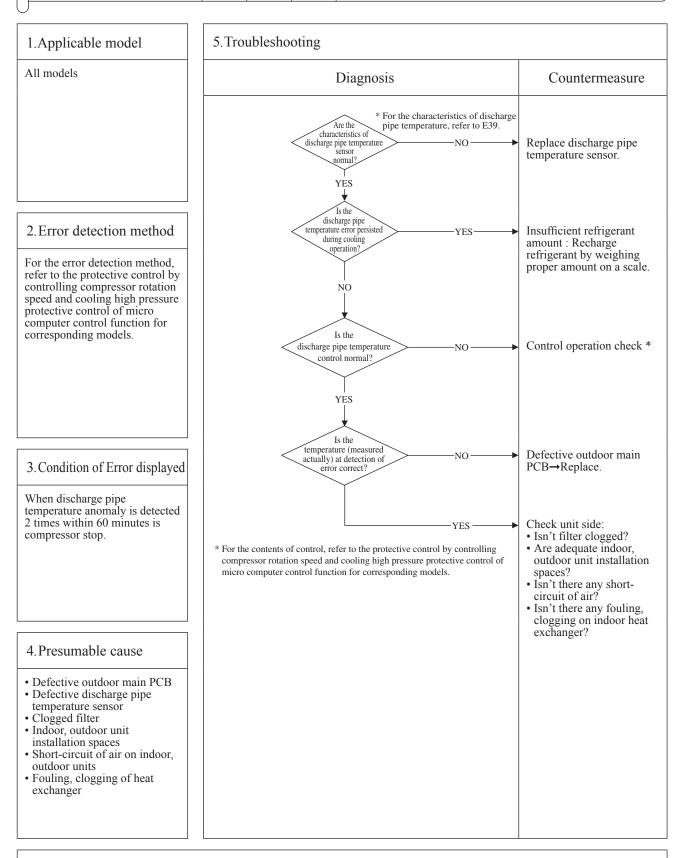




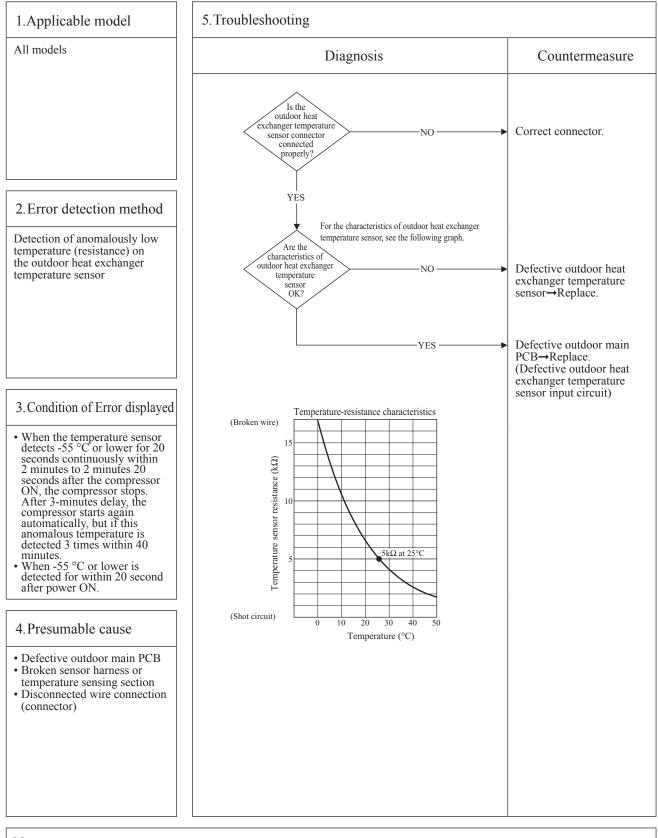





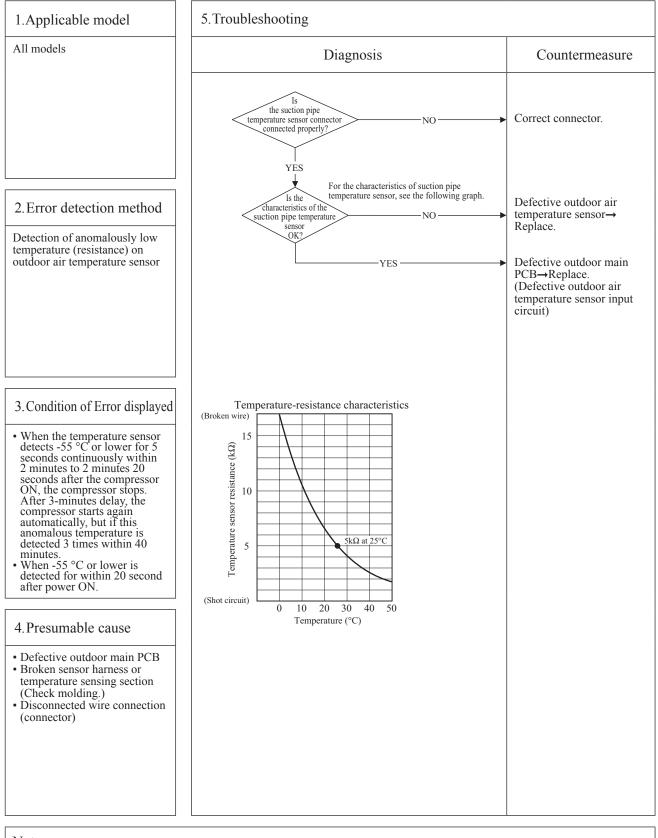


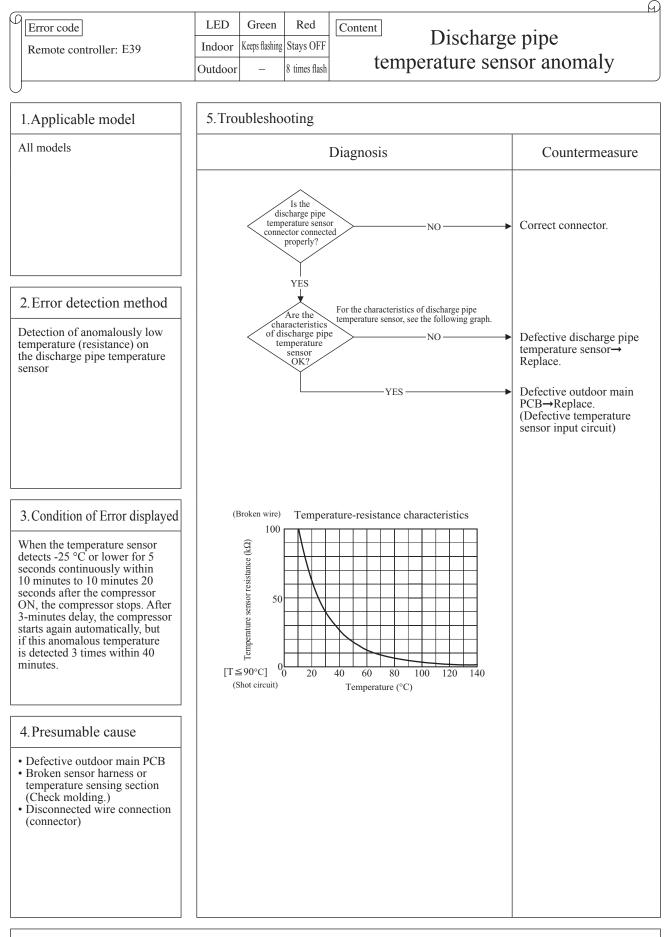





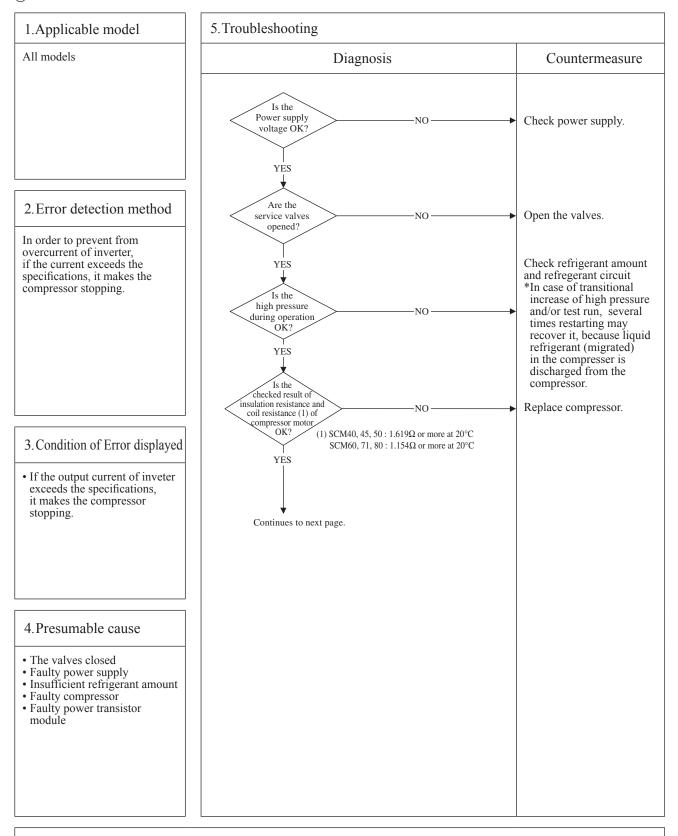

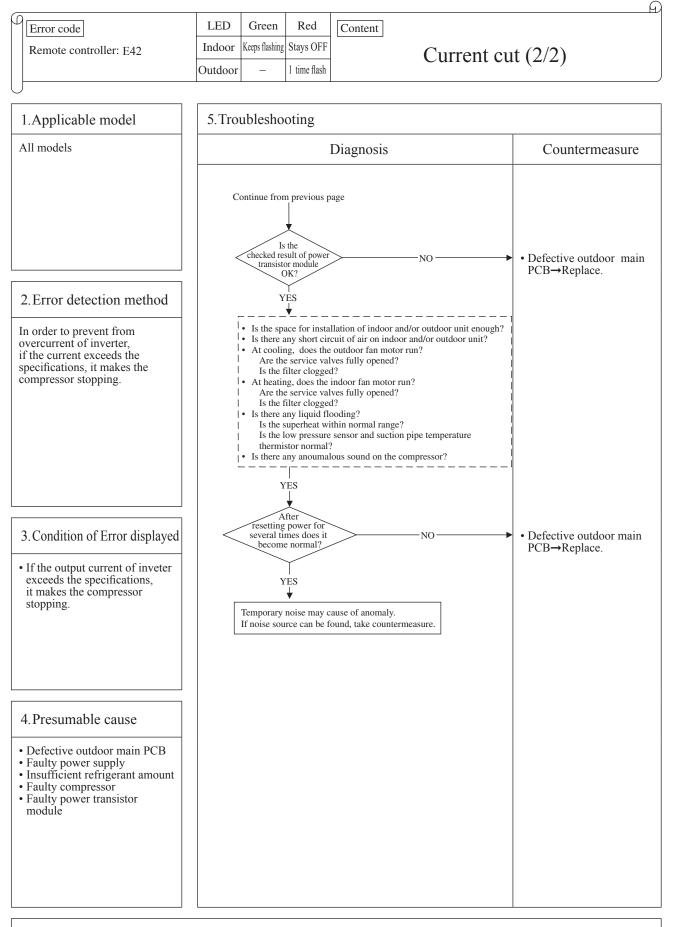


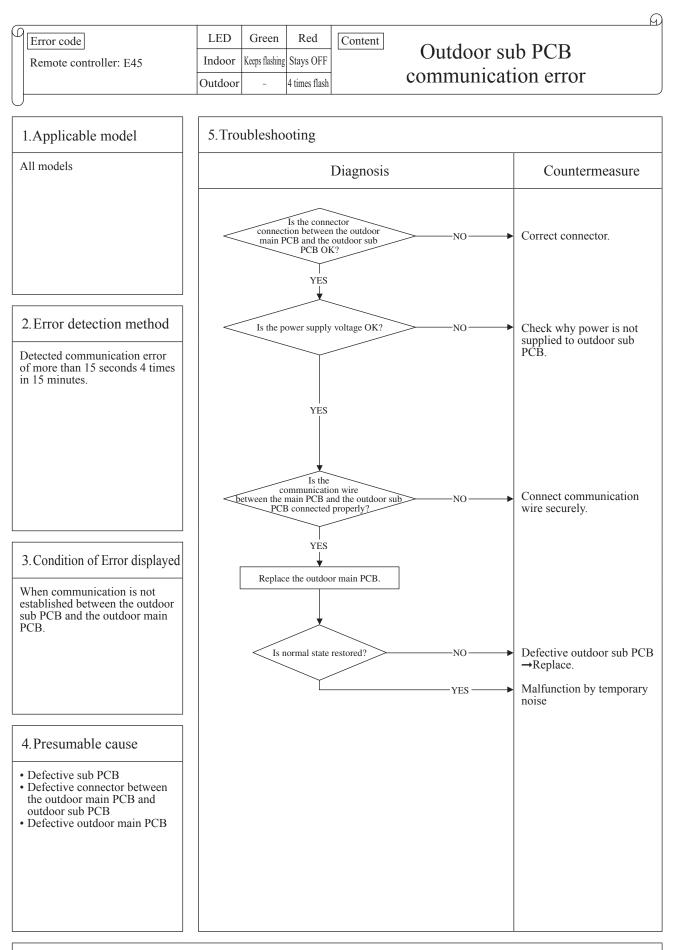




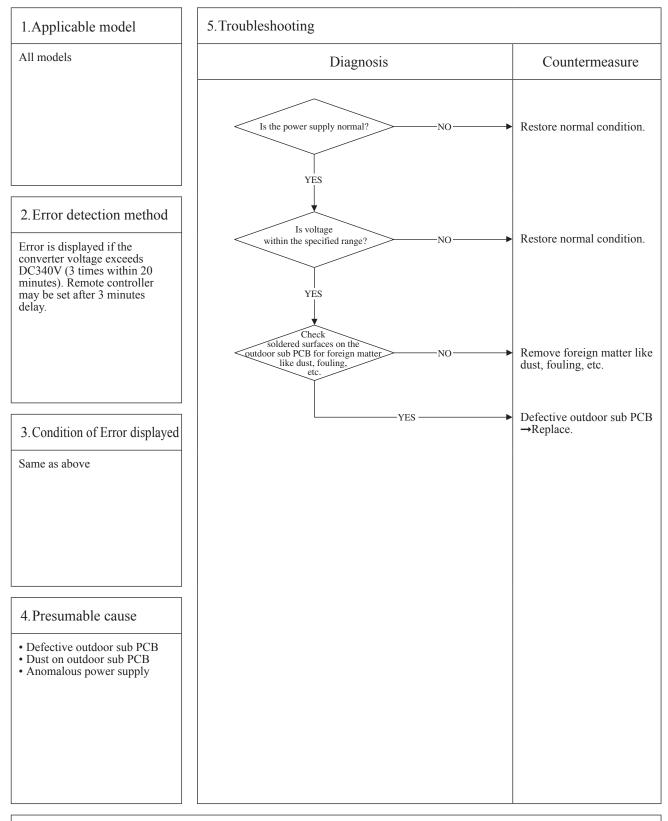


Note:



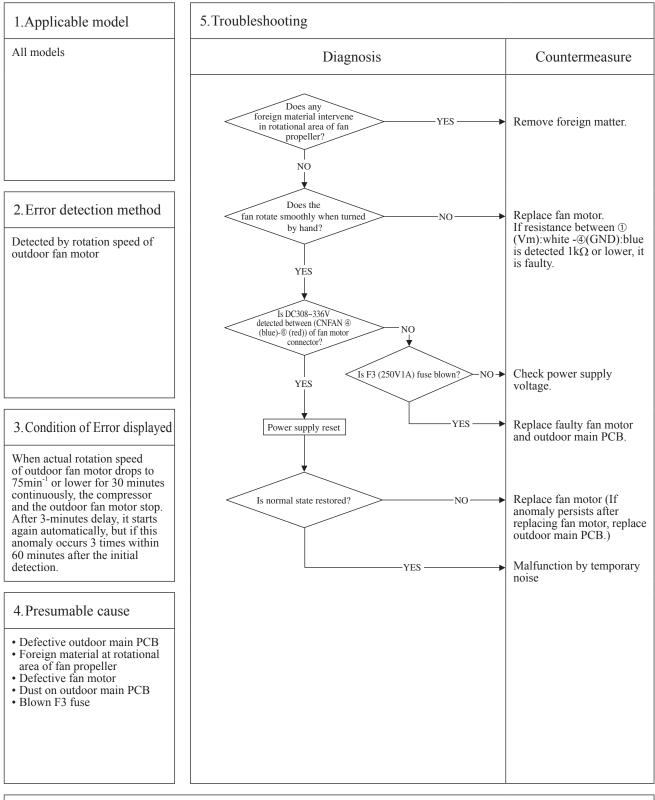


Note: When E48 error occurs, in almost cases F3 fuse (1A) on the outdoor main PCB is blown. There are a lot of cases that fuse is blown and E48 occurs due to defective fan motor. And even though only the outdoor main PCB (or fuse) is replaced,, another trouble could occur. Therefore when fuse is blown, check whether the fan motor is OK or not. After confirming the fan motor normal, check by power ON. (Don't power ON without confirming the fan motor normal.)



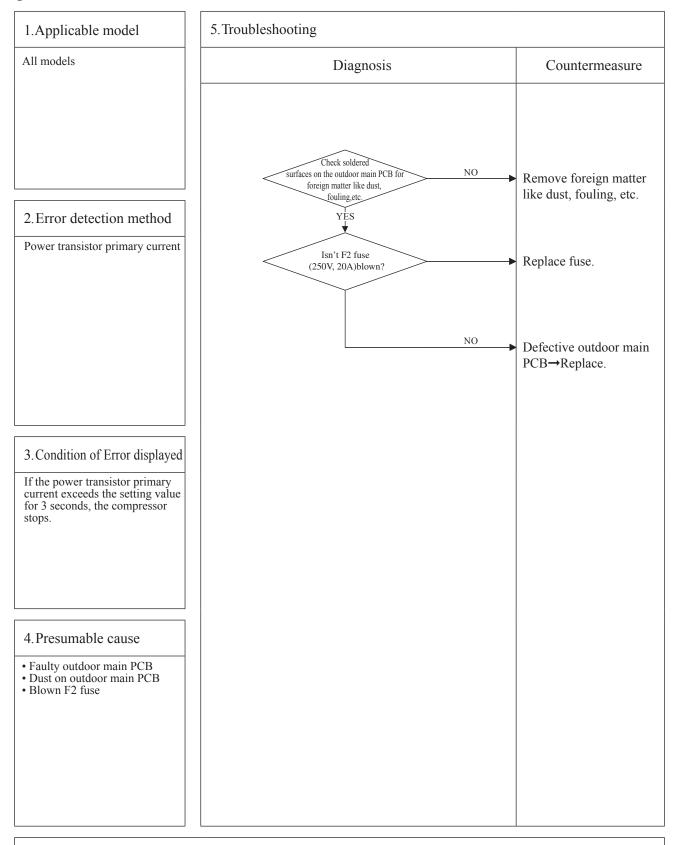


Note:



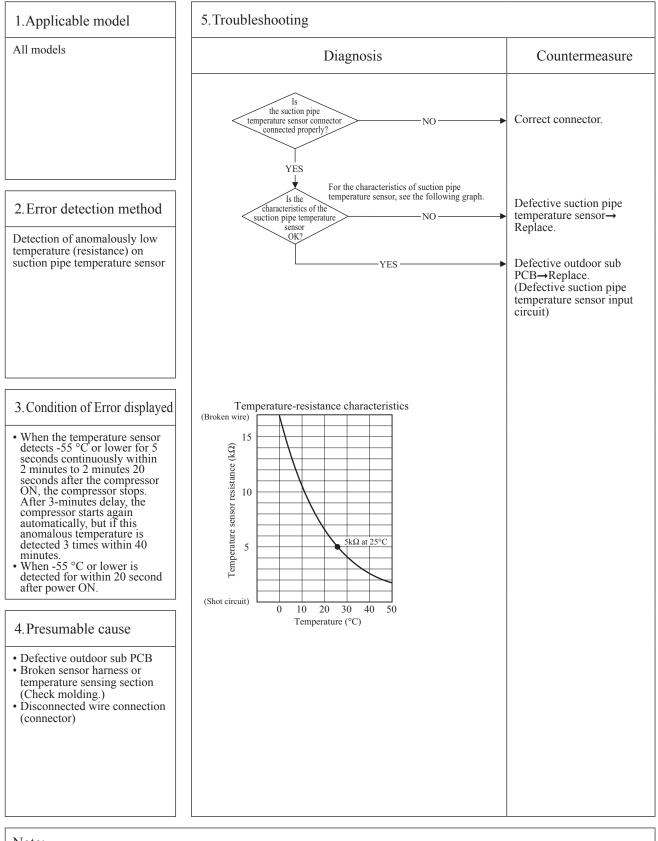



Note:



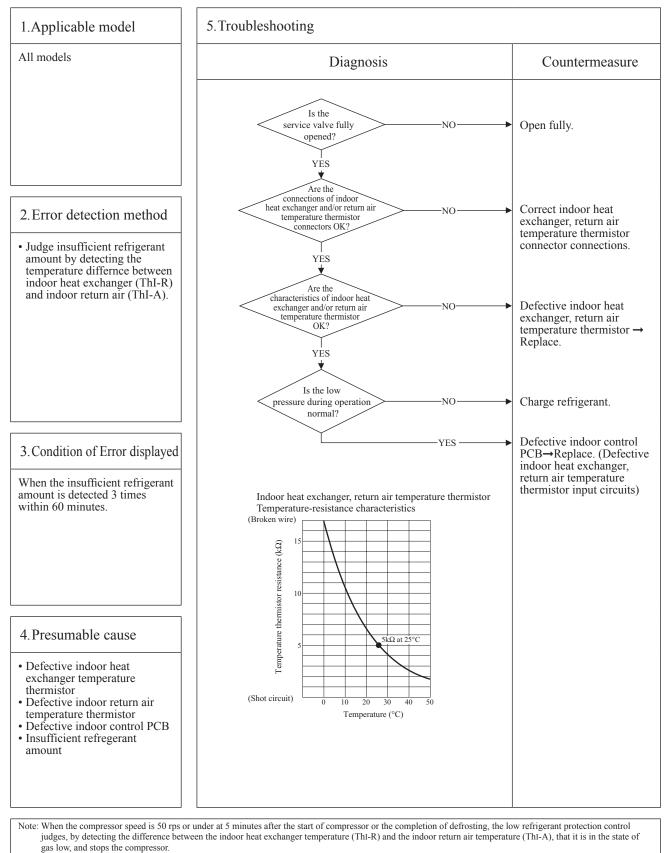



Cooling: Indoor return air temperature (ThI-A) – Indoor heat exchanger temperature (ThI-R) \ge 4 deg Heating: Indoor heat exchanger temperature (ThI-R) – Indoor return air temperature (ThI-A) \le 6 deg



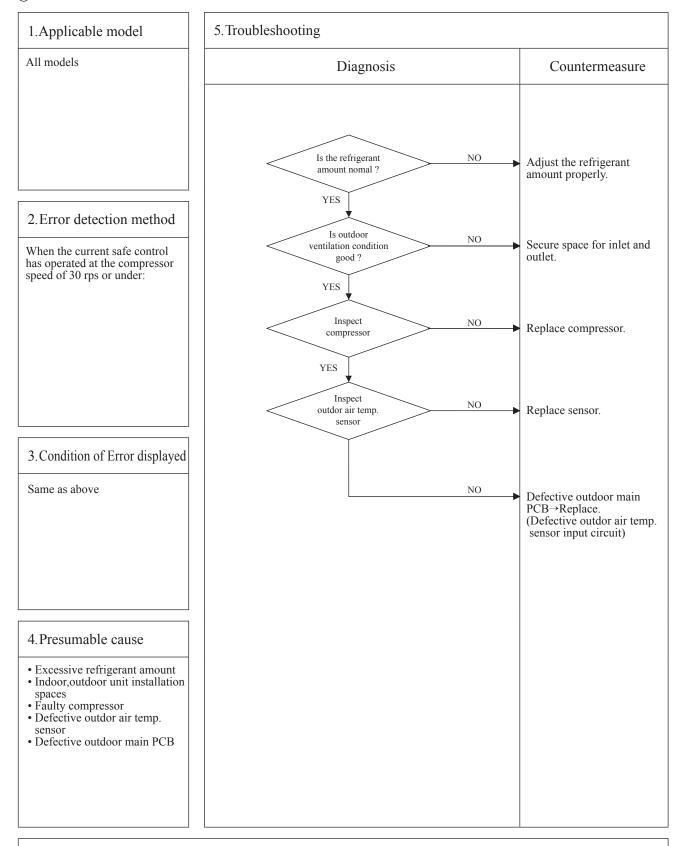


Note:




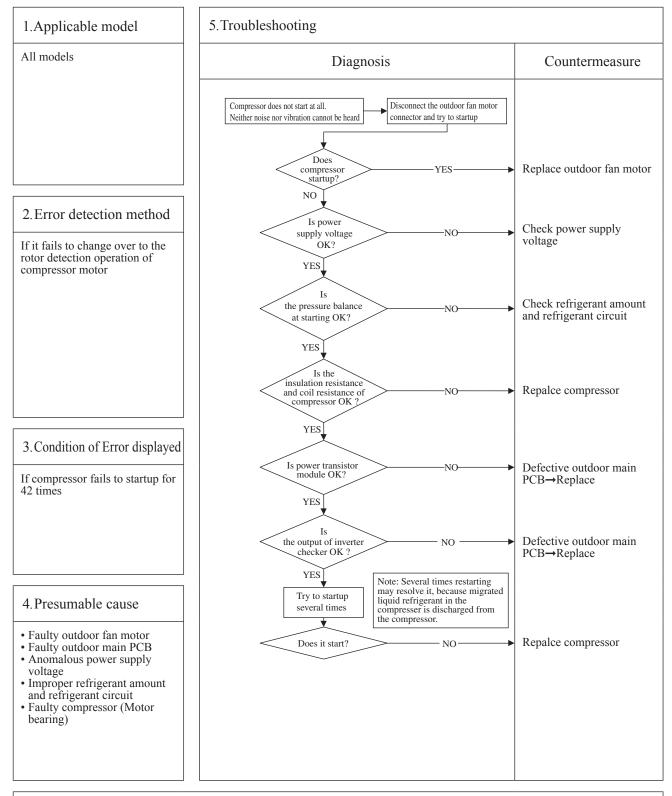


- Note: Insulation resistance
 - The unit is left for long period without power supply or soon after installation, migrated liquid refrigerant may dissolve in the refrigerant oil in the compressor. In such case insulation resistance decreases up to several $M\Omega$ or lower. If the electric leakage breaker is activated due to low insulation resistance, check followings.

 - © Check whehter the insulation resistance can recover or not, ater 6 hours has passed since power ON. (By energize the crankcase heater, migrated liquid refrigerant in the refrigerant oil in compressor can be evaporated)
 © Check whether the electric leakage breake conforms to high-hermonic specifications (As units has inverter, in order to prevent from improper operation, be sure to use high-hermonic one.)



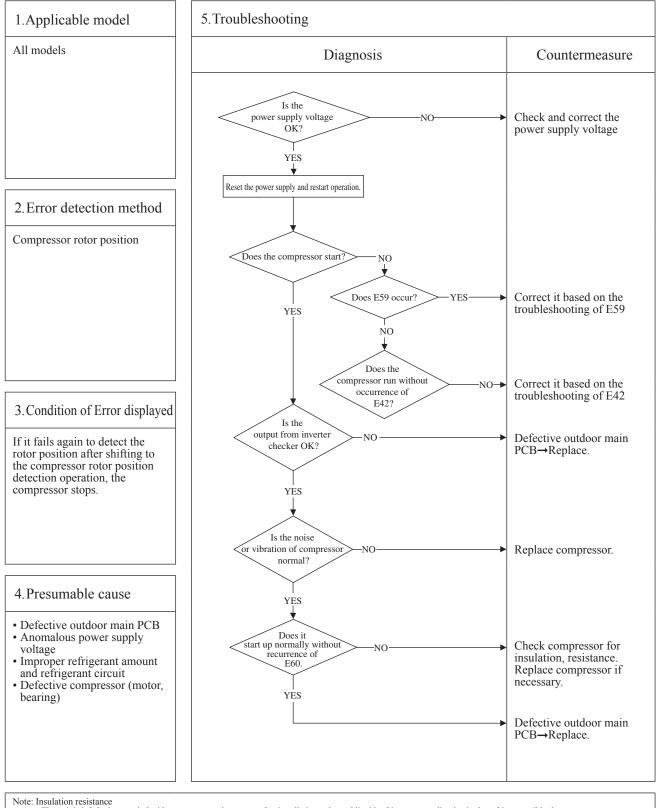

- Note: Insulation resistance
 The unit is left for long period without power supply or soon after installation, migrated liquid refrigerant may dissolve in the refrigerant oil in the compressor. In such case insulation resistance decreases upto several MΩ or lower. If the electric leakage breaker is activated due to low insulation resistance, check followings.
 ① Check whether the insulation resistance can recover or not, ater 6 hours has passed since power ON. (By energize the crankcase heater, migrated liquid refrigerant in the refrigerant oil in compressor can be evaporated)
 ② Check whether the electric leakage breake conforms to high-hermonic specifications (As units has inverter, in order to prevent from improper operation, be sure to use high-hermonic one.)

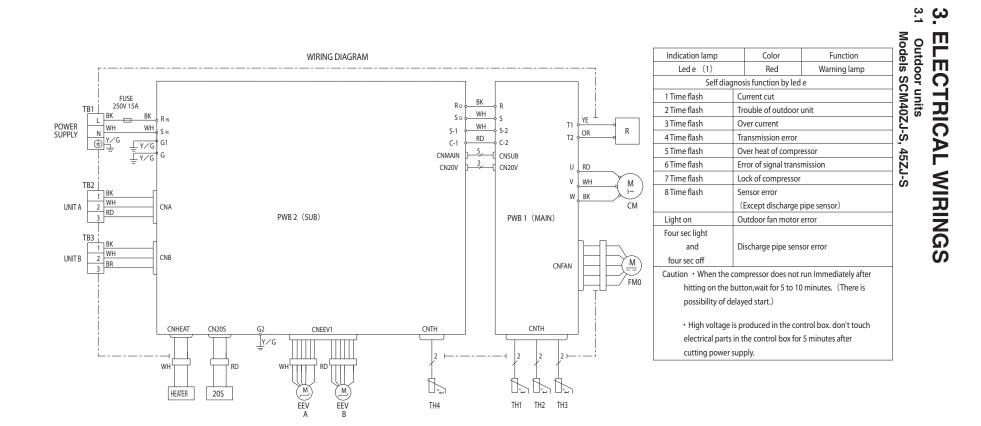


Meaning of Marks

Mark Color		Mark	Color	
BK	Black	YE	Yellow	
RD	RD Red		Yellow/Green	
WH	WH White			
OR	OR Orange			
BR	Brown			

incurning c	/ Mullo		
ltem	Description	ltem	Description
CNA-CN20S	Connector	R	Reactor
20S	4 Way valve (coil)	TB1-TB3	Terminal block
CM	Compressor motor	Th1	Heat exchanger sensor
EEV A,EEV B	Electric expansion valve		(outdoor unit)
	(coil)	Th2	Outdoor air temp. sensor
FMo	Fan motor	Th3	Discharge pipe temp. sensor
HEATER	Crank case heater	Th4	Suction pipe temp. sensor

RWC000Z232

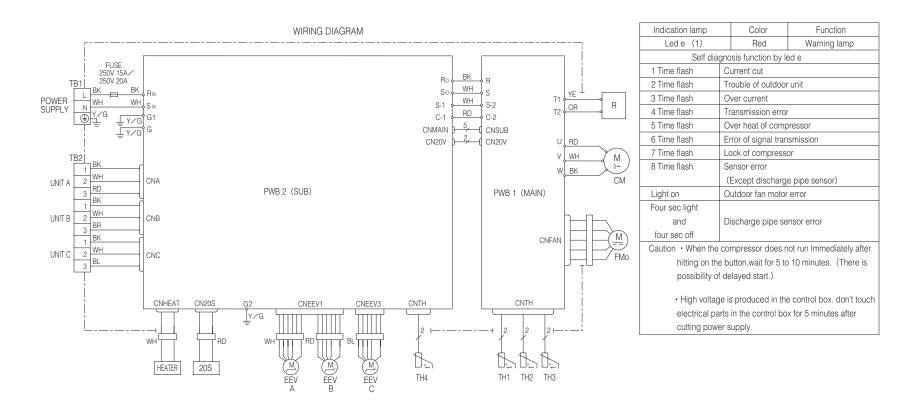


Meaning of Marks

Mark Color		Color				
BK Black		Brown				
BL Blue		Yellow				
RD Red		Yellow/Green				
WH White						
Orange						
	Black Blue Red White	Black BR Blue YE Red Y∕G White				

0			
Item	Item Description		Description
CNA-CN20S	Connector	R	Reactor
20S	0S 4 Way valve (coil)		Terminal block
CM	Compressor motor	Th1	Heat exchanger sensor
EEV A,EEV B	Electric expansion valve		(outdoor unit)
EEV C	(coil)	Th2	Outdoor air temp. sensor
FMo	Fan motor	Th3	Discharge pipe temp. sensor
HEATER	Crank case heater	Th4	Suction pipe temp. sensor

RWC000Z234

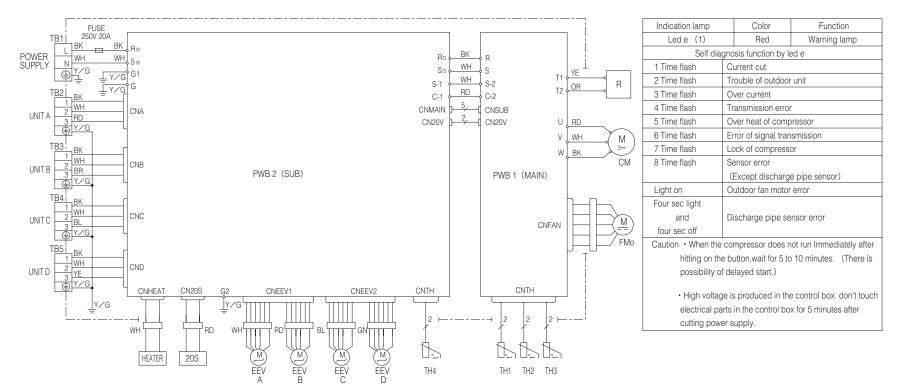


Models SCM71ZJ-S, 80ZJ-S

Color Marks

Meaning of Marks

Mark	Color	Mark	Color
BK	Black	RD	Red
BL	Blue	WH	White
BR	Brown	YE	Yellow
GN	Green	Y∕G	Yellow/Green
OR	Orange		

0			
ltem	m Description		Description
CNA-CN20S	Connector	R	Reactor
20S	20S 4 Way valve (coil)		Terminal block
CM	Compressor motor	Th1	Heat exchanger sensor
EEV A,EEV B	Electric expansion valve		(outdoor unit)
EEV C,EEV D	(coil)	Th2	Outdoor air temp. sensor
FMo	Fan motor	Th3	Discharge pipe temp. sensor
HEATER	Crank case heater	Th4	Suction pipe temp. sensor

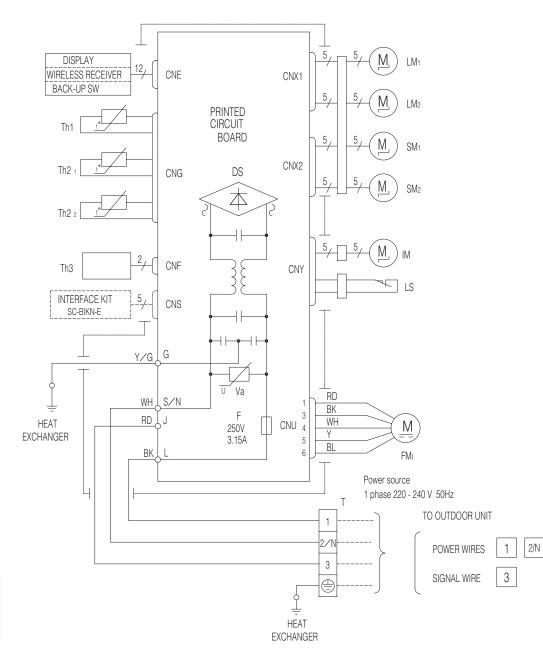

Item	Description		
CNE-CNY	Connector		
FM	Fan motor		
SM1,2	Flap motor		
LM _{1,2}	Louver motor		
IM	Inlet motor		
Th1	Room temp. sensor		
Th2 1,2	Heat exch. sensor		
Th3	Humidity sensor (50,60 only)		
LS	Limit switch		
DS	Diode stack		
F	Fuse		
Т	Terminal block		
Va	Varistor		

Color Marks Mark

ΒK

BL

RD

WH

Y/G

Y

Black

Blue

Red

White

Yellow


Yellow/Green

Color

3.2 Indoor units

(1) Wall mounted type (SRK)

Models SRK20ZJX-S, 25ZJX-S, 35ZJX-S, 50ZJX-S, 60ZJX-S

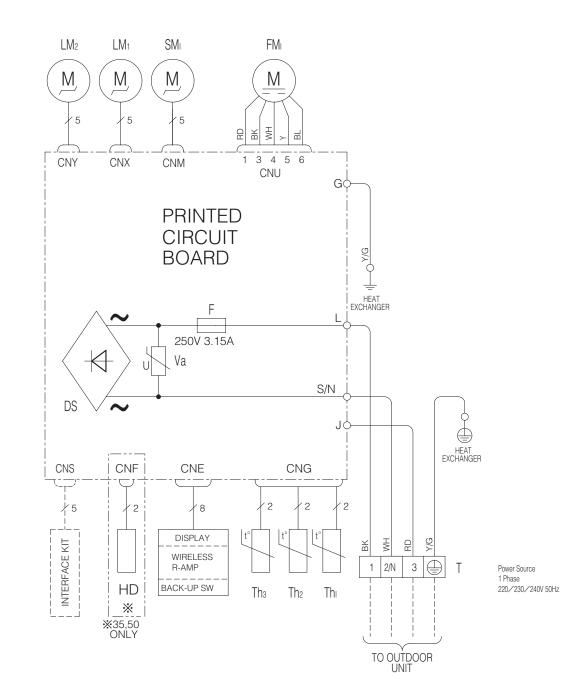


Item	Description	
CNE-CNY	Connector	
FM	Fan motor	
SMI	Flap motor	
LM1,2	Louver motor	
HD	Humidity sensor	
Thi	Room temp. sensor	
Th _{2,3}	Heat exch. sensor	
DS	Diode stack	
F	Fuse	
Т	Terminal block	
Va	Varistor	

Mark	Color
BK	Black
BL	Blue
RD	Red
WH	White
Y	Yellow
Y/G	Yellow/Green

- 120 -


'10 • SCM-SM-094

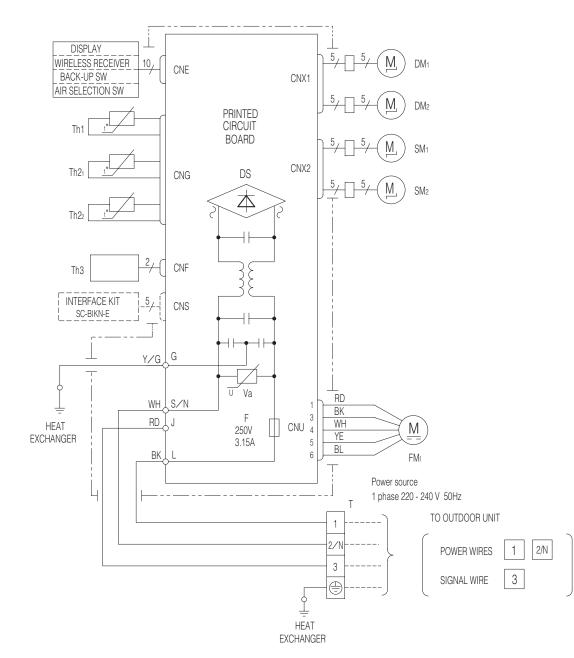

Item	Description	
CNE-CNX2	Connector	
FM	Fan motor	
SM1,2	Flap motor	
DM1	Damper motor	
DM ₂	Damper arm motor	
Th1	Room temp. sensor	
Th2 1,2	Heat exch. sensor	
Th3	Humidity sensor	
DS	Diode stack	
F	Fuse	
Т	Terminal block	
Va	Varistor	

Color Marks				
Mark	Color			
BK	Black			
BL	Blue			
RD	Red			
WH	White			
YE	Yellow			
Y/G	Yellow/Green			

RWB000Z052

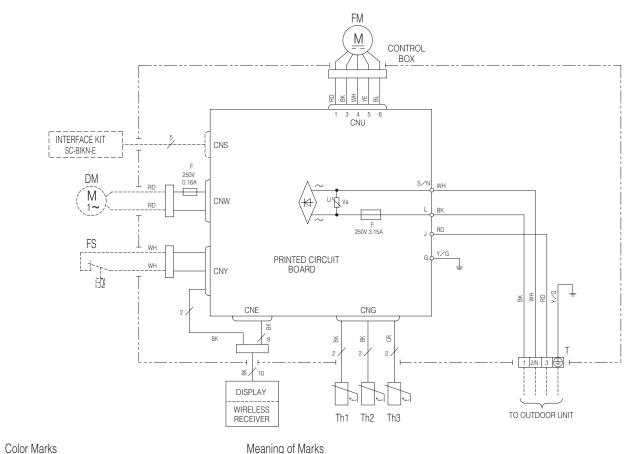

(3) Ceiling concealed type (SRR) Models SRR25ZJ-S, 35ZJ-S, 50ZJ-S, 60ZJ-S

Power source 1 phase 220 - 240 V 50Hz

TO OUTDOOR UNIT




Meaning of Marks

Mark	Color	Mark	Color	Item	Description	Item	Description
BK	Black	YE	Yellow	CNE-CNY	Connector	Th1	Room temp. sensor
BL	Blue	Y/G	Yellow/Green	F	Fuse	Th2	Heat exch. sensor 1
OR	Orange			FΜι	Fan motor	Th3	Heat exch. sensor 2
RD	Red			DM	Drain motor	Т	Terminal block
WH	White			FS	Float Switch	Va	Varistor


RWA000Z230

						00101
CNB~Z	Connector	LED•3	Indication lamp (Red-Inspection)	TB1	Terminal block (Power source)	Mark
DM	Drain motor	LM1~4	Louver motor		(mark)	BK
F200~203	Fuse	SW2	Remote controller communication	TB2	Terminal block (Signal line) (mark)	BL
FM	Fan motor		address	Thc	Thermistor (Remote controller)	BR
FS	Float switch	SW5	Plural units Master / Slave setting	Thi-A	Thermistor (Return air)	OR
LED•2	Indication lamp	SW6	Model capacity setting	Thi-R1,2,3	Thermistor (Heat exchanger)	RD
	(Green-Normal operation)	SW7-1	Operation check, Drain motor test run	Х4	Relay for DM	WH
				mark	Closed-end connector	Y

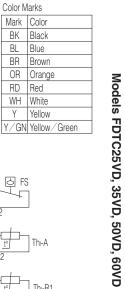


4

Ceiling cassette-4way compact type (FDTC)

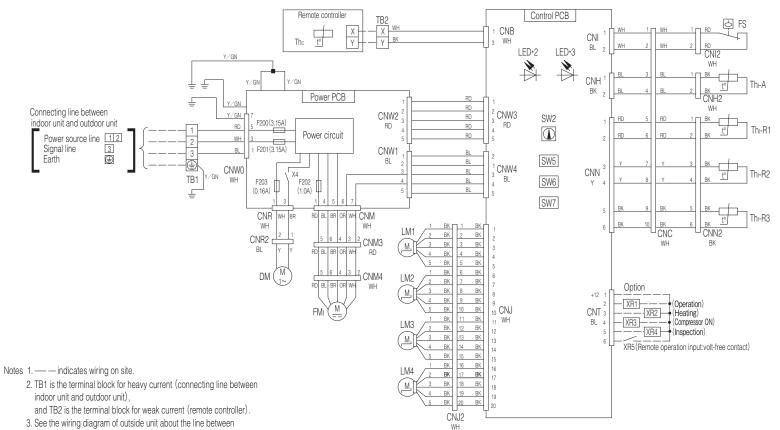

- 3. See the wiring diagram of outside unit about the line between inside unit and outside unit.
- 4. Use twin core cable (0.3mm²X2) at remote controller line. See spec
- sheet of remote controller in case that the total length is more than 100m.
- 5. Do not put remote controller line alongside power source line.


PJA003Z340 🛕

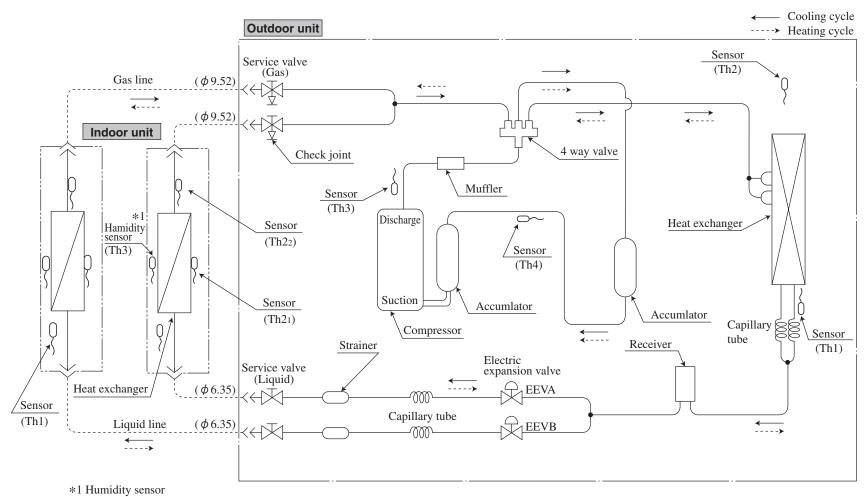


SRK35ZJ-S and SRF series only.

PIPING SYSTEMS Models SCM40ZJ-S, 45ZJ-S

4

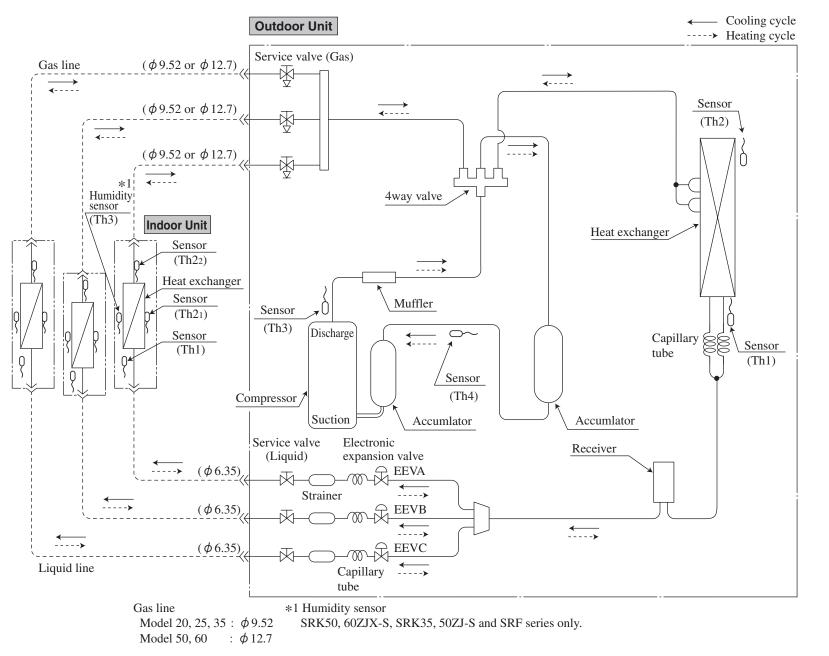



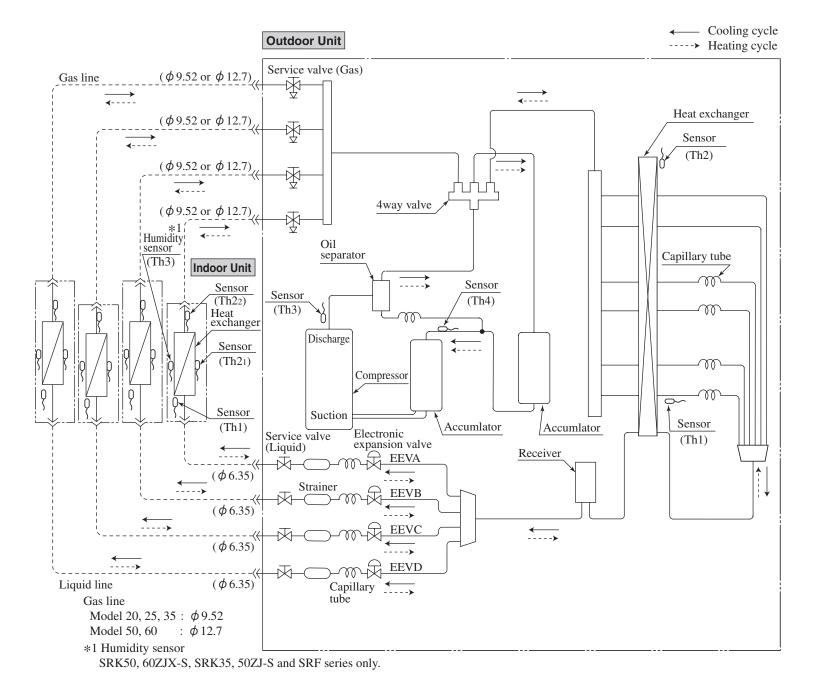

RPC012A915

MULTI TYPE AIR CONDITIONER

R410A REFRIGERANT USED

5. APPLICATION DATAS 5.1 Installation of outdoor unit

(1) Models SCM40ZJ-S, 45ZJ-S

0

(

0

0


 This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page139 and 160. • When install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between

indoor and outdoor units, power supply voltage and etc.) and installation spaces. SAFETY PRECAUTIONS

- We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into MARNING and MCAUTION. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the **WARNING** and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in [A CAUTION]. These are very important precautions for safety. Be sure to observe all of them without fail.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to
- the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user
- · For installing qualified personnel, take precautions in respect to themselves by using suitable protective clothing, groves, etc., and then perform the installation works.
- Please pay attention not to fall down the tools, etc. when installing the unit at the high position. . If unusual noise can be heard during operation, consult the dealer.
- Symbols which appear frequently in the text have the following meaning:





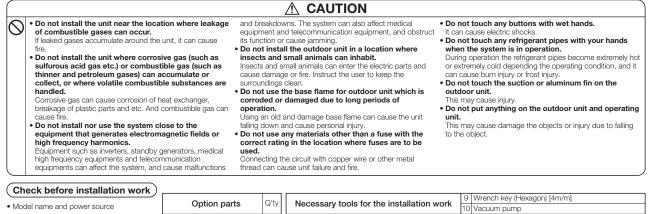

 Model name and power source Refrigerant piping length 		Option parts		Necessary tools for the installation work			Wrench key (Hexagon) [411/11]	
					Necessary tools for the installation work	10	Vacuum pump	
		a Sealing plate		1	Plus headed driver	11	Vacuum pump adapter (Anti-reverse flow type)	
		6 Sleeve		2	2 Knife		(Designed specifically for R410A)	
 Indoor unit installation manual 		C Inclination plate		3	3 Saw	12	Gauge manifold (Designed specifically for R410A)	
		Putty	1	4	Tape measure	13	Charge hose (Designed specifically for R410A)	
Accessories for outdoor unit Q'ty		Drain hose (extension	1	5	Hammer	14	Flaring tool set (Designed specifically for R410A)	
Accessories for outdoor unit	16	Drain nose (extension hose)		6	Spanner wrench	15	Gas leak detector (Designed specifically for R410A)	
Grommet (Heat pump type only) 1		Piping cover (for insulation	1	7	Torque wrench [14.0~62.0N·m (1.4~6.2kgf·m)]	16	Gauge for projection adjustment (Used when flare is	
Drain elbow (Heat pump type only)		of connection piping)		8	Hole core drill (65mm in diameter)	10	made by using conventional flare tool)	

1 SELECTION OF INSTALLATION LOCATION


Install at location that meets the following conditions after getting approval from the customer.


- Where the following installation space is available, and where air does not gather.
- Where rain and sunlight do not directly hit the unit, and where there is enough air circulation.
- Also, where the unit cannot be buried by snow.
- a location which can sustain the weight of the unit, and where noises and vibrations are not enhanced.
- Where blasts of cold or hot air and noise do not bother the neighbors.
- Where the unit does not receive heat radiation from other heat sources.
- Where there are no obstructions (animals, plants, etc.) to the suction inlet and blowing outlet.
 Where water may drain out.
- * Please avoid the following locations.
- Where there is constant exposure to harsh winds such as the top floors of a building. Also, locations with exposure to salty air.
- Where there are oil splashes, vapor, and smoke.
- Where there are possibilities of flammable gas leaks.

Installation

① Anchor bolt fixed position

2 Notabilia for installation





 ${\ensuremath{\bullet}}$ In installing the unit, fix the unit's legs with bolts specified on the left.

• The protrusion of an anchor bolt on the front side must be kept within 15 mm.

Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.


• Refer to the above illustrations for information regarding concrete foundations.


• Install the unit in a level area. (With a gradient of 5 mm or less.)

Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.


- 1 Installation Space (on a flat surface)
 - Blowing out port and suction port on the back side of the unit can be installed at a distance of 10cm from walls.
 - (In case the barrier is 1.2m or above in height, or is overhead, the sufficient space between) the unit and wall shall be secured.

OWhen the unit is installed, the space of the following dimension and above shall be secured.

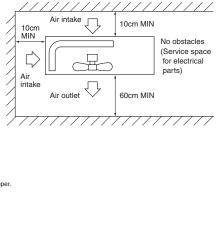

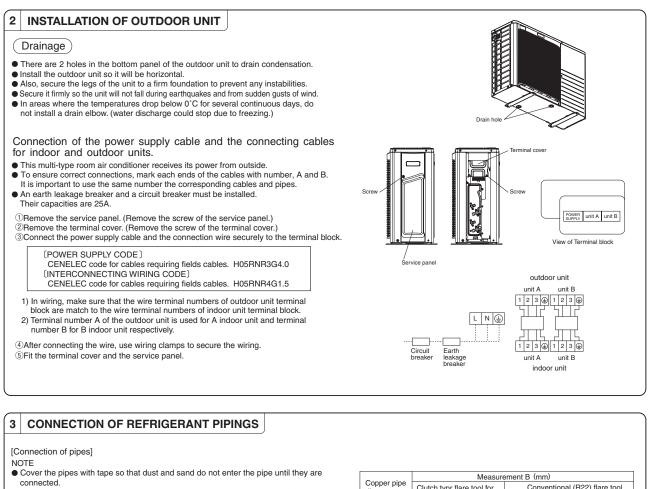

- gas or oil.
- Make sure to match the pipes between the indoor unit and the outdoor unit with the correct operation valves

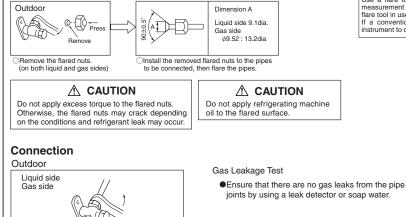


OConnect the pipes on both liquid and gas sides


Liquid side : 14.0~18.0N·m (1.4~1.8kgf·m) Gas side (\$\phi 9.52): 33.0~42.0N·m (3.3~4.2kgf·m)

OTighten the nuts to the following torque.


	- ·	Measurement B (mm)							
	Copper pipe diameter	Clutch typr flare tool for	Conventional (R22) flare tool						
	ulameter	R410A	Clutch type	Wing nut type					
	φ6.35 0.0~0.5 1.0~1.5 1.5~2.0								
	φ9.52 0.0~0.5 1.0~1.5 1.5~2.0								
Use a flare tool designed for R410A or a conventional flare tool. Please note that measurement B (protrusion from the flaring block) will vary depending on the type of a flare tool in use									

If a conventional flare tool is used, please use copper pipe gauge or a similar instrument to check protrusion so that you can keep measurement B to a correct value.



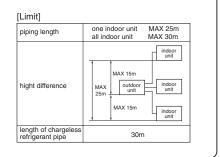

- When connecting the pipes to the outdoor unit, be careful about the discharge of fluorocarbon

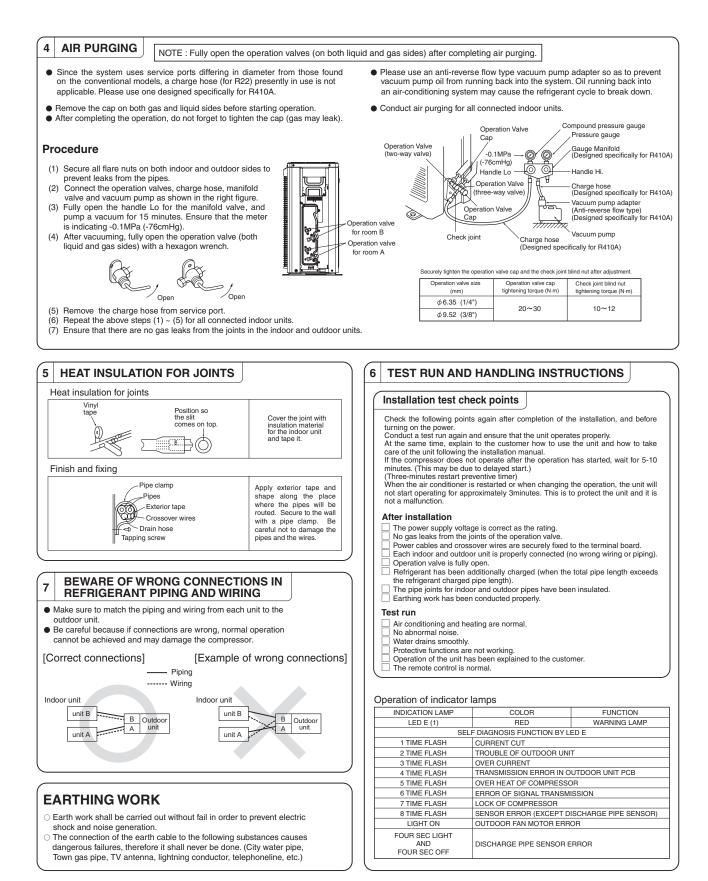

(2) Models SCM50ZJ-S, 60ZJ-S

RPC012A916A

MULTI TYPE AIR CONDITIONER **R410A REFRIGERANT USED**


• This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page139 and 160. . When Install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between indoor and outdoor units, power supply voltage and etc.) and installation spaces

SAFETY PRECAUTIONS


- We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into AWARNING and ACAUTION . The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the MARNING and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including • If unusual noise can be heard during operation, consult the deeler. probability leading to serious consequences in some cases are listed in ACAUTION. These are very important precautions for safety. Be sure to observe all of them without fail

Be sure to confirm no anomaly on the equipment by commissioning after completed installation

- the user according to the owner's manual.
 - Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user.
 - For installing qualified personnel, take precautions in respect to themselves by using suitable protective clothing, groves, etc., and then perform the installation works,
- Please pay attention not to fall down the tools, etc. when installing the unit at the high position.
- Symbols which appear frequently in the text have the following meaning:





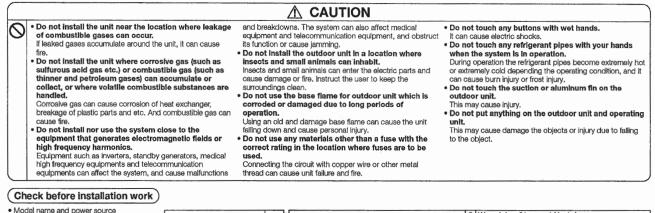

Refrigerant piping length	Option parts	Q'ty				Wrench key (Hexagon) [4m/m]	
 Diping within and miscallaneous small parts 	- Print Pair to	aly		Necessary tools for the installation work	10	Vacuum pump	
 Indoor unit installation manual 	(a) Sealing plate	1	1	Plus headed driver	11	Vacuum pump adapter (Anti-reverse flow type)	
	(b) Sleeve	1	2	Knife	l''	(Designed specifically for R410A)	
Accessories for outdoor unit Q'ty	© Inclination plate	1	3	Saw	12	Gauge manifold (Designed specifically for R410A)	
Accessories for outdoor unit	@ Putty	1	4	Tape measure	13	Charge hose (Designed specifically for R410A)	
Grommet (Heat pump type only)	Drain hose (extension hose)	4	5	Hammer	14	Flaring tool set (Designed specifically for R410A)	
② Drain elbow (Heat pump type only) 1	hose)	1	6	Spanner wrench	15	Gas leak detector (Designed specifically for R410A)	
Variable diameter joint SCM50 1	Piping cover (for insulation	4	7	Torque wrench [14.0~62.0N·m (1.4~6.2kgf·m)]	16	Gauge for projection adjustment (Used when flare is	
	of connection piping)	'	8	Hole core drill (65mm in diameter)	10	made by using conventional flare tool)	
Note: Provide flare nuts when using the variable							

neter joint (for \$12.7).

CAUTION • This model requires a minimum of 2 indoor units.

1 SELECTION OF INSTALLATION LOCATION

Install at location that meets the following conditions after getting approval from the customer.

- Where the following installation space is available, and where air does not gather.
- Where rain and sunlight do not directly hit the unit, and where there is enough air circulation.


 Also, where the unit cannot be buried by snow. a location which can sustain the weight of the unit, and where noises and vibrations are not

enhanced


- Where blasts of cold or hot air and noise do not bother the neighbors. Where the unit does not receive heat radiation from other heat sources.
- Where there are no obstructions (animals, plants, etc.) to the suction inlet and blowing outlet.
- Where water may drain out.
- * Please avoid the following locations.
- Where there is constant exposure to harsh winds such as the top floors of a building. Also, locations with exposure to salty air.
- Where there are oil splashes, vapor, and smoke.
- Where there are possibilities of flammable gas leaks.


Installation

① Anchor bolt fixed position



(2) Notabilia for installation






of the unit can be installed at a distance of 10cm from walls. In case the barrier is 1.2m or above in height, or is overhead, the sufficient space between the unit and wall shall be secured.

OBlowing out port and suction port on the back side

① Installation Space (on a flat surface)

OWhen the unit is installed, the space of the following dimension and above shall be secured.

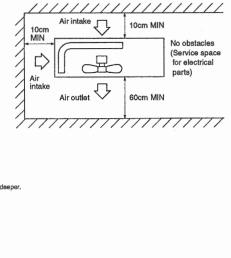


 In installing the unit, fix the unit's legs with bolts specified on the left. The protrusion of an anchor bolt on the front side must be kept within 15 mm.


Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.

Refer to the above illustrations for information regarding concrete foundations.

Install the unit in a level area. (With a gradient of 5 mm or less.)

Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

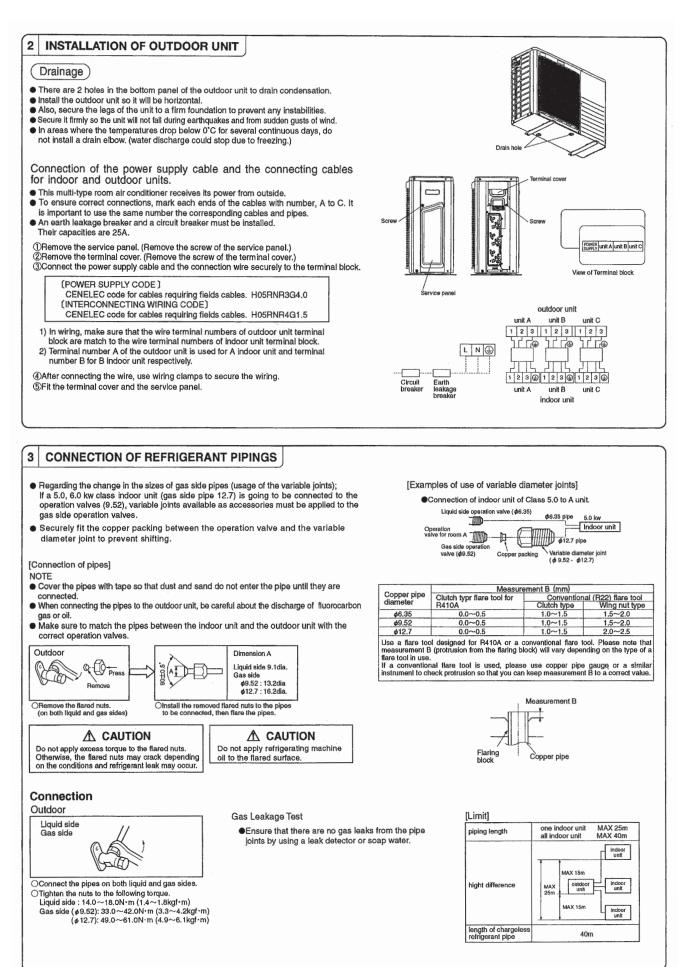

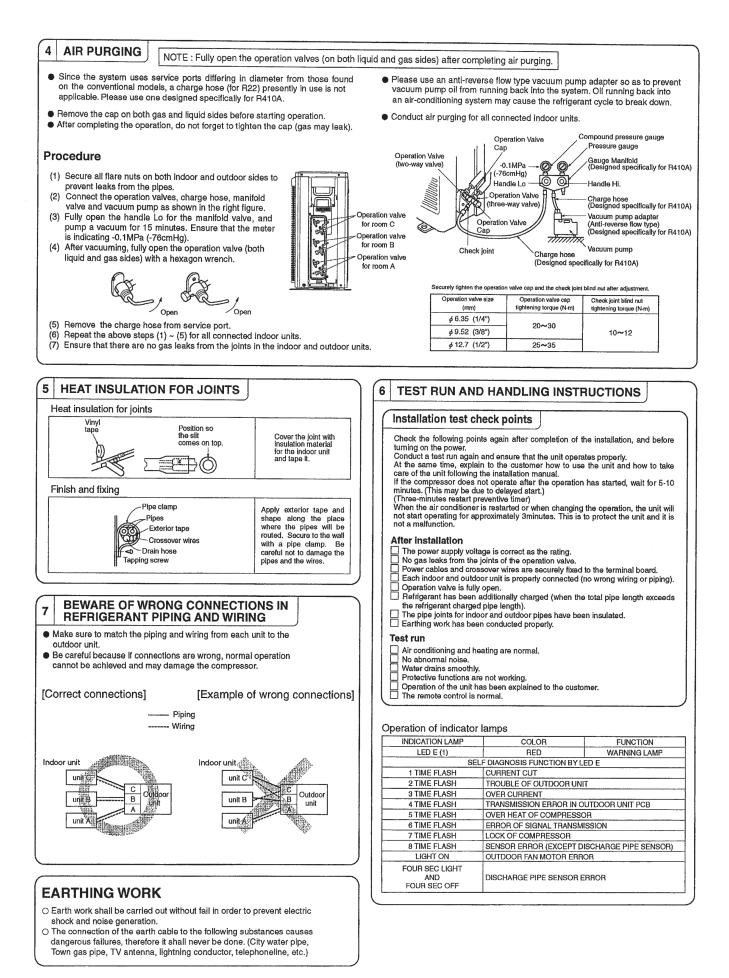

(3) Models SCM71ZJ-S, 80ZJ-S

0

installe

circuit.

 \bigcirc

4

RPC012A913 A

MULTI TYPE AIR CONDITIONER **R410A REFRIGERANT USED**

- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 139 and 160. When install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between indoor and outdoor units, power supply voltage and etc.) and installation spaces.
 - SAFETY PRECAUTIONS
- We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to
- mishandling. The precautions described below are divided into **WARNING** and **ACAUTION**. The matters with possibilities leading to serious consequences such as death or serious p injury due to erroneous handling are listed in the $\underline{\triangle}$ **WARNING** and the matters with such as death or serious personal possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in [A CAUTION]. These are very important precautions for safety. Be sure to observe all of them without fail.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to
- the user according to the owner's manual. Keep the installation manual together with owner's manual at a place where any user can read
- at any time. Moreover if necessary, ask to hand them to a new user. For installing qualified personnel, take precautions in respect to themselves by using suitable
- protective clothing, groves, etc., and then perform the installation works. Please pay attention not to fall down the tools, etc. when installing the unit at the high position. If unusual noise can be heard during operation, consult the dealer.
- · Symbols which appear frequently in the text have the following meaning



Do not open the operation valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. If the compressor is operated in state of opening operation valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can Install the system in full accordance with the instruction manual.
 Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire.
 Be sure to use only for household and residence.
 If this appliance is installed in inferior environment such as machine shop and etc., it can cause malfunction.
 Use the original accessories and the specified components for installation.
 If nate other than those preseribed by us are used it may. Arrange the wirring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. Incorrect installation may result in overheating and fire. Youry and the not seened in the residual number of the residual injury due to anomalously high pressure in the refrigerant.
The electrical installation must be carried out by the qualified electrician in accordance with "the norm for a second and the residual in the refression of the residual interview." Be sure to fix up the service panels.
 Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water. Be sure to switch off the power supply in the event of If parts other than those prescribed by us are used, It may cause water leaks, electric shocks, fire and personal injury. electrical work" and "national wiring regulation", and the system must be connected to the dedicated installation, inspection or servicing. If the power supply is not shut off, there is a risk of electric Install the unit in a location with good support.
 Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
 Ensure the unit is stable when installed, so that it can circuit. shocks, unit failure or personal injury due to the unexpected Power supply with insufficient capacity and incorrect function done by improper work can cause electric shocks start of fan start of fan.
Stop the compressor before disconnecting refrigerant pipes in case of pump down operation.
If disconnecting refrigerant pipes in state of opening operation values before compressor stopping, air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit
Only use prescribed optional parts. The installation must be carried out by the qualified installer.
If you install the system by vorself if the an early seriors. and fire. Proture the time is stable when installed, so that it constrained, so that it constrained is the stable with the stable installation locations can cause the unit to fall and cause material damage and personal injury.
 Ventilate the working area well in the event of refrigerant leakage during installation.
 If the refrigerant comes into contact with naked flames, preserve and in preserve and Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. Be sure to use the cables conformed to safety standard and cable ampacity for power distribution oisonous das is produced. work. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. • Use the prescribed pipes, flare nuts and tools for Unconformable cables can cause electric leak, anomalous R4104 neat production or fire Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant This appliance must be connected to main power supply by means of a circuit breaker or switch (fuse:25A) with a contact separation of at least 3mm. • Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the Do not bundling, winding or processing for the power cord. Or, do not deforming the power plug due to • Do not perform any change of protective device itself or its setup condition. The forced operation by short-circuiting protective device of tread it. This may cause fire or heating pressure switch and temperature controller or the use of non specified component can cause fire or burst. refrigerant circuit becomes too high, which can cause burst and personal injury. Do not processing, splice the power cord, or share a socket with other power plugs. This may cause fire or electric shock due to defecting Do not run the unit with removed panels or protections. Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn o contact, defecting insulation and over-current etc. electric shocks.

• Carry out the electrical work for ground lead with care. Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.

• Use the circuit breaker with sufficient breaking capacity. Take care when carrying the unit by hand. When perform the air conditioner operation (cooling) take care when carrying the unit by hand.
If the unit weights more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.
Dispose of any packing materials correctly. capacity. If the breaker does not have sufficient breaking capacity, it can cause the unit malfunction and fire. • Earth leakage breaker must be installed. or drying operation) in which vertilator is installed in the room. In this case, using the air conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the If the earth leakage breaker is not installed, it can cause room lapse into the negative pressure status. Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.
 Be sure to insulate the refrigerant pipes so as not to room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the air into the room that may appropriat to ventilation (For example; Open the door a little). In addition, just as above, so set up the opening port if the room lapse into negative pressure status due to register of the wind for the high rise apartment etc. electric shocks. Install isolator or disconnect switch on the power
 supply wiring in accordance with the local codes and regulations. After maintenance, all wiring, wiring ties and the like, condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables. should be returned to their original state and wiring route, and the necessary clearance from all metal parts should be secured. Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to falling from the installation place. • Do not install the unit in the locations listed below. base flame and snow hood mentioned in the manual). Do not install the outdoor unit in the locations listed \bigcirc Locations where carbon fiber, metal powder or any powder is floating.
 Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can Locations where the unit is exposed to chimney smoke.
Locations at high altitude (more than 1000m high). below. · Locations where discharged hot air or operating sound of Locations where outlet air of the outdoor unit blows directly to plants. Locations with ammonic atmospheres.
Locations where heat radiation from other heat source can affect the unit. occur. Locations without good air circulation · Locations where vibration can be amplified and Vehicles and ships. Locations without good air circulation.
 Locations with any obstacles which can prevent inlet and outlet air of the unit.
 Locations where short circuit of air can occur (in case of multiple units installation).
 Locations where strong air blows against the air outlet of Locations where vibration can be amplified and transmitted due to insufficient strength of structure.
 Locations where vibration and operation sound generated by the outdoor unit can affect seriously (on the wall or at the place near bed room).
 Locations where an equipment affected by high harmonics · Locations where cosmetic or special sprays are often used Locations with direct exposure of oil mist and steam such as kitchen and machine plant.
Locations where any machines which generate high frequency harmonics are used. outdoor unit. is placed (TV set or radio receiver is placed within 1m). Locations with salty atmospheres such as coastlines.
Locations with heavy snow (If installed, be sure to provide Locations where drainage cannot run off safely.
 It can affect surrounding environment and cause a claim It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire

Vacuum pump adapter (Anti-reverse flow type)

Gauge manifold (Designed specifically for R410A)

3 Charge hose (Designed specifically for R410A)

14 Flaring tool set (Designed specifically for R410A)

made by using conventional flare tool)

Blowing out port and suction port on the back side of the unit can be installed at a distance of 10cm

In case the barrier is 1.2m or above in height.

or is overhead, the sufficient space between

OWhen the unit is installed, the space of the following dimension and above shall be secured.

////////////

No obstacles (Service space

for electrical parts)

10cm MIN

60cm MIN

the unit and wall shall be secured.

/////

 \bigcirc

Air intake

Air outlet

15 Gas leak detector (Designed specifically for R410A)

(Designed specifically for R410A)

Torque wrench [14.0~62.0N·m (1.4~6.2kgf·m)] 16 Gauge for projection adjustment (Used when flare is


① Installation Space (on a flat surface)

from walls.

10cm MIN

Ę,

Air intake

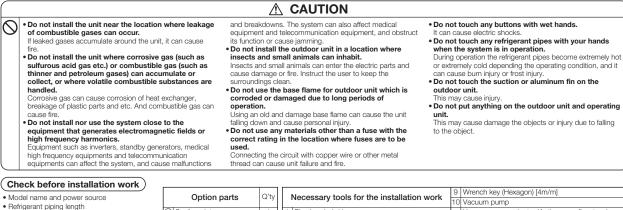

1 Plus headed driver

Spanner wrench

Hole core drill (65mm in diameter)

2 Knife

Saw

Hammer

4 Tape measure

1

1

1

		•	Model	name	and	power	SOL
--	--	---	-------	------	-----	-------	-----

Refrigerant piping length

· Piping, wiring and miscellaneous small parts

•	Indoor unit installation manual								
	Accessories for outdoor unit								
1	Grommet (Heat pump type only)	2							
	Drain elbow (Heat pump type only)	1							
3	Variable diameter joint ϕ 9.52 \Rightarrow ϕ 12.7	2							

Note: Provide flare nuts when using the variable diameter joint (for ϕ 12.7).

CAUTION • This model requires a minimum of 2 indoor units

1 SELECTION OF INSTALLATION LOCATION

Install at location that meets the following conditions after getting approval from the customer.

Where the following installation space is available, and where air does not gather.

Sealing plate

Inclination plate

se (extensior

Piping cover (for insulation

of connection piping)

6 Slee

O Putty

0

Ð


Drain h

hose)


- Where rain and sunlight do not directly hit the unit, and where there is enough air circulation. Also, where the unit cannot be buried by snow.
- a location which can sustain the weight of the unit, and where noises and vibrations are not enhanced.
- Where blasts of cold or hot air and noise do not bother the neighbors.
- Where the unit does not receive heat radiation from other heat sources.
- Where there are no obstructions (animals, plants, etc.) to the suction inlet and blowing outlet. • Where water may drain out.
- * Please avoid the following locations.
- Where there is constant exposure to harsh winds such as the top floors of a building. Also, locations with exposure to salty air.
- Where there are oil splashes, vapor, and smoke.
- Where there are possibilities of flammable gas leaks.


Installation

① Anchor bolt fixed position










• In installing the unit, fix the unit's legs with bolts specified on the left.

- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5 mm or less.)

Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

-136 -

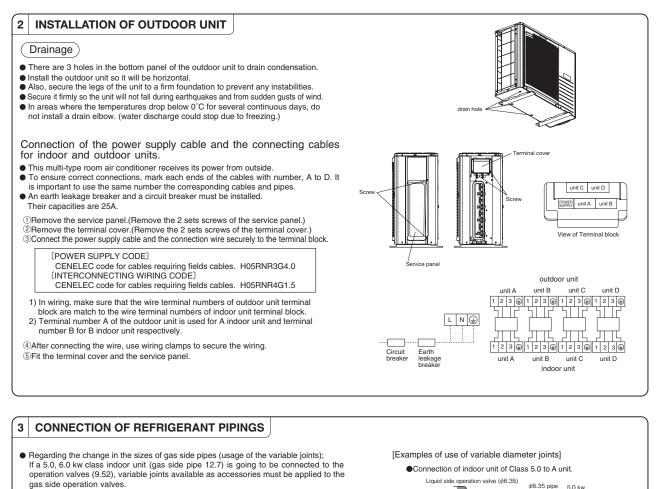


gas side operation valves.
Securely fit the copper packing between the operation valve and the variable diameter joint to prevent shifting.

[Connection of pipes]

NOTE

- Cover the pipes with tape so that dust and sand do not enter the pipe until they are connected.
- When connecting the pipes to the outdoor unit, be careful about the discharge of fluorocarbon gas or oil.
- Make sure to match the pipes between the indoor unit and the outdoor unit with the correct operation valves.





Do not apply excess torque to the flared nuts. Otherwise, the flared nuts may crack depending on the conditions and refrigerant leak may occur.

Connection

Outdoor



- $\label{eq:connect the pipes on both liquid and gas sides. \\ \hline Tighten the nuts to the following torque.$ Liquid side : 14.0~18.0N·m (1.4~1.8kgf·m) $Gas side ($\phi 9.52): 33.0~42.0N·m (3.3~4.2kgf·m)$ $($\phi 12.7): 49.0~61.0N·m (4.9~6.1kgf·m) \\ \end{tabular}$
- When the total refrigerant pipe lenght for all the rooms exceeds the lenght of the uncharged pipe (40m), additional refrigerant is required. (If 40m or less, additional charge is not required.) Additional charge amount per meter = 20g/m


Gas Leakage Test

▲ CAUTION

Do not apply refrigerating machine

oil to the flared surface

•Ensure that there are no gas leaks from the pipe joints by using a leak detector or soap water.



Copper packing


Indoor unit


φ12.7 pipe


 Variable diameter joint (\$\phi\$ 9.52 - \$\phi\$12.7\$)

Operation valve for room A

Gas side operation valve (\$\$\phi\$9.52\$)



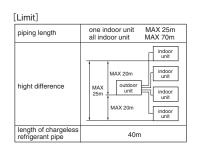

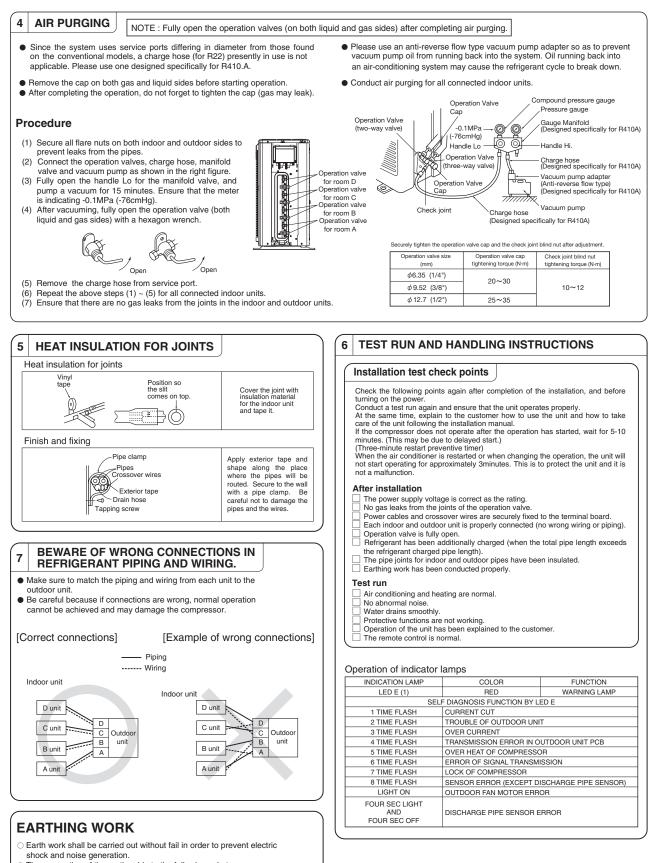

The connection of the earth cable to the following substances causes dangerous failures, therefore it shall never be done. (City water pipe, Town gas pipe, TV antenna, lightning conductor, telephoneline, etc.)

5.2 Installation of Indoor unit

(1) Wall mounted type (SRK)

(a) Models SRK20ZJX-S, 25ZJX-S, 35ZJX-S, 50ZJX-S, 60ZJX-S

• This instruction manual illustrates the method of installing an indoor unit.

· For electrical wiring work, please see instructions set out on the backside.

· For outdoor unit installation and refrigerant piping, please refer to page 127 and 138.

 We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit

and to avoid malfunction due to mishandling The precautions described below are divided into

WARNING and CAUTION. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the AWARNING and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in ACAUTION. These are very important precautions for safety. Be sure to observe all of them without fail.

. Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.

· A wired remote control unit is supplied separately as an optional part. . When install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between indoor and outdoor units, power supply voltage and etc.) and installation spaces.

SAFETY PRECAUTIONS

. Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user For installing gualified personnel, take precautions in respect to themselves by

using suitable protective clothing, groves, etc., and then perform the installation works.

- Please pay attention not to fall down the tools, etc. when installing the unit at the high position.
- . If unusual noise can be heard during operation, consult the dealer
- · Symbols which appear frequently in the text have the following meaning Observe instructions Strictly prohibited with great care

∧ WARNING Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as If the flare nut were tightened with excess torque, this may cause burst and water leaks, electric shocks, fire and personal injury, as a result of a evetem malfunction Install the system in full accordance with the instruction manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. Be sure to use only for household and residence. If this appliance is installed in inferior environment such as machine shop and etc., it can cause malfunction. Use the original accessories and the specified components for installation If parts other than those prescribed by us are used, It may cause water leaks, electric shocks, fire and personal injury. Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury Ventilate the working area well in the event of refrigerant leakage during installation If the refrigerant comes into contact with naked flames, poisonous gas is produced When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage. Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents. After completed installation, check that no refrigerant leaks from the system. If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous das is produced. Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit. O I • Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulphide gas can occur. Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit

becomes too high, which can cause burst and personal injury.

 Tighten the flare nut by torque wrench with specified method. refrigerant leakage after a long period. The electrical installation must be carried out by the gualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. Power supply with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. · Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire . This appliance must be connected to main power supply by means of a circuit breaker or switch (fuse:16A) with a contact separation of at least 3mm. · When plugging this appliance, a plug conforming to the norm IEC60884-1 must be used. Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. Loose connections or cable mountings can cause anomalous heat production or fire. Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.

Incorrect installation may result in overheating and fire. · Be sure to switch off the power supply in the event of installation, inspection or servicing. If the power supply is not shut off, there is a risk of electric shocks, unit

failure or personal injury due to the unexpected start of fan.

. Do not processing, splice the power cord, or share a socket with other power plugs. This may cause fire or electric shock due to defecting contact, defecting

insulation and over-current etc. . Do not bundling, winding or processing for the power cord. Or, do not deforming the power plug due to tread it. This may cause fire or heating

- RKY012A007A On not vent R410A into the atmosphere : R410A is a fluorinated Do not perform any change of protective device itself or its setup greenhouse gas, covered by the Kyoto Protocol with Groval condition. Warming Potential (GWP)=1975. The forced operation by short-circuiting protective device of pressure Do not run the unit with removed panels or protections. switch and temperature controller or the use of non specified componen Touching rotating equipments, hot surfaces or high voltage parts can cause can cause fire or burst. personal injury due to entrapment, burn or electric shocks Carry out the electrical work for ground lead with care Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead, incorrect grounding can cause unit faults such as electric shocks due to short-circuiting · Use the circuit breaker with sufficient breaking capacity. Secure a space for installation, inspection and maintenance If the breaker does not have sufficient breaking capacity, it can cause the specified in the manual. unit malfunction and fire. Insufficient space can result in accident such as personal injury due to Earth leakage breaker must be installed. falling from the installation place. If the earth leakage breaker is not installed, it can cause electric shocks. . For installation work, be careful not to get injured with the heat Install isolator or disconnect switch on the power supply wiring in exchanger, piping flare portion or screws etc. accordance with the local codes and regulations. . Be sure to insulate the refrigerant pipes so as not to condense the Be sure to install indoor unit properly according to the instruction ambient air moisture on them. manual in order to run off the drainage smoothly. Insufficient insulation can cause condensation, which can lead to moisture Improper installation of indoor unit can cause dropping water into the room damage on the ceiling, floor, furniture and any other valuables When perform the air conditioner operation (cooling or drying) and damaging personal property Install the drainage pipe to run off drainage securely according to operation) in which ventilator is installed in the room. In this case, Provide proper the installation manual. using the air conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the Incorrect installation of the drainage pipe can cause dropping water into the room and damaging personal property. room lapse into the negative pressure status. Therefore, set up the Be sure to install the drainage pipe with descending slope of 1/100 opening port such as incorporate the air into the room that may appropriate to ventilation (For example; Open the door a little). In or more, and not to make traps and air-bleedings. Check if the drainage runs off securely during commissioning and ensure addition, just as above, so set up the opening port if the room lapse the space for inspection and maintenance. into negative pressure status due to register of the wind for the high rise apartment etc. • Do not install the unit in the locations listed below. · Do not install the unit where corrosive gas (such as sulfurous acid \bigcirc Locations where carbon fiber, metal powder or any powder is floating gas etc.) or combustible gas (such as thinner and petroleum gases) . Locations where any substances that can affect the unit such as subhide can accumulate or collect, or where volatile combustible gas, chloride gas, acid and alkaline can occur. substances are handled. Vehicles and ships. Corrosive gas can cause corrosion of heat exchanger, breakage of plastic · Locations where cosmetic or special sprays are often used parts and etc. And combustible gas can cause fire. • Locations with direct exposure of oil mist and steam such as kitchen and • Do not use the indoor unit at the place where water splashes may machine nlant occur such as in laundries. Locations where any machines which generate high frequency harmonics Since the indoor unit is not waterproof, it can cause electric shocks and are used fire · Locations with salty atmospheres such as coastlines. . Do not install nor use the system close to the equipment that • Locations with heavy snow (If installed, be sure to provide base flame and generates electromagnetic fields or high frequency harmonics. snow hood mentioned in the manual). Equipment such as inverters, standby generators, medical high frequency Locations where the unit is exposed to chimney smoke. equipments and telecommunication equipments can affect the system, and Locations at high altitude (more than 1000m high). cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or · Locations with ammonic atmospheres. Locations where heat radiation from other heat source can affect the unit. cause iamming. Locations without good air circulation Do not place any variables which will be damaged by getting wet . Locations with any obstacles which can prevent inlet and outlet air of the under the indoor unit When the relative humidity is higher than 80% or drainage pipe is clogged unit Locations where short circuit of air can occur (in case of multiple units) condensation or drainage water can drop and it can cause the damage of installation) valuables Locations where strong air blows against the air outlet of outdoor unit. Do not install the remote control at the direct sunlight It can cause remarkable decrease in performance, corrosion and damage It can cause malfunction or deformation of the remote control of components, malfunction and fire Do not use the unit for special purposes such as storing foods. Do not install the indoor unit in the locations listed below (Be sure) cooling precision instruments and preservation of animals, plants or to install the indoor unit according to the installation manual for art each model because each indoor unit has each limitation) It can cause the damage of the items. • Locations with any obstacles which can prevent inlet and outlet air of the • Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used unit Locations where vibration can be amplified due to insufficient strength of Connecting the circuit with copper wire or other metal thread can cause structure unit failure and fire . Locations where the infrared receiver is exposed to the direct sunlight or . Do not touch any buttons with wet hands the strong light beam (in case of the infrared specification unit). It can cause electric shocks Locations where an equipment affected by high harmonics is placed (TV) . Do not touch any refrigerant pipes with your hands when the set or radio receiver is placed within 5m). system is in operation. · Locations where drainage cannot run off safely. During operation the refrigerant pipes become extremely hot or extremely It can affect performance or function and etc. cold depending the operating condition, and it can cause burn injury or Do not install the unit near the location where leakage of frost injury.
 - combustible gases can occur.

If leaked gases accumulate around the unit, it can cause fire.

10• SCM-SM-094


BEFORE INSTALLATION


OBefore installation check that the power supply matches the air conditioner.


Standard accessories (Installation kin Accessories for indoor unit	t) Q'ty
 Installation board (Attached to the rear of the indoor unit) 	t) 1
Wireless remote control	1
3 Remote control holder	1
Tapping screws (for installation board 4dia. by 25mm)	4
(5) Wood screw (for remote control switch holder 3.5(mm). by 16m	nm) 2
6 Battery [R03(AAA,Micro) 1.5V]	2
⑦ Air-cleaning filters	2
8 Filter holders (Attached to the front panel of indoor)	unit) 2
(9) Insulation (#486 50 x 100 t3)	1


	Option parts	Q'ty
(a)	Sealing plate	1
b	Sleeve	1
©	Inclination plate	1
d	Putty	1
e	Drain hose (extention hose)	1
ſ	Piping cover (for insulation of connection piping)	1

	Necessary tools for the installation work
1	Plus headed driver
2	Knife
3	Saw
4	Tape measure
5	Hammer
6	Spanner wrench
7	Torque wrench $\begin{pmatrix} 14.0 \sim 61.0 \text{N·m} \\ (1.4 \sim 6.1 \text{kgf·m}) \end{pmatrix}$
8	Hole core drill (65mm in diameter)
9	Wrench key (Hexagon) [4m/m]
10	Flaring tool set (Designed specifically for R410A)
11	Gas leak detector (Designed specifically for R410A
12	Gauge for projection adjustment (Used when flare is made by using) conventional flare tool
13	Pipe bender

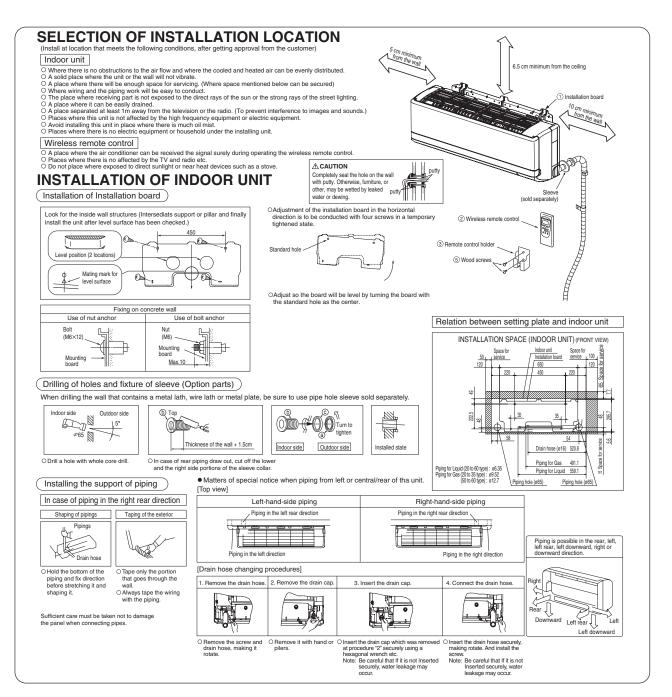


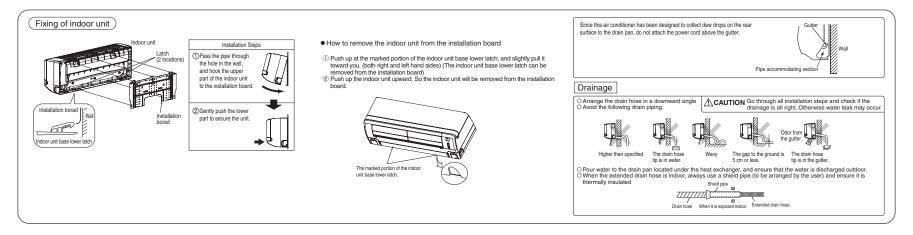

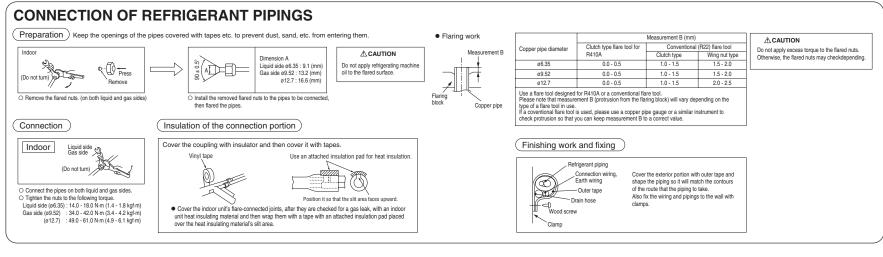

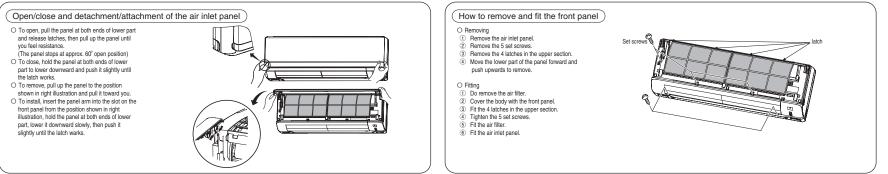

'10 • SCM-SM-094

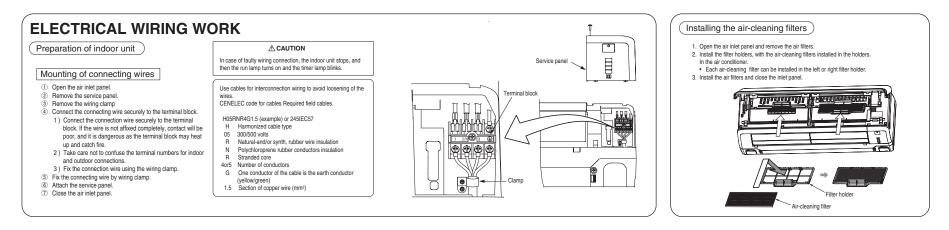

INSTALLATION OF REMOTE CONTROL SWITCH

Mounting method of battery

142

OUncover the wireless remote control, and mount the batteries [R03(AAA,Micro),×2 pieces] in the body regularly.



Fixing to pillar or wall

OConventionally, operate the remote control switch by holding in your hand. OAvoid installing it on a clay wall etc.



INSTALLATION TEST CHECK POINTS

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. At the same time, explain to the customer how to use the unit and how to take care of the unit following the user's manual.

After installation

- The power supply voltage is correct as the rating.
- No gas leaks from the joints of the operational valve.
- Power cables and crossover wires are securely fixed to the terminal board.
- Operational valve is fully open.
- The pipe joints for indoor and outdoor pipes have been insulated.

Test run

- Air conditioning operation is normal. No abnormal noise.
- Water drains smoothly
- Protective functions are not working.
- The remote control is normal.

Operation of the unit has been explained to the customer

- (Three-minutes restart preventive timer)
 - When the air conditioner is restarted or when changing the operation, the unit will not start operating for approximately 3 minutes. This is to protect the unit and it is not a malfunction.

CONCERNING TERMINAL CONNECTION FOR AN INTERFACE

- ① Remove the front panel and lid of control.
- 2 There is a terminal (respectively marked with CNS) for the indoor control board. In connecting an interface, connect to the respective terminal securely with the connection harness supplied
- with an optional "Interface connection kit SC-BIKN-E" and fasten the connection harness onto the indoor control
- box with the clamp supplied with the kit.
- For more details, please refer to the user's manual of your "Interface connection kit SC-BIKN-E".

HOW TO RELOCATE OR DISPOSE OF THE UNIT


O In order to protect the environment, be sure to pump down (recovery of refrigerant). O Pump down is the method of recovering refrigerant from the indoor unit to the outdoor unit when the pipes are removed from the unit.

<How to pump down>

- ① Connect charge hose to service port of outdoor unit.
- Liquid side : Close the liquid valve with hexagon wrench key. Gas side : Fully open the gas valve Carry out cooling operation . (If indoor temperature is low, operate
- forced cooling operation.) ③ After low pressure gauge become 0.01MPa, stop cooling operation
- and close the gas valve.

Turn on a power supply again after a while after turn off a power supply. Then press continually the ON/OFF button 5 seconds or more.

Forced cooling operation



(a) Models SRK20ZJ-S, 25ZJ-S, 35ZJ-S, 50ZJ-S

	RLA012A012		\Lambda WAR	INING
 This instruction manual illustrates the method of installing an indoor unit. 	When install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping	\otimes	Do not vent R410A into the atmosphere : R410A is a fluorinated greenhouse gas, covered by the Kyoto Protocol with Global Warming Potential (GWP)=1975. Do not run the unit with removed panels or protections. Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.	Do not perform any change of protective device itself or its setup condition. The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.
 For outdoor unit installation and refrigerant piping, please refer to page 127 and 138. A wired remote control unit is supplied separately as an optional part. 	Instandard place, power suppry specifications, usage initiation (piping length, height differences between indoor and outdoor units, power supply voltage and etc.) and installation spaces.	•	Carry out the electrical work for ground lead with care. Do not connect the ground lead to the gas line, water line, lightning conduct such as electric shocks due to short-circuiting.	tor or telephone line's ground lead. Incorrect grounding can cause unit faults
SAFETY PR	CAUTIONS		🛆 CAU	TION
 We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling. The precautions described below are divided into [AMANING] and [ACAUTION]. The matters with possibilities leading to serious consequences such as death or serious conscolar by the to erroneous handling are listed in the [AWARNING] and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences such as cases are isted in [ACAUTION]. These are very important precautions for safety. Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual. 	 Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user. For installing qualified personnel, take precautions in respect to themselves by using suitable protective clothing, groves, etc., and then perform the installation works. Please pay attention not to fall down the tools, etc. when installing the unit at the high position. I unsual noise can be heard during operation, consult the dealer. Symbols which appear frequently in the text have the following meaning: Observe instructions of the text prohibited of the performance of the p	•	Use the circuit breaker with sufficient breaking capacity. If the breaker does not have sufficient breaking capacity, it can cause the unit maffunction and fire. Earth leakage breaker must be installed. If the earth leakage breaker must be installed. It can cause electric shocks. Install isolator or disconnect switch on the power supply wiring in accordance with the local codes and regulations. Be sure to install indoor unit properly according to the instruction manual in order to run off the drainage smoothy. Improper installation of indoor unit can cause dropping water into the room and damaging personal property. Install listollation the drainage pipe can cause dropping water into the room and damaging personal property. Be sure to install the drainage pipe with descending slope of 1/100 or more, and not to make traps and ain-bleedings.	 When perform the air conditioner operation (cooling or drying operation) in which ventilator is installed in the room. In this case, using the air conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the air into the room that may appropriate to ventilation (For example; Open the door a little). In
№ WA	RNING		Check if the drainage runs off securely during commissioning and ensure the space for inspection and maintenance.	addition, just as above, so set up the opening port if the room lapse into negative pressure status due to register of the wind for the high rise generating the
 water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Install the system in full accordance with the instruction manual. Incorrect installation may cause bursts, personal injury, water leaks, electr shocks and fire. Be sure to use only for household and residence. If this appliance is installed in inferior environment such as machine shop and etc., it can cause malfunction. Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury. Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fail and cause material damage and personal injury. Ventilate the working area well in the event of refrigerant leakage during installation. If the refrigerant comes into contact with naked flames, poisonous gas is produced. When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage. Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents. After completed installation, check that no refrigerant leaks from the system. If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous gas is produced. Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents to burst of the refrigerant circuit. 	 the dedicated circuit. Power supply with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire. Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire. This appliance must be connected to main power supply by means of a circuit breaker or switch (fuse:16A) with a contact separation of at least 3mm. When plugging this appliance, a plug conforming to the norm IEC60844-1 must be used. Use the prescribed cables for electrical connection, tighten the cables scurely to prevent overloading the terminal block and relieve the cables correctly to prevent or first. Arrange the wiring in the control box so that it cannot be pushed up further installation may result in overheating and fire. Be sure to switch off the power supply in the event of installation, inspection or servicing. If the power supply is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan. 	0	 Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. Vehicles and ships. Locations where cosmetic or special sprays are often used. Locations with direct exposure of oil mist and steam such as kitchen and machine plant. Locations with eary machines which generate high frequency harmonics are used. Locations with any term any machines which generate high frequency harmonics are used. Locations with salty atmospheres such as coastlines. Locations with any anow (fi installed, be sure to provide base flame and snow hood mentioned in the manual). Locations where the unit is exposed to chinney smoke. Locations with ammonic atmospheres. Locations with any obstacles which can prevent inlet and outlet air of the unit. Locations with any obstacles which can prevent inlet and outlet air of the unit. Locations where the unit blow against the air outlet of outdoor unit. It can cause remarkable decrease in performance, corrosion and damage of components, mafunction and fire. Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit has each limitation). Locations with any obstacles which can prevent inlet and outlet air of the unit. Locations where short circuit of air can accur (in case of multiple units installation). Locations where short circuit for an experiment, and the locations and damage of components, mafunction and fire. Do not install the indoor unit in the locations install the indoor unit has each limitation. Locations with any obstacles which can prevent inlet and outlet air of the unit. Locations where vibration can be amplified due to insufficient strength of structure. Locations where heritarian can be amplified due to divert sunlight or structure. 	 substances are handled. Corrosive gas can cause consoin of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire. Do not use the indoor unit at the place where water splashes may occur such as in laundries. Since the indoor unit is not waterproof, it can cause electric shocks and fire. Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics. Equipments usch as invaters, standby generators, medical high frequency equipments and telecommunication equipments an affect the system, and equipment and telecommunication equipment, and obstruct its function or cause jamming. Do not install the remote control at the direct sunlight. It can cause mailuncitors on deformation of the remote control. Do not install the remote control at the direct sunlight. It can cause mailuncitor or deformation of the remote control. Do not use any waterials on the direct sunlight. It can cause mailunciton or deformation of the remote control. Do not use any materials of the items. Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used. Connecting the circuit with copper wire or other metal thread can cause unit failure and fire. Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used.
 Do not put the drainage pipe directly into drainage channels when poisonous gases such as sulphide gas can occur. Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury. 	Do not processing, splice the power cord, or share a socket with other power plugs. This may cause fire or electric shock due to defecting contact, defecting insulation and over-current etc. Do not bundling, winding or processing for the power cord. Or, do not deforming the power plug due to tread it. This may cause fire or heating.		the strong light beam (in case of the infrared specification unit).	It can cause electric shocks. • Do not touch any refrigerant pipes with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.

BEFORE INSTALLATION

O Before installation check that the power supply matches the air conditioner.

Standard accessories (Installation kit) Q'ty Accessories for indoor unit Installation board a 1 (Attached to the rear of the indoor unit) (2) Wireless remote control 1 (3) Remote control holder 1 Tapping screws (for installation board ø4 X 25mm) 4 5 Wood screws (for remote control switch holder ø3.5 X 16mm (5) 2 6) Battery [R03 (AAA, Micro) 1.5V] 2 \overline{O} 2 Air-cleaning filters Filter holders (8) 2 (Attached to the front panel of indoor unit) a Insulation (#486 50 x 100 t3) 1

Option parts	Q'ty
(a) Sealing plate	1
b Sleeve	1
© Inclination plate	1
Putty	1
Drain hose (extension hose)	1
 Piping cover (for insulation of connection piping) 	1

	Necessary tools for the installation work
1	Plus headed driver
2	Knife
3	Saw
4	Tape measure
5	Hammer
6	Spanner wrench
7	Torque wrench $\begin{pmatrix} 14.0 \sim 61.0$ N·m $(1.4 \sim 6.1$ kgf·m) $\end{pmatrix}$
8	Hole core drill (65mm in diameter)
9	Wrench key (Hexagon) [4m/m]
10	Flaring tool set (Designed specifically for R410A)
11	Gas leak detector (Designed specifically for R410A
12	Gauge for projection adjustment (Used when flare is made by using) conventional flare tool
13	Pipe bender

SELECTION OF INSTALLATION LOCATION 5 cm minimum (Install at location that meets the following conditions, after getting approval from the customer) Indoor unit

Where there is no obstructions to the air flow and where the cooled and heated air can be evenly distributed.

- A solid place where the unit or the wall will not vibrate A place where there will be enough space for servicing. (Where space mentioned below can be secured) Where wiring and the piping work will be easy to conduct.
- The place where receiving part is not exposed to the direct rays of the sun or the strong rays of the street lighting. A place where it can be easily drained.
- A place separated at least 1m away from the television or the radio. (To prevent interference to images and sounds.)) Places where this unit is not affected by the high frequency equipment or electric equipment.) Avoid installing this unit in place where there is much oil mist.
- Places where there is no electric equipment or household under the installing unit.


Wireless remote control


A place where the air conditioner can be received the signal surely during operating the wireless remote control. O Places where there is no affected by the TV and radio etc.

O Do not place where exposed to direct sunlight or near heat devices such as a stove

INSTALLATION OF INDOOR UNIT



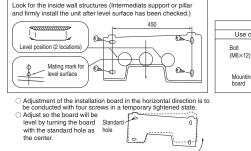









Drain hose O Hold the bottom of the O Tape only the portion piping and fix direction that goes through the before stretching it and wall





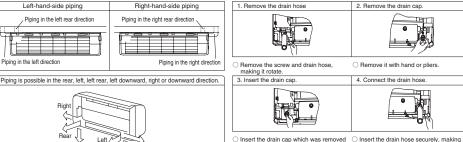

Left downward

Fixing on concrete wall

Nut (M6)


hoard

Mounting

Max.10

Use of nut anchor

Mounting

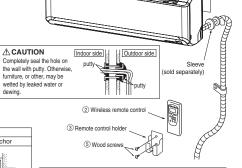

from the wall

dewina.

Use of bolt anchor


Ì

Relation between setting plate and indoor unit

at procedure "2" securely using a

hexagonal wrench etc. Note: Be careful that If it is not Inserted

securely, water leakage may occur

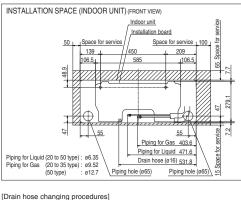

6.5 cm minimum from the ceiling

1) Installation board

10 cm minimum

from the wall

0


rotate. And install the screw

occur


Note: Be careful that If it is not Inserted

securely, water leakage may

2. Remove the drain cap

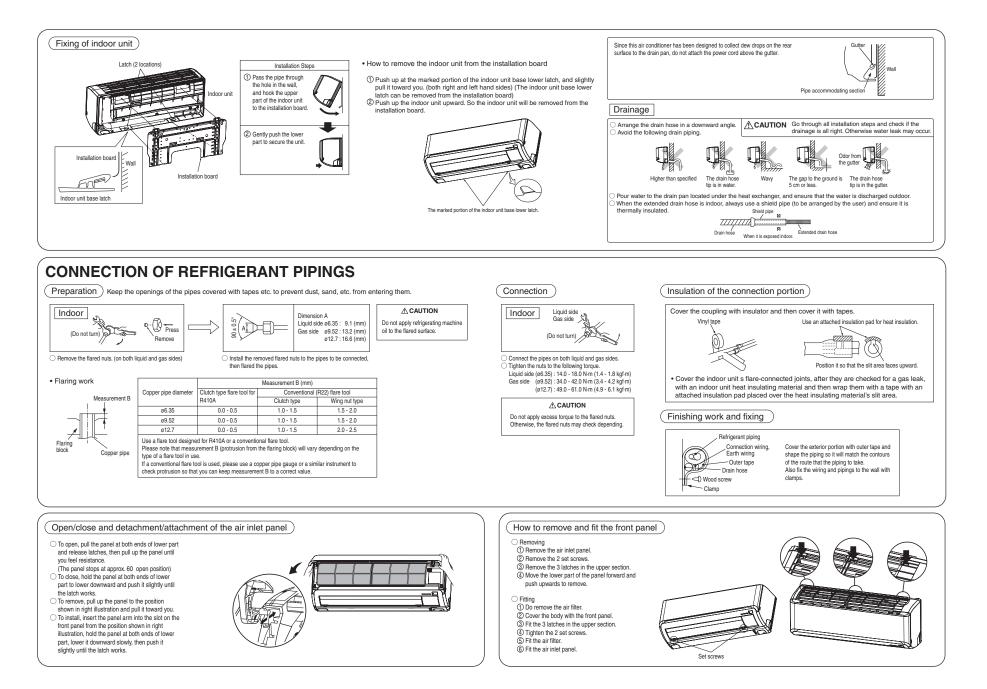


10 • SCM-SM-094

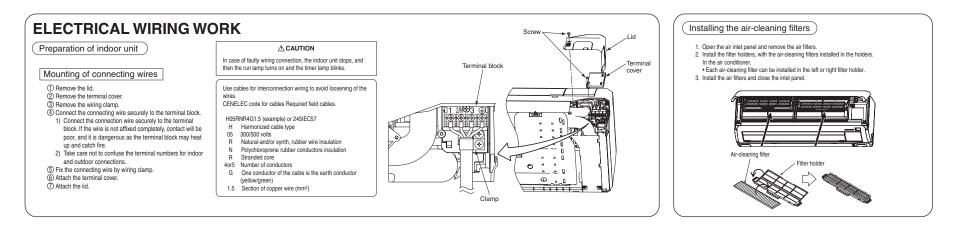

INSTALLATION OF WIRELESS CONTROL

Mounting method of battery

O Uncover the wireless remote control, and mount the batteries [R03 (AAA, Micro), ×2 pieces] in the body regularly. (Fit the poles with the indication marks, + & - without fail)



Fixing to pillar or wall

- O Conventionally, operate the wireless remote control by holding in your hand. O Avoid installing it on a clay wall etc.



INSTALLATION TEST CHECK POINTS

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. At the same time, explain to the customer how to use the unit and how to take care of the unit following the user's manual.

After installation

- The power supply voltage is correct as the rating.
- No gas leaks from the joints of the operation valve.
- Power cables and crossover wires are securely fixed to the terminal board.
- Operation valve is fully open.

The pipe joints for indoor and outdoor pipes have been insulated.


Test run

- Air conditioning operation is normal. No abnormal noise
- Water drains smoothly.
- Protective functions are not working. The remote control is normal.
- Operation of the unit has been explained to the customer. (Three-minutes restart preventive timer) When the air conditioner is restarted or when changing the operation, the unit will not start operating for approximately 3 minutes. This is to protect the unit and it is not a malfunction.

CONCERNING TERMINAL CONNECTION FOR AN INTERFACE

① Remove the front panel and lid of control. ② Remove the control.

- ③ There is a terminal (respectively marked with CNS) for the indoor control board.
- In connecting an interface, connect to the respective terminal securely with the connection harness
- supplied with an optional "Interface connection kit SC-BIKN-E" and fasten the connection harness onto the indoor control box with the clamp supplied with the kit.
- For more details, please refer to the user's manual of your "Interface connection kit SC-BIKN-E".



② Wireless remote control

HOW TO RELOCATE OR DISPOSE OF THE UNIT

O In order to protect the environment, be sure to pump down (recovery of refrigerant). \bigcirc Pump down is the method of recovering refrigerant from the indoor unit to the outdoor unit when the pipes are removed from the unit.


<How to pump down>


146

- Connect charge hose to check joint of outdoor unit. 2 Liquid side : Close the liquid valve with hexagon wrench key.
- Gas side : Fully open the gas valve. Carry out cooling operation. (If indoor temperature is low, operate
- forced cooling operation.) ③ After low pressure gauge become 0.01MPa, stop cooling operation
- and close the gas valve.

Turn on a power supply again after a while after turn off a power supply. Then press continually the ON/OFF button 5 seconds or more

Forced cooling operation



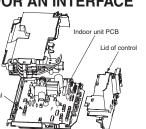

(2) Floor standing type (SRF)

 This instruction manual illustrates the method of installing an indoor unit

· For electrical wiring work, please see instructions set out on the hackside

 For outdoor unit installation and refrigerant nining, please refer to nage 127 and 138

 We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling The precautions described below are divided into

WARNING and CAUTION. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the AWRNING and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in ACAUTION. These are very important precautions for safety. Be sure to observe all of them without fail.

· Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual

 A wired remote control unit is supplied separately as an optional part. . When install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between indoor and outdoor units, power supply voltage and etc.) and installation spaces.

RFB012A002A

SAFETY PRECAUTIONS

any user can read at any time. Moreover if necessary, ask to hand them to a new user

using suitable protective clothing, groves, etc., and then perform the installation works

 Please pay attention not to fall down the tools, etc. when installing the unit at the high position

If unusual noise can be heard during operation, consult the dealer.

Observe instructions Strictly prohibited With great care

 Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks. electric shocks, fire and personal injury, as a result of a system malfunction Install the system in full accordance with the instruction manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. the dedicated circuit. Be sure to use only for household and residence. If this appliance is installed in inferior environment such as machine shop and etc., it can cause malfunction. Use the original accessories and the specified components for installation incorrect function of equipment. If parts other than those prescribed by us are used, It may cause water leaks, electric shocks, fire and personal injury. Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fall and cause or fire. material damage and personal injury. Ventilate the working area well in the event of refrigerant leakage during installation. at least 3mm. If the refrigerant comes into contact with naked flames, poisonous gas is IEC60884-1 must be used. produced. • When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage. Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents production or fire After completed installation, check that no refrigerant leaks from the system. If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous gas is produced. Use the prescribed pipes, flare nuts and tools for R410A. inspection or servicing. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit. • Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulphide gas can occur. other power plugs. Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety insulation and over-current etc. Ensure that no air enters in the refrigerant circuit when the unit is . Do not bundling, winding or processing for the power cord. Or, do installed and removed If air enters in the refrigerant circuit, the pressure in the refrigerant circuit This may cause fire or heating becomes too high, which can cause burst and personal injury.

Tighten the flare nut by torque wrench with specified method. \bigcirc If the flare nut were tightened with excess torque, this may cause burst and refrigerant leakage after a long period. The electrical installation must be carried out by the gualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to Power supply with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or · Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production • This appliance must be connected to main power supply by means of a circuit breaker or switch (fuse:16A) with a contact separation of . When plugging this appliance, a plug conforming to the norm · Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. Loose connections or cable mountings can cause anomalous heat Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.

Incorrect installation may result in overheating and fire. Be sure to switch off the power supply in the event of installation If the power supply is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.

 Do not processing, splice the power cord, or share a socket with This may cause fire or electric shock due to defecting contact, defecting

not deforming the power plug due to tread it.

• Do not vent R410A into the atmosphere : R410A is a fluorinated · Do not perform any change of protective device itself or its setup greenhouse gas, covered by the Kyoto Protocol with Global condition Warming Potential (GWP)=1975. The forced operation by short-circuiting protective device of pressure Do not run the unit with removed panels or protections. switch and temperature controller or the use of non specified component

Touching rotating equipments, hot surfaces or high voltage parts can cause can cause fire or burst. personal injury due to entrapment, burn or electric shocks.

4 Carry out the electrical work for ground lead with care.

Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead, Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.

· Use the circuit breaker with sufficient breaking capacity. If the breaker does not have sufficient breaking capacity, it can cause the unit malfunction and fire

Earth leakage breaker must be installed.

If the earth leakage breaker is not installed, it can cause electric shocks, . Install isolator or disconnect switch on the power supply wiring in accordance with the local codes and regulations.

Be sure to install indoor unit properly according to the instruction manual in order to run off the drainage smoothly.

Improper installation of indoor unit can cause dropping water into the room and damaging personal property.

Install the drainage pipe to run off drainage securely according to the installation manual.

Incorrect installation of the drainage pipe can cause dropping water into the room and damaging personal property.

Be sure to install the drainage pipe with descending slope of 1/100 or more, and not to make traps and air-bleedings.

Check if the drainage runs off securely during commissioning and ensure the space for inspection and maintenance

Do not install the unit in the locations listed below.

· Locations where carbon fiber, metal powder or any powder is floating. I ocations where any substances that can affect the unit such as sulphide.

- gas, chloride gas, acid and alkaline can occur.
- Vehicles and ships.
- Locations where cosmetic or special sprays are often used.
- . Locations with direct exposure of oil mist and steam such as kitchen and machine plant.
- Locations where any machines which generate high frequency harmonics are used.
- · Locations with salty atmospheres such as coastlines.
- snow hood mentioned in the manual).
- Locations where the unit is exposed to chimney smoke
- . Locations at high altitude (more than 1000m high). Locations with ammonic atmospheres.
- Locations where heat radiation from other heat source can affect the unit.
- · Locations without good air circulation.
- Locations with any obstacles which can prevent inlet and outlet air of the unit.
- . Locations where short circuit of air can occur (in case of multiple units installation).
- Locations where strong air blows against the air outlet of outdoor unit. It can cause remarkable decrease in performance, corrosion and damage
- of components, malfunction and fire Do not install the indoor unit in the locations listed below (Be sure)

to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)

- unit I ocations where vibration can be amplified due to insufficient strength of
- structure I ocations where the infrared receiver is exposed to the direct sunlight or
- the strong light beam (in case of the infrared specification unit). Locations where an equipment affected by high harmonics is placed (TV)
- set or radio receiver is placed within 1m)
- Locations where drainage cannot run off safely. It can affect performance or function and etc.

Do not install the unit near the location where leakage of

- combustible gases can occur.
- If leaked gases accumulate around the unit, it can cause fire.

· Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to

- falling from the installation place · For installation work, be careful not to get injured with the heat
- exchanger, piping flare portion or screws etc. . Be sure to insulate the refrigerant pipes so as not to condense the

ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture

damage on the ceiling, floor, furniture and any other valuables

. When perform the air conditioner operation (cooling or drying operation) in which ventilator is installed in the room. In this case, using the air conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the air into the room that may appropriate to ventilation (For example; Open the door a little). In addition, just as above, so set up the opening port if the room lapse into negative pressure status due to register of the wind for the high rise apartment etc.

 Do not install the unit where corrosive gas (such as sulfurous acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled.

Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire.

· Do not use the indoor unit at the place where water splashes may occur such as in laundries.

Since the indoor unit is not waterproof, it can cause electric shocks and

. Do not install nor use the system close to the equipment that Locations with heavy snow (if installed, be sure to provide base flame and generates electromagnetic fields or high frequency harmonics.

Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function of cause iamming.

Do not place any variables which will be damaged by getting wet under the indoor unit.

When the relative humidity is higher than 80% or drainage pipe is clogged, condensation or drainage water can drop and it can cause the damage of valuables.

· Do not install the remote control at the direct sunlight.

It can cause malfunction or deformation of the remote control. • Do not use the unit for special purposes such as storing foods. cooling precision instruments and preservation of animals, plants or

art It can cause the damage of the items

• Locations with any obstacles which can prevent inlet and outlet air of the • Do not use any materials other than a fuse with the correct rating in

the location where fuses are to be used Connecting the circuit with conner wire or other metal thread can cause


unit failure and fire Do not touch any buttons with wet hands

It can cause electric shocks . Do not touch any refrigerant pipes with your hands when the

system is in operation.

During operation the refrigerant pines become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.

M WARNING




BEFORE INSTALLATION


O Before installation check that the power supply matches the air conditioner.


S	tandard accessories (Installation kit) Accessories for indoor unit	Q'ty
1	Installation board (Attached to the rear of the indoor unit)	1
2	Wireless remote control	1
3	Remote control holder	1
4	Tapping screws (for installation board 4dia. by 25mm)	9
5	Wood screws (for remote control switch holder 3.5(mm). by 16mm)	2
6	Battery [R03(AAA,Micro) 1.5V]	2
7	Air-cleaning filters	2
8	Filter holders (Attached to the front panel of indoor unit)	2
9	Pipe cover (200mm)	1
10	Band	2

	Option parts	Q'ty
а	Sealing plate	1
b	Sleeve	1
©	Inclination plate	1
d	Putty	1
e	Drain hose (extention hose)	1
Ð	Piping cover (for insulation of connection piping)	1

1	Plus headed driver
2	Knife
3	Saw
4	Tape measure
5	Hammer
6	Spanner wrench
7	Torque wrench $\begin{pmatrix} 14.0 \sim 61.0N \cdot m \\ (1.4 \sim 6.1 \text{kgf} \cdot m) \end{pmatrix}$
8	Hole core drill (65mm in diameter)
9	Wrench key (Hexagon) [4m/m]
10	Flaring tool set (Designed specifically for R410A)
11	Gas leak detector (Designed specifically for R410A
12	Gauge for projection adjustment (Used when flare is made by using conventional flare tool
13	Pipe bender

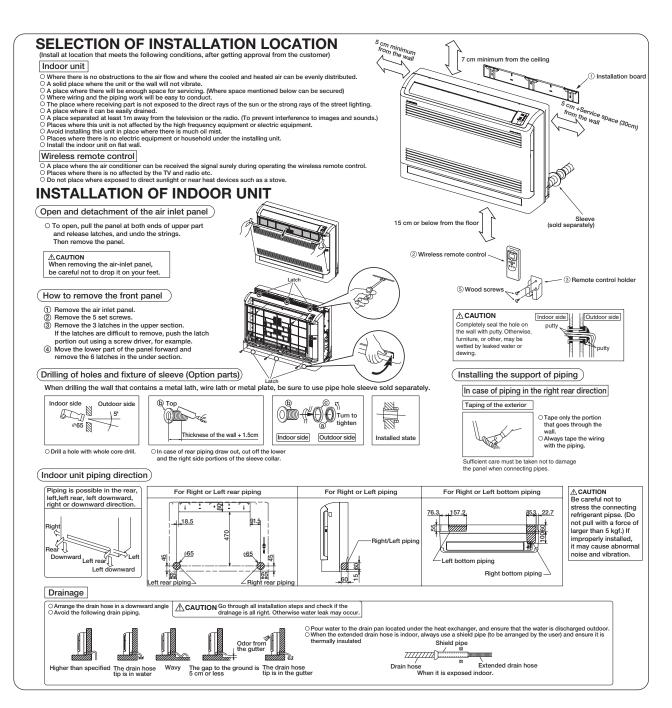

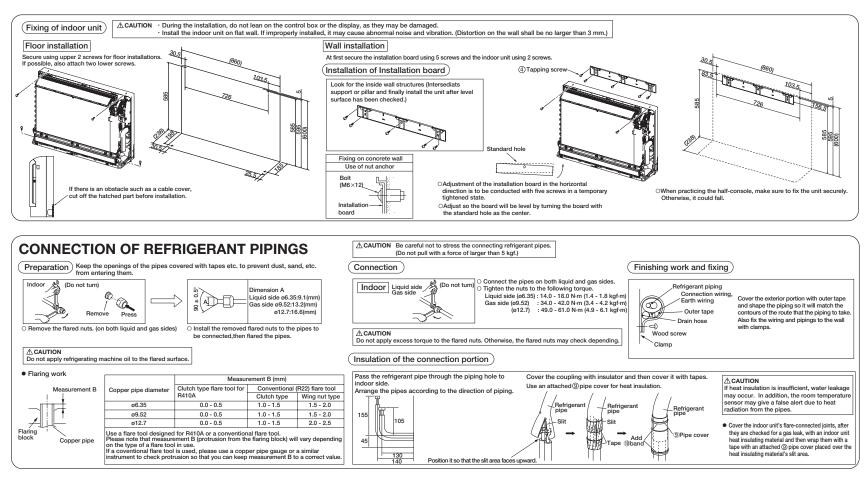

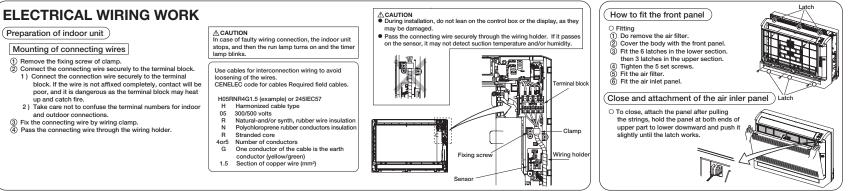

Concealed installation

Mounting method of battery

Do not use new and old batteries together

Fixing to pillar or wall

holding in your hand. OAvoid installing it on a clay wall etc.


- Install the indoor unit according to the following instructions. (1) Secure the upper, right, and left spaces according to the right figure.
- 2 Do not let the horizontal bar obstruct wind from blowing out upward/downward or reception from the remote controller. ③ The lattice size should be 70 % or greater of the open rate.
- (4) Cut the jumper cable (JP173) on the indoor circuit board to control the blow-out angle.


Incorrect installation may cause problems such as non-cooling non-warming, and condensation water leaking into the room.

Ouncover the wireless remote control, and mount the batteries [R03(AAA,Micro),×2 pieces] in the body regularly.

(Fit the poles with the indication marks, ⊕ & ⊖ without fall)

OConventionally, operate the remote control switch by

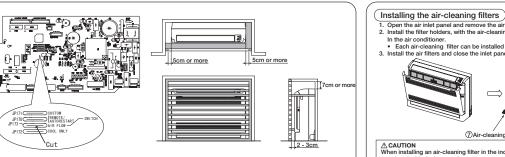

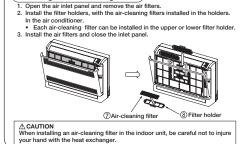

HOW TO RELOCATE OR DISPOSE OF THE UNIT


\odot In order to protect the environment, be sure to pump down (recovery of refrigerant). O Pump down is the method of recovering refrigerant from the

indoor unit to the outdoor unit when the pipes are removed from the unit

<How to pump down>

- Connect charge hose to service port of outdoor unit. 2 Liquid side : Close the liquid valve with hexagon wrench key. Gas side : Fully open the gas valve
- Carry out cooling operation . (If indoor temperature is low. operate forced cooling operation.)
- ③ After low pressure gauge become 0.01MPa, stop cooling operation and close the gas valve.

 Forced cooling operation Turn on a power supply again after a while after turn off a power supply. Then press continually the ON/OFF button 5 seconds or more.



INSTALLATION TEST CHECK POINTS

INSTALLATION OF REMOTE CONTROL

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. At the same time, explain to the customer how to use the unit and how to take care of the unit following the user's manual

Test run

(6) Batta

After installation

The power supply voltage is correct as the rating.

Operational valve is fully open.

- No gas leaks from the joints of the operational valve. Power cables and crossover wires are securely fixed to the terminal board.
- Air conditioning operation is normal. No abnormal noise. Water drains smoothly. Protective functions are not working.

Wireless remote control

- The pipe joints for indoor and outdoor pipes have been insulated. The remote control is normal.
- Operation of the unit has been explained to the customer. (Three-minutes restart preventive timer) When the air conditioner is restarted or when changing the operation, the unit will not start operating for approximately 3 minutes. This is to protect the unit and it is not a malfunction.

CONCERNING TERMINAL CONNECTION FOR AN INTERFACE

- Remove the front panel and lid of control.
 There is a terminal (respectively marked with CNS) for the indoor control board. In connecting an interface, connect to the respective terminal securely with the connection harness supplied with an optional "Interface connection kit SC-BIKN-E" and fasten the connection harness onto the indoor control box with the clamp supplied with the kit. For more details, please refer to the user's manual of your "Interface connection kit SC-BIKN-E".

(3) Ceiling concealed type (SRR) RJD012A201

. This instruction manual illustrates the method of installing an indoor unit

· For electrical wiring work, please see instructions set out on the backside.

. For outdoor unit installation and refrigerant piping, please refer to page 127 and 138

• We recommend you to read this "SAFETY PRECAUTIONS" carefully before the • Keep the Installation manual together with owner's manual at a place whe installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling,

. The precautions described below are divided into WARNING and A CAUTION. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the AWARNING and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in ACAUTION. These are very important precautions for safety. Be sure to observe all of them without fail,

· Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.

· A wired remote control unit is supplied separately as an optional part. . When install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between indoor and outdoor units, power

supply voltage and etc.) and installation spaces.


SAFETY PRECAUTIONS

any user can read at any time. Moreover if necessary, ask to hand them to new user.

- · For installing qualified personnel, take precautions in respect to themselve using suitable protective clothing, groves, etc., and then perform the installation works.
- . Please pay attention not to fall down the tools, etc. when installing the un the high position.
- If unusual noise can be heard during operation, consult the dealer.
- · Symbols which appear frequently in the text have the following meaning:

Provide pr

earthing



\bigcap	<u>∧</u> war	NING		
0	 Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Install the system in full accordance with the instruction manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. Be sure to use only for household and residence. If this appliance is installed in inferior environment such as machine shop and etc., it can cause matinuction. Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury. Install the unit in a location with good support. Unstall the unit in a location with good support. Unstallation. If the refigerant comes into contact with naked flames, polscnous gas is produced. When installation find for fortigrant in the event of refigerant leakage during installation. If the refigerant comes into contact with naked flames, polscnous gas is produced. When installing in small rooms, take prevention measures not to exceed the density limit of refigerant in the event of leakage. Consult the expert about prevention measures. If the density of refigerant leaks from the system. After completed installation, check that no refrigerant leaks from the system. If orfigerant leaks into the room and comes into contact with an oven or other hot system. If the stringer polycon of gas is produced. Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to barts of the refigerant circuit. 	 Tighten the flare nut by torque wrench with specified method. If the flare nut ware tightened with excess torque, this may cause burst and refrigerant leakage after a long period. The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wining regulation", and the system must be connected to the dedicated circuit. Power supply with insufficient capacity and incorrect function done by improper work can cause electric shocks and flre. Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. Be sure to sut of the power can cause electric shocks, unit failure or incorrect function of equipment. Be sure to such the cause electric leak, anomalous heat production or fire. This appliance must be connected to main power supply by means of a circuit breaker or switch (fuse:16A) with a contact separation of at least 3mm. When plugging this appliance, a plug conforming to the norm IEC60684-1 must be used. Use the prescribed cables for electrical connection, tighten the cables securely in terminal blocks. Loses connections or cables mountings can cause anomalous heat production or fire. Arrange the wirking in the control box so that it cannot be pushed up further into the box. Install the service panel correcty. Incorrect installation, nuspection or supply in the event of installation, inspection or supply in the jow supply in the event of installation, inspection or supply in the for electric shocks, unit failure or supply in the shot shot of, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan. 	0	
0	 Do not put the drainage pipe directly into drainage channels where poisonous gases such as supplied gas can occur. Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safely. Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury. 	 Do not processing, spilce the power cord, or share a socket with other power plugs. This may cause fire or electric shock due to defecting contact, defecting insulation and over-current etc. Do not bundling, winding or processing for the power cord. Or, do not deforming the power plug due to tread it. This may cause fire or healing. 		

OD not vent R410A into the atmosphere : R410A is a fluorinated . Do not perform any change of protective device itself or its setup

greenhouse gas, covered by the Kyoto Protocol with Global condition. Warming Potential (GWP)=1975. The forced operation by short-circuiting protective device of pressure Do not run the unit with removed panels or protections. switch and temperature controller or the use of non specified component Touching rotating equipments, hot surfaces or high voltage parts can cause

can cause fire or burst. personal injury due to entrapment, burn or electric shocks.

. Carry out the electrical work for ground lead with care.

0 Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.

	 Use the circuit breaker with sufficient breaking capacity. If the breaker does not have sufficient breaking capacity, it can cause the unit mailunciton and fire. Earth leakage breaker must be installed. If the earth leakage breaker must be installed. Install black or disconnect switch on the power supply wiring in accordance with the local codes and regulations. Be sure to install indoor unit properly according to the instruction manual in order to run off the drainage smoothly. Improper installation of indoor unit can cause dropping water into the room and damaging personal property. Install the drainage pipe to run off drainage socurely according to the installation manual. Incorrect installation of the drainage pipe can cause dropping water into the room and damaging personal property. Be sure to install the drainage pipe with descending slope of 1/100 or more, and not to make traps and alr-bleedings. Check if the drainage runs off securely during commissioning and ensure the space for inspection and maintenance. 	 Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to failing from the installation place. For installation work, be careful not to get injured with the heat exchange, piping flare portion or screws etc. Be sure to insulate the refrigerant pipes so as not to condense the ambient air motisture on them. Insufficient insulation, can cause condensation, which can lead to moisture damage on the celling, floor, furniture and any other valuables. When perform the air conditioner operation (cooling or drying operation) in which ventilator is installed in the room. In this case, using the air conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the ele into the room lapse into the negative gressure status. Therefore, set up the opening port such as long or such as long piece or the dora il title). In addition, just as above, so set up the opening port such as long the size of the wind for the high rise apartment etc.
0	Do not install the unit in the locations listed below. Locations where carbon fiber, metal powder or any powder is floating. Locations where any substances that can affect the unit such as sulphide	 Do not install the unit where corrosive gas (such as suffurous acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible
	 gas, chloride gas, acld and alkaline can occur. Vehicles and ships. Locations where cosmatic or spacial sprays are often used. Locations with direct exposure of oil mist and steam such as kitchen and 	substances are handled. Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire. • Do not use the indoor unit at the place where water splashes may
	machine plant. • Locations where any machines which generate high frequency harmonics are used.	occur such as in laundries. Since the indoor unit is not waterproof, it can cause electric shocks and fire.
	 Locations with saity atmospheres such as coastilnes. Locations with heavy snow (if installed, be sure to provide base flame and snow hood mentioned in the manual). 	Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics. Equipment such as Inverters, standby generators, medical high frequency
	Locations where the unit is exposed to chimney smoke. Locations at high altitude (more than 1000m high). Locations with ammonic atmospheres.	equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or
	 Locations where heat radiation from other heat source can affect the unit. Locations without good air circulation. Locations with any obstacles which can prevent inlet and outlet air of the unit. 	cause jamming. • Do not place any variables which will be damaged by getting wet under the indoor unit. When the relative humidity is higher than 80% or drainage pipe is clogged,
	 Locations where short circuit of air can occur (in case of multiple units installation). Locations where strong air blows against the air outlet of outdoor unit. 	condensation or drainage water can drop and it can cause the damage of valuables. • Do not install the remote control at the direct sunlight.
	It can cause remarkable decrease in performance, corrosion and damage of components, maifunction and fire. Do not install the indoor unit in the locations listed below (Be sure	It can cause malfunction or deformation of the remote control. • Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or
	to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation).	art. It can cause the damage of the Items. • Do not use any materials other than a fuse with the correct rating in
	 Locations with any obstacles which can prevent inlet and outlet air of the unit. Locations where vibration can be amplified due to insufficient strength of structure. 	the location where fuses are to be used. Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.
	 Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam (in case of the infrared specification unit). 	• Do not touch any buttons with wet hands. It can cause electric shocks.
	 Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 1m). Locations where drainage cannot run off safely. 	 Do not touch any refrigerant pipes with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely
	it can affect performance or function and etc. • Do not install the unit near the location where leakage of combustible gases can occur.	cold depending the operating condition, and it can cause burn injury or frost injury.
	If leaked gases accumulate around the unit, it can cause fire.	

BEFORE INSTALLATION

O Before installation check that the power supply matches the air conditioner.

Indoor unit accessories

Symbol	Part name	Units
1	Wireless remote control	1
2	Remote control holder	1
3	Wireless receiver	1
4	Installation frame (for wireless receiver)	1
5	Drain hose	1
6	Clamp (for drain hose)	1
Ø	Battery [R03 (AAA, Micro) 1.5V]	2
8	Large washer (for hanging bolt M8)	8
9	Flat head wood screw (for remote control holder ϕ 3.5x16)	2
0	Flat head machine screw (for wireless receiver M3.5x10)	2
0	Tapping screw (for clamp, $\phi 4x8$)	1
12	Plate (display)	1

Option parts

Symbol	Part name	Units
3	Blowout duct joint model RFJ22	1
Ь	Drain up kit model RDU12E	1
©	Back side suction filter set model RBF12	1
đ	Lower suction grill set model RTS12	1

Parts to be prepared by the operative side

Symbol	Part name	Units
Ø	Drain hose	1
8	Ceiling hanging bolts (M8)	4
C	Nuts (M8)	8
D	Spring lock washers (M8)	4

Necessary tools for the installation work

Plus headed driver

- Knife
 Saw
- Saw
- Tape measure
- Hammer
- Spanner wrench
- Torque wrench [14.0 ~ 62.0 N·m (1.4 ~ 6.2 kgf·m)]
- Hole core drill (65mm in diameter)
- Wrench key (Hexagon) [4 m/m]
- Vacuum pump
- Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)
- Gauge manifold (Designed specifically for R410A)
- Charge hose (Designed specifically for R410A)
- Flaring tool set (Designed specifically for R410A)
- Gas leak detector (Designed specifically for R410A)
- Gauge for projection adjustment
- (Used when flare is made by using conventional flare tool)

SELECTION OF INSTALLING LOCATION

(Install the unit with the customer's consent at a location that meets the following conditions.)

Indoor unit


- Where there are no barriers to the breeze, and where cool/hot air may diffuse throughout the room.
- A firm location that may sustain the weight of the unit, and do not cause the unit or the ceiling to vibrate.
- A location that allows room for maintenance.
- Where wiring and plumbing may be performed with ease.
- Where water may be drained easily.
- Where the unit is not influenced by the television, stereo, radio, or the lights.
- Where the unit is not influenced by high frequency equipment and wiring equipment.
- Where oil splashes do not occur frequently.
- Where sunlight and strong lights do not directly hit the receiver.
- A flat ceiling surface (bottom of ceiling).
- Where the suction inlet of the unit is located far from the air inlet on the ceiling, the entire inside of ceiling acts as an air suction duct so that the capacity is reduced at the startup. In such occasion, it is recommended to install a duct at the air suction side.
- Where the suction inlet of the unit does not match the air inlet and there is not sufficient clearance between the unit and the ceiling face, the capacity is reduced. It is necessary to enable the air suction from the back by using optional parts © (Back side suction filter set model RBF12).


Wireless remote control

- Where the main unit can definitely detect the signals from the wireless remote control.
- Where it is not influenced by television or stereo.
- Avoid locations with direct sunlight or around heaters.
- Do not attach to weak walls such as a mud wall.

Maximum pipe length

The maximum lengths and height differences for the pipes differ according to their outdoor unit. Please refer the Installation Instructions for the outdoor unit.






Clamp

Installation of wireless remote control

Mounting method of battery


\odot Uncover the wireless remote control, and mount the batteries [R03 (AAA, Micro)×2 pieces] in the body regularly. (Fit the poles with the indication marks, \oplus & \bigcirc without fail)




Fixing to pillar or wall

 Conventionally, operate the wireless remote control by holding in your hand.

 In the case of stationary operation service as by mounting on the holder for the wireless remote control, make sure that the locating place is satisfactory for access service before installing it.
 Avoid installing it on a clay wall etc.



'10 • SCM-SM-094

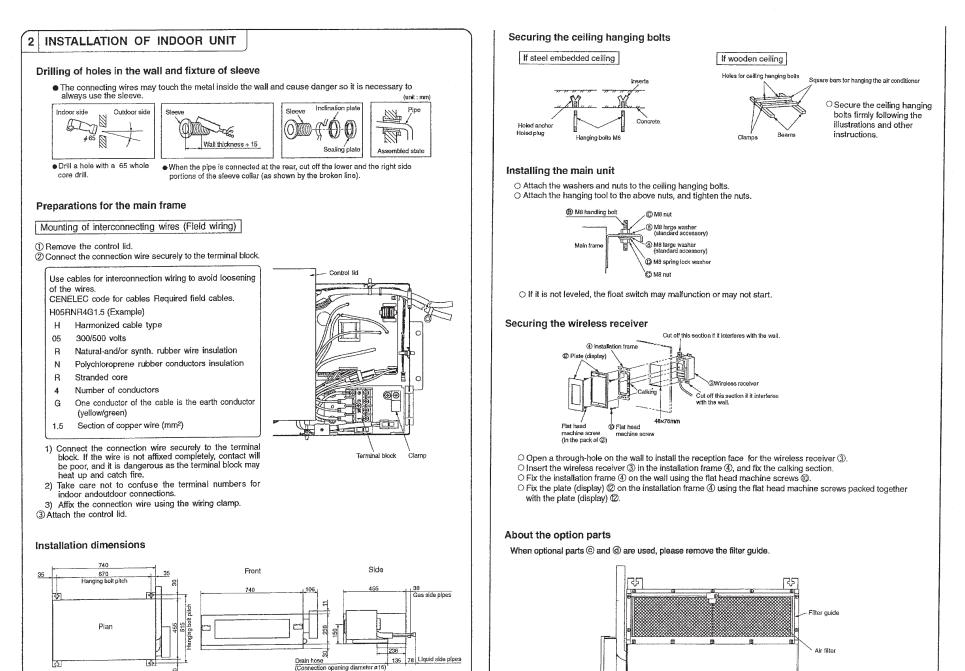


42

52

Unit main body

'10 • SCM-SM-094

153

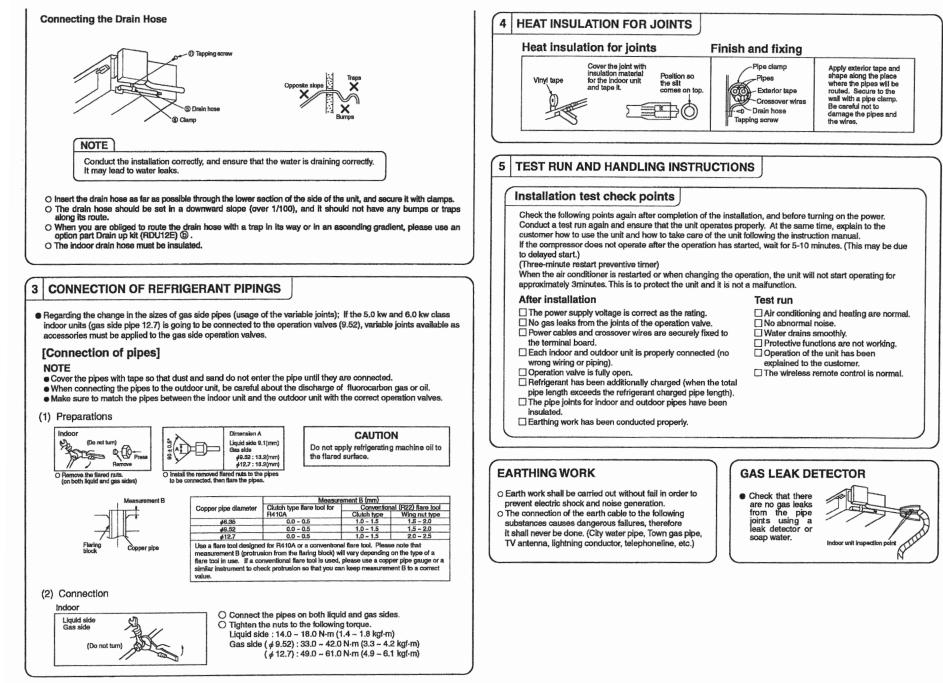

FJA012D786

(4) Ceiling cassette-4way compact type (FDTC)

This manual is for the installation of an indoor unit.

For electrical wiring work (Indoor), refer to the electrical wiring work installation manual. For remote controller installation, refer to the installation manual attached to a remote controller. For wireless kit installation, refer to the installation manual attached to a wireless kit. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to page 127 and 138. This unit must always be used with the panel.

SAFETY PRECAUTIONS

 The precautionary items mentioned below are distinguished into two levels, <u>AWARNING</u> and <u>ACAU</u> 	n work
▲WARNING: Wrong installation would cause serious consequences such as injuries or death. ▲CAUTION): Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any m The meanings of "Marks" used here are as shown as follows: Newer do it under any circumstances. ● Newer do it according to the instruction.	
After completing the installation, do commissioning to confirm there are no abnormalities, and explain customers about "SAFETV PECAUTIONS", correct operation method and maintenance method (air fil cleaning, operation method and temperature setting method) with user's manual of this unit. Ask your customers to keep this installation manual together with the user's manual Also, ask them to I over the user's manual to the new user when the owner is changed.	ter
<u>∧</u> WARNING	\frown
Installation should be performed by the specialist. If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.	0
Install the system correctly according to these installation manuals. Improper installation may cause explosion, injury, water leakage, electric shock, and fire.	0
Improver installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149). If the density of efrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accidents.	0
•Use the genuine accessories and the specified parts for installation. If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overtum of the unit.	0
Ventilate the working area well in case the refrigerant leaks during installation. If the refrigerant contacts the fire, toxic gas is produced.	0
Install the unit in a location that can hold heavy weight. Improper installation may cause the unit to fall leading to accidents.	0
Install the unit property in order to be able to withstand strong winds such as typhoons, and earthquakes. Improper installation may cause the unit to fail leading to accidents.	0
Do not mix air in to the cooling cycle on installation or removal of the air conditioner. If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries.	\bigcirc
Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit. Power source with insufficient capacity and improper work can cause electric shock and fire.	0
Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal. Losse connections or hold could result in abnormal heat generation or fire.	0
•Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel property. Improper fitting may cause abnormal heat and fire.	0
Check for refrigerant gas leakage after installation is completed. If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced.	0
In the training that makes that the throade all or contrast more than the thread of the specified pipe, fare nut, and tools for R410A. Using existing parts (R2) could cause the unit failure and serious accident due to explosion of the cooling cycle.	Ō
Tighten the flare nut according to the specified method by with torque wrench. If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period.	0
Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur. Poisonous gases will flow into the room through charinge pipe and servicely affect the user's health and safely. This can also cause the corresion of the indoor unit and a resultant unit failure or refrigerant leak.	\bigcirc
Connect the pipes for refrigeration circuit securely in installation work before compressor is operated. If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system.	•
Stop the compressor before removing the pipe after shutting the service valve on pump down work. If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.	•
Only use prescribed optional parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.	0
Oo not repair by yourself. And consult with the dealer about repair. Improper repair may cause water leakage, electric shock or fire.	\bigcirc
Consult the dealer or a specialist about removal of the air conditioner. Improper installation may cause water leakage, electric shock or fire.	0
• Turn off the power source during servicing or inspection work. If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.	0
O not run the unit when the panel or protection guard are taken off. Touching the rolating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, le get	\bigcirc
burned, or electric shock.	

▲ CAUTION Perform earth wiring surely. Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit Earth leakage breaker must be installed. Ø kage breaker is not installed, it can cause electric shocks It the earth lea Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all ooles under over current. Q Using the incorrect one could cause the system failure and fire • Do not use any materials other than a fuse of correct capacity where a fuse should be used. \bigcirc Connecting the circuit by wire or copper wire could cause unit failure and f Do not install the indoor unit near the location where there is possibility of flammable gas leakages If the gas leaks and gathers around the unit, it could cause fire. Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thimer, petroleum etc. may be generated or accumulated, or volatile flammable subscances are handled. It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire. \bigcirc Secure a space for installation, inspection and maintenance specified in the marual a Insufficient space can result in accident such as personal injury due to falling from the installation place Do not use the indoor unit at the place where water splashes such as laundry. \bigcirc Indoor unit is not waterproof. It could cause electric shock and fire. Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art. It could cause the damage of the items. Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunicat equipment might influence the air conditioner and cause a malfunction and breakdown. Or the cir conditioner might S influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming. Do not install the remote controller at the direct sunlight. It could cause breakdown or deformation of the remote controller. • Do not install the indoor unit at the place listed below Places where cosmetics or special sprays a Places where flammable gas could leak. \sum Places where carbon fiber, metal powder or any powder is floated. Places where carbon fiber, metal powder or any powder is floated. Place where the substances which affect the air conditioner are generated such as suffide gas, chloride gas, acid, alkali or ammonic atmospheres. Places exposed to oil mist or steam directly. frequently used. Highly salted area such as beach. Heavy snow area Places where the system is affected by smoke from a chimney. Altitude over 1000m On vehicles and ships Places where machinery which generates high harmonics is used. Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation) Locations with a obtacles which can prevent litel and outlet air of the unit Locations with any obtacles which can prevent litel and outlet air of the unit Locations where vibration can be amplified due to insufficient strength of structure. Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit) \otimes Locatons where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locatons where drainage cannot run off safely It can affect performance or function and etc.. Do not put any valuables which will break down by getting wet under the air conditioner. (on could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it danages user's • Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use. It could cause the unit falling down and injury. Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit. If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain par and leakage of water. Ξ To avoid damaging, keep the indoor unit packed or cover the indoor unit Install the drain pipe to drain the water surely according to the installation manual Ø Improper connection of the drain pipe may cause dropping water into room and damaging user • Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or Jeficiency of oxygen) to user's realth and safety. Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work 0 If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small roon, lack of oxygen can occur, which can cause serious accidents. For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps Q and not to make air-bleeding. Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenanc Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Ø Incompete insulation could cause condensation and it would wet ceiling, floor, and any other valuable Do not install the outdoor unit where is likely to be a nest for insects and small animals. Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean. Pay extra attention, carrying the unit by hand. Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbiny place, moving the unit by hanc. Use protective gloves in order to avoid injury by the aluminum fin. 0 Make sure to dispose of the packaging material. Q Leaving the materials may cause injury as metals like nail and woods are used in the package Do not operate the system without the air filter. \bigcirc It may cause the breakdown of the system due to clogging of the heat exchanger. • Do not touch any button with wet hands. \bigcirc It could cause electric shock • Do not touch the refrigerant piping with bare hands when in operation. The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or fr • Do not clean up the air conditioner with water. It could cause electric shock. • Do not turn off the power source immediately after stopping the operation. Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakd Do not control the operation with the circuit breaker.

It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

① Before installation

Install correctly according to the installation manual.

Confirm the following points:

O Unit type/Power supply specification O Pipes/Wires/Small parts O Accessory items

|--|

Accessory line								
For unit hanging		For refrigerant pipe			For draom pipe			
Flat washer (M10)	Level gauge (Insulation)	Pipe cover(big)	Pipe cover (small)	Strap	Pipe cover(big)	Pipe cover(small)	Drain hose	Hose clamp
0	Ó	5	6	F	\bigcirc	Ø	¢ ټ	Ø
8	4	1	1	4	1	1	1	1
For unit hanging	For adjustment in hoisting in the unit's main body	For heat insulation of gas pipe		For pipe cover	For heat insulation of drain socket	For heat insulation of drain socket		For drain hose mounting


2 Selection of installation location for the indoor unit

① Select the suitable areas to install the unit under approval of the user

- Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
- Areas where there is enough space to install and service.
- Areas where it can be drained properly. Areas where drain pipe descending slope can be taken Areas where there is no obstruction of airflow on both air return grille and air supply port.
- Areas where fire alarm will not be accidentally activated by the air conditioner.
- Areas where the supply air does not short-circuit.
- Areas where it is not influenced by draft air.
- Areas not exposed to direct sunlight.
- Areas where dew point is lower than around 28°C and relative humidity is lower than 80%. This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above
- If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.
- Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.) Areas where any items which will be damaged by getting wet are not placed such as food, table
- wares, server, or medical equipment under the unit. Areas where there is no influence by the heat which cookware generates.
- Areas where not exposed to oil mist, powder and/or steam directly such as above fryer
- Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation
- (A beam from lighting device sometimes affects the infrared receiver for the wireless remote controller and the air conditioner might not work properly.)
- ② Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.
- ③ If there are 2 units of wireless type, keep them away for more than 5m to avoid malfunction due to cross communication
- When plural indoor units are installed nearby, keep them away for more than 4m.


Space for installation and service


- When it is not possible to keep enough space between indoor unit and wall or between indoor units, close the air supply port where it is not possible to keep space and confirm there is no short circuit of airflow
- Install the indoor unit at a height of more than 2.5m above the floor.

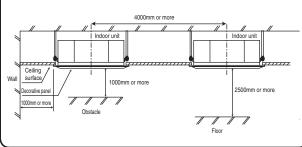

③ Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant.
- O For grid ceiling When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over
- 700mm, apply earthquake resistant brace to the bolt. O In case the unit is hanged directly from the slab and is installed on the ceiling plane which has
- enough strength. When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt. Prepare four (4) sets of suspension bolt, nut and spring washer (M10 or M8) on site.



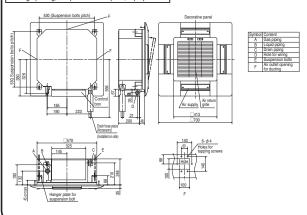

④ Installation of indoor unit

Work procedure


- This units is designed for 2 x 2 grid ceiling.
- If necessary, please detach the T bar temporarily before you install it.

If it is installed on a ceiling other than 2 x 2 grid ceiling, provide an inspection port on the control box side

- Arrange the suspension bolt at the right position (530mm×530mm).
- Make sure to use four suspension bolts and fix them so as to be able to hold 500N load.
- Ensure that the lower end of the suspension bolt should be 45mm above the ceiling plane. Temporarily put the four lower nuts 88mm above the ceiling plane and the upper nuts on distant place from the lower nuts in order not to obstruct hanging the indoor unit or adjust the indoor unit position, and then hang the indoor unit.



Adjust the indoor unit position after hanging it by inserting the level gauge attached on the package into the air supply port and checking if the gap between the ceiling plane and the indoor unit is appropriate. In order to adjust the indoor unit position, adjust the lower nuts while the upper nuts are put on distant place. Confirm there is no backlash between the hanger plate for suspension bolt and the lower nut and washer.

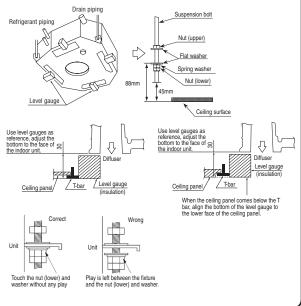

9 0 \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \odot \bigcirc Q 0 0 \bigcirc 0 0 \bigcirc \bigcirc \bigotimes

④ Installation of indoor unit (continued)

- Make sure to install the indoor unit horizontally. Confirm the levelness of the indoor unit with a level gauge or transparent hose filled with water. Keep the height difference at both ends of
- the indoor unit within 3mm.
- Tighten four upper nuts and fix the unit after height and levelness adjustment.

Caution

- Do not adjust the height by adjusting upper nuts. It will cause unexpected stress on the indoor unit and it will lead to deformation of the unit, failure of attaching a panel, and generating noise from the fan
- Make sure to install the indoor unit horizontally and set the gap between the unit underside and the ceiling plane properly. Improper installation may cause air leakage, dew condensation, water
- Even after decorative panel attached, still the unit height can be adjusted finely. Refer to the
- installation manual for decorative panel for details. Installation manual for decorative panel for details. Make sure there is no gap between decoration panel and ceiling surface, and between decoration panel and the indoor unit. The gap may cause air leakage, dew condensation and water leakage.
- In case decorative panel is not installed at the same time, or ceiling material is installed after the unit installed, put the cardboard template for installation attached on the package (packing material of cardboard box) on the bottom of the unit in order to avoid dust coming into the indoor unit.

(5) Refrigerant pipe

Caution

- Use the new refrigerant pipe
 - When re-using the existing pipe system for R22 or R407C, pay attention to the following items. Change the flare nuts with the attached ones (JIS category 2), and reprocess the flare parts.
- Do not use thin-walled pipes. Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for
- refrigeration pipe installation. In addition, make sure there is no damage both inside and outside of the pipe, and no harmful
- substances such as sulfur, oxide, dust or a contaminant stuck on the pipes Do not use any refrigerant other than R410A. Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting
- into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc. Store the copper pipes indoors and seal the both end of them unit if year bazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and
- compressor breakdown
- Use special tools for R410 refrigerant.

Work procedure

- 1. Remove the flare nut and blind flanges on the pipe of the indoor unit. X Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe and then remove them. (Gas may come out at this time, but it is not abnormal.)
- Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.) Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit. % Bend the pipe with as big radius as possible and do not bend the pipe repeatedly. In addition, do 2.
- not twist and crush the pipes.
- Do a flare connection as follows: Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe. and then remove them. When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the
- nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table below. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
- Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
- Make sure to insulate both gas pipes and liquid pipes completely
- X Incomplete insulation may cause dew condensation or water dropping Refrigerant is charged in the outdoor unit.
- As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit

		Strap (Accessory) Pipe cover (Accessory)
Pipe diameter	Tightening torque N·m	
φ 6.35	14 to 18	
φ 9.52	34 to 42	
φ 12.7	49 to 61	ATTAINED ATTAINS
φ 15.88	68 to 82	
± 10.05	100 to 100	The third same of insulation about the Mann or more

6 Drain pipe

Caution

- Install the drain pipe according to the installation manual in order to drain properly.
- Imperfection in draining may cause flood indoors and wetting the household goodsetc. Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious
- damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell. Connect the pipe securely to avoid water leakage from the joint.
 Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance


6 Drain pipe (continued)


Work procedure

Indoor unit

Make sure to insert the drain hose (the end mode of soft PVC) to the end of the step part of drain socket


- Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut.
- Do not apply adhesives on this end.

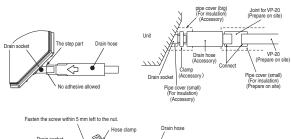




- Prepare a joint for connecting VP-20 pipe, adhere and connect the joint to the drain hose (the end 2. made of rigid PVC), and adhere and connect VP-20 pipe (prepare on site). % As for drain pipe, apply VP-20 made of rigid PVC which is on the market.

 - Make sure that the adhesive will not get into the supplied drain hose It may cause the flexible part broken after the adhesive is dried up and gets rigid.
 - Do not bend or make an excess offset on the drain hose as shown in the picture. Bend or excess offset will cause drain leakage



- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or 3. trap in the midway
- · Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
- Do not set up air vent



unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP-30 or bigger size for main drain pipe.




2

Insulate the drain pipe.

- Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage
 - ※ After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

Drain up

The position for drain pipe outlet can be raised up to 600mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.



6 Drain pipe (continued) Drain test

After installation of drain pipe, make sure that drain system work in good condition and no water leakage from joint and drain pan. Check if the motor sound of drain pump is normal or not.

- Do drain test even if installation of heating season.
 For new building cases, make sure to complete the test before hanging the ceiling.
- 1. Pour water of about 1000cc into the drain pan in the indoor unit by
- pump so as not to get the electrical component wet. 2. Make sure that water is drained out properly and there is no water leakage from any joints of the drain pipe at the test.
- Confirm that the water is properly drained out while the drain motor is operating. At the drain socket (transparent), it is possible to check if the water is drained out properly. 3. Unplug the drain plug on the indoor unit to remove remaining water
- on the drain pan after the test, and re-plug it. And insulate the drain pipe properly finally.

Drain pump operation

O In case electrical wiring work finished Drain pump can be operated by remote controller (wired).

For the operation method, refer to Operation for drain pump in the installation manual for wiring work.

Drain plug

<u>F</u>F


- O In case electrical wiring work not finished
- Drain pump will run continuously when the dip switch"SW7-1" on the indoor unit PCB is turned ON, the Connector CNB is disconnected, and then the power supply (220-240VAC on the terminal block $[\,\,\widehat{}\,$ and $(\widehat{}\,)$ or $[\,\,\widehat{}\,$ and $(\widehat{}\,)$]) is turned ON. Make sure to turn OFF "SW7-1" and reconnect the Connector CNB after the test.

⑦ Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an electrical
 installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country. Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
 Do not put both power source line and signal line on the same route. It may cause
- miscommunication and malfunction.
- Be sure to do D type earth work.
- · For the details of electrical wiring work, see attached instruction manual for electrical wiring work.

Remove a lid of the control box (1 screws).

- Hold each wiring inside the unit and fasten them to terminal block securely.
 Fix the wiring with clamp.

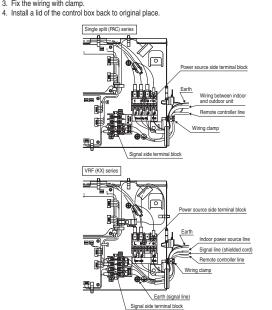

8 Panel installation

- After wiring work finished, install the panel on the indoor unit.
- · Refer to attached panel installation manual for details

Accessory items

1	Hook	79	1 piece	For fixing temporarily	
2	Chain	recorded	2 pieces		
3	Bolt	() I have	4 pieces	For installing the panel	
4	Screw	() I	1 piece	For attaching a hook	
5	Screw	(Jun	2 pieces	For attaching a chain	

Attach the panel on the indoor unit after electrical wiring work.

Refer to attached manual for panel installation for details. (See next page)

9 Check list after installation

Check the following items after all installation work completed.

Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

or VP-20 re on site

-VP-20 epare or er (sn sulatio

hø

PJA012D783


[Figure 1]


[Figure 2]

C-6---

PANEL INSTALLATION MANUAL

Please read this manual together with the indoor unit's installation manual.

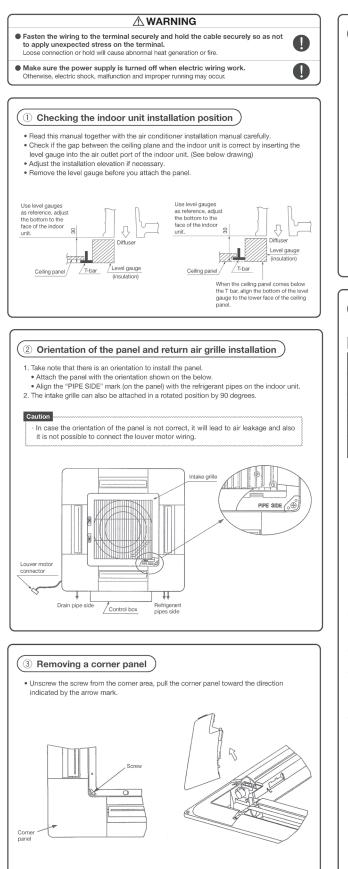

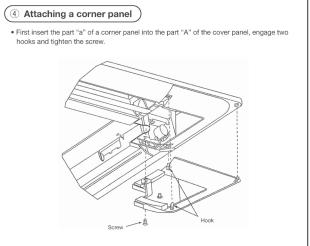

5 Panel installation


Install the panel on the unit after completing the electrical wiring.


Accessories

1	Hook	769	1 piece	For fixing temporarily
2	Chain	vaccoscon	2 pieces	
3	Screw	Dama	4 pieces	For hoisting the panel
4	Screw	6 Jun	1 piece	For attaching a hook
5	Screw	(Jun	2 pieces	For attaching a chain

- Screw in two bolts out of the four supplied with the panel by about slightly less than 5mm.
 (● mark ⑧ ⑧) [Figure 1]
- Attach the hook supplied with the panel to the main body with the hook fixing screw (1 screw). [Figure 2]
- 3. Open the intake grille.
- 4. Please remove the screw of a corner panel and remove a corner panel. (four places)

5. A panel is hooked on two bolts (
 mark (
 B).
[Figure 3]

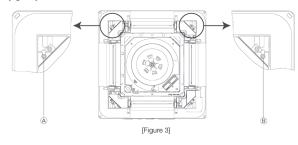

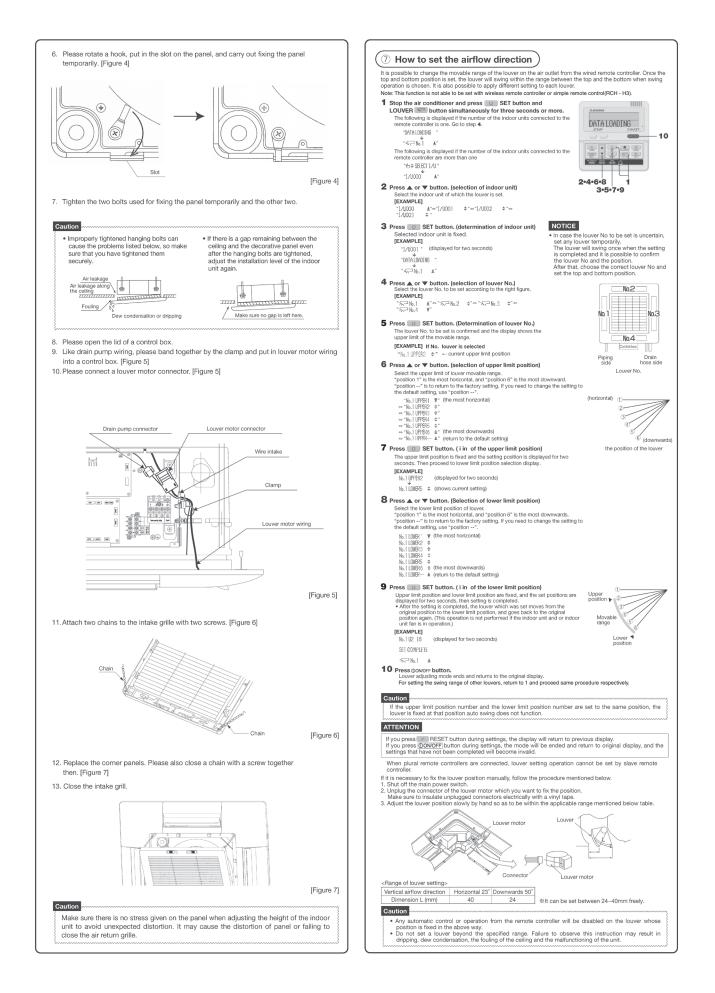

INVERTER MULTI-SPLIT SYSTEM RESIDENTIAL AIR CONDITIONERS

MITSUBISHI HEAVY INDUSTRIES, LTD.

Air-Conditioning & Refrigeration Systems Headquarters 16-5, 2-chome, Kounan, Minato-ku, Tokyo, 108-8215, Japan Fax : (03) 6716-5926

Because of our policy of continuous improvement, we reserve the right to make changes in all specifications without notice. © Copyright MITSUBISHI HEAVY INDUSTRIES, LTD.