

Manual No. '10 · PAC-DB-142

updated April 17, 2012

# STANDARD INVERTER PACKAGED AIR-CONDITIONERS

(Split system, Air to air heat pump type)

<b>CEILING CASSETTE</b>	E-4 WAY COMPACT TYPE	CEILING CASSETTI	E-4 WAY TYPE
Single type	Twin type	Single type	Twin type
FDTC40ZIXVD	FDTC71VNPVD	FDT40ZIXVD	FDT71VNPVD
50ZIXVD	100VNPVD	50ZIXVD	100VNPVD
60ZIXVD	100VSPVD	60ZIXVD	100VSPVD
	125VNPVD	71VNVD	125VNPVD
	125VSPVD	100VNVD	125VSPVD
Triple type	Double Twin type	100VSVD	140VNPVD
FDTC140VNTVD	FDTC200VSDVD	125VNVD	140VSPVD
140VSTVD	FDTC250VSDVD	125VSVD	200VSPVD
		140VNVD	250VSPVD
CEILING SUSPEND	ED TYPE	140VSVD	
Single type	Twin type	Triple type	Double Twin typ
FDEN40ZIXVD	FDEN71VNPVD	FDT140VNTVD	FDT200VSDVD
50ZIXVD	100VNPVD	140VSTVD	250VSDVD
60ZIXVD	100VSPVD	200VSTVD	
71VNVD	125VNPVD	DUCT CONNECTED	LI OW/MIDDI E ST
100VNVD	125VSPVD		
100VSVD	140VNPVD	Single type	Twin type

# ATIC PRESSURE TYPE

FDUM50ZIXVD FDUM100VNPVD **60ZIXVD** 100VSPVD 71VNVD 125VNPVD 100VNVD 125VSPVD 100VSVD 140VNPVD 125VNVD 140VSPVD **125VSVD** 200VSPVD **140VNVD** 250VSPVD 140VSVD

# **DUCT CONNECTED-HIGH STATIC PRESSURE TYPE**

Single type FDU71VNVD FDU140VNVD 100VNVD **140VSVD** 100VSVD **200VSVD** 125VNVD **250VSVD 125VSVD** 

# V Multi System

**125VNVD** 

125VSVD

**140VNVD** 

**140VSVD** 

140VSTVD

200VSTVD

FDEN140VNTVD

Triple type

(OUTDOOR U	NIT)	(INDOOR UNIT)	
FDC71VN	FDC140VN	FDT40VD	FDEN40VD
100VN	140VS	50VD	50VD
100VS	200VS	60VD	60VD
125VN	250VS	71VD	71VD
125VS		100VD	100VD
		125VD	125VD

140VSPVD

200VSPVD

250VSPVD

Ragarding the Service Manual please see the Manual No.'10 • PAC-SM-143.



MITSUBISHI HEAVY INDUSTRIES, LTD.

Triple type FDUM140VNTVD

140VSTVD

200VSTVD

# **TABLE OF CONTENTS**

1. STANDARD INVERTER PACKAGED AIR-CONDITIONERS	2
2. V MULTI SYSTEM	246
3. OPTION PARTS	273


# 1. STANDARD INVERTER PACKAGED AIR-CONDITIONERS

# **CONTENTS**

1.1 SPECIFICATIONS	4
(1) Ceiling cassette-4way compact type (FDTC)	4
(2) Ceiling cassette-4way type (FDT)	
(3) Ceiling suspended type (FDEN)	40
(4) Duct connected-Low/Middle static pressure type (FDUM)	64
(5) Duct connected-High static pressure type (FDU)	84
1.2 EXTERIOR DIMENSIONS	93
(1) Indoor units	93
(2) Outdoor units	105
(3) Remote controller (Option parts)	110
1.3 ELECTRICAL WIRING	112
(1) Indoor units	112
(2) Outdoor units	121
1.4 NOISE LEVEL	126
1.5 CHARACTERISTICS OF FAN	131
1.6 TEMPERATURE AND VELOCITY DISTRIBUTION	137
1.7 PIPING SYSTEM	
1.8 RANGE OF USAGE & LIMITATIONS	
1.9 SELECTION CHART	156
1.9.1 Capacity tables	
(1) Ceiling cassette-4way compact type (FDTC)	
(2) Ceiling cassette-4way type (FDT)	
(3) Ceiling suspended type(FDEN)	
(4) Duct connected-Low/Middle static pressure type (FDUM)	
(5) Duct connected-High static pressure type (FDU)	170
1.9.2 Correction of cooling and heating capacity in relation to air flow rate control (fan speed	)172
1.9.3 Correction of cooling and heating capacity in relation to one way length of refrigerant p	iping172
1.9.4 Height difference between the indoor unit and outdoor unit .	173
1.10 APPLICATION DATA	174
1.10.1 Installation of indoor unit	174
(1) Ceiling cassette-4way compact type (FDTC)	174
(2) Ceiling cassette-4way type (FDT)	180
(3) Ceiling suspended type(FDEN)	
(4) Duct connected-Low/Middle static pressure type (FDUM)	
(5) Duct connected-High static pressure type (FDU)	194
1.10.2 Installation of wired remote controller	202

1.10.3	Installation of outdoor unit	206
(1)	Models SRC40~60ZIX-S	206
(2)	Model FDC71VN	213
(3)	Models FDC100~140VN,100~140VS	221
(4)	Models FDC200,250VS	229
(5)	Method for connecting the accessory pipe (Models FDC200,250 only)	236
1.10.4	Electric wiring work installation	238
1.10.5	Instructions for branching pipe set (DIS-WA1,WB1,TA1,TB1)	243

# How to read the model name

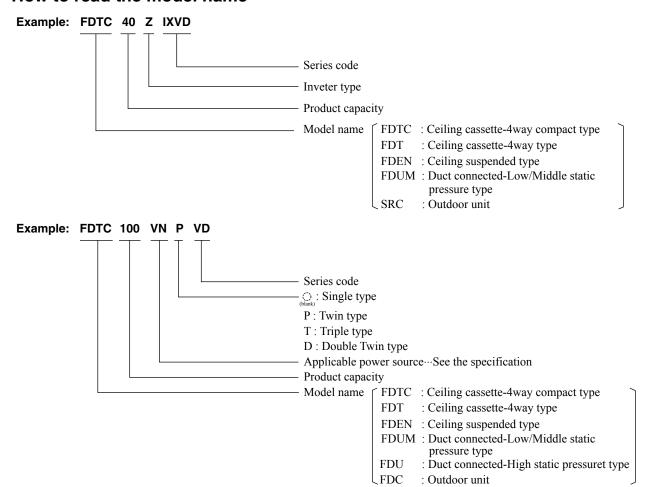

# 1.1. SPECIFICATIONS

# (1) Ceiling cassette-4way compact type (FDTC) (a) Single type

Adapted to **RoHS** directive

	Model	FDTC40ZIXVD		
		Indoor unit FDTC40VD	Outdoor unit SRC40ZIX-S	
Item		Panel TC-PSA-25W-E		
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	4.0 [ 1.8 (Min.)~4.7 (Max.)]	4.5 [ 2.0 (Min.)~5.4 (Max.)]	
Power consumption	kW	1.04	1.10	
Running current	Α	4.6 / 4.8	4.9 / 5.2	
Power factor	%	98 / 99	97	
Inrush current	Α	5 < Max.runnir	ng current 12 >	
Sound Pressure Level	dB(A)	Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32	47	
Exterior dimensions Height x Width x Depth	mm	Unit 248 × 570 × 570 Panel 35 × 700 × 700	640 × 800 × 290	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	UNIT 15 PANEL 3.5	43	
Refrigerant equipment Compressor type & Q'ty		-	5CS130XG04 × 1	
Starting method		_	Direct line start	
Refrigerant oil	l	_	0.48 RB68A	
Heat exchanger		Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1	
Motor <starting method=""></starting>	W	33 < Direct line start >	45 < Direct line start >	
Air flow (Standard)	СММ	Cooling P-Hi:13.5 Hi:11.5 Me:9 Lo:7 Heating P-Hi:13.5 Hi:11.5 Me:9 Lo:8	40	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form		
Electric heater	W	<del>-</del>	_	
Remote controller		wired : RC-E4 (option) wirele	ess : RCN-TC-24W-ER (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Overload protection for fan motor	Internal thermostat for fan motor	
	-	Frost protection thermostat	Abnormal discharge temperature protection.	
Installation data	mm -		6.35 (1/4") x 0.8 O/U φ 6.35 (1/4")	
Refrigerant piping size	$\vdash$	, , , , ,	ο 12.7 (1/2") x 0.8 φ 12.7 (1/2")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.30m	W1 Coo page 154	
Vertical height difference between outdoor unit and indoor unit		Max.20m (Outdoor unit is higher)   **1.See page 154  Max.20m (Outdoor unit is lower)		
Refrigerant Quantity		R410A 1.4kg in outdoor unit (incl.	the amount for the piping of : 15m)	
Drain pump		Built-in Drain pump		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 5pcs	
Insulation for piping		Necessary (both I	Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Drain elbow, Drain hole grommet	


Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

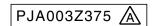


	Model	del FDTC50ZIXVD			
		Indoor unit FDTC50VD	Outdoor unit SRC50ZIX-S		
Item		Panel TC-PSA-25W-E			
Power source			220-240V~50Hz/220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	5.0 [ 2.2 (Min.)~5.6 (Max.)]	5.4 [ 2.5 (Min.) ~ 6.3 (Max.)]		
Power consumption	kW	1.56	1.45		
Running current	Α	6.9 / 7.2	6.4 / 6.7		
Power factor	%	99 / 98	99		
Inrush current	Α	5 < Max.runnir	ng current 14 >		
Sound Pressure Level	dB(A)	Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32	47		
Exterior dimensions Height x Width x Depth	mm	Unit $248 \times 570 \times 570$ Panel $35 \times 700 \times 700$	640 × 800 × 290		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 15 PANEL 3.5	43		
Refrigerant equipment Compressor type & Q'ty		-	5CS130XG04 × 1		
Starting method		-	Direct line start		
Refrigerant oil	l	<del>-</del>	0.48 RB68A		
Heat exchanger		Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1		
Motor <starting method=""></starting>	W	33 < Direct line start >	45 < Direct line start >		
Air flow (Standard)	СММ	Cooling P-Hi:13.5 Hi:11.5 Me:9 Lo:7 Heating P-Hi:13.5 Hi:11.5 Me:9 Lo:8	40		
Available static pressure	Pa	0	_		
Outdoor air intake		Not possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W	<del>-</del>	_		
Remote controller		wired : RC-E4 (option) wirele	ss: RCN-TC-24W-ER (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data	mm	Liquid line: I/U $\phi$ 6.35 (1/4") Pipe $\phi$	6.35 (1/4") x 0.8 O/U $\phi$ 6.35 (1/4")		
Refrigerant piping size	mm	Gas line : $\phi$ 12.7 (1/2") $\phi$	12.7(1/2") x 0.8 φ 12.7 (1/2")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.30m			
Vertical height difference between outdoor unit and indoor unit		Max.20m (Outdoor unit is higher)			
Refrigerant Quantity		R410A 1.4kg in outdoor unit (incl. the amount for the piping of : 15m)			
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 5pcs		
Insulation for piping		Necessary (both L			
Standard Accessories		Mounting kit, Drain hose	Drain elbow, Drain hole grommet		
		=	-		

Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.
- - During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz. (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

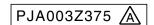


	Model			
		Indoor unit FDTC60VD	Outdoor unit SRC60ZIX-S	
Item	Panel TC-PSA-25W-E			
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	5.6 [ 2.8(Min.)~6.3(Max.)]	6.7 [ 3.1(Min.)~6.7(Max.)]	
Power consumption	kW	1.99	2.08	
Running current	Α	8.3 / 8.7	8.7 / 9.1	
Power factor	%	96	96	
Inrush current	Α	5 < Max.runnir	ng current 14 >	
Sound Pressure Level	dB(A)	Cooling P-Hi: 47 Hi: 46 Me: 39 Lo: 30 Heating P-Hi: 47 Hi: 46 Me: 39 Lo: 32	48	
Exterior dimensions Height x Width x Depth	mm	Unit $248 \times 570 \times 570$ Panel $35 \times 700 \times 700$	640 × 800 × 290	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	UNIT 15 PANEL 3.5	43	
Refrigerant equipment Compressor type & Q'ty		-	5CS130XG04 × 1	
Starting method		_	Direct line start	
Refrigerant oil	e	_	0.48 RB68A	
Heat exchanger		Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1	
Motor <starting method=""></starting>	w	33 < Direct line start >	45 < Direct line start >	
Air flow (Standard)	СММ	Cooling P-Hi: 13.5 Hi: 13.5 Me: 10 Lo: 7 Heating P-Hi: 13.5 Hi: 13.5 Me: 10 Lo: 8	40	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form	_	
Electric heater	w	<del>-</del>	_	
Remote controller		wired : RC-E4 (option) wirele	ss : RCN-TC-24W-ER (option)	
Room temperature control		Thermostat by electronics	_	
O-f-t		Overload protection for fan motor	Internal thermostat for fan motor	
Safety equipment		Frost protection thermostat	Abnormal discharge temperature protection.	
Installation data	mm	Liquid line : I/U $\phi$ 6.35 (1/4") Pipe $\phi$	6 6.35 (1/4") x 0.8 O/U φ 6.35 (1/4")	
Refrigerant piping size	mm	Gas line : φ 12.7 (1/2") φ	φ 12.7(1/2") x 0.8 φ 12.7 (1/2")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.30m		
Vertical height difference between outdoor unit and indoor unit		Max.20m (Outdoor unit is higher)		
Refrigerant Quantity		R410A 1.4kg in outdoor unit (incl. the amount for the piping of : 15m)		
Drain pump		Built-in Drain pump	_	
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 5pcs	
Insulation for piping			Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Drain elbow, Drain hole grommet	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

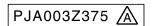

(b) Twin type Adapted to RoHS directive

	Model	lel FDTC71VNPVD		
		Indoor unit FDTC40VD (2 units)	Outdoor unit FDC71VN	
Item		Panel TC-PSA-25W-E		
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	7.1 [ 3.2 (Min.)~8.0 (Max.)]	8.0 [ 3.6 (Min.)~9.0 (Max.)]	
Power consumption	kW	1.91	2.08	
Running current	Α	8.3 / 8.8	9.0 / 9.6	
Power factor	%	99	99 / 98	
Inrush current	Α	5 < Max.runnir	ng current 17 >	
Sound Pressure Level	dB(A)	Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32	48	
Exterior dimensions Height x Width x Depth	mm	Unit 248 × 570 × 570 Panel 35 × 700 × 700	750 × 968 × 340	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	UNIT 15 PANEL 3.5	60	
Refrigerant equipment Compressor type & Q'ty		-	2YC45DXD × 1	
Starting method		_	Direct line start	
Refrigerant oil	e l	_	0.65 FVC50K	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1	
Motor <starting method=""></starting>	w	33 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	Cooling P-Hi: 13.5 Hi: 11.5 Me: 9 Lo: 7 Heating P-Hi: 13.5 Hi: 11.5 Me: 9 Lo: 8	Cooling: 60, Heating: 50	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net x 1 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form	_	
Electric heater	W	_	20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) wirele	ss : RCN-TC-24W-ER (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Overload protection for fan motor	Internal thermostat for fan motor	
Salety equipment		Frost protection thermostat	Abnormal discharge temperature protection.	
Installation data	mm	Liquid line : I/U $\phi$ 6.35 (1/4") ② $\phi$ 9.52 (3/8") $\times$		
Refrigerant piping size			x 0.8 ① φ 15.88 (5/8") x 1.0 O/U φ 15.88 (5/8")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 154	
Refrigerant Quantity		R410A 2.95kg in outdoor unit (incl.	the amount for the piping of : 30m)	
Drain pump		Built-in Drain pump		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs	
Insulation for piping		Necessary (both L	iquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose		


Notes (1) The data are measured at the following conditions.

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	20°C		6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-TA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch ~ I/U


  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

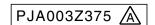

	Model	FDTC10	0VNPVD
		Indoor unit FDTC50VD (2 units)	Outdoor unit FDC100VN
Item		Panel TC-PSA-25W-E	
Power source			220-240V~50Hz / 220V~60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	10.0 [ 4.0 (Min.)~11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]
Power consumption	kW	2.84	3.08
Running current	Α	12.4 / 13.0	13.5 / 14.1
Power factor	%	99	99
Inrush current	Α	5 < Max.runnir	ng current 24 >
Sound Pressure Level	dB(A)	Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 HI: 42 Me: 36 Lo: 32	49
Exterior dimensions Height x Width x Depth	mm	Unit $248 \times 570 \times 570$ Panel $35 \times 700 \times 700$	845 × 970 × 370
Exterior appearance		Plaster White	Stucco White
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent
Net weight	kg	UNIT 15 PANEL 3.5	81
Refrigerant equipment Compressor type & Q'ty		_	RMT5126MDE2×1
Starting method		-	Direct line start
Refrigerant oil	e	_	0.9 M-MA68
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Refrigerant control		_	Electronic expansion valve
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1
Motor <starting method=""></starting>	w	33 < Direct line start >	86 < Direct line start >
Air flow (Standard)	СММ	Cooling P-Hi: 13.5 Hi: 11.5 Me: 9 Lo: 7 Heating P-Hi: 13.5 Hi: 11.5 Me: 9 Lo: 8	Cooling: 75, Heating: 73
Available static pressure	Pa	0	_
Outdoor air intake		Not possible	_
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	<del>-</del>
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )
Insulation (noise & heat)		Polyurethane form	_
Electric heater	W	_	20 (Crank case heater)
Remote controller		wired : RC-E4 (option) wirele	ss : RCN-TC-24W-ER (option)
Room temperature control		Thermostat by electronics	_
Cafaty aguinment		Overload protection for fan motor	Internal thermostat for fan motor
Safety equipment		Frost protection thermostat	Abnormal discharge temperature protection.
Installation data	mm	Liquid line: I/U $\phi$ 6.35 (1/4") ② $\phi$ 9.52 (3/8") >	c 0.8 ① φ 9.52 (3/8") x 0.8 O/U φ 9.52 (3/8")
Refrigerant piping size	mm	Gas line : I/U $\phi$ 12.7 (1/2") ② $\phi$ 12.7 (1/2") $\times$	c 0.8 ① φ 15.88 (5/8") x 1.0 O/U φ 15.88 (5/8")
Connecting method		Flare piping	Flare piping
Refrigerant line (one way) length		Max.50m	
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit
Drain pump		Built-in Drain pump	
Drain		Hose Connectable with VP20	Holes size φ 20 x 3pcs
Insulation for piping		Necessary (both L	
Standard Accessories		Mounting kit, Drain hose	Edging
			1

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch~I/U
  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

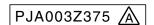


	Model	FDTC10	0VSPVD
	[	Indoor unit FDTC50VD (2 units)	Outdoor unit FDC100VS
Item		Panel TC-PSA-25W-E	
Power source			380-415V 3N~50Hz / 380V 3N~60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	10.0 [ 4.0 (Min.)~11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]
Power consumption	kW	2.84	3.08
Running current	Α	4.2 / 4.4	4.5 / 4.8
Power factor	%	98	99 / 97
Inrush current	Α	5 < Max.runnir	ng current 15 >
Sound Pressure Level	dB(A)	Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32	49
Exterior dimensions Height x Width x Depth	mm	Unit $248 \times 570 \times 570$ Panel $35 \times 700 \times 700$	845 × 970 × 370
Exterior appearance		Plaster White	Stucco White
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent
Net weight	kg	UNIT 15 PANEL 3.5	83
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1
Starting method		_	Direct line start
Refrigerant oil	Q.	_	0.9 M-MA68
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Refrigerant control		_	Electronic expansion valve
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1
Motor <starting method=""></starting>	W	33 < Direct line start >	86 < Direct line start >
Air flow (Standard)	СММ	Cooling P-Hi: 13.5 Hi: 11.5 Me: 9 Lo: 7 Heating P-Hi: 13.5 Hi: 11.5 Me: 9 Lo: 8	Cooling: 75, Heating: 73
Available static pressure	Pa	0	_
Outdoor air intake		Not possible	_
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )
Insulation (noise & heat)		Polyurethane form	_
Electric heater	W	_	20 (Crank case heater)
Remote controller		wired : RC-E4 (option) wirele	ss : RCN-TC-24W-ER (option)
Room temperature control		Thermostat by electronics	_
Safety equipment		Overload protection for fan motor	Internal thermostat for fan motor
		Frost protection thermostat	Abnormal discharge temperature protection.
Installation data	mm -	Liquid line : I/U $\phi$ 6.35 (1/4") ② $\phi$ 9.52 (3/8") >	
Refrigerant piping size			α 0.8 ① φ 15.88 (5/8") x 1.0 O/U φ 15.88 (5/8")
Connecting method	$\vdash$	Flare piping	Flare piping
Refrigerant line (one way) length	$\longmapsto$	Max.50m	
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 154
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit
		Built-in Drain pump	_
Drain pump			
Drain pump Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs
			-

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19℃	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature. (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch ~ I/U


  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

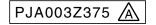

	Model	FDTC12	5VNPVD
	[	Indoor unit FDTC60VD (2 units)	Outdoor unit FDC125VN
Item		Panel TC-PSA-25W-E	
Power source			220-240V~50Hz / 220V~60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.)~16.0 (Max.)]
Power consumption	kW	5.35	4.62
Running current	Α	24.0 / 25.1	20.7 / 21.6
Power factor	%	97	97
Inrush current	Α	5 < Max.runnir	ng current 27 >
Sound Pressure Level	dB(A)	Cooling P-Hi: 47 Hi: 46 Me: 39 Lo: 30 Heating P-Hi: 47 Hi: 46 Me: 39 Lo: 32	Cooling : 50 Heating : 51
Exterior dimensions Height x Width x Depth	mm	Unit $248 \times 570 \times 570$ Panel $35 \times 700 \times 700$	845 × 970 × 370
Exterior appearance		Plaster White	Stucco White
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent
Net weight	kg	UNIT 15 PANEL 3.5	81
Refrigerant equipment Compressor type & Q'ty			RMT5126MDE2 × 1
Starting method		_	Direct line start
Refrigerant oil	Q	_	0.9 M-MA68
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Refrigerant control		_	Electronic expansion valve
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1
Motor <starting method=""></starting>	w	33 < Direct line start >	86 < Direct line start >
Air flow (Standard)	СММ	Cooling P-Hi: 13.5 Hi: 13.5 Me: 10 Lo: 7 Heating P-Hi: 13.5 Hi: 13.5 Me: 10 Lo: 8	Cooling : 75, Heating : 73
Available static pressure	Pa	0	_
Outdoor air intake		Not possible	_
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)
Insulation (noise & heat)		Polyurethane form	_
Electric heater	W	_	20 (Crank case heater)
Remote controller		wired : RC-E4 (option) wirele	ss: RCN-TC-24W-ER (option)
Room temperature control		Thermostat by electronics	_
Cofety equiper		Overload protection for fan motor	Internal thermostat for fan motor
Safety equipment		Frost protection thermostat	Abnormal discharge temperature protection.
Installation data		Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") >	c 0.8 ① φ 9.52 (3/8") x 0.8 O/U φ 9.52 (3/8")
Refrigerant piping size	mm	Gas line : I/U φ 12.7 (1/2") ② φ 12.7 (1/2") >	c 0.8 ① φ 15.88 (5/8") x 1.0 O/U φ 15.88 (5/8")
Connecting method		Flare piping	Flare piping
Refrigerant line (one way) length		Max.50m	
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	**1.See page 154
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit
Drain pump		Built-in Drain pump	_
Drain		Hose Connectable with VP20	Holes size φ20 x 3pcs
Insulation for piping		Necessary (both L	, ,
Standard Accessories		Mounting kit, Drain hose	Edging
		J ,	

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C


- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch~I/U
  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

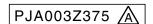

	Model	FDTC12	5VSPVD
		Indoor unit FDTC60VD (2 units)	Outdoor unit FDC125VS
Item		Panel TC-PSA-25W-E	
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]
Power consumption	kW	5.35	4.62
Running current	Α	8.0 / 8.4	6.9 / 7.2
Power factor	%	97	97
Inrush current	Α	5 < Max.runnir	ng current 15 >
Sound Pressure Level	dB(A)	Cooling P-Hi: 47 Hi: 46 Me: 39 Lo: 30 Heating P-Hi: 47 Hi: 46 Me: 39 Lo: 32	Cooling: 50 Heating: 51
Exterior dimensions Height x Width x Depth	mm	Unit $248 \times 570 \times 570$ Panel $35 \times 700 \times 700$	845 × 970 × 370
Exterior appearance		Plaster White	Stucco White
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent
Net weight	kg	UNIT 15 PANEL 3.5	83
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1
Starting method		-	Direct line start
Refrigerant oil	Q	-	0.9 M-MA68
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Refrigerant control		_	Electronic expansion valve
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1
Motor <starting method=""></starting>	W	33 < Direct line start >	86 < Direct line start >
Air flow (Standard)	СММ	Cooling P-Hi: 13.5 Hi: 13.5 Me: 10 Lo: 7 Heating P-Hi: 13.5 Hi: 13.5 Me: 10 Lo: 8	Cooling: 75, Heating: 73
Available static pressure	Pa	0	_
Outdoor air intake		Not possible	_
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	<del>-</del>
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)
Insulation (noise & heat)		Polyurethane form	_
Electric heater	W	-	20 (Crank case heater)
Remote controller		wired : RC-E4 (option) wirele	ss : RCN-TC-24W-ER (option)
Room temperature control		Thermostat by electronics	_
Safety equipment		Overload protection for fan motor	Internal thermostat for fan motor
Salety equipment		Frost protection thermostat	Abnormal discharge temperature protection.
Installation data	mm	Liquid line : I/U $\phi$ 6.35 (1/4") $\bigcirc$ $\phi$ 9.52 (3/8") $\gt$	
Refrigerant piping size		Gas line : I/U $\phi$ 12.7 (1/2") $@$ $\phi$ 12.7 (1/2") $x$	α 0.8 ① φ 15.88 (5/8") x 1.0 O/U φ 15.88 (5/8")
Connecting method		Flare piping	Flare piping
Refrigerant line (one way) length		Max.50m	
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 154
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit
Drain pump		Built-in Drain pump	_
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs
Insulation for piping		Necessary (both L	iquid & Gas lines)
Standard Accessories		Mounting kit, Drain hose	Edging
		g, Drain 11000	Laging

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
  (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch~I/U
  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

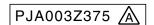


(c) Triple type

#### Adapted to RoHS directive

	Model	FDTC14	0VNTVD
		Indoor unit FDTC50VD (3 units)	Outdoor unit FDC140VN
Item		Panel TC-PSA-25W-E	
Power source			220-240V~50Hz / 220V~60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]
Power consumption	kW	4.64	4.52
Running current	Α	20.4 / 21.3	20.0 / 20.9
Power factor	%	99	98
Inrush current	Α	5 < Max.runnir	ng current 24 >
Sound Pressure Level	dB(A)	Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32	51
Exterior dimensions Height x Width x Depth	mm	Unit $248 \times 570 \times 570$ Panel $35 \times 700 \times 700$	845 × 970 × 370
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent
Net weight	kg	UNIT 15 PANEL 3.5	81
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1
Starting method		_	Direct line start
Refrigerant oil	e	_	0.9 M-MA68
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Refrigerant control		_	Electronic expansion valve
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan x 1
Motor <starting method=""></starting>	w	33 < Direct line start >	86 < Direct line start >
Air flow (Standard)	СММ	Cooling P-Hi:13.5 Hi:11.5 Me:9 Lo:7 Heating P-Hi:13.5 Hi:11.5 Me:9 Lo:8	Cooling: 75, Heating: 73
Available static pressure	Pa	0	_
Outdoor air intake		Not possible	<del>-</del>
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	<del>-</del>
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)
nsulation (noise & heat)		Polyurethane form	_
Electric heater	W	-	20 (Crank case heater)
Remote controller		wired : RC-E4 (option) wirele	ss : RCN-TC-24W-ER (option)
Room temperature control		Thermostat by electronics	1
Safety equipment		Overload protection for fan motor	Internal thermostat for fan motor
Odlety equipment		Frost protection thermostat	Abnormal discharge temperature protection.
nstallation data	mm	Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") >	
Refrigerant piping size		Gas line : I/U $\phi$ 12.7 (1/2") ② $\phi$ 12.7 (1/2") ×	0.8 ① φ 15.88 (5/8") x 1.0 O/U φ 15.88 (5/8")
Connecting method		Flare piping	Flare piping
Refrigerant line (one way) length		Max.50m	
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 155
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	piping length of 30m) Outdoor unit
Drain pump		Built-in Drain pump	<del>-</del>
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs
Insulation for piping		Necessary (both L	iquid & Gas lines)
Standard Accessories		Mounting kit, Drain hose	Edging

		_		
Item	Indoor air temperature		Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber. During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.
- (6) Branching pipe set "DIS-TA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch ~ I/U (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

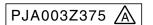

Power source Operation data Nominal capacity kW Power consumption kW Running current A Power factor	Indoor unit FDTC50VD (3 units)  Panel TC-PSA-25W-E  Cooling  14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]  4.64  6.8 / 7.1  98 / 99  5 < Max.runnin  Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32  Unit 248 × 570 × 570 Panel 35 × 700 × 700  Plaster White (6.8Y8.9/0.2) near equivalent  UNIT 15 PANEL 3.5  — —	Outdoor unit <b>FDC140VS</b> 380-415V 3N~50Hz / 380V 3N~60Hz  Heating  16.0 [ 4.0 (Min.)~16.5 (Max.)]  4.52  6.6 / 7.0  99 / 98  rg current 15 >  51  845 × 970 × 370  Stucco White  (4.2Y7.5/1.1) near equivalent  83  RMT5126MDE3 × 1
Power source Operation data Nominal capacity kW Power consumption kW Running current A Power factor % Inrush current A Sound Pressure Level dB(A) Exterior dimensions Height x Width x Depth Exterior appearance (Munsell color) Net weight kg Refrigerant equipment Compressor type & Q'ty Starting method Refrigerant oil leat exchanger Refrigerant control Air handling equipment Fan type & Q'ty	Cooling  14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]  4.64  6.8 / 7.1  98 / 99  5 < Max.runnin  Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32  Unit 248 × 570 × 570 Panel 35 × 700 × 700  Plaster White (6.8Y8.9/0.2) near equivalent	Heating  16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]  4.52  6.6 / 7.0  99 / 98  Ig current 15 >  51  845 × 970 × 370  Stucco White (4.2Y7.5/1.1) near equivalent  83
Operation data  Nominal capacity kW  Power consumption kW  Running current A  Power factor %  Inrush current A  Sound Pressure Level dB(A)  Exterior dimensions Height x Width x Depth  Exterior appearance (Munsell color)  Net weight kg  Refrigerant equipment Compressor type & Q'ty  Starting method  Refrigerant oil & Heat exchanger  Refrigerant control  Air handling equipment Fan type & Q'ty	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]  4.64  6.8 / 7.1  98 / 99  5 < Max.runnin  Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30  Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32  Unit 248 × 570 × 570  Panel 35 × 700 × 700  Plaster White  (6.8Y8.9/0.2) near equivalent	Heating  16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]  4.52  6.6 / 7.0  99 / 98  Ig current 15 >  51  845 × 970 × 370  Stucco White (4.2Y7.5/1.1) near equivalent  83
Nominal capacity kW Power consumption kW Running current A Power factor % Inrush current A Sound Pressure Level dB(A) Exterior dimensions Height x Width x Depth Exterior appearance (Munsell color) Net weight kg Refrigerant equipment Compressor type & Q'ty Starting method Refrigerant oil & Heat exchanger Refrigerant control Air handling equipment Fan type & Q'ty	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]  4.64  6.8 / 7.1  98 / 99  5 < Max.runnin  Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30  Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32  Unit 248 × 570 × 570  Panel 35 × 700 × 700  Plaster White  (6.8Y8.9/0.2) near equivalent	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]  4.52  6.6 / 7.0  99 / 98  1g current 15 >  51  845 × 970 × 370  Stucco White (4.2Y7.5/1.1) near equivalent  83
Power consumption kW Running current A Power factor % Inrush current A Sound Pressure Level dB(A) Exterior dimensions Height x Width x Depth Exterior appearance (Munsell color) Net weight kg Refrigerant equipment Compressor type & Q'ty Starting method Refrigerant oil & Heat exchanger Refrigerant control Air handling equipment Fan type & Q'ty	4.64 6.8 / 7.1 98 / 99 5 < Max.runnin Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32 Unit 248 × 570 × 570 Panel 35 × 700 × 700  Plaster White (6.8Y8.9/0.2) near equivalent	4.52 6.6 / 7.0 99 / 98 ag current 15 >  51  845 × 970 × 370  Stucco White (4.2Y7.5/1.1) near equivalent 83
Running current A Power factor % Inrush current A Sound Pressure Level dB(A)  Exterior dimensions Height x Width x Depth Exterior appearance (Munsell color) Net weight kg Refrigerant equipment Compressor type & Q'ty Starting method Refrigerant oil & Heat exchanger Refrigerant control Air handling equipment Fan type & Q'ty	6.8 / 7.1 98 / 99 5 < Max.runnin Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32 Unit 248 × 570 × 570 Panel 35 × 700 × 700  Plaster White (6.8Y8.9/0.2) near equivalent	6.6 / 7.0 99 / 98  ag current 15 >  51  845 × 970 × 370  Stucco White (4.2Y7.5/1.1) near equivalent 83
Power factor	98 / 99  5 < Max.runnin  Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32  Unit 248 × 570 × 570 Panel 35 × 700 × 700  Plaster White (6.8Y8.9/0.2) near equivalent	99 / 98  19 current 15 >  51  845 × 970 × 370  Stucco White (4.2Y7.5/1.1) near equivalent 83
Inrush current  Sound Pressure Level  Exterior dimensions Height x Width x Depth  Exterior appearance (Munsell color)  Net weight  Refrigerant equipment Compressor type & Q'ty  Starting method  Refrigerant oil  Heat exchanger  Refrigerant control  Air handling equipment Fan type & Q'ty	5 < Max.runnin  Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32  Unit 248 × 570 × 570 Panel 35 × 700 × 700  Plaster White (6.8Y8.9/0.2) near equivalent	g current 15 > 51  845 × 970 × 370  Stucco White (4.2Y7.5/1.1) near equivalent 83
Sound Pressure Level dB(A)  Exterior dimensions Height x Width x Depth  Exterior appearance (Munsell color)  Net weight kg  Refrigerant equipment Compressor type & Q'ty  Starting method  Refrigerant oil leat exchanger  Refrigerant control  Air handling equipment Fan type & Q'ty	Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32  Unit 248 × 570 × 570 Panel 35 × 700 × 700  Plaster White (6.8Y8.9/0.2) near equivalent	51  845 × 970 × 370  Stucco White (4.2Y7.5/1.1) near equivalent 83
Exterior dimensions Height x Width x Depth  Exterior appearance (Munsell color)  Net weight Refrigerant equipment Compressor type & Q'ty  Starting method Refrigerant oil Heat exchanger  Refrigerant control  Air handling equipment Fan type & Q'ty	Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32  Unit 248 × 570 × 570  Panel 35 × 700 × 700  Plaster White  (6.8Y8.9/0.2) near equivalent	845 × 970 × 370  Stucco White (4.2Y7.5/1.1) near equivalent 83
Height x Width x Depth  Exterior appearance (Munsell color)  Net weight  Refrigerant equipment Compressor type & Q'ty  Starting method  Refrigerant oil  Heat exchanger  Refrigerant control  Air handling equipment Fan type & Q'ty	Panel 35 × 700 × 700  Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent 83
(Munsell color)  Net weight kg  Refrigerant equipment Compressor type & Q'ty  Starting method  Refrigerant oil leat exchanger  Refrigerant control  Air handling equipment Fan type & Q'ty	(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent 83
Net weight kg  Refrigerant equipment Compressor type & Q'ty  Starting method  Refrigerant oil leat exchanger  Refrigerant control  Air handling equipment Fan type & Q'ty		83
Refrigerant equipment Compressor type & Q'ty Starting method Refrigerant oil Heat exchanger Refrigerant control Air handling equipment Fan type & Q'ty	UNIT 15 PANEL 3.5	
Compressor type & Q'ty  Starting method  Refrigerant oil & Heat exchanger  Refrigerant control  Air handling equipment Fan type & Q'ty	-	RMT5126MDE3 x 1
Refrigerant oil  Heat exchanger  Refrigerant control  Air handling equipment Fan type & Q'ty	-	
Heat exchanger Refrigerant control Air handling equipment Fan type & Q'ty		Direct line start
Refrigerant control Air handling equipment Fan type & Q'ty	_	0.9 M-MA68
Air handling equipment Fan type & Q'ty	Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Fan type & Q'ty	_	Electronic expansion valve
	Turbo fan × 1	Propeller fan × 1
	33 < Direct line start >	86 < Direct line start >
Air flow (Standard) CMM	Cooling P-Hi:13.5 Hi:11.5 Me:9 Lo:7 Heating P-Hi:13.5 Hi:11.5 Me:9 Lo:8	Cooling: 75, Heating: 73
Available static pressure Pa	0	<del>-</del>
Outdoor air intake	Not possible	-
Air filter, Q'ty	Pocket plastic net × 1 (Washable)	<del>-</del>
Shock & vibration absorber	Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )
Insulation (noise & heat)	Polyurethane form	<del>-</del>
Electric heater W	-	20 (Crank case heater)
Remote controller	wired : RC-E4 (option) wireles	ss : RCN-TC-24W-ER (option)
Room temperature control	Thermostat by electronics	<del>-</del>
Safety equipment	Overload protection for fan motor	Internal thermostat for fan motor
Salety equipment	Frost protection thermostat	Abnormal discharge temperature protection.
Installation data mm	Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") x	
Refrigerant piping size	Gas line : I/U φ 12.7 (1/2") ② φ 12.7 (1/2") x	α 0.8 ① φ 15.88 (5/8") x 1.0 O/U φ 15.88 (5/8")
Connecting method	Flare piping	Flare piping
Refrigerant line (one way) length	Max.50m	
Vertical height difference between outdoor unit and indoor unit	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 155
Refrigerant Quantity	R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit
Drain pump	Built-in Drain pump	<del>-</del>
Drain	Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs
Insulation for piping	Necessary (both L	
Standard Accessories	Mounting kit, Drain hose	Edging

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.


  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

  (5) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.

  (6) Branching pipe set "DIS-TA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

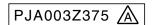

# (d) Double Twin type

#### Adapted to RoHS directive

	Model	FDTC20	0VSDVD
		Indoor unit FDTC50VD (4 units)	Outdoor unit FDC200VS
Item		Panel TC-PSA-25W-E	
Power source			380-415V 3N~50Hz / 380V 3N~60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	20.0 [ 7.0 (Min.)~22.4 (Max.)]	22.4 [ 7.6 (Min.)~25.0 (Max.)]
Power consumption	kW	7.33	6.98
Running current	Α	10.9 / 11.5	10.4 / 10.9
Power factor	%	97	97
Inrush current	Α	5 < Max.runnir	ng current 19 >
Sound Pressure Level	dB(A)	Cooling P-Hi: 47 Hi: 42 Me: 36 Lo: 30 Heating P-Hi: 47 Hi: 42 Me: 36 Lo: 32	57
Exterior dimensions Height x Width x Depth	mm	Unit 248 × 570 × 570 Panel 35 × 700 × 700	1,300 × 970 × 370
Exterior appearance		Plaster White	Stucco White
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent
Net weight	kg	UNIT 15 PANEL 3.5	122
Refrigerant equipment Compressor type & Q'ty		_	GTC5150ND70K × 1
Starting method		_	Direct line start
Refrigerant oil	Q	_	1.45 M-MA32R
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Refrigerant control		_	Electronic expansion valve
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 2
Motor <starting method=""></starting>	w	33 < Direct line start >	86 x 2 < Direct line start >
Air flow (Standard)	СММ	Cooling P-Hi:13.5 Hi:11.5 Me:9 Lo:7 Heating P-Hi:13.5 Hi:11.5 Me:9 Lo:8	Cooling : 150, Heating : 145
Available static pressure	Pa	0	_
Outdoor air intake		Not possible	_
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)
Insulation (noise & heat)		Polyurethane form	_
Electric heater	W	_	33 (Crank case heater)
Remote controller		wired : RC-E4 (option) wirele	
Room temperature control		Thermostat by electronics	
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.
Installation data		Liquid line : I/O φ 6.35 (1/4") ③② φ 9.52 (3/8") x	
Refrigerant piping size	mm		$\phi$ 15.88 ① $\phi$ 22.22 (7/8") x 1.6 O/U $\phi$ 22.22 (7/8")
Connecting method		Flare piping	Liquid: Flare / Gas: Brazing
Refrigerant line (one way) length		Max.70m	
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher)	
Refrigerant Quantity			
Drain pump		R410A 5.4kg (Pre-charged up to the piping length of 30m) Outdoor unit	
Drain pump  Drain		Built-in Drain pump  Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs
Insulation for piping		Necessary (both L	
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging

#### Notes (1) The data are measured at the following conditions.

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
  (5) Indoor unit specifications for one unit. Capacity and operation data is four indoor units are combined and run together.
  (6) Branching pipe set "DIS-WB1"×1, "DIS-WA1"×2 (option). Pipe ①: O/U~Branch, ②: Branch~Branch, ③: Branch~I/U
  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

PJA003Z375

	Model	FDTC25	OVSDVD
		Indoor unit FDTC60VD (4 units)	Outdoor unit FDC250VS
Item		Panel TC-PSA-25W-E	
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	25.0 [ 10.0 (Min.) ~ 28.0 (Max.)]	28.0 [ 9.5 (Min.)~31.5 (Max.)]
Power consumption	kW	11.28	10.19
Running current	Α	16.8 / 17.7	15.2 / 16.0
Power factor	%	97	97
Inrush current	Α	5 < Max.runnir	ng current 22 >
Sound Pressure Level	dB(A)	Cooling P-Hi: 47 Hi: 46 Me: 39 Lo: 30 Heating P-Hi: 47 Hi: 46 Me: 39 Lo: 32	Cooling: 57 Heating: 58
Exterior dimensions Height x Width x Depth	mm	Unit $248 \times 570 \times 570$ Panel $35 \times 700 \times 700$	1,505 × 970 × 370
Exterior appearance		Plaster White	Stucco White
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent
Net weight	kg	UNIT 15 PANEL 3.5	140
Refrigerant equipment Compressor type & Q'ty		-	GTC5150ND70K × 1
Starting method		_	Direct line start
Refrigerant oil	e l	_	1.45 M-MA32R
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Refrigerant control		_	Electronic expansion valve
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 2
Motor <starting method=""></starting>	w	33 < Direct line start >	86 x 2 < Direct line start >
Air flow (Standard)	СММ	Cooling P-Hi: 13.5 Hi: 13.5 Me: 10 Lo: 7 Heating P-Hi: 13.5 Hi: 13.5 Me: 10 Lo: 8	Cooling : 150, Heating : 145
Available static pressure	Pa	0	_
Outdoor air intake		Not possible	_
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)
Insulation (noise & heat)		Polyurethane form	_
Electric heater	W		33 (Crank case heater)
Remote controller		wired : RC-E4 (option) wirele	ss : RCN-TC-24W-ER (option)
Room temperature control		Thermostat by electronics	_
O-f-t		Overload protection for fan motor	Internal thermostat for fan motor
Safety equipment		Frost protection thermostat	Abnormal discharge temperature protection.
Installation data		Liquid line : I/O φ 6.35 (1/4") ③② φ 9.52 (3/8") x	0.8 ① φ 12.7 (1/2") x 0.8 O/U φ 12.7 (1/2")
Refrigerant piping size	mm	Gas line : I/U $\phi$ 12.7 (1/2") $\Im \phi$ 12.7 x 0.8 $\Im \phi$	φ 15.88 ① φ 22.22 (7/8") x 1.6 O/U φ 22.22 (7/8")
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing
Refrigerant line (one way) length		Max.70m	·
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher)	
Refrigerant Quantity		R410A 7.2kg (Pre-charged up to the piping length of 30m) Outdoor unit	
Drain pump		Built-in Drain pump	
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs
Insulation for piping		Necessary (both L	
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.


  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

  (5) Indoor unit specifications for one unit. Capacity and operation data is four indoor units are combined and run together.

  (6) Branching pipe set "DIS-WB1"×1, "DIS-WA1"×2 (option). Pipe ①: O/U~Branch, ②: Branch~Branch, ③: Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

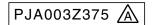

# (2) Ceiling cassette-4way type (FDT) (a) Single type

Adapted to RoHS directive

	Model	FDT40	ZIXVD	
		Indoor unit <b>FDT40VD</b>	Outdoor unit SRC40ZIX-S	
Item		Panel <b>T-PSA-3AW-E</b>		
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	4.0 [ 1.8 (Min.)~4.7 (Max.)]	4.5 [ 2.0 (Min.)~5.4 (Max.)]	
Power consumption	kW	0.93	1.15	
Running current	Α	4.1 / 4.3	5.2 / 5.4	
Power factor	%	98	97	
Inrush current	Α	5 < Max.runnir	ng current 12 >	
Sound Pressure Level	dB(A)	P-Hi:39 Hi:33 Me:31 Lo:30	47	
Exterior dimensions Height x Width x Depth	mm	Unit 246 × 840 × 840 Panel 35 × 950 × 950	640 × 800 × 290	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
let weight	kg	UNIT 22 PANEL 5.5	43	
Refrigerant equipment Compressor type & Q'ty		-	5CS130XG04 x 1	
Starting method		_	Direct line start	
Refrigerant oil	l	_	0.48 RB68A	
Heat exchanger		Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1	
Motor <starting method=""></starting>	W	50 < Direct line start >	45 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:20 Hi:18 Me:16 Lo:14	40	
Available static pressure	Pa	0	_	
Outdoor air intake		Possible	_	
Air filter, Q'ty		Pocket plastic net x 1 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
nsulation (noise & heat)		Polyurethane form	_	
Electric heater	W	_	_	
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
nstallation data		Liquid line : I/U φ 6.35 (1/4") Pipe σ	φ 6.35 (1/4") x 0.8 O/U φ 6.35 (1/4")	
Refrigerant piping size	mm		$\phi$ 12.7 (1/2") x 0.8 $\phi$ 12.7 (1/2")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.30m	·	
Vertical height difference between outdoor unit and indoor unit		Max.20m (Outdoor unit is higher)		
Refrigerant Quantity		R410A 1.4kg in outdoor unit (incl. the amount for the piping of : 15m)		
Drain pump		Built-in Drain pump		
Drain Prain		Hose Connectable with VP20	Holes size φ20 x 5pcs	
nsulation for piping			Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Drain elbow, Drain hole grommet	

Notes (1) The data are measured at the following conditions.

	Item	Indoor air t	emperature	Outdoor air	temperature
ſ	Operation	DB WB		DB	WB
	Cooling	27°C	19°C	35°C	24°C
ſ	Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber. During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

PJF000Z188 🛕

	Model	FDT50	ZIXVD	
		Indoor unit FDT50VD	Outdoor unit SRC50ZIX-S	
Item		Panel <b>T-PSA-3AW-E</b>		
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	5.0 [ 2.2 (Min.)~5.6 (Max.)]	5.4 [ 2.5 (Min.)~6.3 (Max.)]	
Power consumption	kW	1.29	1.29	
Running current	Α	5.7 / 6.0	5.7 / 6.0	
Power factor	%	98	98	
Inrush current	Α	5 < Max.runnir	ng current 14 >	
Sound Pressure Level	dB(A)	P-Hi:39 Hi:33 Me:31 Lo:30	47	
Exterior dimensions Height x Width x Depth	mm	Unit 246 × 840 × 840 Panel 35 × 950 × 950	640 × 800 × 290	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	UNIT 22 PANEL 5.5	43	
Refrigerant equipment Compressor type & Q'ty		-	5CS130XG04 × 1	
Starting method		_	Direct line start	
Refrigerant oil	e	_	0.48 RB68A	
Heat exchanger		Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1	
Motor <starting method=""></starting>	W	50 < Direct line start >	45 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:20 Hi:18 Me:16 Lo:14	40	
Available static pressure	Pa	0	_	
Outdoor air intake		Possible	_	
Air filter, Q'ty		Pocket plastic net x 1 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
nsulation (noise & heat)		Polyurethane form	_	
Electric heater	w		_	
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line: I/U φ 6.35 (1/4") Pipe φ		
Refrigerant piping size	mm		$\phi$ 12.7 (1/2") x 0.8 $\phi$ 12.7 (1/2")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.30m		
Vertical height difference between outdoor unit and indoor unit		Max.20m (Outdoor unit is higher) Max.20m (Outdoor unit is lower)	※1.See page 154	
Refrigerant Quantity		R410A 1.4kg in outdoor unit (incl.	the amount for the piping of : 15m)	
Drain pump		Built-in Drain pump	——————————————————————————————————————	
Drain		Hose Connectable with VP20	Holes size φ20 x 5pcs	
Insulation for piping			Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Drain elbow, Drain hole grommet	
Statiualu Accessories		Woulding Kit, Drain 1105e	Drain elbow, Drain note grommet	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz. (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT60ZIXVD			
		Indoor unit FDT60VD	Outdoor unit SRC60ZIX-S		
Item	$\overline{}$	Panel <b>T-PSA-3AW-E</b>			
Power source			220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	5.6 [ 2.8 (Min.) ~ 6.3 (Max.)]	6.7 [ 3.1 (Min.)~7.1 (Max.)]		
Power consumption	kW	1.57	1.85		
Running current	Α	7.0 / 7.2	8.2 / 8.7		
Power factor	%	98 / 99	98 / 97		
Inrush current	Α	5 < Max.runniı	ng current 14 >		
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 33 Me: 31 Lo: 30	48		
Exterior dimensions		Unit 246 × 840 × 840			
Height x Width x Depth	mm	Panel 35 × 950 × 950	640 × 800 × 290		
Exterior appearance		Plaster White	Stucco White		
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 24 PANEL 5.5	43		
Refrigerant equipment			ECC120VC04 1		
Compressor type & Q'ty		_	5CS130XG04 × 1		
Starting method		<del>-</del>	Direct line start		
Refrigerant oil	l e	_	0.48 RB68A		
Heat exchanger		Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control		<del>-</del>	Electronic expansion valve		
Air handling equipment		Turbo fan x 1	Duan allow form 1		
Fan type & Q'ty		Turbo tan x T	Propeller fan × 1		
Motor <starting method=""></starting>	W	50 < Direct line start >	45 < Direct line start >		
Air flow (Standard)	CMM	P-Hi: 28 Hi: 18 Me: 16 Lo: 14	40		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	w	_	_		
Remote controller		wired : RC-E4 (option) wire	eless : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics	_		
·		Overload protection for fan motor	Internal thermostat for fan motor		
Safety equipment		Frost protection thermostat	Abnormal discharge temperature protection.		
Installation data		Liquid line: I/U φ 6.35 (1/4") Pipe α	φ 6.35 (1/4") x 0.8 O/U φ 6.35 (1/4")		
Refrigerant piping size	mm		$\phi$ 12.7 (1/2") x 0.8 $\phi$ 12.7 (1/2")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.30m	· · · · · ·		
Vertical height difference between		Max.20m (Outdoor unit is higher) %1.See pag			
outdoor unit and indoor unit		Max.20m (Outdoor unit is lower)			
Refrigerant Quantity		R410A 1.4kg in outdoor unit (incl.	R410A 1.4kg in outdoor unit (incl. the amount for the piping of : 15m)		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 5pcs		
Insulation for piping		Necessary (both I	Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Drain elbow, Drain hole grommet		
	nocoured	at the following conditions	· · · · · · · · · · · · · · · · · · ·		

# Notes (1) The data are measured at the following conditions.

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

PJF000Z188 🛕

	Model	FDT71VNVD			
		Indoor unit FDT71VD	Outdoor unit FDC71VN		
Item	$\overline{}$	Panel T-PSA-3AW-E			
Power source			220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	7.1 [ 3.2 (Min.)~8.0 (Max.)]	8.0 [ 3.6 (Min.)~9.0 (Max.)]		
Power consumption	kW	1.90	2.07		
Running current	Α	8.3 / 8.8	9.0 / 9.6		
Power factor	%	99 / 98	99 / 98		
Inrush current	Α	5 < Max.runnir	ng current 17 >		
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 35 Me: 33 Lo: 31	48		
Exterior dimensions Height x Width x Depth	mm	Unit 246 × 840 × 840 Panel 35 × 950 × 950	750 × 968 × 340		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 24 PANEL 5.5	60		
Refrigerant equipment Compressor type & Q'ty		-	2YC45DXD × 1		
Starting method		_	Direct line start		
Refrigerant oil	e	_	0.65 FVC50K		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1		
Motor <starting method=""></starting>	w	50 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:28 Hi:21 Me:19 Lo:17	Cooling: 60, Heating: 50		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	w		20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	,		
Room temperature control		Thermostat by electronics			
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		·	b 9.52 (3/8") x 0.8 O/U φ 9.52 (3/8")		
Refrigerant piping size	mm		$\phi$ 15.88 (5/8") x 1.0 $\phi$ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154		
Refrigerant Quantity		R410A 2.95kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs		
Insulation for piping		Necessary (both L	Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose			

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT100VNVD			
		Indoor unit FDT100VD	Outdoor unit FDC100VN		
Item	$\overline{}$	Panel T-PSA-3AW-E			
Power source			220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	10.0 [ 4.0 (Min.)~11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]		
Power consumption	kW	2.76	2.74		
Running current	Α	12.1 / 12.7	12.0 / 12.6		
Power factor	%	99	99		
Inrush current	Α	5 < Max.runnir	ng current 24 >		
Sound Pressure Level	dB(A)	P-Hi: 51 Hi: 40 Me: 37 Lo: 35	49		
Exterior dimensions Height x Width x Depth	mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	845×970×370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 27 PANEL 5.5	81		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1		
Starting method		_	Direct line start		
Refrigerant oil	l	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1		
Motor <starting method=""></starting>	w	140 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi: 37 Hi: 27 Me: 24 Lo: 20	Cooling: 75, Heating: 73		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
nsulation (noise & heat)		Polyurethane form			
Electric heater	w	=	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics	— (-1)		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		Liquid line: I/U φ 9.52 (3/8") Pipe α	φ 9.52 (3/8") x 0.8 O/U φ 9.52 (3/8")		
Refrigerant piping size	mm -		b 15.88 (5/8") x 1.0 φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs		
Insulation for piping		Necessary (both L	Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Edging		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT100VSVD			
		Indoor unit FDT100VD	Outdoor unit FDC100VS		
Item	$\overline{}$	Panel T-PSA-3AW-E			
Power source			380-415V 3N~50Hz / 380V 3N~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	10.0 [ 4.0 (Min.) ~ 11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]		
Power consumption	kW	2.76	2.74		
Running current	Α	4.2 / 4.4	4.2 / 4.4		
Power factor	%	95 / 91	94 / 95		
Inrush current	Α	5 < Max.runnir	ng current 15 >		
Sound Pressure Level	dB(A)	P-Hi:51 Hi:40 Me:37 Lo:35	49		
Exterior dimensions Height x Width x Depth	mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	845 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 27 PANEL 5.5	83		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1		
Starting method		_	Direct line start		
Refrigerant oil	l	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1		
Motor <starting method=""></starting>	w	140 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi: 37 Hi: 27 Me: 24 Lo: 20	Cooling: 75, Heating: 73		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )		
nsulation (noise & heat)		Polyurethane form	_		
Electric heater	w	<del>-</del>	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		Liquid line : I/U φ 9.52 (3/8") Pipe φ	φ 9.52 (3/8") x 0.8 O/U φ 9.52 (3/8")		
Refrigerant piping size	mm	Gas line : φ 15.88 (5/8") φ	φ 15.88 (5/8") x 1.0 φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs		
Insulation for piping		Necessary (both L	iquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Edging		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT125VNVD		
		Indoor unit FDT125VD	Outdoor unit FDC125VN	
Item		Panel T-PSA-3AW-E		
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.)~16.0 (Max.)]	
Power consumption	kW	4.05	3.77	
Running current	Α	17.7 / 18.6	16.6 / 17.3	
Power factor	%	99	99	
Inrush current	Α	5 < Max.runnir	ng current 24 >	
Sound Pressure Level	dB(A)	P-Hi:51 Hi:42 Me:40 Lo:37	Cooling: 50 Heating: 51	
Exterior dimensions	, ,	Unit 298 × 840 × 840		
Height x Width x Depth	mm	Panel 35 × 950 × 950	845 × 970 × 370	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	UNIT 27 PANEL 5.5	81	
Refrigerant equipment	9	5 2 / WILL 5.5	-	
Compressor type & Q'ty		_	RMT5126MDE2 × 1	
Starting method		_	Direct line start	
Refrigerant oil	l e	<del>-</del>	0.9 M-MA68	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment		T 1 4	D    1	
Fan type & Q'ty		Turbo fan × 1	Propeller fan x 1	
Motor <starting method=""></starting>	w	140 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	P-Hi: 37 Hi: 30 Me: 27 Lo: 23	Cooling: 75, Heating: 73	
Available static pressure	Pa	0	_	
Outdoor air intake		Possible	_	
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form		
Electric heater	w		20 (Crank case heater)	
Remote controller		wired : BC-F4 (option) wire	eless : RCN-T-36W-E (option)	
Room temperature control		Thermostat by electronics		
noom temperature control		Overload protection for fan motor	Internal thermostat for fan motor	
Safety equipment		Frost protection thermostat	Abnormal discharge temperature protection.	
Installation data			$\phi$ 9.52 (3/8") x 0.8 O/U $\phi$ 9.52 (3/8")	
Installation data Refrigerant piping size	mm		b 15.88 (5/8") x 1.0  φ 15.88 (5/8")	
Connecting method		Gas line : φ 15.88 (5/8 ) φ Flare piping	7 15.88 (5/8") x 1.0 φ 15.88 (5/8")  Flare piping	
			l idie bibilig	
Refrigerant line (one way) length		Max.50m	*1.See page 154	
Vertical height difference between outdoor unit and indoor unit		maneem (eatable and is nighter)		
		Max.15m (Outdoor unit is lower)  R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)		
Refrigerant Quantity			the amount for the piping of : 30m)	
Drain pump		Built-in Drain pump		
Drain		Hose Connectable with VP20	Holes size φ 20 x 3pcs	
Insulation for piping			_iquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Edging	

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT125VSVD			
		Indoor unit FDT125VD	Outdoor unit FDC125VS		
Item	$\overline{}$	Panel <b>T-PSA-3AW-E</b>			
Power source			380-415V 3N~50Hz / 380V 3N~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	12.5 [ 5.0 (Min.) ~ 14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]		
Power consumption	kW	4.05	3.77		
Running current	Α	5.9 / 6.3	5.5 / 5.9		
Power factor	%	99 / 98	99 / 97		
Inrush current	Α	5 < Max.runnir	ng current 15 >		
Sound Pressure Level	dB(A)	P-Hi:51 Hi:42 Me:40 Lo:37	Cooling: 50 Heating: 51		
Exterior dimensions Height x Width x Depth	mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	845 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 27 PANEL 5.5	83		
Refrigerant equipment Compressor type & Q'ty		_	RMT5126MDE3 × 1		
Starting method		_	Direct line start		
Refrigerant oil	e	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1		
Motor <starting method=""></starting>	w	140 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi: 37 Hi: 30 Me: 27 Lo: 23	Cooling: 75, Heating: 73		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve(for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	w	<del>-</del>	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics	— (APP - 17)		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		Liquid line: I/U φ 9.52 (3/8") Pipe α	φ 9.52 (3/8") x 0.8 O/U φ 9.52 (3/8")		
Refrigerant piping size	mm		b 15.88 (5/8") x 1.0 φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs		
Insulation for piping		Necessary (both L	Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Edging		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT140VNVD			
		Indoor unit FDT140VD	Outdoor unit FDC140VN		
Item	$\overline{}$	Panel <b>T-PSA-3AW-E</b>			
Power source			220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]		
Power consumption	kW	4.98	4.57		
Running current	Α	22.0 / 23.0	20.2 / 21.2		
Power factor	%	98	98		
Inrush current	Α	5 < Max.runnir	ng current 24 >		
Sound Pressure Level	dB(A)	P-Hi:51 Hi:43 Me:41 Lo:38	51		
Exterior dimensions Height x Width x Depth	mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	845 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 27 PANEL 5.5	81		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1		
Starting method		_	Direct line start		
Refrigerant oil	e l	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		<u> </u>	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1		
Motor <starting method=""></starting>	w	140 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	CMM	P-Hi: 37 Hi: 30 Me: 27 Lo: 23	Cooling: 75, Heating: 73		
Available static pressure	Pa	0			
Outdoor air intake	- u	Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form			
Electric heater	w	- Olyarethane form	20 (Crank case heater)		
Remote controller		wired : RC-F4 (option) wire	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics			
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		<u> </u>	φ 9.52 (3/8") x 0.8 O/U φ 9.52 (3/8")		
Refrigerant piping size	mm		b 15.88 (5/8") x 1.0 φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m	a b.u.a		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Drain pump		Built-in Drain pump			
Drain		Hose Connectable with VP20	Holes size <i>ϕ</i> 20 x 3pcs		
Insulation for piping		Necessary (both L	Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Edging		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT140VSVD			
		Indoor unit FDT140VD	Outdoor unit FDC140VS		
Item		Panel <b>T-PSA-3AW-E</b>			
Power source			380-415V 3N~50Hz / 380V 3N~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]		
Power consumption	kW	4.98	4.57		
Running current	Α	7.4 / 7.8	6.7 / 7.4		
Power factor	%	97	98 / 94		
Inrush current	Α	5 < Max.runnir	ng current 15 >		
Sound Pressure Level	dB(A)	P-Hi:51 Hi:43 Me:41 Lo:38	51		
Exterior dimensions	. ,	Unit 298 × 840 × 840			
Height x Width x Depth	mm	Panel 35 × 950 × 950	845 × 970 × 370		
Exterior appearance		Plaster White	Stucco White		
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 27 PANEL 5.5	83		
Refrigerant equipment	9	01111 E7 1711EE 0.0			
Compressor type & Q'ty		_	RMT5126MDE3 × 1		
Starting method		<del>-</del>	Direct line start		
Refrigerant oil	l	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment		Turbo fan × 1	Propeller fan × 1		
Fan type & Q'ty			· ·		
Motor <starting method=""></starting>	W	140 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	CMM	P-Hi:37 Hi:30 Me:27 Lo:23	Cooling: 75, Heating: 73		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W	_	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data			$\phi$ 9.52 (3/8") x 0.8 O/U $\phi$ 9.52 (3/8")		
Installation data Refrigerant piping size	mm		φ 15.88 (5/8") x 1.0 φ 15.88 (5/8")		
Connecting method	<del>                                     </del>	Gas line : φ 15.88 (5/8°) φ Flare piping	φ 15.88 (5/8") x 1.0 φ 15.88 (5/8")  Flare piping		
	<del>                                     </del>		I rate hibitig		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) %1.See page 154 Max.15m (Outdoor unit is lower)			
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs		
Insulation for piping		Necessary (both L	Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Edging		
	nocoured	at the following conditions			

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.


(b) Twin type

# Adapted to **RoHS** directive

	Model FDT71VNPVD		
		Indoor unit FDT40VD (2 units)	Outdoor unit FDC71VN
Item		Panel <b>T-PSA-3AW-E</b>	
Power source			220-240V~50Hz / 220V~60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	7.1 [ 3.2 (Min.)~8.0 (Max.)]	8.0 [ 3.6 (Min.)~9.0 (Max.)]
Power consumption	kW	1.85	1.99
Running current	Α	8.0 / 8.6	8.7 / 9.1
Power factor	%	99 / 98	99
Inrush current	Α	5 < Max.runnir	ng current 17 >
Sound Pressure Level	dB(A)	P-Hi:39 Hi:33 Me:31 Lo:30	48
Exterior dimensions Height x Width x Depth	mm	Unit 246 × 840 × 840 Panel 35 × 950 × 950	750 × 968 × 340
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent
Net weight	kg	UNIT 22 PANEL 5.5	60
Refrigerant equipment Compressor type & Q'ty		-	2YC45DXD × 1
Starting method		-	Direct line start
Refrigerant oil	l	-	0.65 FVC50K
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Refrigerant control		_	Electronic expansion valve
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1
Motor <starting method=""></starting>	W	50 < Direct line start >	86 < Direct line start >
Air flow (Standard)	СММ	P-Hi: 20 Hi: 18 Me: 16 Lo: 14	Cooling: 60, Heating: 50
Available static pressure	Pa	0	_
Outdoor air intake		Possible	_
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	-
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)
nsulation (noise & heat)		Polyurethane form	_
Electric heater	W	-	20 (Crank case heater)
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)
Room temperature control		Thermostat by electronics	_
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.
nstallation data	mm	Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") γ	x 0.8 ① φ 9.52 (3/8") x 0.8 O/U φ 9.52 (3/8")
Refrigerant piping size	111111	Gas line : I/U φ 12.7 (1/2") ② φ 12.7 (1/2") >	c 0.8 ① φ 15.88 (5/8") x 1.0 O/U φ 15.88 (5/8")
Connecting method		Flare piping	Flare piping
Refrigerant line (one way) length		Max.50m	
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154
Refrigerant Quantity		R410A 2.95kg in outdoor unit (incl.	the amount for the piping of : 30m)
Drain pump		Built-in Drain pump	_
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs
Insulation for piping		Necessary (both L	Liquid & Gas lines)
Standard Accessories		Mounting kit, Drain hose	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature. (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
- (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch ~ I/U (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

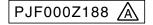

Model		FDT100VNPVD			
	Ī	Indoor unit FDT50VD (2 units)	Outdoor unit FDC100VN		
Item		Panel T-PSA-3AW-E			
Power source			220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	10.0 [ 4.0 (Min.)~11.2 (Max.)]	11.2 [ 4.0 (Min.)~12.5 (Max.)]		
Power consumption	kW	2.94	3.09		
Running current	Α	12.9 / 13.7	13.6 / 14.2		
Power factor	%	99 / 98	99		
Inrush current	Α	5 < Max.runnir	ng current 24 >		
Sound Pressure Level	dB(A)	P-Hi:39 Hi:33 Me:31 Lo:30	49		
Exterior dimensions		Unit 246 × 840 × 840			
Height x Width x Depth	mm	Panel 35 × 950 × 950	845 × 970 × 370		
Exterior appearance		Plaster White	Stucco White		
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 22 PANEL 5.5	81		
Refrigerant equipment					
Compressor type & Q'ty		_	RMT5126MDE2 × 1		
Starting method		_	Direct line start		
Refrigerant oil	l e	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve		
Air handling equipment			Electronic expansion varve		
Fan type & Q'ty		Turbo fan x 1	Propeller fan x 1		
Motor <starting method=""></starting>	w	50 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	CMM	P-Hi: 20 Hi: 18 Me: 16 Lo: 14	Cooling: 75, Heating: 73		
Available static pressure	Pa	0			
Outdoor air intake	"	Possible	_		
Air filter, Q'ty		Pocket plastic net × 1(Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )		
Insulation (noise & heat)		Polyurethane form			
Electric heater	w	Folydrethalle form	20 (Crank case heater)		
Remote controller	V V	wired : RC-E4 (option) wire	,		
		***	less . non-1-30W-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Overload protection for fan motor  Frost protection thermostat	Internal thermostat for fan motor		
		·	Abnormal discharge temperature protection.		
Installation data Refrigerant piping size	mm	Liquid line: I/U \( \phi 6.35 \) (1/4") ② \( \phi 9.52 \) (3/8") \( \text{Cool line} \) : I/I \( \phi 4.12.7 \) (1/2") \( \text{2.7 (1/2")} \)			
			( 0.8 ① φ 15.88 (5/8") x 1.0 O/U φ 15.88 (5/8")		
Connecting method	<del>                                     </del>	Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m	 *1.See page 154		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	жт.эее рауе тэ <del>4</del>		
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit		
Drain pump		Built-in Drain pump			
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 x 3pcs		
	1	Nananani /bath I	iquid 9 Cap lines)		
Insulation for piping		Necessary (both L	iquid & Gas imes)		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature. (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U
  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT100	FDT100VSPVD		
	L	Indoor unit FDT50VD (2 units)	Outdoor unit FDC100VS		
Item		Panel T-PSA-3AW-E			
Power source			380-415V 3N~50Hz / 380V 3N~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	10.0 [ 4.0 (Min.)~11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]		
Power consumption	kW	2.94	3.09		
Running current	Α	4.3 / 4.6	4.5 / 4.8		
Power factor	%	99 / 97	99 / 98		
Inrush current	Α	5 < Max.runnir	ng current 15 >		
Sound Pressure Level	dB(A)	P-Hi: 39 Hi: 33 Me: 31 Lo: 30	49		
Exterior dimensions		Unit 246 × 840 × 840			
Height x Width x Depth	mm	Panel 35 × 950 × 950	845×970×370		
Exterior appearance		Plaster White	Stucco White		
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 22 PANEL 5.5	83		
Refrigerant equipment		_	RMT5126MDE3 × 1		
Compressor type & Q'ty			B: 11: 1		
Starting method			Direct line start		
Refrigerant oil	l		0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		<del>-</del>	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1		
Motor <starting method=""></starting>	w	50 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi: 20 Hi: 18 Me: 16 Lo: 14	Cooling: 75, Heating: 73		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form			
Electric heater	w	<del>-</del>	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		Liquid line : I/U $\phi$ 6.35 (1/4") ② $\phi$ 9.52 (3/8") ×			
Installation data Refrigerant piping size	mm		$< 0.8 \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$		
Connecting method		Gas line : I/U φ 12.7 (1/2") ⊗ φ 12.7 (1/2") × Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m	Ι ιαιε ριριίια		
, .,			 *1.See page 154		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	. 1.0ee раус 104		
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size φ 20 × 3pcs		
Insulation for piping		Necessary (both L	Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Edging		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C 19°C		35°C	24°C
Heating	20	)°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

_		FDT125VNPVD		
		Indoor unit FDT60VD (2 units)	Outdoor unit FDC125VN	
Item	$\overline{}$	Panel <b>T-PSA-3AW-E</b>		
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.)~16.0 (Max.)]	
Power consumption	kW	3.95	3.70	
Running current	Α	17.7 / 18.5	16.6 / 17.3	
Power factor	%	97	97	
Inrush current	Α	5 < Max.runnin	ng current 24 >	
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 33 Me: 31 Lo: 30	Cooling: 50 Heating: 51	
Exterior dimensions Height x Width x Depth	mm	Unit 246 × 840 × 840 Panel 35 × 950 × 950	845×970×370	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	UNIT 24 PANEL 5.5	81	
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1	
Starting method		_	Direct line start	
Refrigerant oil	e e	_	0.9 M-MA68	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1	
Motor <starting method=""></starting>	W	50 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	P-Hi: 28 Hi: 18 Me: 16 Lo: 14	Cooling: 75, Heating: 73	
Available static pressure	Pa	0		
Outdoor air intake		Possible		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	<del>-</del>	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form		
Electric heater	w	-	20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) wirel	,	
Room temperature control		Thermostat by electronics		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection	
Installation data Refrigerant piping size	mm —	Liquid line : I/U $\phi$ 6.35 (1/4") ② $\phi$ 9.52 (3/8") × Gas line : I/U $\phi$ 12.7 (1/2") ② $\phi$ 12.7 (1/2") ×	0.8 ① φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8") 0.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m	1, 3	
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154	
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit	
Drain pump		Built-in Drain pump		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs	
Insulation for piping		Necessary (both L		
		. recessary (both E	1	

` '				
Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber. During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDT125VSPVD			
		Indoor unit FDT60VD (2 units)	Outdoor unit FDC125VS		
Item		Panel T-PSA-3AW-E			
Power source			380-415V 3N~50Hz / 380V 3N~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]		
Power consumption	kW	3.95	3.70		
Running current	Α	5.9 / 6.2	5.5 / 5.8		
Power factor	%	97	97		
Inrush current	Α	5 < Max.runnir	ng current 15 >		
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 33 Me: 31 Lo: 30	Cooling: 50 Heating: 51		
Exterior dimensions Height x Width x Depth	mm	Unit 246 × 840 × 840 Panel 35 × 950 × 950	845 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 24 PANEL 5.5	83		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1		
Starting method		_	Direct line start		
Refrigerant oil	e	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1		
Motor <starting method=""></starting>	w	50 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi: 28 Hi: 18 Me: 16 Lo: 14	Cooling: 75, Heating: 73		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form			
Electric heater	w	=	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics			
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") ×			
Refrigerant piping size	mm		c 0.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154		
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs		
Insulation for piping		Necessary (both L	Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Edging		


Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	)°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

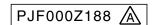

Model		FDT140VNPVD		
		Indoor unit FDT71VD (2 units)	Outdoor unit FDC140VN	
Item	$\overline{}$	Panel T-PSA-3AW-E		
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]	
Power consumption	kW	4.51	4.58	
Running current	Α	19.8 / 20.7	20.1 / 21.0	
Power factor	%	99	99	
Inrush current	Α	5 < Max.runnir	ng current 24 >	
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 35 Me: 33 Lo: 31	51	
Exterior dimensions		Unit 246 × 840 × 840		
Height x Width x Depth	mm	Panel 35 × 950 × 950	845 × 970 × 370	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	UNIT 24 PANEL 5.5	81	
Refrigerant equipment Compressor type & Q'ty		_	RMT5126MDE2 × 1	
Starting method			Direct line start	
Refrigerant oil	e l	<del>_</del>	0.9 M-MA68	
	l e	Laurentin 9 inner are available		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1	
Motor <starting method=""></starting>	W	50 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	CMM	P-Hi: 28 Hi: 21 Me: 19 Lo: 17	Cooling: 75, Heating: 73	
Available static pressure	Pa	0	_	
Outdoor air intake		Possible	_	
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form	_	
Electric heater	W	_	20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) wire	lless : RCN-T-36W-E (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line : I/U φ 9.52 (3/8") ② φ 9.52 (3/8") >		
Refrigerant piping size	mm -		× 1.0 ① $\phi$ 15.88 (5/8") × 1.0 O/U $\phi$ 15.88 (5/8")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between		Max.30m (Outdoor unit is higher)	*1.See page 154	
outdoor unit and indoor unit		Max.15m (Outdoor unit is lower)		
Refrigerant Quantity			e piping length of 30m) Outdoor unit	
Drain pump		Built-in Drain pump		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs	
Insulation for piping			Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Edging	
	<u> </u>	at the following conditions	199	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT140VSPVD			
		Indoor unit FDT71VD (2 units)	Outdoor unit FDC140VS		
Item	$\overline{}$	Panel T-PSA-3AW-E			
Power source			380-415V 3N~50Hz / 380V 3N~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]		
Power consumption	kW	4.51	4.58		
Running current	Α	6.7 / 7.1	6.7 / 7.1		
Power factor	%	97	99 / 98		
Inrush current	Α	5 < Max.runnir	ng current 15 >		
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 35 Me: 33 Lo: 31	51		
Exterior dimensions		Unit 246 × 840 × 840			
Height x Width x Depth	mm	Panel 35 × 950 × 950	845 × 970 × 370		
Exterior appearance		Plaster White	Stucco White		
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 24 PANEL 5.5	83		
Refrigerant equipment		_	RMT5126MDE3 × 1		
Compressor type & Q'ty Starting method		_	Direct line start		
Refrigerant oil	e	_	0.9 M-MA68		
Heat exchanger	L L	Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		Louver in a niner grooved tabling	Electronic expansion valve		
	<u> </u>		Electronic expansion vaive		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1		
Motor <starting method=""></starting>	W	50 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	CMM	P-Hi: 28 Hi: 21 Me: 19 Lo: 17	Cooling: 75, Heating: 73		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	-		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W	_	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		Liquid line: I/U φ 9.52 (3/8") ② φ 9.52 (3/8") >			
Refrigerant piping size	mm		$\times$ 1.0 ① $\phi$ 15.88 (5/8") $\times$ 1.0 O/U $\phi$ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m	1		
Vertical height difference between		Max.30m (Outdoor unit is higher)	*1.See page 154		
outdoor unit and indoor unit			· -		
Refrigerant Quantity			e piping length of 30m) Outdoor unit		
Drain pump		Built-in Drain pump			
Drain Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs		
Insulation for piping			Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Edging		
	<u> </u>	Lat the following conditions			

# Notes (1) The data are measured at the following conditions.

,				
Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

During operation these value are somewhat higher due to ambient temperature.

- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT200VSPVD			
	Ī	Indoor unit FDT100VD (2 units)	Outdoor unit FDC200VS		
Item		Panel T-PSA-3AW-E			
Power source			380-415V 3N~50Hz / 380V 3N~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	20.0 [ 7.0 (Min.)~22.4 (Max.)]	22.4 [ 7.6 (Min.)~25.0 (Max.)]		
Power consumption	kW	6.58	6.02		
Running current	Α	9.9 / 10.6	9.1 / 9.8		
Power factor	%	96 / 94	95 / 93		
Inrush current	Α	5 < Max.runnir	ng current 19 >		
Sound Pressure Level	dB(A)	P-Hi:51 Hi:40 Me:37 Lo:35	57		
Exterior dimensions Height x Width x Depth	mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	1,300 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 27 PANEL 5.5	122		
Refrigerant equipment Compressor type & Q'ty	5	_	GTC5150ND70K × 1		
Starting method		_	Direct line start		
Refrigerant oil	Q.	_	1.45 M-MA32R		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 2		
Motor <starting method=""></starting>	W	140 < Direct line start >	86 × 2 < Direct line start >		
Air flow (Standard)	СММ	P-Hi: 37 Hi: 27 Me: 24 Lo: 20	Cooling: 150, Heating: 145		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W	=	33 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics	- Var a /		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		Liquid line : I/U φ 9.52 (3/8") ② φ 9.52 (3/8") ×	0.8 ① φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")		
Refrigerant piping size	mm		$\times$ 1.0 ① $\phi$ 22.22 (7/8") $\times$ 1.6 O/U $\phi$ 22.22 (7/8")		
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing		
Refrigerant line (one way) length		Max.70m	·		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154		
Refrigerant Quantity		R410A 5.4kg (Pre-charged up to the	e piping length of 30m) Outdoor unit		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size φ 20 × 3pcs		
Insulation for piping		Necessary (both L	iquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging		

· ·						
	Item	Indoor air te	emperature	Outdoor air temperatur		
	Operation	DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
	Heating	20	°C	7°C	6°C	

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WB1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT250VSPVD			
	Ī	Indoor unit FDT125VD (2 units)	Outdoor unit FDC250VS		
Item		Panel T-PSA-3AW-E			
Power source			380-415V 3N~50Hz / 380V 3N~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	25.0 [ 10.0 (Min.)~28.0 (Max.)]	28.0 [ 9.5 (Min.)~31.5 (Max.)]		
Power consumption	kW	8.30	7.75		
Running current	Α	12.4 / 13.0	11.8 / 12.3		
Power factor	%	97	95 / 96		
Inrush current	Α	5 < Max.runnir	ng current 22 >		
Sound Pressure Level	dB(A)	P-Hi:51 Hi:42 Me:40 Lo:37	Cooling: 57 Heating: 58		
Exterior dimensions Height x Width x Depth	mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	1,505 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 27 PANEL 5.5	140		
Refrigerant equipment Compressor type & Q'ty	_	-	GTC5150ND70K × 1		
Starting method		_	Direct line start		
Refrigerant oil	Q.	_	1.45 M-MA32R		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 2		
Motor <starting method=""></starting>	W	140 < Direct line start >	86 × 2 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:37 Hi:30 Me:27 Lo:23	Cooling: 150, Heating: 145		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W	=	33 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		Liquid line : I/U φ 9.52 (3/8") ② φ 9.52 (3/8") ×	c 0.8 ① φ 12.7 (1/2") × 0.8 O/U φ 12.7 (1/2")		
Refrigerant piping size	mm		× 1.0 ① φ 22.22 (7/8") × 1.6 O/U φ 22.22 (7/8")		
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing		
Refrigerant line (one way) length		Max.70m	·		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154		
Refrigerant Quantity		R410A 7.2kg (Pre-charged up to the	e piping length of 30m) Outdoor unit		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size φ 20 × 3pcs		
Insulation for piping		Necessary (both L	Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging		

<u>-</u>						
Item	Indoor air t	emperature	Outdoor air	temperature		
Operation	DB	WB	DB	WB		
Cooling	27°C	19°C	35°C	24°C		
Heating	20°C		7°C	6°C		

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature. (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WB1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

(c) Triple type Adapted to **RoHS** directive

Model		del FDT140VNTVD			
		Indoor unit FDT50VD (3 units)	Outdoor unit FDC140VN		
Item		Panel T-PSA-3AW-E			
Power source			220-240V~50Hz / 220V~60Hz		
Operation data	Cooling		Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]		
Power consumption	kW	4.65	4.63		
Running current	Α	20.8 / 22.1	20.3 / 21.2		
Power factor	%	97 / 96	99		
Inrush current	Α	5 < Max.runnir	ng current 24 >		
Sound Pressure Level	dB(A)	P-Hi:39 Hi:33 Me:31 Lo:30	51		
Exterior dimensions Height x Width x Depth	mm	Unit 246 × 840 × 840 Panel 35 × 950 × 950	845 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	UNIT 22 PANEL 5.5	81		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1		
Starting method		_	Direct line start		
Refrigerant oil	e	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1		
Motor <starting method=""> V</starting>		50 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi: 20 Hi: 18 Me: 16 Lo: 14	Cooling: 75, Heating: 73		
Available static pressure	Pa	0	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
nsulation (noise & heat)		Polyurethane form	_		
Electric heater	W	_	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
nstallation data	mm	Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") ×			
Refrigerant piping size			c 0.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit	maties in (earlies)				
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the piping length of 30m) Outdoor unit			
Orain pump		Built-in Drain pump —			
Drain	Hose Connectable with VP20 Ho		Holes size $\phi$ 20 × 3pcs		
nsulation for piping		Necessary (both L	iquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Edging		

Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.


  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.

  (6) Branching pipe set "DIS-TA1"x1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

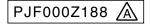

	Model	FDT140	DVSTVD
		Indoor unit FDT50VD (3 units)	Outdoor unit FDC140VS
Item		Panel <b>T-PSA-3AW-E</b>	
Power source			380-415V 3N~50Hz / 380V 3N~60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]
Power consumption	kW	4.65	4.63
Running current	Α	6.9 / 7.4	6.8 / 7.1
Power factor	%	97 / 95	98 / 99
Inrush current	Α	5 < Max.runnir	ng current 15 >
Sound Pressure Level	dB(A)	P-Hi: 39 Hi: 33 Me: 31 Lo: 30	51
Exterior dimensions Height x Width x Depth	mm	Unit 246 × 840 × 840 Panel 35 × 950 × 950	845 × 970 × 370
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent
Net weight	kg	UNIT 22 PANEL 5.5	83
Refrigerant equipment Compressor type & Q'ty	g	-	RMT5126MDE3 × 1
Starting method		_	Direct line start
Refrigerant oil	l e	_	0.9 M-MA68
Heat exchanger	1	Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Refrigerant control			Electronic expansion valve
Air handling equipment			Eloctionic expansion valve
Fan type & Q'ty		Turbo fan × 1	Propeller fan × 1
Motor <starting method=""></starting>	W	50 < Direct line start >	86 < Direct line start >
Air flow (Standard)	CMM	P-Hi: 20 Hi: 18 Me: 16 Lo: 14	Cooling: 75, Heating: 73
Available static pressure	Pa	0	<del>-</del>
Outdoor air intake		Possible	<del>-</del>
Air filter, Q'ty		Pocket plastic net x 1 (Washable)	<del>-</del>
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)
nsulation (noise & heat)		Polyurethane form	<del>-</del>
Electric heater	W	<del>-</del>	20 (Crank case heater)
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)
Room temperature control		Thermostat by electronics	<u> </u>
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.
nstallation data	mm	Liquid line : I/U $\phi$ 6.35 (1/4") $$ $$ $$ $$ $$ $$ $$ $$ $$ $$	0.8 ① φ 9.52 (3/8") × 0.8 Ο/U φ 9.52 (3/8")
Refrigerant piping size	'''''	Gas line : I/U $\phi$ 12.7 (1/2") ② $\phi$ 12.7 (1/2") ×	0.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")
Connecting method		Flare piping	Flare piping
Refrigerant line (one way) length		Max.50m	
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 155
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit
Drain pump		Built-in Drain pump	_
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs
Insulation for piping		Necessary (both L	iquid & Gas lines)
Standard Accessories		Mounting kit, Drain hose	Edging

# Notes (1) The data are measured at the following conditions.

` '		•		
Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	)°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

During operation these value are somewhat higher due to ambient temperature.

- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.

  (6) Branching pipe set "DIS-TA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch ~ I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT200VSTVD		
	L	Indoor unit FDT71VD (3 units)	Outdoor unit FDC200VS	
Item		Panel T-PSA-3AW-E		
Power source			380-415V 3N~50Hz / 380V 3N~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	20.0 [ 7.0 (Min.)~22.4 (Max.)]	22.4 [ 7.6 (Min.)~25.0 (Max.)]	
Power consumption	kW	6.49	6.12	
Running current	Α	9.7 / 10.2	9.1 / 9.6	
Power factor	%	97	97	
Inrush current	Α	5 < Max.runnir	ng current 19 >	
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 35 Me: 33 Lo: 31	57	
Exterior dimensions		Unit 246 × 840 × 840	4 000 070 070	
Height x Width x Depth	mm	Panel 35 × 950 × 950	1,300 × 970 × 370	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	UNIT 24 PANEL 5.5	122	
Refrigerant equipment Compressor type & Q'ty	<u> </u>		GTC5150ND70K × 1	
Starting method		_	Direct line start	
Refrigerant oil	e l	_	1.45 M-MA32R	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control		<u> </u>	Electronic expansion valve	
Air handling equipment			·	
Fan type & Q'ty		Turbo fan x 1	Propeller fan x 2	
Motor <starting method=""></starting>	W	50 < Direct line start >	86 × 2 < Direct line start >	
Air flow (Standard)	CMM	P-Hi: 28 Hi: 21 Me: 19 Lo: 17	Cooling: 150, Heating: 145	
Available static pressure	Pa	0	_	
Outdoor air intake		Possible	_	
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form	_	
Electric heater	W	<u> </u>	33 (Crank case heater)	
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)	
Room temperature control		Thermostat by electronics		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line: I/U φ 9.52 (3/8") ② φ 9.52 (3/8") >	l .	
Refrigerant piping size	mm -		$\times$ 1.0 ① $\phi$ 22.22 (7/8") $\times$ 1.6 O/U $\phi$ 22.22 (7/8")	
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing	
Refrigerant line (one way) length		Max.70m	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
Vertical height difference between		Max.30m (Outdoor unit is higher)	*1.See page 155	
outdoor unit and indoor unit		Max.15m (Outdoor unit is lower)	· -	
Refrigerant Quantity			e piping length of 30m) Outdoor unit	
Drain pump		Built-in Drain pump		
Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs	
Insulation for piping			Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging	
		at the following conditions	1	

# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

During operation these value are somewhat higher due to ambient temperature.

(4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

- (5) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.

  (6) Branching pipe set "DIS-TB1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch ~ I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

# (d) Double Twin type

#### Adapted to RoHS directive

	Model	FDT200	VSDVD
		Indoor unit FDT50VD (4 units)	Outdoor unit FDC200VS
Item		Panel T-PSA-3AW-E	
Power source			380-415V 3N~50Hz / 380V 3N~60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	20.0 [ 7.0 (Min.)~22.4 (Max.)]	22.4 [ 7.6 (Min.)~25.0 (Max.)]
Power consumption	kW	6.58	6.15
Running current	Α	9.8 / 10.3	9.2 / 9.6
Power factor		97	97
Inrush current	Α	5 < Max.runnir	ng current 19 >
Sound Pressure Level	dB(A)	P-Hi:39 Hi:33 Me:31 Lo:30	57
Exterior dimensions Height x Width x Depth	mm	Unit 246 × 840 × 840 Panel 35 × 950 × 950	1,300 × 970 × 370
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent
Net weight	kg	UNIT 22 PANEL 5.5	122
Refrigerant equipment Compressor type & Q'ty		-	GTC5150ND70K × 1
Starting method		_	Direct line start
Refrigerant oil	e	_	1.45 M-MA32R
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Refrigerant control		_	Electronic expansion valve
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 2
Motor <starting method=""></starting>	W	50 < Direct line start >	86 × 2 < Direct line start >
Air flow (Standard)	CMM	P-Hi: 20 Hi: 18 Me: 16 Lo: 14	Cooling: 150, Heating: 145
Available static pressure	Pa	0	_
Outdoor air intake		Possible	_
Air filter, Q'ty		Pocket plastic net x 1 (Washable)	_
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )
nsulation (noise & heat)		Polyurethane form	_
Electric heater	W	_	33 (Crank case heater)
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)
Room temperature control		Thermostat by electronics	_
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.
nstallation data		Liquid line : I/U φ 6.35 (1/4") ③② φ 9.52 (3/8") ×	0.8 ① $\phi$ 9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8")
Refrigerant piping size	mm	Gas line : I/U $\phi$ 12.7 (1/2") $3 \phi$ 12.7 × 0.8 $2 \phi$	$\phi$ 15.88 ① $\phi$ 22.22 (7/8") × 1.6 O/U $\phi$ 22.22 (7/8")
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing
Refrigerant line (one way) length		Max.70m	
Vertical height difference between outdoor unit and indoor unit	Max.30m (Outdoor unit is higher)		*1.See page 154
Refrigerant Quantity			e piping length of 30m) Outdoor unit
Drain pump		Built-in Drain pump	
Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs
Insulation for piping			iguid & Gas lines)
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging
		<u> </u>	

Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber. During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is four indoor units are combined and run together.
  (6) Branching pipe set "DIS-WB1"×1, "DIS-WA1"×2(option). Pipe ①: O/U~Branch, ②: Branch~Branch, ③: Branch~I/U
- (7) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.



Model		FDT250VSDVD		
	[	Indoor unit FDT60VD (4 units)	Outdoor unit FDC250VS	
Item		Panel T-PSA-3AW-E		
Power source			380-415V 3N~50Hz / 380V 3N~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	25.0 [ 10.0 (Min.) ~ 28.0 (Max.)]	28.0 [ 9.5 (Min.)~31.5 (Max.)]	
Power consumption	kW	8.28	7.70	
Running current	Α	12.3 / 13.0	11.5 / 12.1	
Power factor	%	97	97	
Inrush current	Α	5 < Max.runnir	ng current 22 >	
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 33 Me: 31 Lo: 30	Cooling: 57 Heating: 58	
Exterior dimensions Height x Width x Depth	mm	Unit 246 × 840 × 840 Panel 35 × 950 × 950	1,505 × 970 × 370	
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent	
Net weight	kg	UNIT 24 PANEL 5.5	140	
Refrigerant equipment Compressor type & Q'ty		_	GTC5150ND70K × 1	
Starting method		_	Direct line start	
Refrigerant oil	Q.	_	1.45 M-MA32R	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Turbo fan × 1	Propeller fan × 2	
Motor <starting method=""></starting>	W	50 < Direct line start >	86 × 2 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:28 Hi:18 Me:16 Lo:14	Cooling: 150, Heating: 145	
Available static pressure	Pa	0	_	
Outdoor air intake		Possible	_	
Air filter, Q'ty		Pocket plastic net × 1 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form	_	
Electric heater	W		33 (Crank case heater)	
Remote controller		wired : RC-E4 (option) wire	less : RCN-T-36W-E (option)	
Room temperature control		Thermostat by electronics		
Safety equipment		Overload protection for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line : I/O φ 6.35 (1/4") ③② φ 9.52 (3/8") ×	0.8 ① φ 12.7 (1/2") × 0.8 O/U φ 12.7 (1/2")	
Refrigerant piping size	mm		φ 15.88 ① φ 22.22 (7/8") × 1.6 O/U φ 22.22 (7/8")	
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing	
Refrigerant line (one way) length		Max.70m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154	
Refrigerant Quantity		R410A 7.2kg (Pre-charged up to the	e piping length of 30m) Outdoor unit	
Drain pump		Built-in Drain pump	_	
Drain		Hose Connectable with VP20	Holes size φ20 x 3pcs	
Insulation for piping		Necessary (both L	iquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz. (5) Indoor unit specifications for one unit. Capacity and operation data is four indoor units are combined and run together.
- (6) Branching pipe set "DIS-WB1"×1,"DIS-WA1"×2(option). Pipe ①: O/U ~ Branch, ②: Branch ~ Branch, ③: Branch ~ I/U (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

# (3) Ceiling suspended type (FDEN) (a) Single type


Adapted to RoHS directive

Model		FDEN4	0ZIXVD
		Indoor unit FDEN40VD	Outdoor unit SRC40ZIX-S
Item			
Power source			220-240V ~ 50Hz / 220V ~ 60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	4.0 [ 1.8 (Min.)~4.7 (Max.)]	4.5 [ 2.0 (Min.)~5.4 (Max.)]
Power consumption	kW	1.04	1.13
Running current	Α	4.7 / 4.8	5.1 / 5.3
Power factor	%	97 / 98	97
Inrush current	Α	5 < Max.runnir	ng current 12 >
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 39 Me: 38 Lo: 37	47
Exterior dimensions Height x Width x Depth	mm	210 × 1,070 × 690	640 × 800 × 290
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent
Net weight	kg	28	43
Refrigerant equipment Compressor type & Q'ty		-	5CS130XG04 × 1
Starting method		_	Direct line start
Refrigerant oil	Q.	_	0.48 RB68A
Heat exchanger		Louver fin & inner grooved tubing	M shape fin & inner grooved tubing
Refrigerant control			Electronic expansion valve
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1
Motor <starting method=""></starting>	w	25 < Direct line start >	45 < Direct line start >
Air flow (Standard)	СММ	P-Hi:13 Hi:11 Me:9 Lo:7	40
Available static pressure	Pa	0	_
Outdoor air intake		Not possible	_
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)
Insulation (noise & heat)		Polyurethane form	_
Electric heater	W	<del>-</del>	_
Remote controller		wired : RC-E4 (option) w	ireless : RCN-E1R (option)
Room temperature control		Thermostat by electronics	_
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.
Installation data		Liquid line : I/U $\phi$ 6.35 (1/4") Pipe $\phi$	6.35 (1/4") × 0.8 O/U φ 6.35 (1/4")
Refrigerant piping size	mm	Gas line : $\phi$ 12.7 (1/2") $\phi$	9 12.7 (1/2") × 0.8 φ 12.7 (1/2")
Connecting method		Flare piping	Flare piping
Refrigerant line (one way) length		Max.30m	
Vertical height difference between outdoor unit and indoor unit		Max.20m (Outdoor unit is higher) Max.20m (Outdoor unit is lower)	*1.See page 154
Refrigerant Quantity		R410A 1.4kg in outdoor unit (incl.	the amount for the piping of : 15m)
Drain pump			
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 5pcs
Insulation for piping		Necessary (both L	Liquid & Gas lines)
Standard Accessories		Mounting kit, Drain hose	Drain elbow, Drain hole grommet

Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
  - During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

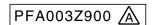

Model		FDEN50ZIXVD		
		Indoor unit <b>FDEN50VD</b>	Outdoor unit SRC50ZIX-S	
Item				
Power source			220-240V ~ 50Hz / 220V ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	5.0 [ 2.2 (Min.)~5.6 (Max.)]	5.4 [ 2.5 (Min.) ~ 6.3 (Max.)]	
Power consumption	kW	1.59	1.58	
Running current	Α	7.1 / 7.5	7.0 / 7.3	
Power factor	%	97	98	
Inrush current	Α	5 < Max.runniı	ng current 14 >	
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 39 Me: 38 Lo: 37	47	
Exterior dimensions Height x Width x Depth	mm	210 × 1,070 × 690	640 × 800 × 290	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	28	43	
Refrigerant equipment Compressor type & Q'ty		_	5CS130XG04 × 1	
Starting method		_	Direct line start	
Refrigerant oil	l	_	0.48 RB68A	
Heat exchanger		Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control	– Electroni		Electronic expansion valve	
Air handling equipment			·	
Fan type & Q'ty		Centrifugal fan × 2	Propeller fan x 1	
Motor <starting method=""></starting>	W	25 < Direct line start >	45 < Direct line start >	
Air flow (Standard)	CMM	P-Hi:13 Hi:11 Me:9 Lo:7	40	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form		
Electric heater	W	<del>-</del>	_	
Remote controller		wired : RC-E4 (option) w	rireless : RCN-E1R (option)	
Room temperature control		Thermostat by electronics		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line : I/U $\phi$ 6.35 (1/4") Pipe $\phi$		
Refrigerant piping size	mm —		$\phi 12.7 (1/2") \times 0.8 \qquad \phi 12.7 (1/2")$	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.30m		
Vertical height difference between		Max.20m (Outdoor unit is higher)	*1.See page 154	
outdoor unit and indoor unit	, , , , , , , , , , , , , , , , , , ,			
Refrigerant Quantity			the amount for the piping of : 15m)	
Drain pump				
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 5pcs	
Insulation for piping			Liquid & Gas lines)	
11.3		Mounting kit, Drain hose	Drain elbow, Drain hole grommet	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	)°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDEN6	0ZIXVD
		Indoor unit FDEN60VD	Outdoor unit SRC60ZIX-S
Item			
Power source			220-240V~50Hz / 220V~60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	5.6 [ 2.8 (Min.)~6.3 (Max.)]	6.7 [ 3.1 (Min.)~7.1 (Max.)]
Power consumption	kW	1.95	2.12
Running current	Α	8.7 / 9.2	9.4 / 9.8
Power factor	%	97 / 96	98
Inrush current	Α	5 < Max.runnir	ng current 14 >
Sound Pressure Level	dB(A)	P-Hi:50 Hi:41 Me:39 Lo:38	48
Exterior dimensions Height x Width x Depth	mm	210 × 1,320 × 690	640 × 800 × 290
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent
Net weight	kg	37	43
Refrigerant equipment Compressor type & Q'ty		-	5CS130XG04 × 1
Starting method		_	Direct line start
Refrigerant oil	Q.	_	0.48 RB68A
Heat exchanger		Louver fin & inner grooved tubing	M shape fin & inner grooved tubing
Refrigerant control		_	Electronic expansion valve
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 1
Motor <starting method=""></starting>	W	20 × 2 < Direct line start >	45 < Direct line start >
Air flow (Standard)	СММ	P-Hi:22 Hi:18 Me:14 Lo:12	40
Available static pressure	Pa	0	_
Outdoor air intake		Not possible	_
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )
Insulation (noise & heat)		Polyurethane form	_
Electric heater	W	<u> </u>	_
Remote controller		wired : RC-E4 (option) w	ireless : RCN-E1R (option)
Room temperature control		Thermostat by electronics	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.
Installation data		Liquid line : I/U $\phi$ 6.35 (1/4") Pipe $\phi$	6.35 (1/4") × 0.8 O/U φ 6.35 (1/4")
Refrigerant piping size	mm		12.7 (1/2") × 0.8 φ 12.7 (1/2")
Connecting method		Flare piping	Flare piping
Refrigerant line (one way) length		Max.30m	
Vertical height difference between outdoor unit and indoor unit		Max.20m (Outdoor unit is higher) Max.20m (Outdoor unit is lower)	※1.See page 154
Refrigerant Quantity		R410A 1.4kg in outdoor unit (incl.	the amount for the piping of : 15m)
Drain pump		-	_
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 5pcs
Insulation for piping		Necessary (both L	Liquid & Gas lines)
Standard Accessories		Mounting kit, Drain hose	Drain elbow, Drain hole grommet

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDEN7	1VNVD	
		Indoor unit FDEN71VD	Outdoor unit FDC71VN	
Item				
Power source			220-240V ~ 50Hz / 220V ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	7.1 [ 3.2 (Min.)~8.0 (Max.)]	8.0 [ 3.6 (Min.)~9.0 (Max.)]	
Power consumption	kW	2.01	2.21	
Running current	Α	8.9 / 9.2	9.8 / 10.2	
Power factor	%	98 / 99	98	
Inrush current	Α	5 < Max.runnir	ng current 17 >	
Sound Pressure Level	dB(A)	P-Hi:50 Hi:41 Me:39 Lo:38	48	
Exterior dimensions Height x Width x Depth	mm	210 × 1,320 × 690	750 × 968 × 340	
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent	
Net weight	kg	37	60	
Refrigerant equipment Compressor type & Q'ty		-	2YC45DXD × 1	
Starting method		_	Direct line start	
Refrigerant oil	e	_	0.65 FVC50K	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 1	
Motor <starting method=""></starting>	W	20 × 2 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:22 Hi:18 Me:14 Lo:12	Cooling: 60, Heating: 50	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )	
nsulation (noise & heat)		Polyurethane form	_	
Electric heater	W	<del>-</del>	20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) w	ireless : RCN-E1R (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line : I/U $\phi$ 9.52 (3/8") Pipe $\phi$	9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8")	
Refrigerant piping size	mm	Gas line : $\phi$ 15.88 (5/8") $\phi$	15.88 (5/8") × 1.0 φ 15.88 (5/8")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	**1.See page 154	
Refrigerant Quantity		R410A 2.95kg in outdoor unit (incl.	the amount for the piping of : 30m)	
Drain pump			_	
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs	
Insulation for piping		Necessary (both L	Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	_	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDEN100VNVD		
		Indoor unit FDEN100VD	Outdoor unit FDC100VN	
Item				
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	10.0 [ 4.0 (Min.)~11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]	
Power consumption	kW	2.85	2.97	
Running current	Α	12.5 / 13.1	13.0 / 13.6	
Power factor	%	99	99	
Inrush current	Α	5 < Max.runnir	ng current 24 >	
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 44 Me: 41 Lo: 39	49	
Exterior dimensions Height x Width x Depth	mm	250 × 1,620 × 690	845 × 970 × 370	
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent	
Net weight	kg	49	81	
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1	
Starting method		_	Direct line start	
Refrigerant oil	l	_	0.9 M-MA68	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan x 1	
Motor <starting method=""></starting>	W	30 × 2 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:28 Hi:26 Me:23 Lo:21	Cooling: 75, Heating: 73	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form		
Electric heater	W	<del>-</del>	20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) w	ireless : RCN-E1R (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line : I/U $\phi$ 9.52 (3/8") Pipe $\phi$	9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8")	
Refrigerant piping size	mm		15.88 (5/8") × 1.0	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154	
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)	
Drain pump			_	
Drain .		Hose Connectable with VP20	Holes size φ20 x 3pcs	
Insulation for piping		Necessary (both I	Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Edging	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDEN100VSVD		
		Indoor unit FDEN100VD	Outdoor unit FDC100VS	
Item				
Power source			380-415V 3N~50Hz / 380V 3N~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	10.0 [ 4.0 (Min.)~11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]	
Power consumption	kW	2.85	2.97	
Running current	Α	4.2 / 4.4	4.3 / 4.6	
Power factor	%	98	99 / 98	
Inrush current	Α	5 < Max.runnir	ng current 15 >	
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 44 Me: 41 Lo: 39	49	
Exterior dimensions Height x Width x Depth	mm	250 × 1,620 × 690	845 × 970 × 370	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	49	83	
Refrigerant equipment Compressor type & Q'ty		_	RMT5126MDE3 × 1	
Starting method		_	Direct line start	
Refrigerant oil	e e	_	0.9 M-MA68	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve	
Air handling equipment			·	
Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 1	
Motor <starting method=""></starting>	W	30 × 2 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	CMM	P-Hi: 28 Hi: 26 Me: 23 Lo: 21	Cooling: 75, Heating: 73	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form	_	
Electric heater	W		20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) w	ireless : RCN-E1R (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data	mm	Liquid line : I/U $\phi$ 9.52 (3/8") Pipe $\phi$	9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8")	
Refrigerant piping size	mm	Gas line : $\phi$ 15.88 (5/8") $\phi$	0 15.88 (5/8") × 1.0 φ 15.88 (5/8")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between		Max.30m (Outdoor unit is higher)	*1.See page 154	
outdoor unit and indoor unit	i I	Max.15m (Outdoor unit is lower)	· -	
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)	
Drain pump		_	_	
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs	
Diaili				
Insulation for piping		Necessarv (both L	Liquid & Gas lines)	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDEN125VNVD		
		Indoor unit FDEN125VD	Outdoor unit FDC125VN	
Item				
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]	
Power consumption	kW	4.45	4.08	
Running current	Α	19.5 / 20.4	17.9 / 18.7	
Power factor	%	99	99	
Inrush current	Α	5 < Max.runnir	ng current 24 >	
Sound Pressure Level	dB(A)	P-Hi:50 Hi:46 Me:44 Lo:43	Cooling: 50 Heating: 51	
Exterior dimensions Height x Width x Depth	mm	250 × 1,620 × 690	845 × 970 × 370	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	49	81	
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1	
Starting method		_	Direct line start	
Refrigerant oil	l	_	0.9 M-MA68	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 1	
Motor <starting method=""></starting>	W	40 × 2 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	CMM	P-Hi: 32 Hi: 29 Me: 26 Lo: 23	Cooling: 75, Heating: 73	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form	_	
Electric heater	W	_	20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) w	ireless : RCN-E1R (option)	
Room temperature control		Thermostat by electronics	<del>-</del>	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data	mm	Liquid line : I/U $\phi$ 9.52 (3/8") Pipe $\phi$	9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")	
Refrigerant piping size	111111	Gas line : $\phi$ 15.88 (5/8") $\phi$	15.88 (5/8") × 1.0 φ 15.88 (5/8")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 154	
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)	
Drain pump		_	_	
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs	
Insulation for piping		Necessary (both L	iquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Edging	

# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

PFA003Z900 🛦

	Model	FDEN125VSVD		
		Indoor unit FDEN125VD	Outdoor unit FDC125VS	
Item				
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]	
Power consumption	kW	4.45	4.08	
Running current	Α	6.6 / 6.8	6.0 / 6.3	
Power factor	%	97 / 99	98 / 99	
Inrush current	Α	5 < Max.runnir	ng current 15 >	
Sound Pressure Level	dB(A)	P-Hi:50 Hi:46 Me:44 Lo:43	Cooling: 50 Heating: 51	
Exterior dimensions Height x Width x Depth	mm	250 × 1,620 × 690	845 × 970 × 370	
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent	
Net weight	kg	49	83	
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1	
Starting method		_	Direct line start	
Refrigerant oil	l	_	0.9 M-MA68	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 1	
Motor <starting method=""></starting>	W	40 × 2 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:32 Hi:29 Me:26 Lo:23	Cooling: 75, Heating: 73	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )	
nsulation (noise & heat)		Polyurethane form	_	
Electric heater	W	<u> </u>	20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) w	ireless : RCN-E1R (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line : I/U $\phi$ 9.52 (3/8") Pipe $\phi$	9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8")	
Refrigerant piping size	mm	Gas line : $\phi$ 15.88 (5/8") $\phi$	15.88 (5/8") × 1.0 φ 15.88 (5/8")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 154	
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)	
Drain pump		_	_	
Drain		Hose Connectable with VP20	Holes size φ 20 x 3pcs	
nsulation for piping		Necessary (both L	Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Edging	

# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

PFA003Z900 🛦

	Model	fodel FDEN140VNVD		
		Indoor unit FDEN140VD	Outdoor unit FDC140VN	
Item				
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]	
Power consumption	kW	5.80	4.92	
Running current	Α	25.2 / 26.0	21.6 / 22.6	
Power factor	%	99	99	
Inrush current	Α	5 < Max.runnir	ng current 26 >	
Sound Pressure Level	dB(A)	P-Hi:50 Hi:46 Me:44 Lo:43	51	
Exterior dimensions Height x Width x Depth	mm	250 × 1,620 × 690	845 × 970 × 370	
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent	
Net weight	kg	49	81	
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1	
Starting method		_	Direct line start	
Refrigerant oil	l	_	0.9 M-MA68	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan x 1	
Motor <starting method=""></starting>	W	40 × 2 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:32 Hi:29 Me:26 Lo:23	Cooling: 75, Heating: 73	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
nsulation (noise & heat)		Polyurethane form		
Electric heater	W		20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) w	ireless : RCN-E1R (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line : I/U $\phi$ 9.52 (3/8") Pipe $\phi$	9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8")	
Refrigerant piping size	mm		15.88 (5/8") × 1.0	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 154	
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)	
Drain pump		_	_	
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs	
Insulation for piping		Necessary (both L	Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Edging	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19℃	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDEN14	40VSVD	
		Indoor unit FDEN140VD	Outdoor unit FDC140VS	
Item				
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]	
Power consumption	kW	5.80	4.92	
Running current	Α	8.6 / 9.1	7.2 / 7.6	
Power factor	%	97	99	
Inrush current	Α	5 < Max.runnir	ng current 15 >	
Sound Pressure Level	dB(A)	P-Hi:50 Hi:46 Me:44 Lo:43	51	
Exterior dimensions Height x Width x Depth	mm	250 × 1,620 × 690	845 × 970 × 370	
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent	
Net weight	kg	49	83	
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1	
Starting method		_	Direct line start	
Refrigerant oil	e	_	0.9 M-MA68	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control		, ,	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 1	
Motor <starting method=""></starting>	w	40 × 2 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:32 Hi:29 Me:26 Lo:23	Cooling: 75, Heating: 73	
Available static pressure	Pa	0		
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form		
Electric heater	W		20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) w	ireless : RCN-E1R (option)	
Room temperature control		Thermostat by electronics		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line : I/U $\phi$ 9.52 (3/8") Pipe $\phi$	9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8")	
Refrigerant piping size	mm		ο 15.88 (5/8") × 1.0 φ 15.88 (5/8")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 154	
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)	
Orain pump		_	_	
Drain .		Hose Connectable with VP20	Holes size φ20 × 3pcs	
Insulation for piping		Necessary (both L	Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Edging	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19℃	35°C	24°C
Heating	20	)°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
  (5) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.


(b) Twin type Adapted to RoHS directive

Model		FDEN71VNPVD		
		Indoor unit FDEN40VD (2 units)	Outdoor unit <b>FDC71VN</b>	
Item				
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	7.1 [ 3.2 (Min.)~8.0 (Max.)]	8.0 [ 3.6 (Min.) ~ 9.0 (Max.)]	
Power consumption	kW	1.74	2.05	
Running current	Α	7.6 / 8.0	9.0 / 9.5	
Power factor	%	99	99 / 98	
Inrush current	Α	5 < Max.runnir	ng current 17 >	
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 39 Me: 38 Lo: 37	48	
Exterior dimensions Height x Width x Depth	mm	210 × 1,070 × 690	750 × 968 × 340	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	28	60	
Refrigerant equipment Compressor type & Q'ty		-	2YC45DXD × 1	
Starting method		_	Direct line start	
Refrigerant oil	l	_	0.65 FVC50K	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1	
Motor <starting method=""></starting>	w	25 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:13 Hi:11 Me:9 Lo:7	Cooling: 60, Heating: 50	
Available static pressure	Pa	0		
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
nsulation (noise & heat)		Polyurethane form		
Electric heater	w		20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) wi	,	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line : I/U $\phi$ 6.35 (1/4") ② $\phi$ 9.52 (3/8") ×	: 0.8 ① φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")	
Refrigerant piping size	mm —	Gas line : I/U $\phi$ 12.7 (1/2") $@\phi$ 12.7 (1/2") $×$	: 0.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154	
Refrigerant Quantity		R410A 2.95kg in outdoor unit (incl.	the amount for the piping of : 30m)	
Drain pump		`		
Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs	
Insulation for piping		Necessary (both L	, .	
Standard Accessories		Mounting kit, Drain hose	_	
		5 ,=		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
- (6) Branching pipe set "DIS-WA1"×1(option). ① : Pipe of O/U~Branch, ② : Pipe of Branch~I/U
- (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

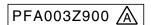

Model		FDEN100VNPVD		
	L	Indoor unit FDEN50VD (2 units)	Outdoor unit FDC100VN	
Item				
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	10.0 [ 4.0 (Min.) ~ 11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]	
Power consumption	kW	3.12	3.28	
Running current	Α	13.7 / 14.3	14.4 / 15.1	
Power factor	%	99	99	
Inrush current	Α	5 < Max.runnir	ng current 24 >	
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 39 Me: 38 Lo: 37	49	
Exterior dimensions Height x Width x Depth	mm	210 × 1,070 × 690	845 × 970 × 370	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	28	81	
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1	
Starting method		_	Direct line start	
Refrigerant oil	Q.	_	0.9 M-MA68	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve	
Air handling equipment			·	
Fan type & Q'ty		Centrifugal fan × 2	Propeller fan x 1	
Motor <starting method=""></starting>	W	25 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:13 Hi:11 Me:9 Lo:7	Cooling: 75, Heating: 73	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form	_	
Electric heater	W		20 (Crank case heater)	
Remote controller		wired : BC-F4 (option) w	ireless : RCN-E1R (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data		Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") ×		
Refrigerant piping size	mm		c 0.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")	
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m	1	
Vertical height difference between		Max.30m (Outdoor unit is higher)	*1.See page 154	
outdoor unit and indoor unit		Max.15m (Outdoor unit is Inigrier)		
Refrigerant Quantity			e piping length of 30m) Outdoor unit	
Drain pump		—		
Drain pump		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs	
Insulation for piping			Liquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Edging	
		at the following conditions	l Laging	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

- (a) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.



	Model	FDEN10	0VSPVD
		Indoor unit FDEN50VD (2 units)	Outdoor unit FDC100VS
Item			
Power source			380-415V 3N~50Hz / 380V 3N~60Hz
Operation data		Cooling	Heating
Nominal capacity	kW	10.0 [ 4.0 (Min.)~11.2 (Max.)]	11.2 [ 4.0 (Min.)~12.5 (Max.)]
Power consumption	kW	3.12	3.28
Running current	Α	4.6 / 4.8	4.8 / 5.0
Power factor	%	98	99
Inrush current	Α	5 < Max.runnir	ng current 15 >
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 39 Me: 38 Lo: 37	49
Exterior dimensions Height x Width x Depth	mm	210 × 1,070 × 690	845 × 970 × 370
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent
Net weight	kg	28	83
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1
Starting method		_	Direct line start
Refrigerant oil	e	_	0.9 M-MA68
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing
Refrigerant control		_	Electronic expansion valve
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1
Motor <starting method=""></starting>	w	25 < Direct line start >	86 < Direct line start >
Air flow (Standard)	CMM	P-Hi: 13 Hi: 11 Me: 9 Lo: 7	Cooling: 75, Heating: 73
Available static pressure	Pa	0	
Outdoor air intake		Not possible	<del>-</del>
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)
nsulation (noise & heat)		Polyurethane form	—
Electric heater	w	——————————————————————————————————————	20 (Crank case heater)
Remote controller	''	wired : RC-E4 (option) w	·
Room temperature control		Thermostat by electronics	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.
Installation data		Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") ×	
Refrigerant piping size	mm -		10.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")
Connecting method		Flare piping	Flare piping
Refrigerant line (one way) length		Max.50m	e e e e e e e e e e e e e e e e e e e
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154
Refrigerant Quantity			e piping length of 30m) Outdoor unit
Drain pump		_	
Drain		Hose Connectable with VP20	Holes size φ 20 × 3pcs
Insulation for piping		Necessary (both L	<u>'</u>
Standard Accessories		Mounting kit, Drain hose	Edging

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.

  (3) Sound pressure level indicates the value in an anechoic chamber.


  During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

  (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

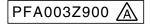

	Model	FDEN125VNPVD		
		Indoor unit FDEN60VD (2 units)	Outdoor unit FDC125VN	
Item				
Power source			220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]	
Power consumption	kW	4.23	3.83	
Running current	Α	18.5 / 19.4	16.8 / 17.6	
Power factor	%	99	99	
Inrush current	Α	5 < Max.runnin	ng current 24 >	
Sound Pressure Level	dB(A)	P-Hi:50 Hi:41 Me:39 Lo:38	Cooling: 50 Heating: 51	
Exterior dimensions Height x Width x Depth	mm	210 × 1,320 × 690	845 × 970 × 370	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	37	81	
Refrigerant equipment Compressor type & Q'ty		_	RMT5126MDE2 × 1	
Starting method		_	Direct line start	
Refrigerant oil	e	_	0.9 M-MA68	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 1	
Motor <starting method=""></starting>	W	20 × 2 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:22 Hi:18 Me:14 Lo:12	Cooling: 75, Heating: 73	
Available static pressure	Pa	0	_	
Outdoor air intake		Not possible	<del>-</del>	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Insulation (noise & heat)		Polyurethane form	_	
Electric heater	W	_	20 (Crank case heater)	
Remote controller		wired : RC-E4 (option) wi	ireless : RCN-E1R (option)	
Room temperature control		Thermostat by electronics	<del>-</del>	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
Installation data Refrigerant piping size	mm	Liquid line : I/U $\phi$ 6.35 (1/4") ② $\phi$ 9.52 (3/8") × Gas line : I/U $\phi$ 12.7 (1/2") ② $\phi$ 12.7 (1/2") ×		
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)		
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit	
Drain pump		_	—	
Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs	
Insulation for piping		Necessary (both L	• •	
Standard Accessories		Mounting kit, Drain hose	Edging	
		· · J , - · - · · · · · · · · · · · · · · · ·	· ʊ···ʊ	

` '		J		
Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C


- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

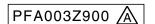

Me		FDEN12	5VSPVD		
		Indoor unit FDEN60VD (2 units)	Outdoor unit FDC125VS		
tem					
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.)~16.0 (Max.)]		
Power consumption	kW	4.23	3.83		
Running current	Α	6.2 / 6.5	5.6 / 5.9		
Power factor	%	98 / 99	99		
Inrush current	Α	5 < Max.runnin	ng current 15 >		
Sound Pressure Level	dB(A)	P-Hi:50 Hi:41 Me:39 Lo:38	Cooling: 50 Heating: 51		
Exterior dimensions Height x Width x Depth	mm	210 × 1,320 × 690	845 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
` '	ka	(0.616.9/0.2) Hear equivalent	83		
Net weight Refrigerant equipment	kg	) 3 <i>l</i>	03		
Compressor type & Q'ty		-	RMT5126MDE3 × 1		
Starting method		_	Direct line start		
Refrigerant oil	l	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 1		
Motor <starting method=""></starting>	W	20 × 2 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:22 Hi:18 Me:14 Lo:12	Cooling: 75, Heating: 73		
Available static pressure	Pa	0	_		
Outdoor air intake		Not possible	_		
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
nsulation (noise & heat)		Polyurethane form	<del>-</del>		
Electric heater	W	_	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wi	ireless : RCN-E1R (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
nstallation data	mm	Liquid line : I/U \$\phi\$ 6.35 (1/4") 2 \$\phi\$ 9.52 (3/8") ×	0.8 ① $\phi$ 9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8")		
Refrigerant piping size			0.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) %1.See page 154 Max.15m (Outdoor unit is lower)			
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit		
Orain pump		_	<u> </u>		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs		
nsulation for piping		Necessary (both L	iquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Edging		

· · · · · · · · · · · · · · · · · · ·						
Item	Indoor air t	emperature	Outdoor air	temperature		
Operation	DB WB		DB	WB		
Cooling	27°C	19°C	35°C	24°C		
Heating	20	°C	7°C	6°C		

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDEN14	0VNPVD		
		Indoor unit FDEN71VD (2 units)	Outdoor unit FDC140VN		
Item					
Power source			220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.)~16.5 (Max.)]		
Power consumption	kW	4.87	4.59		
Running current	Α	21.6 / 22.6	20.1 / 21.0		
Power factor	%	98	99		
Inrush current	Α	5 < Max.runnir	ng current 24 >		
Sound Pressure Level	dB(A)	P-Hi:50 Hi:41 Me:39 Lo:38	51		
Exterior dimensions Height x Width x Depth	mm	210 × 1,320 × 690	845 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	37	81		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1		
Starting method		-	Direct line start		
Refrigerant oil	l	-	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		-	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 1		
Motor <starting method=""></starting>	W	20 × 2 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	CMM	P-Hi:22 Hi:18 Me:14 Lo:12	Cooling: 75, Heating: 73		
Available static pressure	Pa	0	_		
Outdoor air intake		Not possible	<del>-</del>		
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W		20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) w	ireless : RCN-E1R (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data Refrigerant piping size	mm	Liquid line : I/U φ 9.52 (3/8") ② φ 9.52 (3/8") × Gas line : I/U φ 15.88 (5/8") ② φ 15.88 (5/8")	0.8 ① $\phi$ 9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8") × 1.0 ① $\phi$ 15.88 (5/8") × 1.0 O/U $\phi$ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	9 /		
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit		
Drain pump		_	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs		
Insulation for piping		Necessary (both L	iquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Edging		

# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6℃

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

During operation these value are somewhat higher due to ambient temperature.

(4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDEN140VSPVD		
		Indoor unit FDEN71VD (2 units)	Outdoor unit FDC140VS	
Item				
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]	
Power consumption	kW	4.87	4.59	
Running current	Α	7.2 / 7.6	6.7 / 7.1	
Power factor	%	98	99 / 98	
Inrush current	Α	5 < Max.runnin	g current 15 >	
Sound Pressure Level	dB(A)	P-Hi:50 Hi:41 Me:39 Lo:38	51	
Exterior dimensions Height x Width x Depth	mm	210 × 1,320 × 690	845 × 970 × 370	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	37	83	
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1	
Starting method		_	Direct line start	
Refrigerant oil	e	_	0.9 M-MA68	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 1	
Motor <starting method=""></starting>	w	20 × 2 < Direct line start >	86 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:22 Hi:18 Me:14 Lo:12	Cooling: 75, Heating: 73	
Available static pressure	Pa	0	——————————————————————————————————————	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
nsulation (noise & heat)		Polyurethane form	——————————————————————————————————————	
Electric heater	w	–	20 (Crank case heater)	
Remote controller	**	wired : RC-E4 (option) wir		
Room temperature control		Thermostat by electronics	reless . Hore-E III (option)	
ricom temperature control		Internal thermostat for fan motor	Internal thermostat for fan motor	
Safety equipment		Frost protection thermostat	Abnormal discharge temperature protection.	
Installation data		Liquid line: I/U $\phi$ 9.52 (3/8") $\bigcirc$ $\phi$ 9.52 (3/8") $\times$ 0		
Installation data Refrigerant piping size	mm —	Gas line : I/U $\phi$ 15.88 (5/8") ② $\phi$ 15.88 (5/8") ×		
Connecting method		Flare piping	Flare piping	
Refrigerant line (one way) length		гыге ріріпу Мах.50m	ι ιαι ε ριριιίι	
· , , ,			 *1.See page 154	
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)		
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	piping length of 30m) Outdoor unit	
Drain pump		-	<del>_</del>	
Drain		Hose Connectable with VP20	Holes size $\phi 20 \times 3pcs$	
Insulation for piping		Necessary (both Li	iquid & Gas lines)	
Standard Accessories		Mounting kit, Drain hose	Edging	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDEN200VSPVD				
		Indoor unit FDEN100VD (2 units)	Outdoor unit FDC200VS			
Item						
Power source			380-415V 3N~50Hz / 380V 3N~60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	20.0 [ 7.0 (Min.)~22.4 (Max.)]	22.4 [ 7.6 (Min.) ~ 25.0 (Max.)]			
Power consumption	kW	6.47	5.97			
Running current	Α	9.7 / 10.1	9.1 / 9.5			
Power factor	%	96 / 97	95			
Inrush current	Α	5 < Max.runnir	ng current 19 >			
Sound Pressure Level	dB(A)	P-Hi:46 Hi:44 Me:41 Lo:39	57			
Exterior dimensions Height x Width x Depth	mm	250 × 1,620 × 690	1,300 × 970 × 370			
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent			
Net weight	kg	49	122			
Refrigerant equipment Compressor type & Q'ty	-	-	GTC5150ND70K × 1			
Starting method		_	Direct line start			
Refrigerant oil	e	_	1.45 M-MA32R			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 2			
Motor <starting method=""></starting>	W	30 × 2 < Direct line start >	86 × 2 < Direct line start >			
Air flow (Standard)	СММ	P-Hi:28 Hi:26 Me:23 Lo:21	Cooling: 150, Heating: 145			
Available static pressure	Pa	0	_			
Oudoor air intake		Not possible	_			
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
Insulation (noise & heat)		Polyurethane form	_			
Electric heater	W	_	33 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wi	ireless : RCN-E1R (option)			
Room temperature control		Thermostat by electronics	_			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data Refrigerant piping size	mm		x 0.8 ① φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8") × 1.0 ① φ 22.22 (7/8") × 1.6 O/U φ 22.22 (7/8")			
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing			
Refrigerant line (one way) length		Max.70m				
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	9 ,			
Refrigerant Quantity		R410A 5.4kg (Pre-charged up to the	e piping length of 30m) Outdoor unit			
Drain pump		_	_			
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs			
Insulation for piping		Necessary (both L	Liquid & Gas lines)			
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging			
		- 1				

# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C 19°C		35°C	24°C
Heating	20	°C	7°C	6℃

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

During operation these value are somewhat higher due to ambient temperature.

(4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WB1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

Item	_	Indoor unit FDEN125VD (2 units)	0.11 ". == 00=010	
1	_		Outdoor unit FDC250VS	
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	25.0 [ 10.0 (Min.) ~ 28.0 (Max.)]	28.0 [ 9.5 (Min.)~31.5 (Max.)]	
Power consumption	kW	9.01	8.05	
Running current	Α	13.5 / 14.1	12.2 / 12.8	
Power factor	%	96 / 97	95 / 96	
Inrush current	Α	5 < Max.runnin	ig current 22 >	
Sound Pressure Level	dB(A)	P-Hi:50 Hi:46 Me:44 Lo:43	Cooling: 57 Heating: 58	
Exterior dimensions Height x Width x Depth	mm	250 × 1,620 × 690	1,505 × 970 × 370	
Exterior appearance		Plaster White	Stucco White	
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent	
Net weight	kg	49	140	
Refrigerant equipment Compressor type & Q'ty		-	GTC5150ND70K × 1	
Starting method		_	Direct line start	
Refrigerant oil	Q	_	1.45 M-MA32R	
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control		_	Electronic expansion valve	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 2	
Motor <starting method=""></starting>	W	40 × 2 < Direct line start >	86 × 2 < Direct line start >	
Air flow (Standard)	СММ	P-Hi:32 Hi:29 Me:26 Lo:23	Cooling: 150, Heating: 145	
Available static pressure	Pa	0	<del>-</del>	
Outdoor air intake		Not possible	_	
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_	
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
nsulation (noise & heat)		Polyurethane form	<del>-</del>	
Electric heater	W	_	33 (Crank case heater)	
Remote controller		wired : RC-E4 (option) wi	reless : RCN-E1R (option)	
Room temperature control		Thermostat by electronics	_	
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.	
nstallation data Refrigerant piping size	mm	Liquid line: I/U φ 9.52 (3/8") ② φ 9.52 (3/8") × Gas line : I/U φ 15.88 (5/8") ② φ 15.88 (5/8")	0.8 ① φ 12.7 (1/2") × 0.8 O/U φ 12.7 (1/2") × 1.0 ① φ 22.22 (7/8") × 1.6 O/U φ 22.22 (7/8")	
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing	
Refrigerant line (one way) length		Max.70m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154	
Refrigerant Quantity		R410A 7.2kg (Pre-charged up to the	e piping length of 30m) Outdoor unit	
Orain pump			<u> </u>	
Orain Pamp		Hose Connectable with VP20	Holes size φ20 × 3pcs	
nsulation for piping		Necessary (both L		
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging	


,					
Item	Indoor	Indoor air temperature			temperature
Operation	n DB	DB WB		DB	WB
Cooling	27°C		19℃	35°C	24°C
Heating		20°C			6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WB1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

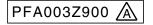

(c) Triple type Adapted to RoHS directive

	Model	FDEN140VNTVD			
		Indoor unit FDEN50VD (3 units)	Outdoor unit FDC140VN		
Item	$\overline{}$				
Power source			220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]	16.0 [ 4.0 (Min.)~16.5 (Max.)]		
Power consumption	kW	4.88	4.58		
Running current	А	21.7 / 22.6	20.2 / 21.1		
Power factor	%	98	99		
Inrush current	Α	5 < Max.running	g current 24 >		
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 39 Me: 38 Lo: 37	51		
Exterior dimensions Height x Width x Depth	mm	210 × 1,070 × 690	845 × 970 × 370		
Exterior appearance		Plaster White	Stucco White		
(Munsell color)		(6.8Y8.9/0.2) near equivalent	(4.2Y7.5/1.1) near equivalent		
Net weight	kg	28	81		
Refrigerant equipment Compressor type & Q'ty	-	-	RMT5126MDE2 × 1		
Starting method		_	Direct line start		
Refrigerant oil	Q	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1		
Motor <starting method=""></starting>	w	25 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:13 Hi:11 Me:9 Lo:7	Cooling: 75, Heating: 73		
Available static pressure	Pa	0			
Outdoor air intake		Not possible	<del>_</del>		
Air filter, Q'ty		Pocket plastic net × 2 (Washable)			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	—		
Electric heater	w	—	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wir			
Room temperature control		Thermostat by electronics			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data Refrigerant piping size	mm	Liquid line : I/U $\phi$ 6.35 (1/4") ② $\phi$ 9.52 (3/8") × 0 Gas line : I/U $\phi$ 12.7 (1/2") ② $\phi$ 12.7 (1/2") × 0	0.8 ① φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m	6 14.14.13		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 155		
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	piping length of 30m) Outdoor unit		
Drain pump					
Drain pump Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs		
Insulation for piping		Necessary (both Li			
Standard Accessories		Mounting kit, Drain hose	·		
Standard Accessories		Woulding Kit, Drain nose	Edging		


# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6℃

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

During operation these value are somewhat higher due to ambient temperature.

- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz. (4) The operation data indicates when the all-containers of perated at 25000 12 of 25000 12. (5) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together. (6) Branching pipe set "DIS-TA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch ~ I/U (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

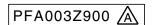

	Model	FDEN140VSTVD			
		Indoor unit FDEN50VD (3 units)	Outdoor unit FDC140VS		
tem					
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.)~16.5 (Max.)]		
Power consumption	kW	4.88	4.58		
Running current	Α	7.2 / 7.6	6.7 / 7.0		
Power factor	%	98	99		
Inrush current	Α	5 < Max.runnir	ng current 15 >		
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 39 Me: 38 Lo: 37	51		
Exterior dimensions Height x Width x Depth	mm	210 × 1,070 × 690	845 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	28	83		
Refrigerant equipment Compressor type & Q'ty	<u> </u>	-	RMT5126MDE3 × 1		
Starting method		_	Direct line start		
Refrigerant oil	Q	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1		
Motor <starting method=""></starting>	W	25 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:13 Hi:11 Me:9 Lo:7	Cooling: 75, Heating: 73		
Available static pressure	Pa	0			
Outdoor air intake		Not possible	_		
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
nsulation (noise & heat)		Polyurethane form	<del>-</del>		
Electric heater	W	_	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wi	ireless : RCN-E1R (option)		
Room temperature control		Thermostat by electronics	<del>-</del>		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
nstallation data Refrigerant piping size	mm	Liquid line: I/U φ 6.35 (1/4") ② φ 9.52 (3/8") × Gas line : I/U φ 12.7 (1/2") ② φ 12.7 (1/2") ×	0.8 ① $\phi$ 9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8") 0.8 ① $\phi$ 15.88 (5/8") × 1.0 O/U $\phi$ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher)			
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit		
Orain pump		_	<u> </u>		
Orain		Hose Connectable with VP20	Holes size φ20 × 3pcs		
nsulation for piping		Necessary (both L			
Standard Accessories		Mounting kit, Drain hose	Edging		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	)°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.

  (6) Branching pipe set "DIS-TA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDEN200VSTVD			
		Indoor unit FDEN71VD (3 units)	Outdoor unit FDC200VS		
Item					
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	20.0 [ 7.0 (Min.)~22.4 (Max.)]	22.4 [ 7.6 (Min.)~25.0 (Max.)]		
Power consumption	kW	6.40	5.90		
Running current	Α	9.6 / 10.0	9.0 / 9.4		
Power factor	%	96 / 97	95		
Inrush current	Α	5 < Max.runnir	ng current 19 >		
Sound Pressure Level	dB(A)	P-Hi:50 Hi:41 Me:39 Lo:38	57		
Exterior dimensions Height x Width x Depth	mm	210 × 1,320 × 690	1,300 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	37	122		
Refrigerant equipment Compressor type & Q'ty		-	GTC5150ND70K × 1		
Starting method		-	Direct line start		
Refrigerant oil	l	_	1.45 M-MA32R		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 2		
Motor <starting method=""></starting>	W	20 × 2 < Direct line start >	86 × 2 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:22 Hi:18 Me:14 Lo:12	Cooling: 150, Heating: 145		
Available static pressure	Pa	0	_		
Outdoor air intake		Not possible	_		
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	-		
Electric heater	W	-	33 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wi	ireless : RCN-E1R (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data Refrigerant piping size	mm	Liquid line : I/U φ 9.52 (3/8") ② φ 9.52 (3/8") × Gas line : I/U φ 15.88 (5/8") ② φ 15.88 (5/8")	0.8 ① φ 9.52 (3/8") × 0.8 Ο/U φ 9.52 (3/8") × 1.0 ① φ 22.22 (7/8") × 1.6 Ο/U φ 22.22 (7/8")		
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing		
Refrigerant line (one way) length		Max.70m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) ————————————————————————————————————			
Refrigerant Quantity		R410A 5.4kg (Pre-charged up to the piping length of 30m) Outdoor unit			
Drain pump		_	_		
Drain		Hose Connectable with VP20	Holes size		
Insulation for piping			Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging		

		_		
Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (4) The operation data indicates when the all-containers of perated at 4000012 of 3000012.

  (5) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.

  (6) Branching pipe set "DIS-TB1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch~I/U

  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.


# (d) Double-Twin type

#### Adapted to RoHS directive

	Model	FDEN200VSDVD			
	Ì	Indoor unit FDEN50VD (4 units)	Outdoor unit FDC200VS		
Item					
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	20.0 [ 7.0 (Min.)~22.4 (Max.)]	22.4 [ 7.6 (Min.)~25.0 (Max.)]		
Power consumption	kW	7.43	7.26		
Running current	Α	11.1 / 11.6	10.8 / 11.4		
Power factor	%	97	97		
Inrush current	Α	5 < Max.runnir	ng current 19 >		
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 39 Me: 38 Lo: 37	57		
Exterior dimensions Height x Width x Depth	mm	210 × 1,070 × 690	1,300 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	28	122		
Refrigerant equipment Compressor type & Q'ty	0	-	GTC5150ND70K × 1		
Starting method		_	Direct line start		
Refrigerant oil	Q	_	1.45 M-MA32R		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 2		
Motor <starting method=""></starting>	w	25 < Direct line start >	86 × 2 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:13 Hi:11 Me:9 Lo:7	Cooling: 150, Heating: 145		
Available static pressure	Pa	0	<u> </u>		
Outdoor air intake		Not possible	_		
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
nsulation (noise & heat)		Polyurethane form	_		
Electric heater	W	_	33 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wi			
Room temperature control		Thermostat by electronics			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
nstallation data Refrigerant piping size	mm	Liquid line : I/O $\phi$ 6.35 (1/4") 32 $\phi$ 9.52 (3/8") × Gas line : I/U $\phi$ 12.7 (1/2") 3 $\phi$ 12.7 × 0.8 2 $\phi$	0.8 ① $\phi$ 9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8") $\phi$ 15.88 ① $\phi$ 22.22 (7/8") × 1.6 O/U $\phi$ 22.22 (7/8")		
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing		
Refrigerant line (one way) length		Max.70m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher)			
Refrigerant Quantity		` '	e piping length of 30m) Outdoor unit		
Drain pump		-			
Drain Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs		
Insulation for piping		Necessary (both L	, ,		
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging		
,.aa. a / 10000001100		mounting tit, Drain 11000	Cornicoting pipo, Laging		

` '				
Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	)°C	7°C	6°C


- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature. (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is four indoor units are combined and run together.
  (6) Branching pipe set "DIS-WB1"×1,"DIS-WA1"×2 (option). Pipe ①: O/U~Branch, ②: Branch~Branch, ③: Branch~I/U
  (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

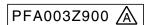

	Model	FDEN250VSDVD			
		Indoor unit FDEN60VD (4 units)	Outdoor unit FDC250VS		
Item					
Power source			380-415V 3N~50Hz / 380V 3N~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	25.0 [ 10.0 (Min.)~28.0 (Max.)]	28.0 [ 9.5 (Min.)~31.5 (Max.)]		
Power consumption	kW	9.50	8.69		
Running current	Α	14.1 / 14.9	12.9 / 13.6		
Power factor	%	97	97		
Inrush current	Α	5 < Max.runnin	ng current 22 >		
Sound Pressure Level	dB(A)	P-Hi:50 Hi:41 Me:39 Lo:38	Cooling: 57 Heating: 58		
Exterior dimensions Height x Width x Depth	mm	210 × 1,320 × 690	1,505 × 970 × 370		
Exterior appearance (Munsell color)		Plaster White (6.8Y8.9/0.2) near equivalent	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	37	140		
Refrigerant equipment Compressor type & Q'ty		-	GTC5150ND70K × 1		
Starting method		-	Direct line start		
Refrigerant oil	Q	_	1.45 M-MA32R		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 2		
Motor <starting method=""></starting>	W	20 × 2 < Direct line start >	86 × 2 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:22 Hi:18 Me:14 Lo:12	Cooling: 150, Heating: 145		
Available static pressure	Pa	0	_		
Outdoor air intake		Not possible	_		
Air filter, Q'ty		Pocket plastic net × 2 (Washable)	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W	-	33 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wi	ireless : RCN-E1R (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data Refrigerant piping size	mm	Liquid line : I/O $\phi$ 6.35 (1/4") 3② $\phi$ 9.52 (3/8") > Gas line : I/U $\phi$ 12.7 (1/2") 3 $\phi$ 12.7x0.8 ② $\phi$			
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing		
Refrigerant line (one way) length		Max.70m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher)			
Refrigerant Quantity		R410A 7.2kg (Pre-charged up to the piping length of 30m) Outdoor unit			
Drain pump			_		
Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs		
Insulation for piping		Necessary (both L			
Standard Accessories		Mounting kit, Drain hose	Connecting pipe, Edging		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19℃	35°C	24°C
Heating	20	°C	7°C	6℃

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz. (5) Indoor unit specifications for one unit. Capacity and operation data is four indoor units are combined and run together.
- (6) Branching pipe set "DIS-WB1"×1,"DIS-WA1"×2 (option). Pipe ①: O/U~Branch, ②: Branch~Branch, ③: Branch~I/U (7) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

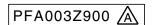


# (4) Duct connected - Low/Middle static pressure type (FDUM) (a) Single type

Adapted to **RoHS** directive

Refrigerant control — Electronic expansion valve  Air handling equipment Fan type & Q'ty  Motor <starting method=""> W 60 &lt; Direct line start &gt; 45 &lt; Direct line start &gt;  Air flow (Standard) CMM P-Hi : 14 Hi : 13 Me : 12 Lo : 11 40  Available static pressure Pa 85 / 90 (at 14 CMM) — —  Outdoor air intake Possible — —  Air fliter, Q'ty Procure locally —  Shock &amp; vibration absorber Rubber sleeve (for fan motor) Rubber sleeve (for Compressor)  Insulation (noise &amp; heat) Polyurethane form — —  Electric heater W — —  Remote controller Wired : RC-E4 (option) wireless : RCN-KIT3-E (option)  Room temperature control Thermostat by electronics —  Safety equipment Installation data  Refrigerant piping size Connecting method Refrigerant piping size  Connecting method Refrigerant line (one way) length Flare piping  Refrigerant line (one way) length Max.30m  Refrigerant Quantity Refrigerant Quantity Refrigerant Quantity Refrigerant for the piping of : 15m)</starting>		Model	FDUM5	OZIXVD	
Power source			Indoor unit <b>FDUM50VD</b>	Outdoor unit SRC50ZIX-S	
Operation data         Cooling         Heating           Nominal capacity         kW         5.0 [2.2 (Min) — 5.6 (Max.)]         5.4 [2.5 (Min.) — 6.3 (Max.)]           Power consumption         kW         1.52         1.41           Running current         A         6.7 / 7.1         6.3 / 6.5           Power factor         %         98         98           Inrush current         A         5 < Max.running current 14 >           Sound Pressure Level         dB(A)         P-Hi : 35 Hi : 34 Me : 31 Lo : 28         47           Exterior dimensions         mm         299 × 750 × 635         640 × 800 × 290           Height x Width X Depth         kg         34         43           Exterior appearance (Munsell color)         fw         -         Stucco White (4.2Y7.5/1.1) near equivalent (4.2Y7.5/1.1) near eq	Item				
Nominal capacity	Power source			220-240V~50Hz / 220V~60Hz	
Power consumption   KW	Operation data		Cooling	Heating	
Running current	Nominal capacity	kW	5.0 [ 2.2 (Min.) ~ 5.6 (Max.)]	5.4 [ 2.5 (Min.) ~ 6.3 (Max.)]	
Power factor	Power consumption	kW	1.52	1.41	
Inrush current	Running current	Α	6.7 / 7.1	6.3 / 6.5	
Sound Pressure Level	Power factor	%	98	98	
Exterior dimensions Height x Width x Depth         mm         299 x 750 x 635         640 x 800 x 290           Exterior appearance (Munsell color)         —         Stucco White (4.2Y7.5/1.1) near equivalent (	Inrush current	Α	5 < Max.runnir	ng current 14 >	
Height x Width x Depth   mm   299 x 750 x 635   640 x 800 x 290	Sound Pressure Level	dB(A)	P-Hi:35 Hi:34 Me:31 Lo:28	47	
(Munsell color)         Image: Net weight to with the weight to with the weight to with the weight to with the weight to t		mm	299 × 750 × 635	640 × 800 × 290	
Refrigerant equipment Compressor type & Q'ty         —         5CS130XG04 x 1           Starting method         —         Direct line start           Refrigerant oil         ℓ         —         0.48 RB68A           Heat exchanger         Louver fin & inner grooved tubing         M shape fin & inner grooved tubing           Refrigerant control         —         Electronic expansion valve           Air handling equipment Fan type & Q'ty         —         Propeller fan x 1           Fan type & Q'ty         Centrifugal fan x 2         Propeller fan x 1           Motor < Starting method>         W         60 < Direct line start >         45 < Direct line start >           Air flow (Standard)         CMM         P-Hi : 14 Hi : 13 Me : 12 Lo : 11         40         40           Available static pressure         Pa         85 / 90 (at 14 CMM)         —         —           Outdoor air intake         Possible         —         —           Air filter, O'ty         Procure locally         —         —           Shock & vibration absorber         Rubber sleeve (for fan motor)         Rubber sleeve (for Compressor)           Insulation (noise & heat)         Polyurethane form         —           Bernote controller         wired : RC-E4 (option)         internal thermostat for fan motor	' '		-		
Compressor type & Q'ty         —         5CS130XGQ4 × 1           Starting method         —         Direct line start           Refrigerant oil         ℓ         —         0.48 RB68A           Heat exchanger         Louver fin & inner grooved tubing         M shape fin & inner grooved tubing           Refrigerant control         —         Electronic expansion valve           Air fandling equipment Fan type & Q'ty         —         Propeller fan × 1           Motor <starting method="">         W         60 &lt; Direct line start &gt;         45 &lt; Direct line start &gt;           Air flow (Standard)         CMM         P-H: 14 H: 13 Me: 12 Lo: 11         40           Available static pressure         Pa         85 / 90 (at 14 CMM)         —           Outdoor air intake         Possible         —           Air filter, Q'ty         Procure locally         —           Shock &amp; vibration absorber         Rubber sleeve (for fan motor)         Rubber sleeve (for Compressor)           Insulation (noise &amp; heat)         Polyurethane form         —           Electric heater         W         —         —           Remote controller         wired: RC-E4 (option) wireless: RCN-KIT3-E (option)           Room temperature control         Thermostat by electronics         —           Safety eq</starting>	Net weight	kg	34	43	
Refrigerant oil         ℓ         —         0.48 RB68A           Heat exchanger         Louver fin & inner grooved tubing         M shape fin & inner grooved tubing           Refrigerant control         —         Electronic expansion valve           Air handling equipment Fan type & Q'ty         Centrifugal fan × 2         Propeller fan × 1           Fan type & Q'ty         W         60 < Direct line start >         45 < Direct line start >           Air flow (Standard)         CMM         P-Hi : 14 Hi : 13 Me : 12 Lo : 11         40           Available static pressure         Pa         85 / 90 (at 14 CMM)         —           Outdoor air intake         Possible         —           Air filter, Q'ty         Procure locally         —           Shock & vibration absorber         Rubber sleeve (for fan motor)         Rubber sleeve (for Compressor)           Insulation (noise & heat)         Polyurethane form         —           Electric heater         W         —         —           Remote controller         Wired: RC-E4 (option)         wired: RC-E4 (option)           Room temperature control         Thermostat by electronics         —           Safety equipment         Internal thermostat for fan motor Frost protection thermostat         Internal thermostat for fan motor Abnormal discharge temperature protection thermostat	0 1 1		-	5CS130XG04 × 1	
Heat exchanger  Refrigerant control  Air handling equipment Fan type & O'ty  Motor <starting method="">  W  60 &lt; Direct line start &gt;  Air flow (Standard)  Available static pressure  Outdoor air intake  Procesible  Air filter, O'ty  Procure locally  Procure locally  Polyurethane form  Pelectric heater  W  Pelectric heater  W  Remote controller  Remote controller  Roaft equipment  Roaft equipment  Roaft equipment  Roaft equipment  Roaft grant piping size  Connecting method&gt;  M shape fin &amp; inner grooved tubing  Electronic expansion valve  Refrigerant Quantity  Procure Instant &gt;  Roaft grant on tor out of the piping of : 15m)  Roaft page 154  Refrigerant Quantity  Refrigerant Quantity  Refrigerant ine (one way) length  Refrigerant Quantity  Refrigerant Quantity  Refrigerant ine (one way) length  Refrigerant Quantity  Refrigerant Quantity  Refrigerant ine (one way) length of the piping of : 15m)</starting>	Starting method		_	Direct line start	
Refrigerant control — Electronic expansion valve Air handling equipment Fan type & Q'ty  Motor <starting method=""> W 60 &lt; Direct line start &gt; 45 &lt; Direct line start &gt;  Air flow (Standard)</starting>	Refrigerant oil	l	_	0.48 RB68A	
Air handling equipment Fan type & Q'ty  Motor <starting method=""> W 60 &lt; Direct line start &gt; 45 &lt; Direct line start &gt;  Air flow (Standard) CMM P-Hi : 14 Hi : 13 Me : 12 Lo : 11 40  Available static pressure Pa 85 / 90 (at 14 CMM) —  Outdoor air intake Possible —  Air filter, Q'ty Procure locally —  Shock &amp; vibration absorber Rubber sleeve (for fan motor) Rubber sleeve (for Compressor)  Insulation (noise &amp; heat) Polyurethane form —  Electric heater W — — —  Remote controller wired : RC-E4 (option) wireless : RCN-KIT3-E (option)  Room temperature control Thermostat by electronics —  Safety equipment Internal thermostat for fan motor Frost protection thermostat Abnormal discharge temperature protection thermostat Polyurethion (poise &amp; heat) Polyurethion</starting>	Heat exchanger		Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Fan type & Q'ty  Motor <starting method=""> W  60 &lt; Direct line start &gt;  Air flow (Standard) CMM  P-Hi : 14 Hi : 13 Me : 12 Lo : 11  Available static pressure Pa  85 / 90 (at 14 CMM) —  Outdoor air intake Possible —  Air flitter, Q'ty Procure locally —  Shock &amp; vibration absorber Rubber sleeve (for fan motor) Rubber sleeve (for Compressor)  Insulation (noise &amp; heat) Polyurethane form —  Electric heater W —  Remote controller Wired : RC-E4 (option) wireless : RCN-KIT3-E (option)  Room temperature control Thermostat by electronics —  Safety equipment Internal thermostat for fan motor Frost protection thermostat Prost protection thermostat Prost protection thermostat Prost pring size Gas line : \( \phi 12.7 \) (1/2") \( \phi 12.7 \) (1/2") \( \phi 12.7 \) (1/2") \( \phi 13.5 \) epage 154  Vertical height difference between outdoor unit and indoor unit  Refrigerant Quantity R410A 1.4kg in outdoor unit (incl. the amount for the piping of : 15m)</starting>	Refrigerant control		_	Electronic expansion valve	
Air flow (Standard)         CMM         P-Hi : 14 Hi : 13 Me : 12 Lo : 11         40           Available static pressure         Pa         85 / 90 (at 14 CMM)         —           Outdoor air intake         Possible         —           Air filter, Q'ty         Procure locally         —           Shock & vibration absorber         Rubber sleeve (for fan motor)         Rubber sleeve (for Compressor)           Insulation (noise & heat)         Polyurethane form         —           Electric heater         W         —         —           Remote controller         wired : RC-E4 (option)         wireds: RCN-KIT3-E (option)           Room temperature control         Thermostat by electronics         —           Safety equipment         Internal thermostat for fan motor         Internal thermostat for fan motor           Fare priping slize         Internal thermostat for fan motor         Abnormal discharge temperature protection thermostat           Installation data         Refrigerant piping slize         Gas line : √ 12.7 (1/2") ← 0.35 (1/4") Pipe ← 0.35 (1/4") × 0.8 O/U ← 0.35 (1/4")           Connecting method         Flare piping         Flare piping           Refrigerant line (one way) length         Max.20m (Outdoor unit is higher)         ※1.See page 154           Vertical height difference between outdoor unit         Max.20m (Outdoor unit is low	•		Centrifugal fan × 2	Propeller fan × 1	
Available static pressure Pa 85 / 90 (at 14 CMM) —  Outdoor air intake Possible —  Air filter, Q'ty Procure locally —  Shock & vibration absorber Rubber sleeve (for fan motor) Rubber sleeve (for Compressor)  Insulation (noise & heat) Polyurethane form —  Electric heater W — — —  Remote controller wired: RC-E4 (option) wireless: RCN-KIT3-E (option)  Room temperature control Thermostat by electronics —  Safety equipment Internal thermostat for fan motor Internal thermostat for fan motor Abnormal discharge temperature protection thermostat  Installation data Refrigerant piping size Gas line: \( \psi \) 12.7 (1/2") \( \phi \) 12.7 (1/2") \( \times \) 0.8 \( \phi \) 12.7 (1/2")  Connecting method Flare piping Flare piping  Refrigerant line (one way) length Max.30m  Vertical height difference between outdoor unit and indoor unit  Refrigerant Quantity R410A 1.4kg in outdoor unit (incl. the amount for the piping of: 15m)	Motor <starting method=""></starting>	W	60 < Direct line start >	45 < Direct line start >	
Outdoor air intake       Possible       —         Air filter, Q'ty       Procure locally       —         Shock & vibration absorber       Rubber sleeve (for fan motor)       Rubber sleeve (for Compressor)         Insulation (noise & heat)       Polyurethane form       —         Electric heater       W       —       —         Remote controller       wired: RC-E4 (option) wireless: RCN-KIT3-E (option)         Room temperature control       Thermostat by electronics       —         Safety equipment       Internal thermostat for fan motor       Internal thermostat for fan motor         Frost protection thermostat       Abnormal discharge temperature protection thermostat         Installation data       Max.30m       Eliquid line: I/U φ 6.35 (1/4") Pipe φ 6.35 (1/4") × 0.8 O/U φ 6.35 (1/4")         Refrigerant piping size       Max.30m       Flare piping         Refrigerant line (one way) length       Max.30m         Vertical height difference between outdoor unit and indoor unit       Max.20m (Outdoor unit is higher)       *1.See page 154         Max.20m (Outdoor unit is lower)         Refrigerant Quantity       R410A 1.4kg in outdoor unit (incl. the amount for the piping of: 15m)	Air flow (Standard)	СММ	P-Hi:14 Hi:13 Me:12 Lo:11	40	
Air filter, Q'ty Procure locally — Shock & vibration absorber Rubber sleeve (for fan motor) Rubber sleeve (for Compressor) Insulation (noise & heat) Polyurethane form — Electric heater W — — — — —  Remote controller Room temperature control Thermostat by electronics —  Safety equipment Installation data Refrigerant piping size Refrigerant line (one way) length Vertical height difference between outdoor unit and indoor unit  Refrigerant Quantity Rubber sleeve (for Compressor) Rubber sleeve (f	Available static pressure	Pa	85 / 90 (at 14 CMM)	_	
Shock & vibration absorber Insulation (noise & heat)  Polyurethane form  Remote controller Remote controller  Safety equipment  Installation data Refrigerant piping size  Connecting method  Refrigerant United in Eight difference between outdoor unit discharge temperature  Methods in Safety equantity  Refrigerant Quantity  Rubber sleeve (for Compressor)  Another  Liquid Insulation (aption)  Refrigerant piping size (by Compressor)  Refrigerant piping size (by Compressor)  Refrigerant line (one way) length  Max.30m  Max.20m (Outdoor unit is higher)  Max.20m (Outdoor unit is lower)  Refrigerant Quantity  Refrigerant Quantity  Refrigerant in a motor  Abnormal discharge temperature protection thermostat for fan motor  Abnormal discharge temperature protection thermostat in section in the piping of a motor  Abnormal discharge temperature protection thermostat in section in the piping of a motor  Abnormal discharge temperature protection thermostat in section in the piping of a motor  Abnormal discharge temperature protection thermostat in the piping of a motor  Abnormal discharge temperature protection thermostat in the piping of a motor  Abnormal discharge temperature protection thermostat in the piping of a motor  Abnormal discharge temperature protection thermostation in the piping of a motor  Abnormal discharge temperature protection thermostation in the piping of a motor  Abnormal discharge temperature protection thermostation in the piping of a motor  Abnormal discharge temperature protection thermostation in the piping of a motor  Abnormal discharge temperature protection thermostation in the piping of a motor  Abnormal discharge temperature protection thermostation	Outdoor air intake		Possible	_	
Insulation (noise & heat)       Polyurethane form       —         Electric heater       W       —       —         Remote controller       wired : RC-E4 (option) wireless : RCN-KIT3-E (option)         Room temperature control       Thermostat by electronics       —         Safety equipment       Internal thermostat for fan motor Frost protection thermostat       Internal thermostat for fan motor Abnormal discharge temperature protection.         Installation data Refrigerant piping size       mm       Liquid line : I/U φ 6.35 (1/4") Pipe φ 6.35 (1/4") × 0.8 O/U φ 6.35 (1/4")         Connecting method       Gas line : φ 12.7 (1/2") φ 12.7 (1/2") × 0.8 φ 12.7 (1/2")       Flare piping         Refrigerant line (one way) length       Max.30m         Vertical height difference between outdoor unit and indoor unit       Max.20m (Outdoor unit is higher)       ※1.See page 154 with piping of : 15m)         Refrigerant Quantity       R410A 1.4kg in outdoor unit (incl. the amount for the piping of : 15m)	Air filter, Q'ty		Procure locally	_	
Electric heater W — — — — — — — — — — — — — — — — — —	Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)	
Remote controller  Room temperature control  Safety equipment  Internal thermostat for fan motor Frost protection thermostat  Refrigerant piping size  Connecting method  Refrigerant line (one way) length  Vertical height difference between outdoor unit disconting the motor  Refrigerant Quantity  Refrigerant Quantity  Wired: RCN-KIT3-E (option)  Wireless: RCN-KIT3-E (option)  Manuals  Flate piping  Abnormal discharge temperature protection  Abnormal discharge temperatu	Insulation (noise & heat)		Polyurethane form	_	
Room temperature controlThermostat by electronics—Safety equipmentInternal thermostat for fan motor Frost protection thermostatInternal thermostat for fan motor Abnormal discharge temperature protectInstallation data Refrigerant piping sizeInstallation data Max.30mEliquid line: $I/U \phi 6.35 (1/4")$ Pipe $\phi 6.35 (1/4") \times 0.8 O/U \phi 6.35 (1/4")$ Connecting methodFlare pipingFlare pipingRefrigerant line (one way) lengthMax.30mVertical height difference between outdoor unit and indoor unitMax.20m (Outdoor unit is higher) Max.20m (Outdoor unit is lower) $\%1.See$ page 154Refrigerant QuantityR410A 1.4kg in outdoor unit (incl. the amount for the piping of: 15m)	Electric heater	W	_	_	
Safety equipment Internal thermostat for fan motor Abnormal discharge temperature protect Installation data Refrigerant piping size mm Gas line: $\psi$ 12.7 (1/2") $\psi$ 6.35 (1/4") × 0.8 O/U $\psi$ 6.35 (1/4")  Connecting method Flare piping Flare piping Flare piping Refrigerant line (one way) length Vertical height difference between outdoor unit and indoor unit Refrigerant Quantity R410A 1.4kg in outdoor unit (incl. the amount for the piping of : 15m)	Remote controller		wired : RC-E4 (option) wire	eless : RCN-KIT3-E (option)	
Safety equipment Frost protection thermostat Abnormal discharge temperature protection thermostat Installation data  Refrigerant piping size Gas line: $\psi$ 12.7 (1/2") $\psi$ 12	Room temperature control		Thermostat by electronics	_	
Refrigerant piping size	Safety equipment			Internal thermostat for fan motor Abnormal discharge temperature protection.	
Refrigerant piping size Gas line : $\phi$ 12.7 (1/2") $\phi$ 12.7 (1/2") × 0.8 $\phi$ 12.7 (1/2")  Connecting method Flare piping Flare piping  Refrigerant line (one way) length Max.30m  Vertical height difference between outdoor unit and indoor unit Max.20m (Outdoor unit is higher) **1.See page 154 outdoor unit and indoor unit Max.20m (Outdoor unit is lower)  Refrigerant Quantity R410A 1.4kg in outdoor unit (incl. the amount for the piping of : 15m)	Installation data		Liquid line : I/U φ 6.35 (1/4") Pipe φ	6.35 (1/4") × 0.8 Ο/U φ 6.35 (1/4")	
Connecting method     Flare piping     Flare piping       Refrigerant line (one way) length     Max.30m       Vertical height difference between outdoor unit and indoor unit     Max.20m (Outdoor unit is higher)     **1.See page 154       Outdoor unit and indoor unit     Max.20m (Outdoor unit is lower)       Refrigerant Quantity     R410A 1.4kg in outdoor unit (incl. the amount for the piping of : 15m)	Refrigerant piping size	mm	Gas line : φ 12.7 (1/2") φ	φ 12.7 (1/2") × 0.8 φ 12.7 (1/2")	
Vertical height difference between outdoor unit and indoor unit  Max.20m (Outdoor unit is higher)	Connecting method			1	
outdoor unit and indoor unit  Max.20m (Outdoor unit is Ingrier)  Refrigerant Quantity  R410A 1.4kg in outdoor unit (incl. the amount for the piping of : 15m)	Refrigerant line (one way) length		Max.30m		
	•		, ,	※1.See page 154	
	Refrigerant Quantity		R410A 1.4kg in outdoor unit (incl.	the amount for the piping of : 15m)	
Drain pump Built-in Drain pump —					
Drain Hose Connectable with VP20 Holes size $\phi 20 \times 5$ pcs			Hose Connectable with VP20	Holes size	
Insulation for piping Necessary (both Liquid & Gas lines)	Insulation for piping		Necessary (both I	Liquid & Gas lines)	
Standard Accessories Drain hose Drain elbow, Drain hole grommet				, .	

Item	Indoor air temperature		Outdoor air	temperature	External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C 19°C		35°C	24°C	60
Heating	20°C		7°C	6°C	80

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
  (6) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

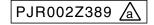

	Model	FDUM60ZIXVD			
		Indoor unit FDUM60VD	Outdoor unit SRC60ZIX-S		
Item					
Power source			220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	5.6 [ 2.8 (Min.) ~ 6.3 (Max.)]	6.7 [ 3.1 (Min.)~7.1 (Max.)]		
Power consumption	kW	1.86	1.96		
Running current	Α	8.2 / 8.5	9.0 / 9.4		
Power factor	%	99	95		
Inrush current	Α	5 < Max.runnii	ng current 14 >		
Sound Pressure Level	dB(A)	P-Hi:38 Hi:34 Me:31 Lo:28	48		
Exterior dimensions Height x Width x Depth	mm	299 × 950 × 635	640 × 800 × 290		
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent		
let weight	kg	40	43		
Refrigerant equipment Compressor type & Q'ty		-	5CS130XG04 × 1		
Starting method		-	Direct line start		
Refrigerant oil	l	-	0.48 RB68A		
Heat exchanger		Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1		
Motor <starting method=""></starting>	W	100 < Direct line start >	45 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:18 Hi:16 Me:15 Lo:14	40		
Available static pressure	Pa	85 / 100 (at 18 CMM)	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Procure locally	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
nsulation (noise & heat)		Polyurethane form	_		
Electric heater	W	_	_		
Remote controller		wired : RC-E4 (option) wir	reless : RCN-KIT3-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
nstallation data Refrigerant piping size	mm		φ 6.35 (1/4") × 0.8 O/U φ 6.35 (1/4") φ 12.7 (1/2") × 0.8 φ 12.7 (1/2")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.30m			
Vertical height difference between outdoor unit and indoor unit		Max.20m (Outdoor unit is higher)			
Refrigerant Quantity		, , ,	the amount for the piping of : 15m)		
Orain pump		Built-in Drain pump			
Orain		Hose Connectable with VP20	Holes size φ20 × 5pcs		
Insulation for piping			Liquid & Gas lines)		
Standard Accessories		Drain hose	Drain elbow, Drain hole grommet		

Item	Indoor air temperature		Outdoor air	temperature	External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
- (6) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.


	Model	FDUM71VNVD				
		Indoor unit FDUM71VD	Outdoor unit FDC71VN			
Item						
Power source			220-240V~50Hz / 220V~60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	7.1 [ 3.2 (Min.) ~ 8.0 (Max.)]	8.0 [ 3.6 (Min.) ~ 9.0 (Max.)]			
Power consumption	kW	2.08	2.21			
Running current	Α	9.2 / 9.6	10.2 / 10.7			
Power factor	%	98	94			
Inrush current	Α	5 < Max.runnir	ng current 17 >			
Sound Pressure Level	dB(A)	P-Hi:38 Hi:35 Me:32 Lo:29	48			
Exterior dimensions Height x Width x Depth	mm	299 × 950 × 635	750 × 968 × 340			
Exterior appearance			Stucco White			
(Munsell color)			(4.2Y7.5/1.1) near equivalent			
Net weight	kg	40	60			
Refrigerant equipment Compressor type & Q'ty		-	2YC45DXD × 1			
Starting method		_	Direct line start			
Refrigerant oil	l	_	0.65 FVC50K			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		<del>_</del>	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1			
Motor <starting method=""></starting>	W	100 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	СММ	P-Hi:23 Hi:20 Me:18 Lo:15	Cooling: 60, Heating: 50			
Available static pressure	Pa	85 / 100 (at 20 CMM)	_			
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
nsulation (noise & heat)		Polyurethane form	_			
Electric heater	W	_	20 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wir	eless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	_			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data		Liquid line : I/U φ 9.52 (3/8") Pipe φ	<sup>b</sup> 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")			
Refrigerant piping size	mm —	Gas line : φ15.88 (5/8") φ	φ 15.88 (5/8") × 1.0 φ 15.88 (5/8")			
Connecting method		Flare piping	Flare piping			
Refrigerant line (one way) length		Max.50m				
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154			
Refrigerant Quantity		R410A 2.95kg in outdoor unit (incl.	the amount for the piping of : 30m)			
Drain pump		Built-in Drain pump	_			
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs			
Insulation for piping		Necessary (both I	Liquid & Gas lines)			
Standard Accessories		Drain hose	_			

Item	Indoor air temperature		tem Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	80

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
- (6) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

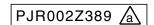

	Model	FDUM100VNVD				
		Indoor unit FDUM100VD	Outdoor unit <b>FDC100VN</b>			
Item						
Power source			220-240V ~ 50Hz / 220V ~ 60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	10.0 [ 4.0 (Min.) ~ 11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]			
Power consumption	kW	2.80	2.77 / 2.80			
Running current	Α	12.5 / 13.1	12.4 / 13.0			
Power factor	%	97	97 / 98			
Inrush current	Α	5 < Max.runnir	ng current 24 >			
Sound Pressure Level	dB(A)	P-Hi: 41 Hi: 37 Me: 35 Lo: 32	49			
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 635	845 × 970 × 370			
Exterior appearance			Stucco White			
(Munsell color)		_	(4.2Y7.5/1.1) near equivalent			
Net weight	kg	59	81			
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1			
Starting method		_	Direct line start			
Refrigerant oil	Q.	_	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 3	Propeller fan × 1			
Motor <starting method=""></starting>	w	50 + 100 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	СММ	P-Hi:34 Hi:28 Me:25 Lo:22	Cooling: 75, Heating: 73			
Available static pressure	Pa	90 / 100 (at 28 CMM)				
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
Insulation (noise & heat)		Polyurethane form				
Electric heater	w	–	20 (Crank case heater)			
Remote controller	**	wired : RC-E4 (option) wir	eless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	eless: HON-KITO-L (Option)			
noom temperature control		•	Internal thermostat for fan motor			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Abnormal discharge temperature protection.			
Installation dat-		·	' ' '			
Installation data Refrigerant piping size	mm —		b 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8") b 15.88 (5/8") × 1.0 φ 15.88 (5/8")			
Connecting method		Gas line . φ 15.66 (5/6 ) φ	Flare piping			
		11.0	riare piping			
Refrigerant line (one way) length		Max.50m				
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)				
Refrigerant Quantity			the amount for the piping of : 30m)			
Drain pump		Built-in Drain pump	_			
Drain		Hose Connectable with VP20	Holes size φ20 x 3pcs			
Insulation for piping		Necessary (both I	iquid & Gas lines)			
Standard Accessories		Drain hose	Edging			

Item	Indoor air temperature		em Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	80

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
- (6) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.


	Model	FDUM100VSVD				
		Indoor unit FDUM100VD	Outdoor unit FDC100VS			
Item						
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	10.0 [ 4.0 (Min.) ~ 11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]			
Power consumption	kW	2.80	2.77 / 2.80			
Running current	Α	4.2 / 4.4	4.1 / 4.3			
Power factor	%	96 / 97	98 / 99			
Inrush current	Α	5 < Max.runniı	ng current 15 >			
Sound Pressure Level	dB(A)	P-Hi: 41 Hi: 37 Me: 35 Lo: 32	49			
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 635	845 × 970 × 370			
Exterior appearance (Munsell color)		_	Stucco White (4.2Y7.5/1.1) near equivalent			
Net weight	kg	59	83			
Refrigerant equipment Compressor type & Q'ty	-	-	RMT5126MDE3 × 1			
Starting method		_	Direct line start			
Refrigerant oil	l	_	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 3	Propeller fan x 1			
Motor <starting method=""></starting>	W	50 + 100 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	CMM	P-Hi: 34 Hi: 28 Me: 25 Lo: 22	Cooling: 75, Heating: 73			
Available static pressure	Pa	90 / 100 (at 28 CMM)	_			
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
nsulation (noise & heat)		Polyurethane form	_			
Electric heater	W	_	20 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wir	reless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	_			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data		Liquid line : I/U φ 9.52 (3/8") Pipe (	b 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")			
Refrigerant piping size	mm —	Gas line : $\phi$ 15.88 (5/8")	φ 15.88 (5/8") × 1.0 φ 15.88 (5/8")			
Connecting method		Flare piping	Flare piping			
Refrigerant line (one way) length		Max.50m				
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154			
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)			
Drain pump		Built-in Drain pump	_			
Drain		Hose Connectable with VP20	Holes size φ20 x 3pcs			
Insulation for piping		Necessary (both I	Liquid & Gas lines)			
		Drain hose	Edging			

Item	Indoor air temperature		Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	00

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

  (5) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
- (6) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

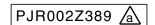

	Model	FDUM125VNVD				
		Indoor unit FDUM125VD	Outdoor unit FDC125VN			
Item						
Power source			220-240V~50Hz / 220V~60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]			
Power consumption	kW	4.03	3.80 / 3.85			
Running current	Α	18.3 / 19.1	17.0 / 18.1			
Power factor	%	96	97			
Inrush current	Α	5 < Max.runnii	ng current 24 >			
Sound Pressure Level	dB(A)	P-Hi: 41 Hi: 38 Me: 36 Lo: 33	Cooling: 50 Heating: 51			
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 635	845 × 970 × 370			
Exterior appearance (Munsell color)		_	Stucco White (4.2Y7.5/1.1) near equivalent			
Net weight	kg	59	81			
Refrigerant equipment Compressor type & Q'ty		_	RMT5126MDE2 × 1			
Starting method		_	Direct line start			
Refrigerant oil	l	-	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		-	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 3	Propeller fan × 1			
Motor <starting method=""></starting>	W	50 + 100 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	CMM	P-Hi:34 Hi:28 Me:25 Lo:22	Cooling: 75, Heating: 73			
Available static pressure	Pa	85 / 100 (at 34 CMM)	_			
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	-			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
nsulation (noise & heat)		Polyurethane form	-			
Electric heater	W	_	20 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wir	eless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	_			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
nstallation data Refrigerant piping size	mm		φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8") φ 15.88 (5/8") × 1.0 φ 15.88 (5/8")			
Connecting method		Flare piping	Flare piping			
Refrigerant line (one way) length		Max.50m				
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154			
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)			
Orain pump		Built-in Drain pump				
Drain .		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs			
nsulation for piping		Necessary (both	Liquid & Gas lines)			
Standard Accessories		Drain hose	Edging			

Item	Indoor air temperature		tem Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
- (6) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDUM125VSVD				
		Indoor unit FDUM125VD	Outdoor unit FDC125VS			
Item						
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	12.5 [ 5.0 (Min.) ~ 14.0 (Max.)]	14.0 [ 4.0 (Min.)~16.0 (Max.)]			
Power consumption	kW	4.03	3.80 / 3.85			
Running current	Α	6.1 / 6.4	5.7 / 6.0			
Power factor	%	95 / 96	96 / 97			
Inrush current	Α	5 < Max.runniı	ng current 15 >			
Sound Pressure Level	dB(A)	P-Hi: 41 Hi: 38 Me: 36 Lo: 33	Cooling: 50 Heating: 51			
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 635	845 × 970 × 370			
Exterior appearance		_	Stucco White			
(Munsell color)			(4.2Y7.5/1.1) near equivalent			
Net weight	kg	59	83			
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1			
Starting method		_	Direct line start			
Refrigerant oil	l	-	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		<del>-</del>	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 3	Propeller fan x 1			
Motor <starting method=""></starting>	W	50 + 100 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	CMM	P-Hi: 34 Hi: 28 Me: 25 Lo: 22	Cooling: 75, Heating: 73			
Available static pressure	Pa	85 / 100 (at 34 CMM)	_			
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )			
nsulation (noise & heat)		Polyurethane form	_			
Electric heater	W	_	20 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wir	eless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	_			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data		Liquid line : I/U φ 9.52 (3/8") Pipe (	b 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")			
Refrigerant piping size	mm	Gas line : $\phi$ 15.88 (5/8")	φ 15.88 (5/8") × 1.0 φ 15.88 (5/8")			
Connecting method		Flare piping	Flare piping			
Refrigerant line (one way) length		Max.50m				
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154			
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)			
Drain pump		Built-in Drain pump	_			
Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs			
Insulation for piping		Necessary (both I				
insulation for piping						

Item	Indoor air temperature		tem Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	80

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

  (5) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
- (6) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDUM140VNVD				
		Indoor unit FDUM140VD	Outdoor unit FDC140VN			
Item						
Power source			220-240V~50Hz / 220V~60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]			
Power consumption	kW	4.95	4.89 / 4.91			
Running current	Α	22.3 / 23.3	22.3 / 22.5			
Power factor	%	97	95 / 99			
Inrush current	А	5 < Max.runnir	ng current 24 >			
Sound Pressure Level	dB(A)	P-Hi:41 Hi:38 Me:36 Lo:33	51			
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 635	845 × 970 × 370			
Exterior appearance			Stucco White			
(Munsell color)			(4.2Y7.5/1.1) near equivalent			
Net weight	kg	59	81			
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1			
Starting method		_	Direct line start			
Refrigerant oil	l	<del>-</del>	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 3	Propeller fan x 1			
Motor <starting method=""></starting>	W	50 + 100 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	СММ	P-Hi: 34 Hi: 28 Me: 25 Lo: 22	Cooling: 75, Heating: 73			
Available static pressure	Pa	85 / 100 (at 34 CMM)	_			
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
nsulation (noise & heat)		Polyurethane form	_			
Electric heater	W	_	20 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wire	eless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	_			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data	mm	Liquid line : I/U $\phi$ 9.52 (3/8") Pipe $\phi$	<sup>1</sup> 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")			
Refrigerant piping size	mm	Gas line : φ15.88 (5/8") φ	b 15.88 (5/8") × 1.0 φ 15.88 (5/8")			
Connecting method		Flare piping	Flare piping			
Refrigerant line (one way) length		Max.50m				
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154			
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)			
Drain pump		Built-in Drain pump	_			
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs			
Insulation for piping		Necessary (both L	Liquid & Gas lines)			
Standard Accessories		Drain hose	Edging			

Item	Indoor air temperature		Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	00

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
- (6) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.


	Model	FDUM140VSVD				
		Indoor unit <b>FDUM140VD</b>	Outdoor unit <b>FDC140VS</b>			
Item						
Power source			380-415V 3N~50Hz / 380V 3N~60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]			
Power consumption	kW	4.95	4.89 / 4.91			
Running current	Α	7.4 / 7.7	7.4 / 7.6			
Power factor	%	97 / 98	95 / 98			
Inrush current	Α	5 < Max.runnir	ng current 15 >			
Sound Pressure Level	dB(A)	P-Hi: 41 Hi: 38 Me: 36 Lo: 33	51			
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 635	845 × 970 × 370			
Exterior appearance			Stucco White			
(Munsell color)		<del>-</del>	(4.2Y7.5/1.1) near equivalent			
Net weight	kg	59	83			
Refrigerant equipment Compressor type & Q'ty	-	-	RMT5126MDE3 × 1			
Starting method		_	Direct line start			
Refrigerant oil	Q.	_	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 3	Propeller fan × 1			
Motor <starting method=""></starting>	w	50 + 100 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	CMM	P-Hi: 34 Hi: 28 Me: 25 Lo: 22	Cooling: 75, Heating: 73			
Available static pressure	Pa	85 / 100 (at 34 CMM)				
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
Insulation (noise & heat)		Polyurethane form				
Electric heater	W	- Organization to the	20 (Crank case heater)			
Remote controller	V V	wired : PC E4 (antion) wir	eless : RCN-KIT3-E (option)			
		* * * * * * * * * * * * * * * * * * * *	ысээ . пом-ктэ-с (оршин)			
Room temperature control		Thermostat by electronics				
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data	mm —		<sup>6</sup> 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")			
Refrigerant piping size			b 15.88 (5/8") × 1.0 φ 15.88 (5/8")			
Connecting method		Flare piping	Flare piping			
Refrigerant line (one way) length		Max.50m				
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) **1.See pag Max.15m (Outdoor unit is lower)				
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)			
Drain pump		Built-in Drain pump				
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs			
Insulation for piping		Necessary (both L	iquid & Gas lines)			
Standard Accessories		Drain hose	Edging			

Item	Indoor air t	emperature	Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C 19°C		35°C	24°C	60
Heating	20°C		7°C	6°C	00

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

  (5) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
- (6) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

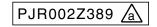

(b) Twin type Adapted to RoHS directive


	Model	FDUM100VNPVD				
		Indoor unit FDUM50VD (2 units)	Outdoor unit FDC100VN			
Item						
Power source			220-240V~50Hz / 220V~60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	10.0 [ 4.0 (Min.) ~ 11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]			
Power consumption	kW	3.12	3.27			
Running current	Α	13.6 / 14.3	14.3 / 15.0			
Power factor	%	99	99			
Inrush current	Α	5 < Max.runnin	g current 24 >			
Sound Pressure Level	dB(A)	P-Hi:35 Hi:34 Me:31 Lo:28	49			
Exterior dimensions Height x Width x Depth	mm	299 × 750 × 635	845 × 970 × 370			
Exterior appearance			Stucco White			
(Munsell color)		_	(4.2Y7.5/1.1) near equivalent			
Net weight	kg	34	81			
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1			
Starting method		_	Direct line start			
Refrigerant oil	l	_	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1			
Motor <starting method=""></starting>	W	60 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	СММ	P-Hi:14 Hi:13 Me:12 Lo:11	Cooling: 75, Heating: 73			
Available static pressure	Pa	85 / 90 (at 14 CMM)	<del>_</del>			
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
Insulation (noise & heat)		Polyurethane form	<del>-</del>			
Electric heater	W	_	20 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wire	eless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	<del>-</del>			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data Refrigerant piping size	mm	Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") ×				
Connecting method		Gas line : I/U φ 12.7 (1/2") ② φ 12.7(1/2") ×	Flare piping			
		Flare piping  Max.50m	гіаге ріріпу			
Refrigerant line (one way) length						
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)				
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	piping length of 30m) Outdoor unit			
Drain pump		Built-in Drain pump				
Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs			
Insulation for piping		Necessary (both L	·			
Standard Accessories		Drain hose	Edging			

,		0			
Item	Indoor air temperature		Item Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C 19°C		35°C	24°C	60
Heating	20°C		7°C	6°C	00

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (4) The operation data indicates when the air-conditioner is operated at 250v50H2 or 220v50H2.
  (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U
  (7) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
  (8) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

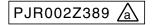


	Model	FDUM100VSPVD				
		Indoor unit FDUM50VD (2 units)	Outdoor unit FDC100VS			
Item						
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	10.0 [ 4.0 (Min.) ~ 11.2 (Max.)]	11.2 [ 4.0 (Min.)~12.5 (Max.)]			
Power consumption	kW	3.12	3.27			
Running current	A	4.6 / 4.8	4.8 / 5.0			
Power factor	%	98 / 99	98 / 99			
Inrush current	Α	5 < Max.runnin	g current 15 >			
Sound Pressure Level	dB(A)	P-Hi:35 Hi:34 Me:31 Lo:28	49			
Exterior dimensions Height x Width x Depth	mm	299 × 750 × 635	845 × 970 × 370			
Exterior appearance			Stucco White			
(Munsell color)		_	(4.2Y7.5/1.1) near equivalent			
Net weight	kg	34	83			
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1			
Starting method		_	Direct line start			
Refrigerant oil	Q.	_	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1			
Motor <starting method=""></starting>	W	60 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	СММ	P-Hi:14 Hi:13 Me:12 Lo:11	Cooling: 75, Heating: 73			
Available static pressure	Pa	85 / 90 (at 14 CMM)	_			
Outdoor air intake		Possible				
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
Insulation (noise & heat)		Polyurethane form				
Electric heater	w		20 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wire				
Room temperature control		Thermostat by electronics				
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data		Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") ×				
Refrigerant piping size	mm —	Gas line : I/U $\phi$ 12.7 (1/2") $@$ $\phi$ 12.7(1/2") $\times$				
Connecting method		Flare piping	Flare piping			
Refrigerant line (one way) length		Max.50m	· 6-h3			
Vertical height difference between		Max.30m (Outdoor unit is higher)	 *1.See page 154			
outdoor unit and indoor unit		Max.15m (Outdoor unit is lower)				
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	piping length of 30m) Outdoor unit			
Drain pump		Built-in Drain pump				
Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs			
Insulation for piping		Necessary (both L	· · · · · · · · · · · · · · · · · · ·			
Standard Accessories		Drain hose	Edging			

Item	Indoor air temperature		Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C 19°C		35°C	24°C	60
Heating	20°C		7°C	6°C	80

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (4) The operation data indicates when the air-conditioner is operated at 40000Hz or 36000Hz.
  (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U
  (7) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
  (8) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

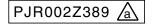

	Model	FDUM125VNPVD			
		Indoor unit FDUM60VD (2 units)	Outdoor unit FDC125VN		
Item					
Power source			220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]		
Power consumption	kW	4.47	4.51		
Running current	Α	19.7 / 20.6	19.8 / 20.7		
Power factor	%	99	99		
Inrush current	Α	5 < Max.runnir	ng current 24 >		
Sound Pressure Level	dB(A)	P-Hi:38 Hi:34 Me:31 Lo:28	Cooling: 50 Heating: 51		
Exterior dimensions Height x Width x Depth	mm	299 × 950 × 635	845 × 970 × 370		
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	40	81		
Refrigerant equipment Compressor type & Q'ty	-	_	RMT5126MDE2 × 1		
Starting method		_	Direct line start		
Refrigerant oil	e	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1		
Motor <starting method=""></starting>	w	100 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:18 Hi:16 Me:15 Lo:14	Cooling: 75, Heating: 73		
Available static pressure	Pa	85 / 100 (at 18 CMM)	1		
Outdoor air intake		Possible	1		
Air filter, Q'ty		Procure locally	1		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	<del>-</del>		
Electric heater	W	_	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	eless : RCN-KIT3-E (option)		
Room temperature control		Thermostat by electronics	<del>-</del>		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data Refrigerant piping size	mm	Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") × Gas line : I/U φ 12.7 (1/2") ② φ 12.7 (1/2") ×	<ul> <li>( 0.8 ① φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")</li> <li>( 0.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")</li> </ul>		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	**1.See page 154		
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs		
Insulation for piping		Necessary (both L	iquid & Gas lines)		
Standard Accessories		Drain hose	Edging		
		1			

### Notes (1) The data are measured at the following conditions.


Item	Indoor air temperature		Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C 19°C		35°C	24°C	60
Heating	20°C		7°C	6°C	60

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

During operation these value are somewhat higher due to ambient temperature.

(4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

- (4) The operation data indicates when the air-conditioner is operated at 250v50H2 or 220v50H2.
  (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U
  (7) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
  (8) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

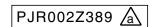


	Model	FDUM125VSPVD			
		Indoor unit FDUM60VD (2 units)	Outdoor unit FDC125VS		
Item					
Power source			$380-415V\ 3N\sim50Hz\ /\ 380V\ 3N\sim60Hz$		
Operation data		Cooling	Heating		
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]		
Power consumption	kW	4.47	4.51		
Running current	Α	6.6 / 6.9	6.6 / 6.9		
Power factor	%	98	99		
Inrush current	Α	5 < Max.runnin	ig current 15 >		
Sound Pressure Level	dB(A)	P-Hi:38 Hi:34 Me:31 Lo:28	Cooling: 50 Heating: 51		
Exterior dimensions Height x Width x Depth	mm	299 × 950 × 635	845 × 970 × 370		
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	40	83		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1		
Starting method		-	Direct line start		
Refrigerant oil	l	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1		
Motor <starting method=""></starting>	W	100 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:18 Hi:16 Me:15 Lo:14	Cooling: 75, Heating: 73		
Available static pressure	Pa	85 / 100 (at 18 CMM)	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Procure locally	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )		
nsulation (noise & heat)		Polyurethane form	_		
Electric heater	W	_	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	eless : RCN-KIT3-E (option)		
Room temperature control		Thermostat by electronics	<del>-</del>		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
nstallation data Refrigerant piping size	mm	Liquid line : I/U φ 6.35 (1/4") ② φ 9.52 (3/8") × Gas line : I/U φ 12.7 (1/2") ② φ 12.7 (1/2") ×	(0.8 ① φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8") (0.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher)			
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	piping length of 30m) Outdoor unit		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs		
Insulation for piping		Necessary (both L			
			·		

Item	Indoor air t	emperature	Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C 19°C		35°C	24°C	60
Heating	20°C		7°C	6°C	80

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (4) The operation data indicates when the air-conditioner is operated at 40000Hz or 36000Hz.
  (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U
  (7) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
  (8) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

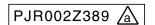


	Model	FDUM140VNPVD			
		Indoor unit FDUM71VD (2 units)	Outdoor unit FDC140VN		
Item					
Power source			220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]		
Power consumption	kW	5.00	4.94 / 4.80		
Running current	Α	22.0 / 23.0	22.4 / 22.1		
Power factor	%	99	96 / 99		
Inrush current	Α	5 < Max.runnin	ng current 24 >		
Sound Pressure Level	dB(A)	P-Hi:38 Hi:35 Me:32 Lo:29	51		
Exterior dimensions Height x Width x Depth	mm	299 × 950 × 635	845 × 970 × 370		
Exterior appearance (Munsell color)			Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	40	81		
Refrigerant equipment Compressor type & Q'ty			RMT5126MDE2 × 1		
Starting method			Direct line start		
Refrigerant oil	l	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1		
Motor <starting method=""></starting>	W	100 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:23 Hi:20 Me:18 Lo:15	Cooling: 75, Heating: 73		
Available static pressure	Pa	85 / 100 (at 20 CMM)	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Procure locally	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W	_	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	eless : RCN-KIT3-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data Refrigerant piping size	mm	Liquid line : I/U φ 9.52 (3/8") ② φ 9.52 (3/8") × Gas line : I/U φ 15.88 (5/8") ② φ 15.88 (5/8")	× 0.8 ① φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8") × 1.0 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154		
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the piping length of 30m) Outdoor unit			
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi 20 \times 3pcs$		
Insulation for piping		Necessary (both L	· · ·		
Standard Accessories		Drain hose	Edging		
			99		

Item	Indoor air temperature		Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C 19°C		35°C	24°C	60
Heating	20°C		7°C	6°C	60

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (4) The operation data indicates when the air-conditioner is operated at 250v50H2 or 220v50H2.
  (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U
  (7) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
  (8) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

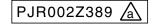

	Model	FDUM140VSPVD				
		Indoor unit FDUM71VD (2 units)	Outdoor unit FDC140VS			
Item						
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]			
Power consumption	kW	5.00	4.94 / 4.80			
Running current	Α	7.3 / 7.7	7.4			
Power factor	%	99	96 / 99			
Inrush current	Α	5 < Max.runnin	g current 15 >			
Sound Pressure Level	dB(A)	P-Hi:38 Hi:35 Me:32 Lo:29	51			
Exterior dimensions Height x Width x Depth	mm	299 × 950 × 635	845 × 970 × 370			
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent			
Net weight	kg	40	83			
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1			
Starting method		_	Direct line start			
Refrigerant oil	e	_	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1			
Motor <starting method=""></starting>	w	100 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	СММ	P-Hi: 23 Hi: 20 Me: 18 Lo: 15	Cooling: 75, Heating: 73			
Available static pressure	Pa	85 / 100 (at 20 CMM)	_			
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
Insulation (noise & heat)		Polyurethane form	_			
Electric heater	W	<u> </u>	20 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wire				
Room temperature control		Thermostat by electronics	—			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data Refrigerant piping size	mm —	Liquid line : I/U $\phi$ 9.52 (3/8") $@$ $\phi$ 9.52 (3/8") $\times$ Gas line : I/U $\phi$ 15.88 (5/8") $@$ $\phi$ 15.88 (5/8") $\otimes$				
Connecting method		Flare piping	Flare piping			
Refrigerant line (one way) length		Max.50m	e e re re G			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154			
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	piping length of 30m) Outdoor unit			
Drain pump		Built-in Drain pump				
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs			
Insulation for piping		Necessary (both L	<u> </u>			
ilibulation for piping						


Item	Indoor air temperature		Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	00

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz. (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

  (6) Branching pipe set "DIS-WA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U

  (7) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.


- (8) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

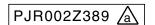

	Model	FDUM200VSPVD				
		Indoor unit FDUM100VD (2 units)	Outdoor unit FDC200VS			
Item						
Power source			380-415V 3N~50Hz / 380V 3N~60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	20.0 [ 7.0 (Min.)~22.4 (Max.)]	22.4 [ 7.6 (Min.) ~ 25.0 (Max.)]			
Power consumption	kW	6.86	6.72			
Running current	Α	9.9 / 10.5	9.8 / 10.3			
Power factor	%	99	99			
Inrush current	Α	5 < Max.runnir	ng current 19 >			
Sound Pressure Level	dB(A)	P-Hi: 41 Hi: 37 Me: 35 Lo: 32	57			
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 635	1,300 × 970 × 370			
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent			
Net weight	kg	59	122			
Refrigerant equipment Compressor type & Q'ty	_	-	GTC5150ND70K × 1			
Starting method		_	Direct line start			
Refrigerant oil	Q	_	1.45 M-MA32R			
Heat exchanger	-	Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 3	Propeller fan × 2			
Motor <starting method=""></starting>	W	50 + 100 < Direct line start >	86 x 2 < Direct line start >			
Air flow (Standard)	СММ	P-Hi: 34 Hi: 28 Me: 25 Lo: 22	Cooling: 150, Heating: 145			
Available static pressure	Pa	90 / 100 (at 28 CMM)	_			
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
nsulation (noise & heat)		Polyurethane form	_			
Electric heater	W	_	33 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wir	eless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	_			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
nstallation data Refrigerant piping size	mm	Liquid line : I/U $\phi$ 9.52 (3/8") ② $\phi$ 9.52 (3/8") × Gas line : I/U $\phi$ 15.88 (5/8") ② $\phi$ 15.88 (5/8")				
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing			
Refrigerant line (one way) length		Max.70m	-			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	**1.See page 154			
Refrigerant Quantity		R410A 5.4kg (Pre-charged up to the	e piping length of 30m) Outdoor unit			
Drain pump		Built-in Drain pump	_			
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs			
Insulation for piping		Necessary (both L	Liquid & Gas lines)			
Standard Accessories		Drain hose	Connecting pipe, Edging			
			011700			

Item	Indoor air temperature		Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB WB		DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60


- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz. (5) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.
- (6) Branching pipe set "DIS-WB1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch ~ I/U (7) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
- (8) When wireless remote controlier is used, fan is 3 speed setting (Hi-Me-Lo) only.

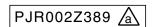

	Model	FDUM250VSPVD				
		Indoor unit FDUM125VD (2 units)	Outdoor unit FDC250VS			
Item						
Power source			380-415V 3N~50Hz / 380V 3N~60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	25.0 [ 10.0 (Min.)~28.0 (Max.)]	28.0 [ 9.5 (Min.)~31.5 (Max.)]			
Power consumption	kW	9.31	8.35			
Running current	Α	13.6 / 14.3	12.3 / 12.9			
Power factor	%	99	98			
Inrush current	Α	5 < Max.runnir	ng current 22 >			
Sound Pressure Level	dB(A)	P-Hi: 41 Hi: 38 Me: 36 Lo: 33	Cooling: 57 Heating: 58			
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 635	1,505 × 970 × 370			
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent			
Net weight	kg	59	140			
Refrigerant equipment Compressor type & Q'ty		-	GTC5150ND70K × 1			
Starting method		_	Direct line start			
Refrigerant oil	l	_	1.45 M-MA32R			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 3	Propeller fan × 2			
Motor <starting method=""></starting>	w	50 + 100 < Direct line start >	86 × 2 < Direct line start >			
Air flow (Standard)	СММ	P-Hi: 34 Hi: 28 Me: 25 Lo: 22	Cooling: 150, Heating: 145			
Available static pressure	Pa	85 / 100 (at 34 CMM)	_			
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )			
nsulation (noise & heat)		Polyurethane form	_			
Electric heater	W	_	33 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wir	eless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	<del>-</del>			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data Refrigerant piping size	mm	Liquid line : I/U $\phi$ 9.52 (3/8") ② $\phi$ 9.52 (3/8") × Gas line : I/U $\phi$ 15.88 (5/8") ② $\phi$ 15.88 (5/8")	0.8 ① φ 12.7 (1/2") × 0.8 O/U φ 12.7 (1/2") × 1.0 ① φ 22.22 (7/8") × 1.6 O/U φ 22.22 (7/8")			
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing			
Refrigerant line (one way) length		Max.70m	Liquid . I late / Gas . Diazing			
Vertical height difference between						
outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)				
Refrigerant Quantity			e piping length of 30m) Outdoor unit			
Drain pump		Built-in Drain pump	<del>-</del>			
Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs			
Insulation for piping		Necessary (both L	·			
Standard Accessories		Drain hose	Connecting pipe, Edging			

Item	Indoor air temperature		Outdoor air	temperature	External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	00

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
- (6) Branching pipe set "DIS-WB1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch ~ I/U (7) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
- (8) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

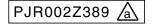


(c) Triple type Adapted to **RoHS** directive

	Model	FDUM140VNTVD			
		Indoor unit FDUM50VD (3 units)	Outdoor unit FDC140VN		
Item	$\frown$				
Power source			220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]		
Power consumption	kW	5.09	5.03 / 4.89		
Running current	Α	22.4 / 23.4	22.8 / 22.5		
Power factor	%	99	96 / 99		
Inrush current	Α	5 < Max.runnin	ng current 24 >		
Sound Pressure Level	dB(A)	P-Hi:35 Hi:34 Me:31 Lo:28	51		
Exterior dimensions Height x Width x Depth	mm	299 × 750 × 635	845 × 970 × 370		
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	34	81		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1		
Starting method		_	Direct line start		
Refrigerant oil	e	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1		
Motor <starting method=""></starting>	W	60 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	P-Hi:14 Hi:13 Me:12 Lo:11	Cooling: 75, Heating: 73		
Available static pressure	Pa	85 / 90 (at 14 CMM)	_		
Outdoor air intake		Possible	_		
Air filter, Q'ty		Procure locally	<del>-</del>		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)		
nsulation (noise & heat)		Polyurethane form	<del>-</del>		
Electric heater	w	-	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wire	eless : RCN-KIT3-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data Refrigerant piping size	mm	Liquid line : I/U $\phi$ 6.35 (1/4") ② $\phi$ 9.52 (3/8") × Gas line : I/U $\phi$ 12.7 (1/2") ② $\phi$ 12.7 (1/2") ×	( 0.8 ① φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8") ( 0.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 155		
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size <i>ϕ</i> 20 × 3pcs		
Insulation for piping		Necessary (both L	iquid & Gas lines)		
Standard Accessories		Drain hose	Edging		

Item	Indoor air temperature		m Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60


- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- (3) Sound pressure level indicates the value in an anechoic chamber. During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together.
  (6) Branching pipe set "DIS-TA1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch ~ I/U
  (7) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
  (8) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

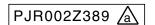

	Model	FDUM140VSTVD				
		Indoor unit FDUM50VD (3 units)	Outdoor unit FDC140VS			
tem						
Power source			380-415V 3N~50Hz / 380V 3N~60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]			
Power consumption	kW	5.09	5.03 / 4.89			
Running current	Α	7.4 / 7.8	7.6 / 7.5			
Power factor	%	99	96 / 99			
Inrush current	Α	5 < Max.runnir	ng current 15 >			
Sound Pressure Level	dB(A)	P-Hi:35 Hi:34 Me:31 Lo:28	51			
Exterior dimensions Height x Width x Depth	mm	299 × 750 × 635	845 × 970 × 370			
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent			
Net weight	kg	34	83			
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1			
Starting method		-	Direct line start			
Refrigerant oil	l	_	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1			
Motor <starting method=""></starting>	w	60 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	СММ	P-Hi: 14 Hi: 13 Me: 12 Lo: 11	Cooling: 75, Heating: 73			
Available static pressure	Pa	85 / 90 (at 14 CMM)	_			
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
nsulation (noise & heat)		Polyurethane form	_			
Electric heater	W	_	20 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wire	eless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	-			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
nstallation data	mm	Liquid line : I/U $\phi$ 6.35 (1/4") $$ $$ $$ $$ $$ $$ $$ $$ $$ $$	0.8 ① φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")			
Refrigerant piping size	mm	Gas line : I/U $\phi$ 12.7 (1/2") ② $\phi$ 12.7 (1/2") ×	0.8 ① φ 15.88 (5/8") × 1.0 O/U φ 15.88 (5/8")			
Connecting method		Flare piping	Flare piping			
Refrigerant line (one way) length		Max.50m				
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 155			
Refrigerant Quantity		R410A 3.8kg (Pre-charged up to the	e piping length of 30m) Outdoor unit			
Orain pump		Built-in Drain pump	-			
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs			
Insulation for piping		Necessary (both L	iquid & Gas lines)			
Standard Accessories		Drain hose	Edging			

Item	Indoor air temperature		Item Indoor air temperature Outdoor air temperature		Extemal static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60


- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz. (5) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
- (6) Branching pipe set "DIS-TA1"×1(option). ①: Pipe of O/U~Branch, ②: Pipe of Branch~I/U (7) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa.
- (8) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

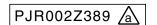

Model		FDUM200VSTVD				
		Indoor unit FDUM71VD (3 units)	Outdoor unit FDC200VS			
Item						
Power source			380-415V 3N ~ 50Hz / 380V 3N ~ 60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	20.0 [ 7.0 (Min.) ~ 22.4 (Max.)]	22.4 [ 7.6 (Min.)~25.0 (Max.)]			
Power consumption	kW	6.88	6.74			
Running current	Α	9.9 / 10.6	9.8 / 10.3			
Power factor	%	99	99			
Inrush current	Α	5 < Max.runnir	ng current 19 >			
Sound Pressure Level	dB(A)	P-Hi:38 Hi:35 Me:32 Lo:29	57			
Exterior dimensions Height x Width x Depth	mm	299 × 950 × 635	1,300 × 970 × 370			
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent			
Net weight	kg	40	122			
Refrigerant equipment Compressor type & Q'ty		<del>-</del>	GTC5150ND70K × 1			
Starting method		_	Direct line start			
Refrigerant oil	Q	_	1.45 M-MA32R			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 2			
Motor <starting method=""></starting>	W	100 < Direct line start >	86 × 2 < Direct line start >			
Air flow (Standard)	СММ	P-Hi: 23 Hi: 20 Me: 18 Lo: 15	Cooling: 150, Heating: 145			
Available static pressure	Pa	85 / 100 (at 20 CMM)	_			
Outdoor air intake		Possible	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )			
Insulation (noise & heat)		Polyurethane form	_			
Electric heater	W	_	33 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wire	eless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	_			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data	mrs	Liquid line : I/U φ 9.52 (3/8") ② φ 9.52 (3/8") :	× 0.8 ① $\phi$ 9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8")			
Refrigerant piping size	mm -	Gas line : I/U φ 15.88 (5/8") ② φ 15.88 (5/8")	) × 1.0 ① φ 22.22 (7/8") × 1.6 O/U φ 22.22 (7/8")			
Connecting method		Flare piping	Liquid : Flare / Gas : Brazing			
Refrigerant line (one way) length		Max.70m				
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 155			
Refrigerant Quantity		R410A 5.4kg (Pre-charged up to the	e piping length of 30m) Outdoor unit			
Drain pump		Built-in Drain pump	_			
Drain		Hose Connectable with VP20	Holes size <i>ϕ</i> 20 × 3pcs			
Insulation for piping		Necessary (both L	iquid & Gas lines)			
Standard Accessories		Drain hose	Connecting pipe, Edging			

Item	Indoor air temperature		m Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (4) The operation data indicates when the air-continuous its operated at 40003042 or 36000042. (c) Indoor unit specifications for one unit. Capacity and operation data is three indoor units are combined and run together. (f) Branching pipe set "DIS-TB1"×1(option). ①: Pipe of O/U ~ Branch, ②: Pipe of Branch ~ I/U (7) Initial static pressure values of optional air filter "UM-FL1E" are 5Pa. (8) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

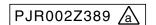

### (5) Duct connected - High static pressure type (FDU) (a) Single type


Adapted to RoHS directive

Model	FDU71VNVD				
	Indoor unit FDU71VD	Outdoor unit FDC71VN			
		220-240V~50Hz			
	Cooling	Heating			
kW	7.1 [ 3.2 (Min.)~8.0 (Max.)]	8.0 [ 3.6 (Min.) ~ 9.0 (Max.)]			
kW	2.08	2.21			
Α	9.2	10.2			
%	98	94			
Α	5 < Max.runnii	ng current 17 >			
dB(A)	Hi:41 Lo:37	48			
mm	297 × 850 × 650	750 × 968 × 340			
	-	Stucco White (4.2Y7.5/1.1) near equivalent			
kg	40	60			
	-	2YC45DXD × 1			
	_	Direct line start			
Q	_	0.65 FVC50K			
	Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
		Electronic expansion valve			
	Centrifugal fan × 2	Propeller fan × 1			
w	230 < Direct line start >	86 < Direct line start >			
СММ	Hi:20 Lo:17	Cooling: 60, Heating: 50			
Pa	Standard: 60 Max: 130	_			
	Possible (on return duct)	_			
	Procure locally	_			
	Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor)			
	Polyurethane form	_			
W		20 (Crank case heater)			
	wired : RC-E4 (option) wired	reless : RCN-KIT3-E (option)			
	Thermostat by electronics	_			
	Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
	Liquid line : I/U $\phi$ 9.52 (3/8") Pipe	φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")			
mm	Gas line : φ 15.88 (5/8")	φ 15.88 (5/8") × 1.0 φ 15.88 (5/8")			
	Flare piping	Flare piping			
	Max.50m				
	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154			
	R410A 2.95kg in outdoor unit (incl.	the amount for the piping of : 30m)			
	Built-in Drain pump				
	Hose Connectable with VP20	Holes size φ20 × 3pcs			
	Necessary (both	Liquid & Gas lines)			
	kW kW A A GB(A) mm kg W CMM Pa	Indoor unit FDU71VD			

Notes (1) The data are measured at the following conditions.

Item	Indoor air temperature		em Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- (a) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz
  (5) External static pressure is changeable to set by remote controller. Standard external static pressure is factory setting.
  MAX external static pressure is "High static pressure" setting.
  (6) Values of sound pressure level become 5dB(A) upper at external static pressure 130Pa.

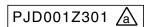

Model			100VNVD		
		Indoor unit FDU100VD	Outdoor unit FDC100VN		
Item					
Power source			220-240V~50Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	10.0 [ 4.0 (Min.) ~ 11.2 (Max.)]	11.2 [ 4.0 (Min.)~12.5 (Max.)]		
Power consumption	kW	2.88	2.99		
Running current	Α	12.7	13.1		
Power factor	%	99	99		
Inrush current	Α	5 < Max.runnir	ng current 25 >		
Sound Pressure Level	dB(A)	Hi: 42 Lo: 37	49		
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 650	845 × 970 × 370		
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	63	81		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1		
Starting method		_	Direct line start		
Refrigerant oil	e	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1		
Motor <starting method=""></starting>	w	280 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	Hi : 34 Lo : 27	Cooling: 75, Heating: 73		
Available static pressure	Pa	Standard: 60 Max: 130	_		
Outdoor air intake		Possible (on return duct)	_		
Air filter, Q'ty		Procure locally	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W	-	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wir	reless : RCN-KIT3-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		Liquid line : I/U φ 9.52 (3/8") Pipe (	φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")		
Refrigerant piping size	mm	Gas line : φ 15.88 (5/8")	φ 15.88 (5/8") × 1.0 φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs		
Insulation for piping		Necessary (both I	Liquid & Gas lines)		
Standard Accessories		Drain hose	Edging		

Item	Indoor air temperature		Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.


  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz

  (5) External static pressure is changeable to set by remote controller. Standard external static pressure is factory setting.

  MAX external static pressure is "High static pressure" setting.

  (6) Values of sound pressure level become 5dB(A) upper at external static pressure 130Pa.

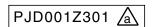

	Model	FDU100VSVD				
		Indoor unit <b>FDU100VD</b>	Outdoor unit FDC100VS			
Item						
Power source			380-415V 3N ~ 50Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	10.0 [ 4.0 (Min.) ~ 11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]			
Power consumption	kW	2.88	2.99			
Running current	Α	4.3	4.4			
Power factor	%	97	99			
Inrush current	А	5 < Max.runniı	ng current 16 >			
Sound Pressure Level	dB(A)	Hi : 42 Lo : 37	49			
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 650	845 × 970 × 370			
Exterior appearance			Stucco White			
(Munsell color)		<del>-</del>	(4.2Y7.5/1.1) near equivalent			
Net weight	kg	63	83			
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1			
Starting method		<del>-</del>	Direct line start			
Refrigerant oil	l	_	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control		_	Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1			
Motor <starting method=""></starting>	w	280 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	СММ	Hi : 34 Lo : 27	Cooling: 75, Heating: 73			
Available static pressure	Pa	Standard: 60 Max: 130				
Outdoor air intake		Possible (on return duct)	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )			
Insulation (noise & heat)		Polyurethane form	_			
Electric heater	w		20 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wir	eless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	_			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data		Liquid line: I/U $\phi$ 9.52 (3/8") Pipe	φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")			
Refrigerant piping size	mm		φ 15.88 (5/8") × 1.0 φ 15.88 (5/8")			
Connecting method		Flare piping	Flare piping			
Refrigerant line (one way) length		Max.50m	· · · · · · ·			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154			
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)			
Drain pump		Built-in Drain pump				
Drain		Hose Connectable with VP20	Holes size φ20 × 3pcs			
Insulation for piping			_iquid & Gas lines)			
Standard Accessories		Drain hose	Edging			

### Notes (1) The data are measured at the following conditions.

Item	Indoor air temperature		Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	00

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

- (a) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz
  (5) External static pressure is changeable to set by remote controller. Standard external static pressure is factory setting.
  MAX external static pressure is "High static pressure" setting.
  (6) Values of sound pressure level become 5dB(A) upper at external static pressure 130Pa.

PJD001Z301 🛕

Model		FDU12	25VNVD		
		Indoor unit FDU125VD	Outdoor unit FDC125VN		
Item					
Power source			220-240V~50Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	12.5 [ 5.0 (Min.) ~ 14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]		
Power consumption	kW	4.04	3.79		
Running current	Α	17.8	16.6		
Power factor	%	99	99		
Inrush current	Α	5 < Max.runnii	ng current 27 >		
Sound Pressure Level	dB(A)	Hi : 43 Lo : 38	Cooling: 50 Heating: 51		
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 650	845 × 970 × 370		
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	63	81		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1		
Starting method		_	Direct line start		
Refrigerant oil	l	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1		
Motor <starting method=""></starting>	W	370 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	Hi : 42 Lo : 33.5	Cooling: 75, Heating: 73		
Available static pressure	Pa	Standard: 60 Max: 130	_		
Outdoor air intake		Possible (on return duct)	_		
Air filter, Q'ty		Procure locally	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W		20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wir	reless : RCN-KIT3-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data	mm	Liquid line : I/U φ 9.52 (3/8") Pipe	φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")		
Refrigerant piping size	mm -	Gas line : φ15.88 (5/8")	φ 15.88 (5/8") × 1.0 φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs		
Insulation for piping		Necessary (both I	Liquid & Gas lines)		
Standard Accessories		Drain hose	Edging		

Item	Indoor air temperature		Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.


  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz

  (5) External static pressure is changeable to set by remote controller. Standard external static pressure is factory setting.

  MAX external static pressure is "High static pressure" setting.

  (6) Values of sound pressure level become 5dB(A) upper at external static pressure 130Pa.

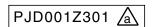

	Model	FDU125VSVD				
		Indoor unit <b>FDU125VD</b>	Outdoor unit FDC125VS			
Item						
Power source			380-415V 3N ~ 50Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	12.5 [ 5.0 (Min.) ~ 14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]			
Power consumption	kW	4.04	3.79			
Running current	Α	6.0	5.6			
Power factor	%	97	98			
Inrush current	Α	5 < Max.runniı	ng current 18 >			
Sound Pressure Level	dB(A)	Hi: 43 Lo: 38	Cooling: 50 Heating: 51			
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 650	845 × 970 × 370			
Exterior appearance			Stucco White			
(Munsell color)		_	(4.2Y7.5/1.1) near equivalent			
Net weight	kg	63	83			
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1			
Starting method		<del>-</del>	Direct line start			
Refrigerant oil	l	_	0.9 M-MA68			
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan x 1			
Motor <starting method=""></starting>	w	370 < Direct line start >	86 < Direct line start >			
Air flow (Standard)	СММ	Hi : 42 Lo : 33.5	Cooling: 75, Heating: 73			
Available static pressure	Pa	Standard: 60 Max: 130				
Outdoor air intake		Possible (on return duct)	_			
Air filter, Q'ty		Procure locally	_			
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )			
Insulation (noise & heat)		Polyurethane form	_			
Electric heater	w		20 (Crank case heater)			
Remote controller		wired : RC-E4 (option) wir	reless : RCN-KIT3-E (option)			
Room temperature control		Thermostat by electronics	_			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.			
Installation data		Liquid line: I/U $\phi$ 9.52 (3/8") Pipe	φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")			
Refrigerant piping size	mm —		φ 15.88 (5/8") × 1.0 φ 15.88 (5/8")			
Connecting method		Flare piping	Flare piping			
Refrigerant line (one way) length		Max.50m				
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 154			
Refrigerant Quantity		R410A 3.8ka in outdoor unit (incl.	the amount for the piping of : 30m)			
Drain pump		Built-in Drain pump	-			
Drain		Hose Connectable with VP20	Holes size φ 20 × 3pcs			
Insulation for piping			Liquid & Gas lines)			
Standard Accessories		Drain hose	Edging			

Item	Indoor air temperature		Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.

- (a) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz
  (5) External static pressure is changeable to set by remote controller. Standard external static pressure is factory setting.
  MAX external static pressure is "High static pressure" setting.
  (6) Values of sound pressure level become 5dB(A) upper at external static pressure 130Pa.

Model		FDU14	40VNVD		
		Indoor unit FDU140VD	Outdoor unit FDC140VN		
Item					
Power source			220-240V~50Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]		
Power consumption	kW	4.95	4.43		
Running current	Α	21.7	19.5		
Power factor	%	99	99		
Inrush current	Α	5 < Max.runnii	ng current 28 >		
Sound Pressure Level	dB(A)	Hi : 43 Lo : 38	51		
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 650	845 × 970 × 370		
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	63	81		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE2 × 1		
Starting method		<del>-</del>	Direct line start		
Refrigerant oil	l	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1		
Motor <starting method=""></starting>	W	370 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	Hi : 42 Lo : 33.5	Cooling: 75, Heating: 73		
Available static pressure	Pa	Standard: 60 Max: 130	_		
Outdoor air intake		Possible (on return duct)	_		
Air filter, Q'ty		Procure locally	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	w	_	20 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wir			
Room temperature control		Thermostat by electronics	_		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		Liquid line: I/U $\phi$ 9.52 (3/8") Pipe	φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")		
Refrigerant piping size	mm	Gas line : φ15.88 (5/8")	φ 15.88 (5/8") × 1.0 φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	※1.See page 154		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Drain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size φ20 x 3pcs		
Insulation for piping		Necessary (both I	Liquid & Gas lines)		
Standard Accessories		Drain hose	Edging		

Item	Indoor air temperature		Indoor air temperature Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.

  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz

  (5) External static pressure is changeable to set by remote controller. Standard external static pressure is factory setting.

  MAX external static pressure is "High static pressure" setting.

  (6) Values of sound pressure level become 5dB(A) upper at external static pressure 130Pa.

Model		FDU140VSVD			
		Indoor unit FDU140VD	Outdoor unit FDC140VS		
Item					
Power source			380-415V 3N ∼50Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.)~14.5 (Max.)]	16.0 [ 4.0 (Min.)~16.5 (Max.)]		
Power consumption	kW	4.95	4.43		
Running current	Α	7.4	6.6		
Power factor	%	97	97		
Inrush current	Α	5 < Max.runnir	ng current 19 >		
Sound Pressure Level	dB(A)	Hi: 43 Lo: 38	51		
Exterior dimensions Height x Width x Depth	mm	350 × 1,370 × 650	845 × 970 × 370		
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	63	83		
Refrigerant equipment Compressor type & Q'ty		-	RMT5126MDE3 × 1		
Starting method		<del>-</del>	Direct line start		
Refrigerant oil	l	_	0.9 M-MA68		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		_	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2	Propeller fan × 1		
Motor <starting method=""></starting>	w	370 < Direct line start >	86 < Direct line start >		
Air flow (Standard)	СММ	Hi: 42 Lo: 33.5	Cooling: 75, Heating: 73		
Available static pressure	Pa	Standard: 60 Max: 130	_		
Outdoor air intake		Possible (on return duct)	_		
Air filter, Q'ty		Procure locally	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )		
nsulation (noise & heat)		Polyurethane form	_		
Electric heater	w		20 (Crank case heater)		
Remote controller	**	wired : RC-E4 (option) wir	eless : RCN-KIT3-E (option)		
Room temperature control		Thermostat by electronics			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
nstallation data		Liquid line : I/U $\phi$ 9.52 (3/8") Pipe	φ 9.52 (3/8") × 0.8 O/U φ 9.52 (3/8")		
Refrigerant piping size	mm —		φ 15.88 (5/8") × 1.0 φ 15.88 (5/8")		
Connecting method		Flare piping	Flare piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	**1.See page 154		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Orain pump		Built-in Drain pump	_		
Drain		Hose Connectable with VP20	Holes size $\phi$ 20 × 3pcs		
nsulation for piping		Necessary (both I	Liquid & Gas lines)		
11.3		Drain hose	Edging		

Item	Indoor air temperature Outdoor air temperature External static pressure of		Outdoor air temperature		External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	60
Heating	20°C		7°C	6°C	60

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber. During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz
- (5) External static pressure is changeable to set by remote controller. Standard external static pressure is factory setting.
   (6) Values of sound pressure level become 5dB(A) upper at external static pressure 130Pa.

Model		FDU200VSVD			
		Indoor unit FDU200VD	Outdoor unit FDC200VS		
Item					
Power source			380-415V 3N~50Hz / 380V 3N~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	20.0 [ 7.0 (Min.)~22.4 (Max.)]	22.4 [ 7.6 (Min.)~25.0 (Max.)]		
Power consumption	kW	6.59 / 6.58	6.08 / 5.84		
Running current	Α	10.8 / 11.4	10.2 / 10.3		
Power factor	%	88	86		
Inrush current	Α	5 < Max.runnir	ng current 24 >		
Sound Pressure Level	dB(A)	51	57		
Exterior dimensions Height x Width x Depth	mm	360 × 1,570 × 830	1,300 × 970 × 370		
Exterior appearance (Munsell color)		-	Stucco White (4.2Y7.5/1.1) near equivalent		
Net weight	kg	92	122		
Refrigerant equipment Compressor type & Q'ty		-	GTC5150ND70K × 1		
Starting method		_	Direct line start		
Refrigerant oil	e	_	1.45 M-MA32R		
Heat exchanger		Louver fin & inner grooved tubing	Straight fin & inner grooved tubing		
Refrigerant control		=	Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 2		
Motor <starting method=""></starting>	W	270 × 2 < Direct line start >	86 × 2 < Direct line start >		
Air flow (Standard)	СММ	Hi : 51 / 60	Cooling: 150, Heating: 145		
Available static pressure	Pa	200	_		
Outdoor air intake		Possible (on return duct)	_		
Air filter, Q'ty		Procure locally	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W	_	33 (Crank case heater)		
Remote controller		wired : RC-E4 (option) wir	reless : RCN-KIT3-E (option)		
Room temperature control		Thermostat by electronics	_		
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data Refrigerant piping size	mm		$\phi$ 9.52 (3/8") × 0.8 O/U $\phi$ 9.52 (3/8") $\phi$ 22.22 (7/8") × 1.6 $\phi$ 22.22 (7/8")		
Connecting method		Brazing	Liquid : Flare / Gas : Brazing		
Refrigerant line (one way) length		Max.70m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	**1.See page 154		
Refrigerant Quantity		R410A 5.4kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Drain pump		_	_		
Drain		Hose Connectable with VP25	Holes size $\phi$ 20 × 3pcs		
Insulation for piping		Necessary (both L	Liquid & Gas lines)		
Standard Accessories		-	Connecting pipe, Edging		


### Notes (1) The data are measured at the following conditions.

Item	Indoor air temperature		Outdoor air	temperature	External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	100
Heating	20°C		7°C	6°C	(With optional fan controller kit:U-FCRA)

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

During operation these value are somewhat higher due to ambient temperature.

- (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.
- (5) Values of sound pressure level become 5dB(A) upper at external static pressure 200Pa (factory setting).
  (6) Values of air flow are based at external static pressure 200Pa (factory setting).

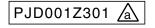

	Model				
		Indoor unit <b>FDU250VD</b>	Outdoor unit FDC250VS		
Item					
Power source			380-415V 3N~50Hz / 380V 3N~60Hz		
Operation data	Cooling		Heating		
Nominal capacity	kW	25.0 [ 10.0 (Min.)~28.0 (Max.)]	28.0 [ 9.5 (Min.) ~ 31.5 (Max.)]		
Power consumption	kW	9.91 / 10.21	8.50 / 8.22		
Running current	Α	15.7 / 17.0	14.4 / 14.7		
Power factor	%	91	85		
Inrush current	Α	5 < Max.runni	ng current 27 >		
Sound Pressure Level	dB(A)	52	Cooling: 57 Heating: 58		
Exterior dimensions Height x Width x Depth	mm	360 × 1,570 × 830	1,505 × 970 × 370		
Exterior appearance			Stucco White		
(Munsell color)		<del>-</del>	(4.2Y7.5/1.1) near equivalent		
Net weight	kg	92	140		
Refrigerant equipment Compressor type & Q'ty		-	GTC5150ND70K × 1		
Starting method		_	Direct line start		
Refrigerant oil	Q.	_	1.45 M-MA32R		
Heat exchanger	t exchanger Louver fin & inner groov		Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4	Propeller fan × 2		
Motor <starting method=""></starting>	w	270 × 2 < Direct line start >	86 × 2 < Direct line start >		
Air flow (Standard)	CMM	Hi : 68 / 80	Cooling: 150, Heating: 145		
Available static pressure	Pa	200	_		
Outdoor air intake		Possible (on return duct)	_		
Air filter, Q'ty		Procure locally	_		
Shock & vibration absorber		Rubber sleeve (for fan motor)	Rubber sleeve (for Compressor )		
Insulation (noise & heat)		Polyurethane form	_		
Electric heater	W	<del>-</del>	33 (Crank case heater)		
Remote controller		wired : BC-F4 (option) wired	reless : RCN-KIT3-E (option)		
Room temperature control		Thermostat by electronics			
Safety equipment		Internal thermostat for fan motor Frost protection thermostat	Internal thermostat for fan motor Abnormal discharge temperature protection.		
Installation data		Liquid line : I/U φ 12.7 (1/2") Pipe	φ 12.7 (1/2") × 0.8 O/U φ 12.7 (1/2")		
Refrigerant piping size	mm —		$\phi$ 22.22 (7/8") × 1.6 $\phi$ 22.22 (7/8")		
Connecting method		Brazing	Liquid : Flare / Gas : Brazing		
Refrigerant line (one way) length		Max.70m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154		
Refrigerant Quantity		R410A 7.2kg in outdoor unit (incl.	the amount for the piping of : 30m)		
Drain pump		_			
Drain .		Hose Connectable with VP25	Holes size φ 20 × 3pcs		
			<u> </u>		
Insulation for piping		Necessary (both	Liquid & Gas lines)		

Item	Indoor air temperature		Outdoor air	temperature	External static pressure of indoor unit
Operation	DB	WB	DB	WB	Pa
Cooling	27°C	19°C	35°C	24°C	100
Heating	20°C		7°C	6°C	(With optional fan controller kit:U-FCRA)

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound pressure level indicates the value in an anechoic chamber.


- (a) Sound pressure level indicates the value in an affection chamber.

  During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

  (5) Values of sound pressure level become 5dB(A) upper at external static pressure 200Pa (factory setting).

  (6) Values of air flow are based at external static pressure 200Pa (factory setting).

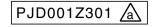


# $\exists$ **EXTERIOR DIMENSIONS**

Indoor units

**a** 

Ceiling cassette-4way compact type (FDTC) Models FDTC40VD, 50VD, 60VD

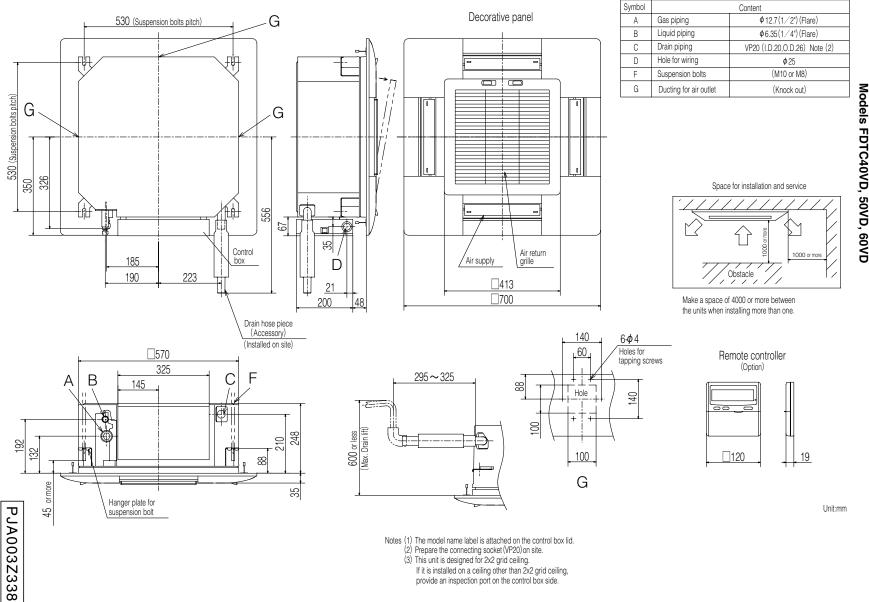



Notes (1) The model name label is attached on the control box lid.

(3) This unit is designed for 2x2 grid ceiling.

If it is installed on a ceiling other than 2x2 grid ceiling, provide an inspection port on the control box side.



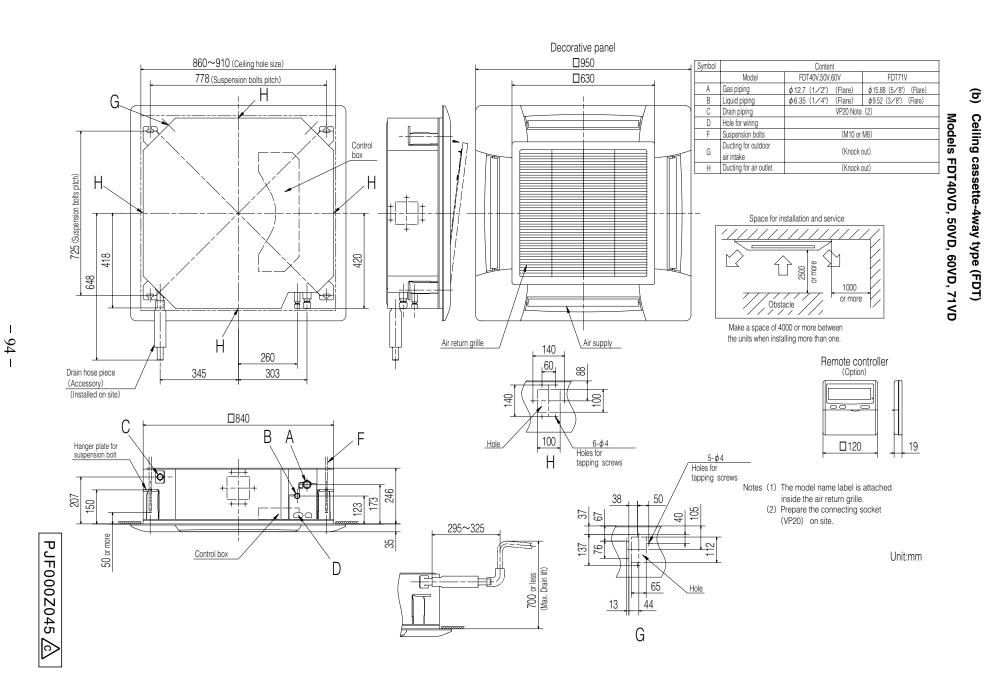

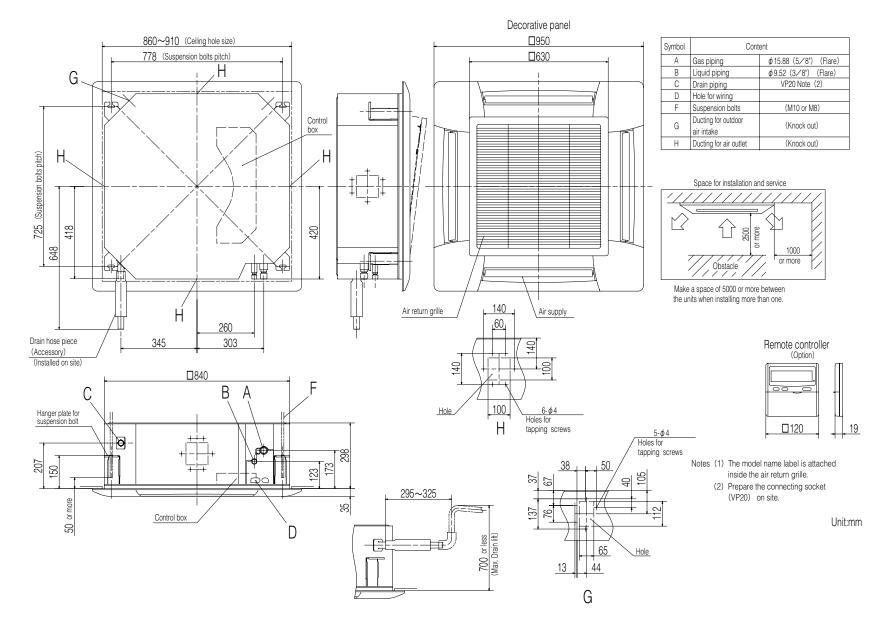

PJF000Z046 6

PFA003Z816/A

Obstacle

Make a space of 4000 or more between the units when installing more than one.

Piping can be connected from 3 different direction.

Remove the cutout using side cutter or similar tool.

290 (Suspension bolts pitch)

135

D

145

410

C<sub>1</sub>, C<sub>2</sub>

23 13

<u>O</u>


Ceiling suspended type (FDEN)

'10 • PAC-DB-142

Models FDEN40VD, 50VD

C<sub>1</sub>, C<sub>2</sub>



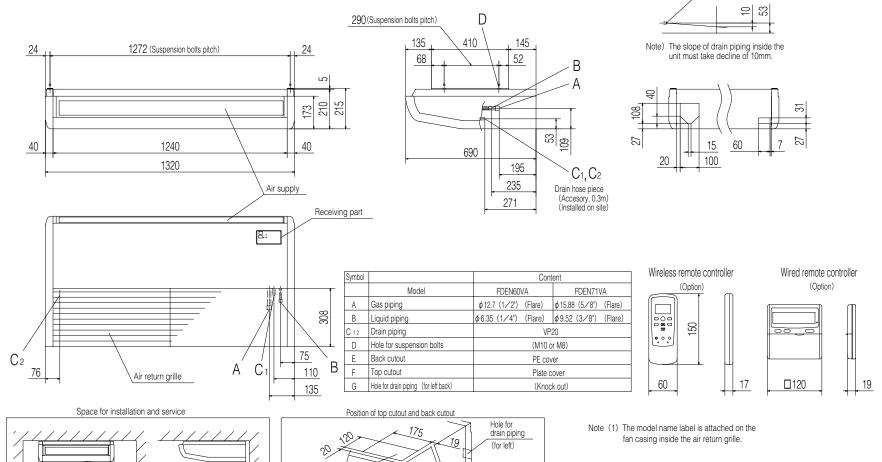

G

Unit:mm

'10 • PAC-DB-142

150 or more

5 or more

Right side cutout

Piping can be connected from 3 different direction.


Remove the cutout using side cutter or similar tool.

300 or more


Obstacle

100 or more


'10 • PAC-DB-142

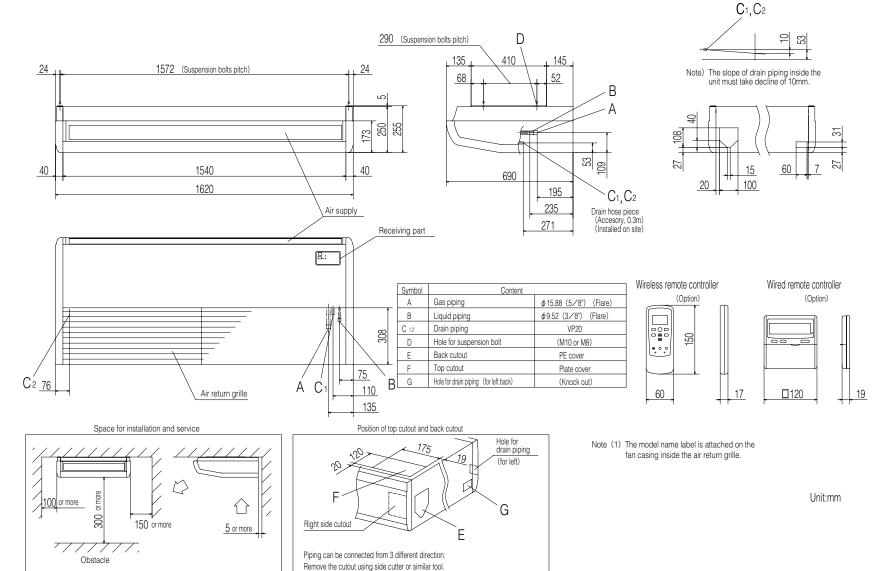

Make a space of 5000 or more between the units when installing more than one.

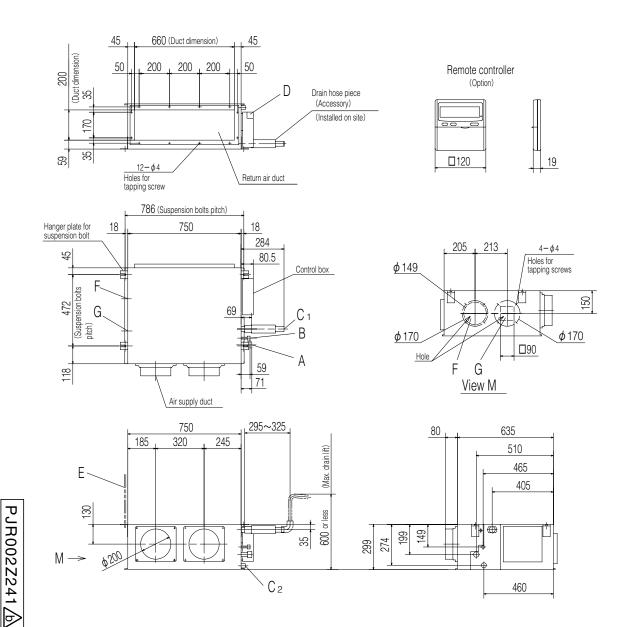

Symbol	Content			
Α	Gas piping	φ12.7 (1/2") (Flare)		
В	Liquid piping	φ6.35 (1/4") (Flare)		
C1	Drain piping	VP20 Note (2)		
C2	Drain piping (Gravity drainage)	VP20		
D	Hole for wiring			
Е	Suspension bolts	(M10)		
F	Ducting for outdoor air intake	(φ150) (Knock out)		
G	Ducting for air outlet	(φ125) (Knock out)		

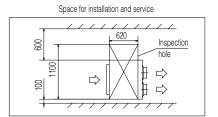

Notes (1) The model name label is attached on the lid of the control box.

(2) Prepare the connecting socket

Prepare the connecting socket (VP20) on site.


Unit:mm

<u>a</u>

Model FDUM50VD

Duct connected-Low/Middle static pressure type (FDUM)




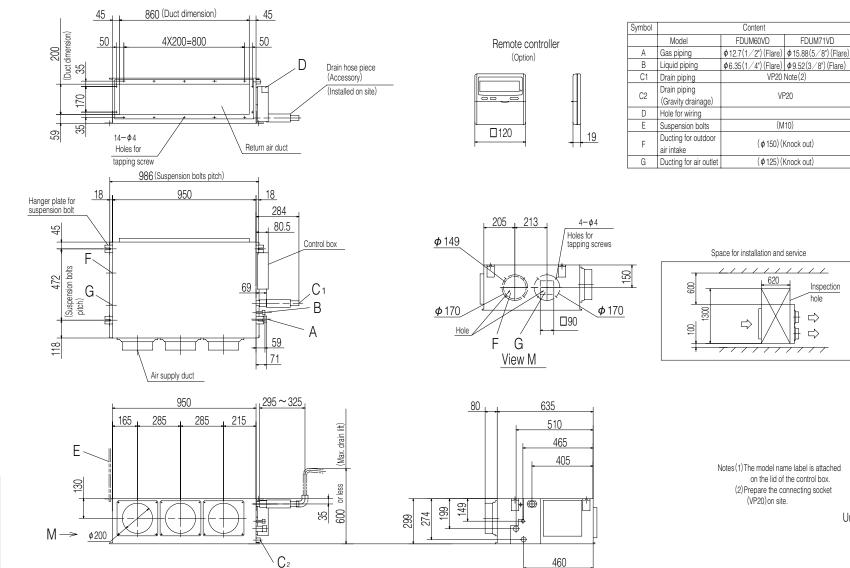

'10 • PAC-DB-142


Unit:mm

101 -

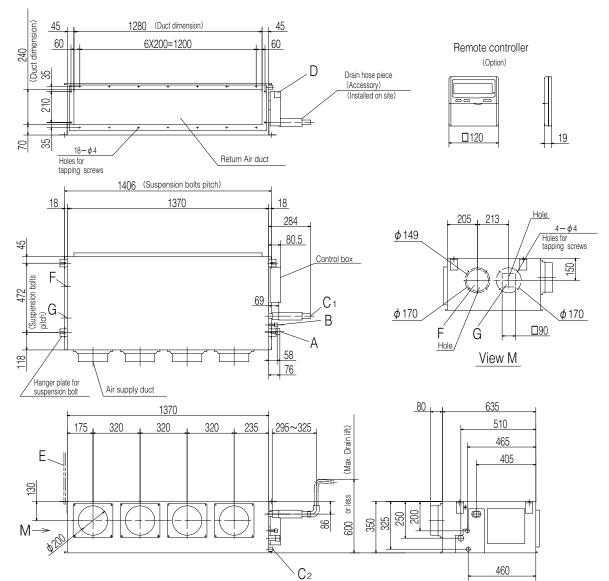

Symbol	Cor	ntent		
Α	Gas piping	φ15.88 (5/8") (Flare)		
В	Liquid piping	φ9.52 (3/8") (Flare)		
C1	Drain piping	VP20 Note (2)		
C2	Drain piping (Gravity drainage)	VP20		
D	Hole for wiring			
Е	Suspension bolts	(M10)		
F	Ducting for outdoor air intake	(φ150) (Knock out)		
G	Ducting for air outlet	(φ125) (Knock out)		



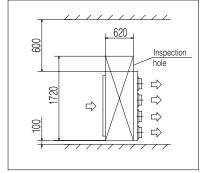


- Notes (1) The model name label is attached on the lid of the control box.
  - (2) Prepare the connecting socket (VP20) on site.

Unit:mm

## '10 • PAC-DB-142

### **e** Duct connected-High static pressure type (FDU) Model FDU71VD


Unit:mm

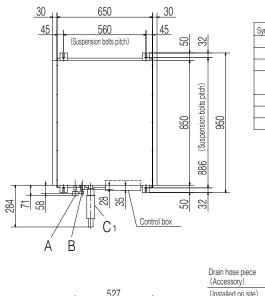


Symbol	Content			
Α	Gas piping	φ 15.88 (5/8") (Flare)		
В	Liquid piping	φ9.52 (3/8") (Flare)		
C 1	Drain piping	VP20 Note (2)		
C 2	Drain piping (Gravity drainage) VP20			
D	Hole for wiring			
Е	Suspension bolts	(M10)		
F	Inspection hole	(635X1200)		

Remote controller

(Option)

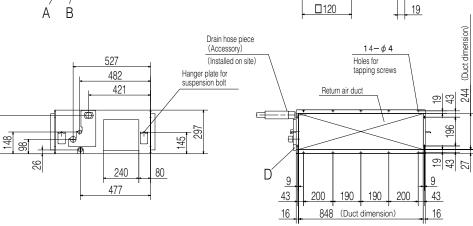

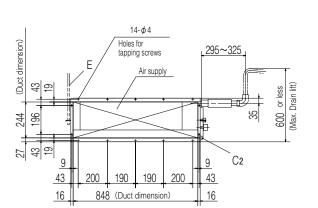

Space for installation and service

û

1200

100


262

600

- Notes (1) The model name label is attached on the lid of the control box.
  (2) Prepare the connecting socket (VP20) on site.

PJD001Z214

Unit:mm

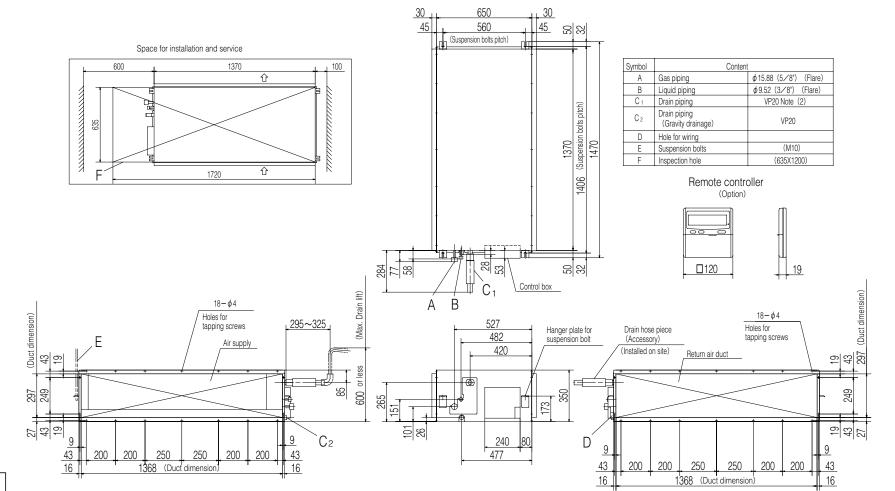

Notes (1) The model name label is attached on the lid of the control box.

(2) Prepare the connecting socket (VP20) on site.

103 -

830

104 -


RCT000Z004


## '10 • PAC-DB-142


(2) Outdoor units

Models SRC40ZIX-S, 50ZIX-S, 60ZIX-S

Symbol	Content		
Α	Service valve connection (gas side)	φ12.7(1/2*)(Flare)	
В	Service valve connection (liquid side)	φ6.35(1/4") (Flare)	
С	Pipe / cable draw-out hole		
D	Drain discharge hole	φ20×5places	
Е	Anchor bolt hole	M10×4places	

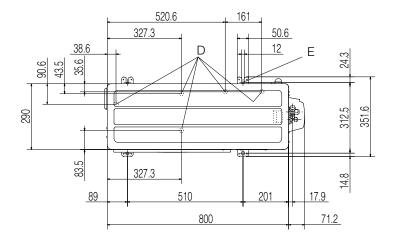


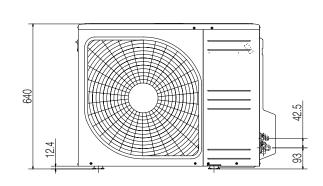

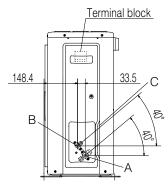

### Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- A wall in front of the blower outlet must not exceed the units height.
   The model name label is attached on the lower right corner of the front panel.

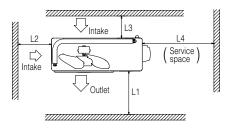

Minimum installation space

Examples of installation  Dimensions	1	Ш	III	IV
L1	Open	280	280	180
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open

Unit:mm


**-** 106 **-**

Symbol	Content	
Α	Service valve connection (gas side)	φ15.88(5/8") (Flare)
В	Service valve connection (liquid side)	φ9.52(3/8") (Flare)
С	Pipe / cable draw-out hole	
D	Drain discharge hole	φ20×3places
Е	Anchor bolt hole	M10×4places

### Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.

- (4) Leave 1m or more space above the unit.
  (5) A wall in front of the blower outlet must not exceed the units height.
  (6) The model name label is attached on the lower right corner of the front panel.

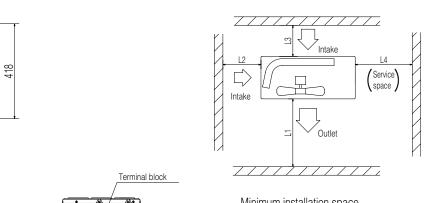

Minimum installation space

Examples of installation Dimensions	I	II	III
L1	Open	Open	500
L2	300	250	Open
L3	100	150	100
L4	250	250	250

Unit:mm

		880 88	Terminal block
750	24	3.5	B C

Ε

380

19

32

60

310


47.5

9

340



'10 • PAC-DB-142

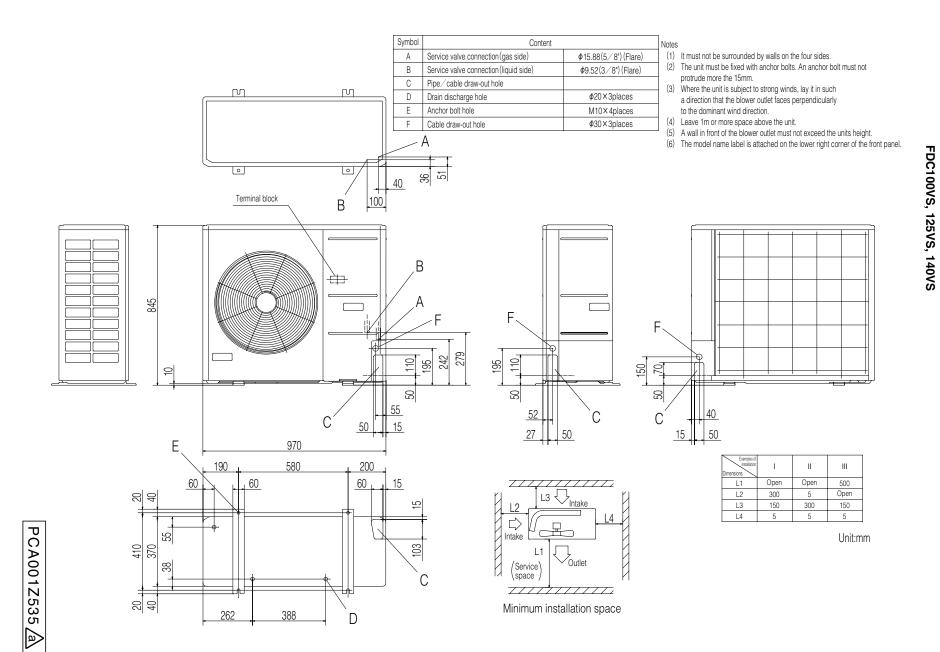

'10 • PAC-DB-142

Notes

108

Notes

PCA001Z537

a

The peeling-off length of sheath

### (3) Remote controller (Option parts)

(a) wired remote controller (RC-E4)

□120

### Wiring outlet Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc. Exposed mounting In case of pulling out from upper left In case of pulling out from center 48 0.3mm<sup>2</sup>×2 cores Upper part In case of pulling out In case of pulling out from upper left Lower case LCD 0 0000 Sheath Sheath Upper Upper<sub>I</sub> $\bigcirc$ Upper cace Upper cace Board ΠQ Lower Wiring Lower Wiring X, Y Terminal block In case of pulling out from center In case of pulling out from upper left Attach M3 screw with washer

### Embedded mounting

### Remote control installation dimensions

Pulling out from upper left Pulling out from center


X wiring: 170mm

Y wiring: 190mm

The peeling-off length of sheath

X wiring : 215mm

Y wiring: 195mm

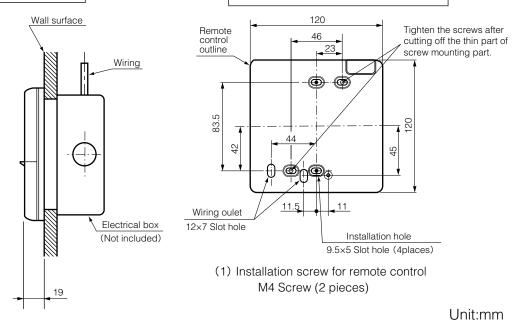


### Wiring specifications


(1) If the prolongation is over 100m, change to the size below. But, wiring in the remote controller case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Length	Wiring thickness
100 to 200m	0.5mm <sup>2</sup> ×2 cores
Under 300m	0.75mm <sup>2</sup> ×2 cores
Under 400m	1.25mm <sup>2</sup> ×2 cores
Under 600m	2.0mm <sup>2</sup> ×2 cores

PJZ000Z274

### (b) Wireless remote controller (RCN-E1R)

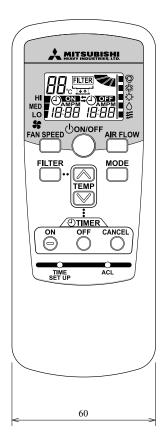

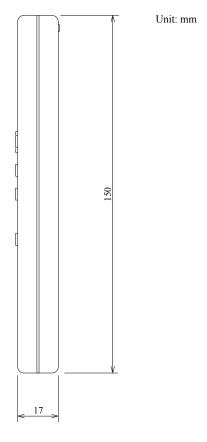

CNB~Z	Connector
DM	Drain motor
F200~203	Fuse
FMι	Fan motor
FS	Float switch
LED•2	Indication lamp (Green-Normal operation)

LED•3	Indication lamp (Red-Inspection)
LM1~4	Louver motor
SW2	Remote controller communication address
SW5	Plural units Master / Slave setting
SW6	Model capacity setting
SW7-1	Operation check, Drain motor test run

TB1	Terminal block (Power source)
	(☐ mark)
TB2	Terminal block (Signal line) (☐mark)
Thc	Thermistor (Remote controller)
Th <sub>I</sub> -A	Thermistor (Return air)
Th <sub>I</sub> -R1,2,3	Thermistor(Heat exchanger)
X4	Relay for DM
mark	Closed-end connector

### Color Marks

	Mark	Color	7
	BK	Black	1
	BL	Blue	
	BR	Brown	
	OR	Orange	
	RD	Red	7
	WH	White	ା ପୂ
	Υ	Yellow	<u> 6</u>
	Y/GN	Yellow/Green	S
			Models FDTC40VD, 50VD, 60VD
			$^{\circ}$
			6
			6
			ر. ن
			Ş
			Ģ
			6
			>
L			D


 $\Xi$ Ш

Indoor units
(a) Ceiling cassette-4way compact type (FDTC)

**ECTRICAL WIRING** 

Remote controller Control PCB CNB <u>t</u>° CNI LED·3 LED•2 CNH Power PCB Connecting line between indoor unit and outdoor unit CNW2 RD CNW3 RD SW2 Power source line 112 Signal line 3 Earth Power circuit CNW1 TB1 SW5 CNW0 <sup>1</sup> CNW4 CNN SW6 F203 (0.16A) SW7 RD BL BR OR WH CNM CNR WH CNR2 CNM3 DM (M) CNM4 +12 CNT (Compressor ON)
(Inspection) XR5 (Remote operation input:volt-free contact) CNJ2 WH

- 2. TB1 is the terminal block for heavy current (connecting line between indoor unit and outdoor unit),
- and TB2 is the terminal block for weak current (remote controller).
- 3. See the wiring diagram of outside unit about the line between inside unit and outside unit.
- 4. Use twin core cable (0.3mm<sup>2</sup>X2) at remote controller line. See spec sheet of remote controller in case that the total length is more than 100m.
- 5. Do not put remote controller line alongside power source line.

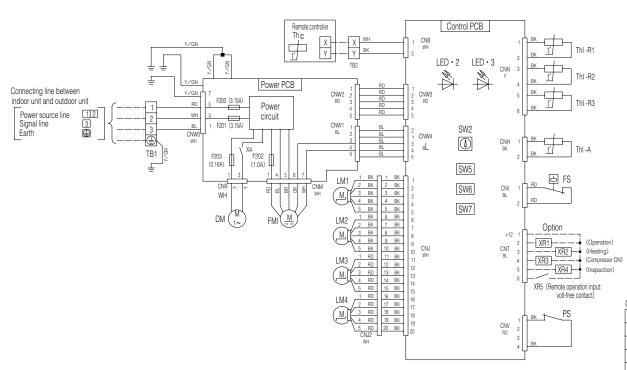

CNB∼Z	Connector
DM	Drain motor
F200~203	Fuse
FMI	Fan motor
FS	Float switch
LED · 2	Indication lamp (Green-Normal operation)
LED · 3	Indication lamp (Red-Inspection)
LM1~4	Louver motor
PS	Panel switch
SW2	Remote controller communication address
SW5	Plural units Master/Slave setting
SW6	Model capacity setting
SW7-1	Operation check, Drain motor test run
TB1	Terminal block (Power source) (□mark)
TB2	Terminal block (Signal line) (□mark)
Thc	Thermistor (Remote controller)
ThI -A	Thermistor (Return air)
ThI -R1,2,3	Thermistor (Heat exchanger)
X4	Relay for DM
■mark	Closed-end connector

<u>6</u>

Ceiling cassette-4way type (FDT)


'10 • PAC-DB-142

Models FDT40VD, 50VD, 60VD, 71VD, 100VD, 125VD, 140VD

### Color Marks

JOIOT Marks			
Mark	Color	Mark	Color
BK	Black	RD	Red
BL	Blue	WH	White
BR	Brown	Υ	Yellow
OR	Orange	Y/GN	Yellow/Green

- 2. See the wiring diagram of outside unit about the line between inside unit and outside unit.
- Use twin core cable (0.3mm²X2) at remote controller line. See spec sheet of remote controller in case that the total length is more than 100m.
- Do not put remote controller line alongside power source line.

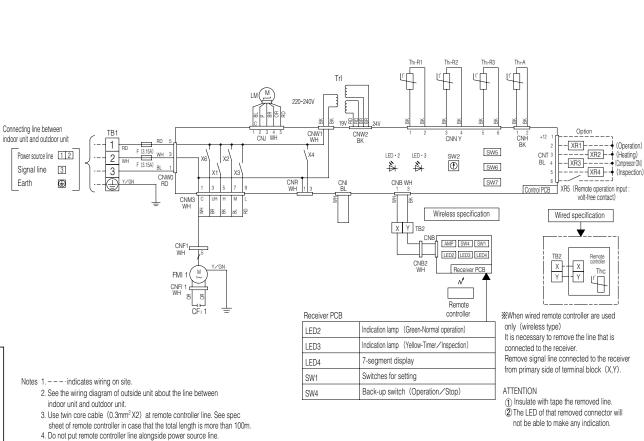

### Capacitor for FMI Models FDEN40VD, 50VD Connector Fuse Fan motor (with thermostat) Indication lamp (Green-Normal operation) Indication lamp (Red-Inspection) Louver motor Remote controller communication address Plural units Master/Slave setting Model capacity setting Operation check, Drain motor test run Terminal block (Power source) (□mark) Terminal block (Signal line) (□mark) Thermistor (Remote controller) Thermistor (Return air) Thermistor (Heat exchanger) Thl -R1,2,3

<u>o</u>

Ceiling suspended type (FDEN)

'10 • PAC-DB-142

### Color Marke

CFI 1

FMI 1

LED · 2

LED · 3

SW2

SW5

SW6 SW7-1

TB1

TB2

Thc

Thl -A

X1~3,6

CNB~Z

CUIUI IVIAII	NO.		
Mark	Color	Mark	Color
BK	Black	RD	Red
BL	Blue	WH	White
BR	Brown	Υ	Yellow
OR	Orange	Y/GN	Yellow/Green
Р	Pink		

Transformer


Relay for FM

Relay for DM

indoor unit and outdoor unit.

3. Use twin core cable (0.3mm² X2) at remote controller line. See spec sheet of remote controller in case that the total length is more than 100m.

4. Do not put remote controller line alongside power source line.

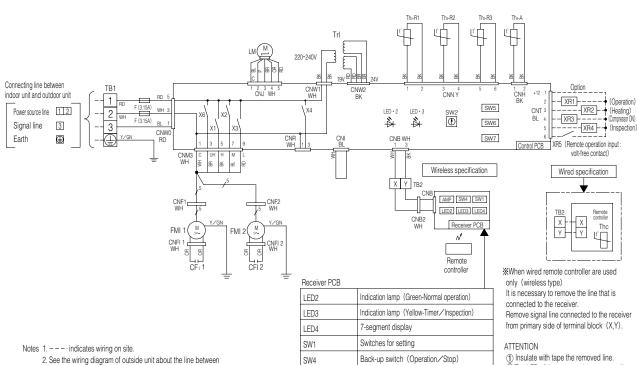

CFI 1,2	Capacitor for FMI	
CNB~Z	Connector	
F	Fuse	
FMI 1,2	Fan motor (with thermostat)	
LED • 2	Indication lamp (Green-Normal operation)	
LED · 3	Indication lamp (Red-Inspection)	
LM	Louver motor	
SW2	Remote controller communication address	
SW5	Plural units Master/Slave setting	
SW6	Model capacity setting	
SW7-1	Operation check, Drain motor test run	
TB1	Terminal block (Power source) (□mark)	
TB2	Terminal block (Signal line) (□mark)	
Thc	Thermistor (Remote controller)	
ThI -A	Thermistor (Return air)	
Thl -R1,2,3	Thermistor (Heat exchanger)	
Trl	Transformer	
X1~3,6	Relay for FM	
X4	Relay for DM	
■mark	Closed-end connector	

Models FDEN60VD, 71VD, 100VD, 125VD, 140VD

'10 • PAC-DB-142


### Color Marke

CUIUI IVIAIT	15		
Mark	Color	Mark	Color
BK	Black	RD	Red
BL	Blue	WH	White
BR	Brown	Υ	Yellow
OR	Orange	Y/GN	Yellow/Green
Р	Pink		

2 The LED of that removed connector will not be able to make any indication.


# (d) Duct connected-Low/Middle static pressure type (FDUM) Models FDUM50VD, 60VD, 71VD

'10 • PAC-DB-142

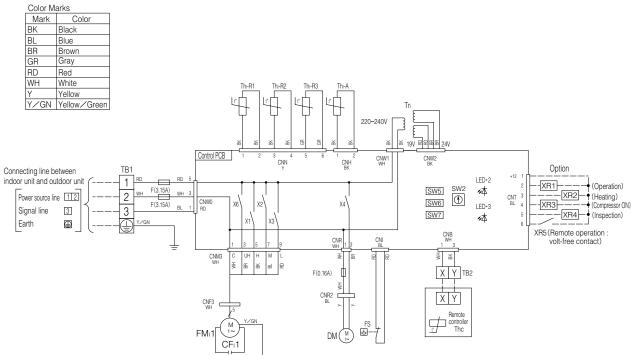

	CFi1	Capacitor for FMI
	CNB~Z	Connector
	DM	Drain motor
	F	Fuse
	FMI1	Fan motor(with thermostat)
	FS	Float switch
	LED•2	Indication lamp (Green-Normal operation)
	LED•3	Indication lamp (Red-Inspection)
	SW2	Remote controller communication address
	SW5	Plural units Master/Slave setting
	SW6	Model capacity setting
	SW7-1	Operation check, Drain motor test run
N)	TB1	Terminal block(Power source) (□mark)
	TB2	Terminal block(Signal line) (□mark)
	Thc	Thermistor(Remote controller)
	Thl -A	Thermistor (Return air)
	Thl -R1,2,3	Thermistor (Heat exchanger)
	Trl	Transformer
	X1~3,6	Relay for FM
	X4	Relay for DM

- 2. See the wiring diagram of outside unit about the line between inside unit and outside unit.
- Use twin core cable (0.3mm² X2) at remote controller line. See spec sheet of remote controller in case that the total length is more than 100m.
- 4. Do not put remote controller line alongside power source line.

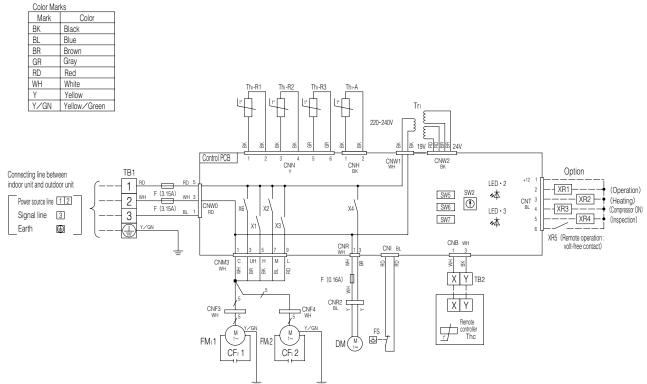


CFI1,2	Capacitor for FMI	
CNB~Z	Connector	
DM	Drain motor	
F	Fuse	
FMI 1,2	Fan motor (with thermostat)	
FS	Float switch	
LED · 2	Indication lamp (Green-Normal operation)	
LED · 3	Indication lamp (Red-Inspection)	
SW2	Remote controller communication address	
SW5	Plural units Master/Slave setting	
SW6	Model capacity setting	
SW7-1	Operation check, Drain motor test run	
TB1	Terminal block (Power source) (□mark)	
TB2	Terminal block (Signal line) (□mark)	
Thc	Thermistor (Remote controller)	
Thl -A	Thermistor (Return air)	
Thl -R1,2,3	Thermistor (Heat exchanger)	
Trl	Transformer	
X1~3,6	Relay for FM	
X4	Relay for DM	
■mark	Closed-end connector	

- See the wiring diagram of outside unit about the line between inside unit and outside unit.
- Use twin core cable (0.3mm² X2) at remote controller line. See spec sheet of remote controller in case that the total length is more than 100m.
- Do not put remote controller line alongside power source line.

## **e** Duct connected-High static pressure type (FDU) Model FDU71VD

### Color Marks

Mark	Color	Mark	Color
BK	Black	Р	Pink
BL	Blue	RD	Red
BR	Brown	WH	White
GR	Gray	Υ	Yellow
OR	Orange	Y/GN	Yellow/Green

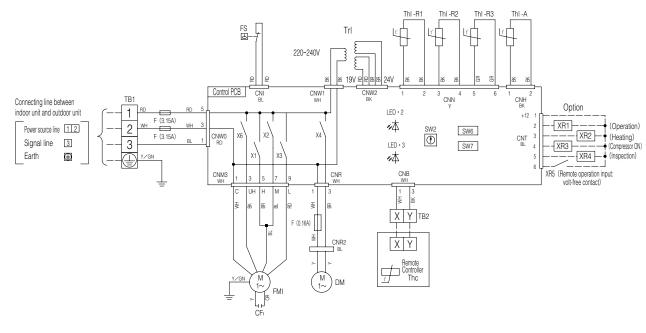


CFI	Capacitor for FMI	
CNB~Z	Connector	
DM	Drain motor	
F	Fuse	
FMI	Fan motor (with thermostat)	
FS	Float switch	
LED · 2	Indication lamp (Green-Normal operation)	
LED · 3	Indication lamp (Red-Inspection)	
SW2	Remote controller communication address	
SW6	Model capacity setting	
SW7-1	Operation check, Drain motor test run	
TB1	Terminal block (Power source) (□mark)	
TB2	Terminal block (Signal line) (□mark)	
Thc	Thermistor (Remote controller)	
Thl -A	Thermistor (Return air)	
Thl -R1,2,3	Thermistor (Heat exchanger)	
Trl	Transformer	
X1~3,6	Relay for FM	
X4	Relay for DM	
■mark	Closed-end connector	
■IIIdIK	Glosea-eria connector	

- See the wiring diagram of outside unit about the line between inside unit and outside unit.
- 3. Use twin core cable (0.3mm<sup>2</sup>X2) at remote controller line. See spec sheet of remote controller in case that the total length is more than 100m.

  4. Do not put remote controller line alongside power source line.


### Color Marks

Mark	Color	Mark	Color
BK	Black	Р	Pink
BL	Blue	RD	Red
BR	Brown	WH	White
GR	Gray	Υ	Yellow
OR	Orange	Y/GN	Yellow/Green

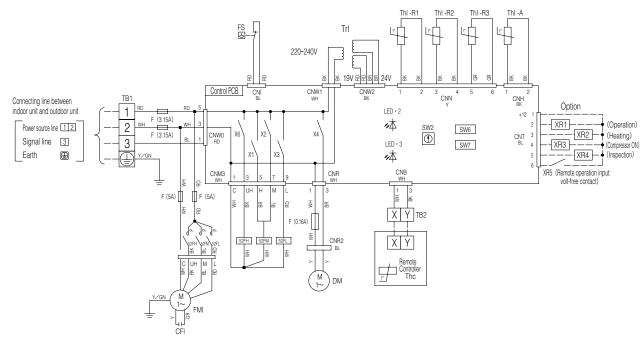

CFI	Capacitor for FMI
CNB~Z	Connector
DM	Drain motor
F	Fuse
FMI	Fan motor (with thermostat)
FS	Float switch
LED • 2	Indication lamp (Green-Normal operation)
LED • 3	Indication lamp (Red-Inspection)
SW2	Remote controller communication address
SW6	Model capacity setting
SW7-1	Operation check, Drain motor test run
TB1	Terminal block (Power source) (□mark)
TB2	Terminal block (Signal line) (□mark)
Thc	Thermistor (Remote controller)
Thl -A	Thermistor (Return air)
Thl -R1,2,3	Thermistor (Heat exchanger)
Trl	Transformer
X1~3,6	Relay for FM
X4	Relay for DM
■mark	Closed-end connector
52FL,FM,FH	Electromagnetic contactor for FMI

- 2. See the wiring diagram of outside unit about the line between inside unit and outside unit.
- Use twin core cable (0.3mm² X2) at remote controller line. See spec sheet of remote controller in case that the total length is more than 100m.
- 4. Do not put remote controller line alongside power source line.

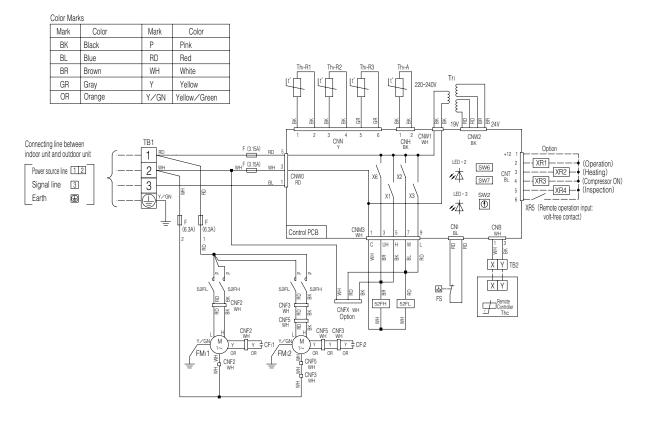

CFI 1,2	Capacitor for FMI
CNB~Z	Connector
F	Fuse
FC	Fan controller
FMI 1,2	Fan motor (with thermostat)
FS	Float switch
LED · 2	Indication lamp (Green-Normal operation)
LED · 3	Indication lamp (Red-Inspection)
SW2	Remote controller communication address
SW6	Model capacity setting
SW7-1	Operation check, Drain motor test run
TB1	Terminal block (Power source) (□mark)
TB2	Terminal block (Signal line) (□mark)
Thc	Thermistor (Remote controller)
ThI -A	Thermistor (Return air)
Thl -R1,2,3	Thermistor (Heat exchanger)
Trl	Transformer
X1~3,6	Relay for FM
■mark	Closed-end connector
52FL,FH	Electromagnetic contactor for FMI

- 2. See the wiring diagram of outside unit about the line between inside unit and outside unit.
- 3. Use twin core cable (0.3mm²X2) at remote controller line. See spec sheet of remote controller in case that the total length is more than 100m.

  4. Do not put remote controller line alongside power source line.

## (2) Outdoor units

## Models SRC40ZIX-S, **50ZIX-S, 60ZIX-S**

## Heat exchanger sensor (outdoor unit)

Mark	Color
BK	Black
BR	Brown
OR	Orange
RD	Red
WH	White
Υ	Yellow
Y/G	Yellow/Green

Item

CNEEV~20S Connector

СМ

EEV

FMo

T1,2

TH1

TH2

TH3

208

Description

Electric expansion valve (coil)

Compressor motor

Fan motor

Terminal block

Outdoor air temp.sensor

Discharge pipe temp.sensor

Solenoid valve for 4 way valve

Reactor

### ε PWB ASSY (MAIN) TERMINAL BLOCK PWB ASSY (SUB) POWER TRANSISTOR 250V 20A ACTIVE FILTER UNIT 250V 20A (Y/G) S-1 (WH) (Y/G) G1 TERMINAL BLOCK CNMAIN CN20S T2 F3 250V 1A TO INDOOR UNIT 1 <sup>2</sup>/<sub>N</sub> CNFAN POWER WIRES (RD) C-2 SWITCHING POWER CIRCUIT SIGNAL WIRE

CNTH

CNEEV


D		to decide a second decide.		
Power	cable,	indoor-outdoor	connecting	wires

POWER SOURCE 1~220-240V 50Hz/1~220V 60Hz

1 OWGI G	abic, iriador datador corrido	ung wires			
Model	MAX running current (A)	Power cable size (mm <sup>2</sup> )	Power cable length (m)	indoor-outdoor wire size x number	Earth wire size (mm)
40	12		21		
50		2.0	10	φ 1.6mm x 3	φ1.6mm
60	14		18		

20S

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

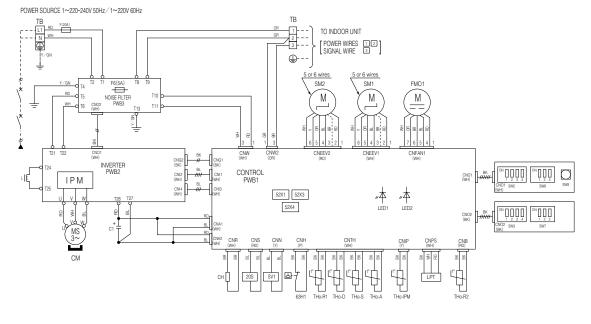

Mark	Color
BK	Black
BL	Blue
BR	Brown
GR	Gray
Р	Pink
OR	Orange
RD	Red
WH	White
Υ	Yellow
Y/GN	Yellow/Green

Item	Description
CnA~Z	Connector
CH	Crankcase heater
CM	Compressor motor
F	Fuse
FM01	Fan motor
IPM	Intelligent power module
L	Reactor
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
LPT	Low pressure sensor
SM1	Expansion valve for cooling
SM2	Expansion valve for heating
SV1	Solenoid valve
SW9	Pump down switch
SW3,5,7,8	Local setting switch
TB	Terminal block
THo-A	Thermistor (Outdoor air temp.)
THo-D	Thermistor (Discharge pipe temp.)
THo-IPM	Thermistor (IPM)
THo-R1,2	Thermistor (Heat exchanger pipe temp. )
THo-S	Thermistor (Suction pipe temp.)
20S	Solenoid valve for 4 way valve
52X1	Auxilliary relay (for CH)
52X3	Auxilliary relay (for 20S)
52X4	Auxilliary relay(for SV1)
63H1	High pressure switch

### Power cable, indoor-outdoor connecting wires

Model	MAX over current (A)	Power cable size (mm <sup>2</sup> )	Power cable length (m)	indoor-outdoor wire size x number	Earth wire size (mm)
71	17	3.5	21	φ1.6mm x 3	φ1.6

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

### Local setting switch SW3(Set up at shipment OFF)

SW3-1	Defrost control change	The defrosting operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.
SW3-2	Snow guard fan control	When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3 or lower and the compressor is not runnning when the unit is used in a very snowy country, set this switch to ON.
SW <b>5</b> -3,4	Trial operation	Method of trial operation (1) Trial operation can be performed by using SW5-3,4. (2) Compressor will be in the operation when SW5-3 is ON. (3) Cooling trial operation will be performed when SW5-4 is OFF, and heating trial operation when SW5-4 is ON. (4) Be sure to turn OFF SW5-3 after the trial operation is finished.

Mark	Color
ВК	Black
BL	Blue
BR	Brown
GN	Green
GR	Gray
Р	Pink
OR	Orange
RD	Red
WH	White
Υ	Yellow
Y/GN	Yellow/Green

Item	Description
CnA~Z	Connector
CH	Crankcase heater
CM	Compressor motor
CT	Current sensor
DM	Diode module
F	Fuse
FM01	Fan motor
IPM	Intelligent power module
L	Reactor
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
LPT	Low pressure sensor
SM1	Expansion valve for cooling
SM2	Expansion valve for heating
SW1	Pump down switch
SW3,5	Local setting switch
TB	Terminal block
THo-A	Thermistor (Outdoor air temp.)
THo-D	Thermistor (Discharge pipe temp.)
THo-IPM	Thermistor (IPM)
THo-R1,2	Thermistor (Heat exchanger pipe temp.)
THo-S	Thermistor (Suction pipe temp.)
20S	Solenoid valve for 4 way valve
52X1	Auxilliary relay (for CH)
52X3	Auxilliary relay (for 20S)
63H1	High pressure switch

Models FDC100VN, 125VN, 140VN

### Power cable, indoor-outdoor connecting wires

Model	MAX over current (A)	Power cable size (mm <sup>2</sup> )	Power cable length (m)	indoor-outdoor wire size x number	Earth wire size (mm)
100					
125	24	5.5	25	<b>φ</b> 1.6mm x 3	φ1.6
140					

### $\ensuremath{\mbox{\%}}\mbox{At}$ the connection with the duct type indoor unit.

Model	MAX over current (A)	Power cable size (mm <sup>2</sup> )	Power cable length (m)	indoor-outdoor wire size x number	Earth wire size (mm)
100	25	5.5	24		
125	27	5.5	22	Φ 1.6mm x 3	<b>Φ</b> 1.6
140	28	8	32		

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.


### Local setting switch SW3 (Set up at shipment OFF)

Local set	Local setting switch SW3 (Set up at shipment OFF)			
SW3-1	Defrost control change	The defrosting operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.		
SW3-2	Snow guard fan control	When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not runnning when the unit is used in a very snowy country, set this switch to ON.		
SW3-3,4	Trial operation	Method of trial operation  Trial operation can be performed by using SW3-3,4.  Compressor will be in the operation when SW3-3 is ON. Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON.  Be sure to turn OFF SW3-3 after the trial operation is finished.		

PCA001

Z539



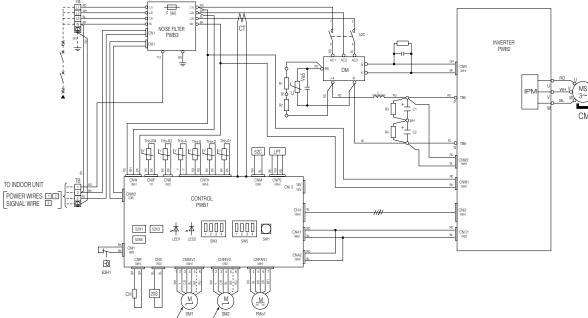

Mark	Color
BK	Black
BL	Blue
BR	Brown
GR	Gray
Р	Pink
OR	Orange
RD	Red
WH	White
Υ	Yellow
Y/GN	Yellow/Green

CnA~Z	Connector	
CH	Crankcase heater	
CM	Compressor motor	
CT	Current sensor	
DM	Diode module	
F	Fuse	
FM01	Fan motor	
IPM	Intelligent power module	
L	Reactor	
LED1	Indication lamp (GREEN)	
LED2	Indication lamp (RED)	
LPT	Low pressure sensor	
SM1	Expansion valve for cooling	
SM2	Expansion valve for heating	
SW1	Pump down switch	
SW3,5	Local setting switch	
TB	Terminal block	
THo-A	Thermistor (Outdoor air temp.)	
THo-D	Thermistor (Discharger pipe temp.)	
THo-IPM	Thermistor (IPM)	
THo-R1,2	Thermistor (Heat exchanger pipe temp.)	
THo-S	Thermistor (Suction pipe temp.)	
20S	Solenoid valve for 4 way valve	
52X1	Auxilliary relay (for CH)	
52X3	Auxilliary relay (for 20S)	
52X6	Auxilliary relay (for 52C)	

Models FDC100VS, 125VS, 140VS

Description

### Power cable, indoor-outdoor connecting wires

Model	MAX over current (A)	Power cable size (mm <sup>2</sup> )	Power cable length (m)	indoor-outdoor wire size x number	Earth wire size (mm)
100					
125	15	3.5	27	φ 1.6mm x 3	φ1.6
140					

### \*At the connection with the duct type indoor unit.


with the connection with the duet type indeed drift.					
Model	MAX over current (A)	Power cable size (mm <sup>2</sup> )	Power cable length (m)	indoor-outdoor wire size x number	Earth wire size (mm)
100	16		26		
125	18	3.5	23	φ 1.6mm x 3	Φ1.6
140	19		21		

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

### Local setting switch SW3 (Set up at shipment OFF)

Local setting switch SW3 (Set up at shipment OFF)				
SW3-1	Defrost control change	The defrosting operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.		
SW3-2	Snow guard fan control	When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.		
SW3-3,4	Trial operation	Method of trial operation () Trial operation can be performed by using SW3-3,4. () Compressor will be in the operation when SW3-3 is ON. () Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON. () Be sure to turn OFF SW3-3 after the trial operation is finished.		

'10 • PAC-DB-142

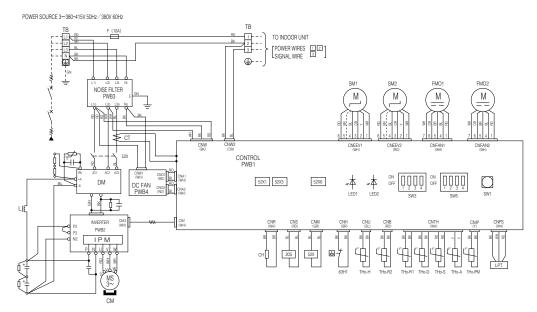

Mark	Color
BK	Black
BL	Blue
BR	Brown
GR	Gray
Р	Pink
OR	Orange
RD	Red
WH	White
Υ	Yellow
Y/GN	Yellow/Green

	Item	Description		
	CnA~Z	Connector		
	CH	Crankcase heater		
	СМ	Compressor motor		
	СТ	Current sensor		
	DM	Diode module		
	F	Fuse		
	FM01,02	Fan motor		
	IPM	Intelligent power module		
	L	Reactor		
	LED1	Indication lamp (GREEN)		
	LED2	Indication lamp (RED)		
	LPT	Low pressure sensor		
	SM1	Expansion valve for cooling		
	SM2	Expansion valve for heating		
	SW1	Pump down switch		
	SW3,5	Local setting switch		
	TB	Terminal block		
	THo-A	Thermistor (Outdoor air temp.)		
	THo-D	Thermistor (Discharge pipe temp.)		
	THo-H	Thermistor (Camp.undeneth temp.)		
	THo-IPM	Thermistor (IPM)		
	THo-R1,2	Thermistor (Heat exchanger pipe temp.)		
	THo-S	Thermistor (Suction pipe temp.)		
	20S	Solenoid valve for 4 way valve		
	52X1	Auxilliary relay (for CH)		
	52X3	Auxilliary relay (for 20S)		
	52X6	Auxilliary relay (for 52X)		
	63H1	High pressure switch		
in	interval becomes shorter			

Power cable, indoor-outdoor connecting wires

	Model	MAX over current (A)	Power cable size (mm) <sup>2</sup>	Power cable length (m)	indoor-outdoor wire size x number	Earth wire size (mm)
	200	19	3.5	21	φ 1.6mm x 3	φ1.6
Ī	250	22	5.5	31	Ψισιπικο	Ψ1.6

\*At the connection with the duct type indoor unit.

	With the definition with the descriptor made.						
Model	MAX over current (A)	Power cable size (mm) <sup>2</sup>	Power cable length (m)	indoor-outdoor wire size x number	Earth wire size (mm)		
200	24		29	φ 1.6mm x 3	410		
250	27	5.5	26	ψ1.6ππχ3	φ1.6		

- The specifications shown in the above table are for units without heaters. For units with heaters, refer
  to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of Circuit breaker capacity which is calculated from MAX. over current should be chosen
  along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Local setting switch SW3	(Set up at shipment OFF)		
		The def	

SW3-1	Defrost control change	The defrosting operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.
SW3-2	Snow guard fan control	When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3 or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.
SW3-3,4	Trial operation	Method of trial operation  Orial operation can be performed by using SW3-3,4.  Ocompressor will be in the operation when SW3-3 is ON.  Ocoling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is OF.  Be sure to turn OFF SW3-3 after the trial operation is finished.

### 1.4 NOISE LEVEL

Notes (1) The data are based on the following conditions.

Ambient air temperature: Indoor unit 27°CWB. Outdoor unit 35°CDB.

- (2) The data in the chart are measured in an anechoic room.
- (3) The noise levels measured in the field are usually higher than the data because of reflection.

### (1) Indoor units


(a) Ceiling cassette-4way compact type (FDTC)

Measured based on JIS B 8616 Mike position as right




### Models FDTC40VD,50VD

Cooling noise level 47 dB (A) at P-HIGH
42 dB (A) at HIGH
36 dB (A) at MEDIUM
30 dB (A) at LOW

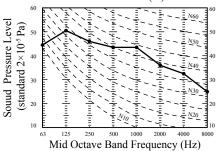


### Heating noise level 47 dB (A) at P-HIGH 42 dB (A) at HIGH 36 dB (A) at MEDIUM 32 dB (A) at LOW

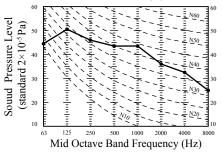

### Model FDTC60VD

Cooling noise level 47 dB (A) at P-HIGH


46 dB (A) at HIGH 39 dB (A) at MEDIUM 30 dB (A) at LOW

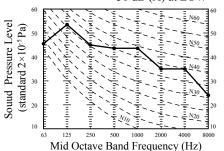

**Heating noise level** 47 dB (A) at P-HIGH

46 dB (A) at HIGH

39 dB (A) at MEDIUM 32 dB (A) at LOW

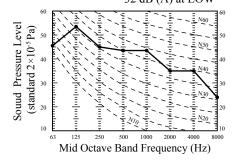


### (b) Ceiling cassette-4way type (FDT)

Measured based on JIS B 8616 Mike position as right




### Models FDT40,50VD

Noise level 39 dB (A) at P-HIGH 33 dB (A) at HIGH 31 dB (A) at MEDIUM 30 dB (A) at LOW

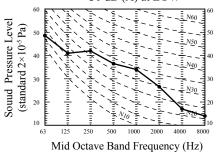

### Model FDT60VD

Noise level 46 dB (A) at P-HIGH 33 dB (A) at HIGH 31 dB (A) at MEDIUM 30 dB (A) at LOW

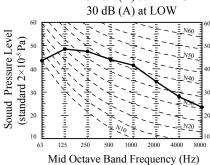


### Model FDT71VD

Noise level 46 dB (A) at P-HIGH 35 dB (A) at HIGH 33 dB (A) at MEDIUM 31 dB (A) at LOW


Sound Pressure Level (Hz) standard 2×10×50 and Pressure Level (Hz) standard 2×10×50 and Pressure (Level 2×10×50 a

### Model FDT100VD


### Noise level 51 dB (A) at P-HIGH 40 dB (A) at HIGH 37 dB (A) at MEDIUM

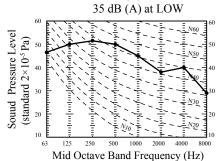

### Model FDT125VD

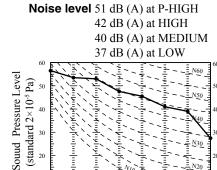

### Model FDT140VD

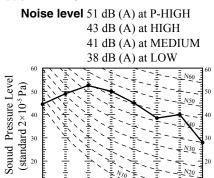


Mid Octave Band Frequency (Hz)

### (c) Ceiling suspended type (FDEN)

Measured based on JIS B 8616 Mike position as right


Mid Octave Band Frequency (Hz)

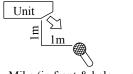

Mike (in front & below unit)


### Models FDEN40,50VD

Noise level 46 dB (A) at P-HIGH 39 dB (A) at HIGH 38 dB (A) at MEDIUM 37 dB (A) at LOW

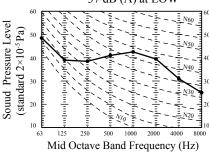


### Models FDEN60,71VD

Noise level 50 dB (A) at P-HIGH
41 dB (A) at HIGH
39 dB (A) at MEDIUM
38 dB (A) at LOW

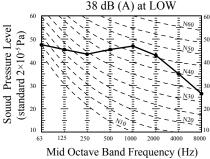


### Model FDEN100VD

Noise level 46 dB (A) at P-HIGH 44 dB (A) at HIGH 41 dB (A) at MEDIUM 39 dB (A) at LOW

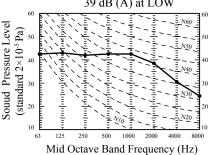

### Models FDEN125,140VD

Noise level 50 dB (A) at P-HIGH 46 dB (A) at HIGH 44 dB (A) at MEDIUM 43 dB (A) at LOW

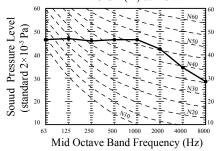

### (d) Duct connected-Low/Middle static pressure type (FDUM)

Unit Measured based on JIS B 8616 1.5 m Mike position as right Mike (at center & below unit) Model FDUM50VD Model FDUM60VD Model FDUM71VD Noise level 35 dB (A) at P-HIGH Noise level 38 dB (A) at P-HIGH Noise level 38 dB (A) at P-HIGH 34 dB (A) at HIGH 34 dB (A) at HIGH 35 dB (A) at HIGH 31 dB (A) at MEDIUM 31 dB (A) at MEDIUM 32 dB (A) at MEDIUM 28 dB (A) at LOW 28 dB (A) at LOW 29 dB (A) at LOW Sound Pressure Level Pressure Level Pressure Level (standard 2×10-5 Pa) (standard 2×10<sup>-5</sup>Pa) standard 2×10-5 Pa) 40 Sound Sound Mid Octave Band Frequency (Hz) Mid Octave Band Frequency (Hz) Mid Octave Band Frequency (Hz) Model FDUM100VD Models FDUM125,140VD Noise level 41 dB (A) at P-HIGH Noise level 41 dB (A) at P-HIGH 37 dB (A) at HIGH 38 dB (A) at HIGH 35 dB (A) at MEDIUM 36 dB (A) at MEDIUM 32 dB (A) at LOW 33 dB (A) at LOW Sound Pressure Level Pressure Level (standard 2×10-5 Pa) (standard 2×10<sup>-5</sup> Pa) Sound Mid Octave Band Frequency (Hz) Mid Octave Band Frequency (Hz)

### (e) Duct connected-High static pressure-type (FDU)

Model FDU71VD Model FDU100VD Models FDU125VD, 140VD Noise level 41 dB (A) at HIGH Noise level 42 dB (A) at HIGH Noise level 43 dB (A) at HIGH 38 dB (A) at LOW 37 dB (A) at LOW 37 dB (A) at LOW Sound Pressure Level (standard 2×10-5 Pa) Level 5 Pa) Sound Pressure Level (standard 2×10-5 Pa) ound Pressure I (standard 2×10<sup>-5</sup> Sound Mid Octave Band Frequency (Hz) Mid Octave Band Frequency (Hz) Mid Octave Band Frequency (Hz)

Measured based on JIS B 8616

Mike position as right

Unit


Mike (at center & below unit)


1.5 m


### Model FDU200VD

### Model FDU250VD

### Noise level 51 dB (A)

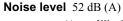

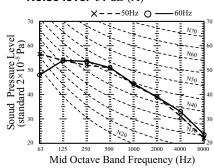

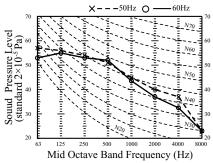

### Power level

(Measurement conditions: JIS-B8616, measurement location: reverberation chamber)

Unit: dB

 Unit: dB

 Model
 Air supply side
 Air return side

 FDU200VD
 75
 64

 FDU250VD
 76
 65

		Onit. ub
Model	Air supply side	Air return side
FDU71VD	65	65
FDU100VD	66	66
FDU125VD, 140VD	67	67

Note(1) Values are for external static pressure of 200Pa.

Note(1) Values are for external static pressure of 50Pa.


### (2) Outdoor units


Measured based on JIS B 8616

Mike position: at highest noise level in position as mentined below


Distance from front side 1m Height 1m

### Models SRC40ZIX-S, 50ZIX-S

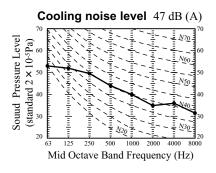


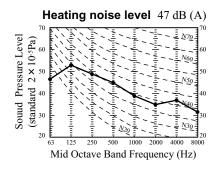


### Model SRC60ZHIX-S

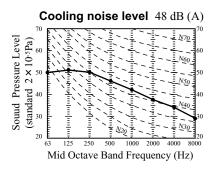


### **Model FDC71VN**

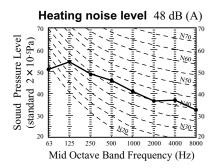


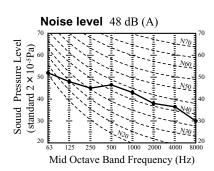


### Model FDC100VN,100VS

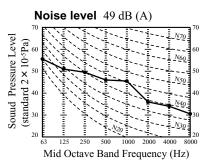


### Model FDC125VN,125VS

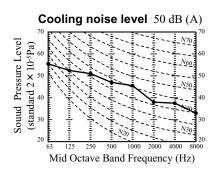


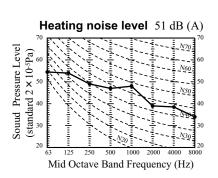


### Model FDC140VN,140VS

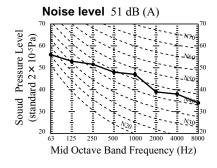


### Model FDC200VS

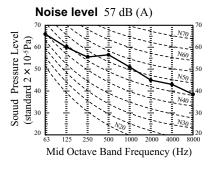

### Model FDC250VS

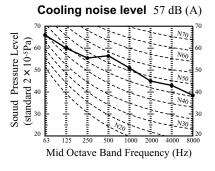

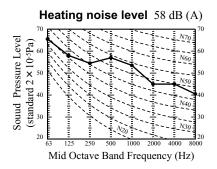

### 1.5 CHARACTERISTICS FAN

### (1) Duct connected-Low/Middle static pressure type (FDUM)

• External static pressure table

Unit: Pa (50Hz/60Hz)


Air flow (m³/min)	ict specs.	1 spot closing <sup>(1)</sup>	Standard (2)	Square duct (3)
FDUM50VD	14	-	85/90	90/90
FDUM60VD	18	70/85	85/100	90/100
FDUM71VD	20	65/80	85/100	90/105
FDUM100VD	28	80/90	90/100	95/105
FDUM125VD FDUM140VD	34	75/90	85/100	95/105

Notes(1) 1 spot closing: Round duct flange at center is removed and shield with a special panel (option).

- (2) Standard: ø200 duct are installed at all blowout holes.
- (3) Square duct: All round ducts are removed and replaced with special square duct flanges (option)


How to interpret the blower characteristics table




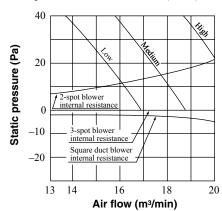



- ② Square duct blowout............. Internal resistance decreases more than the standard round duct (φ200 3-spot). 3Pa at 17m³/min. (External static pressure increases in reverse.)

### Model FDUM50VD

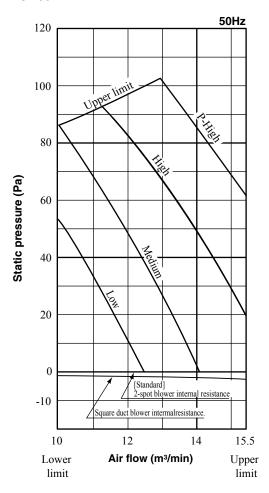

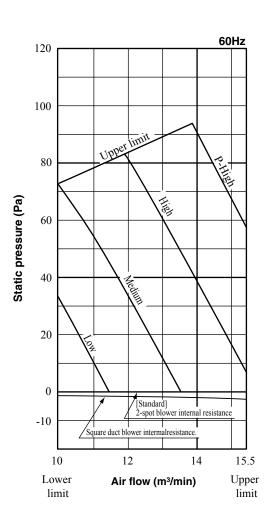

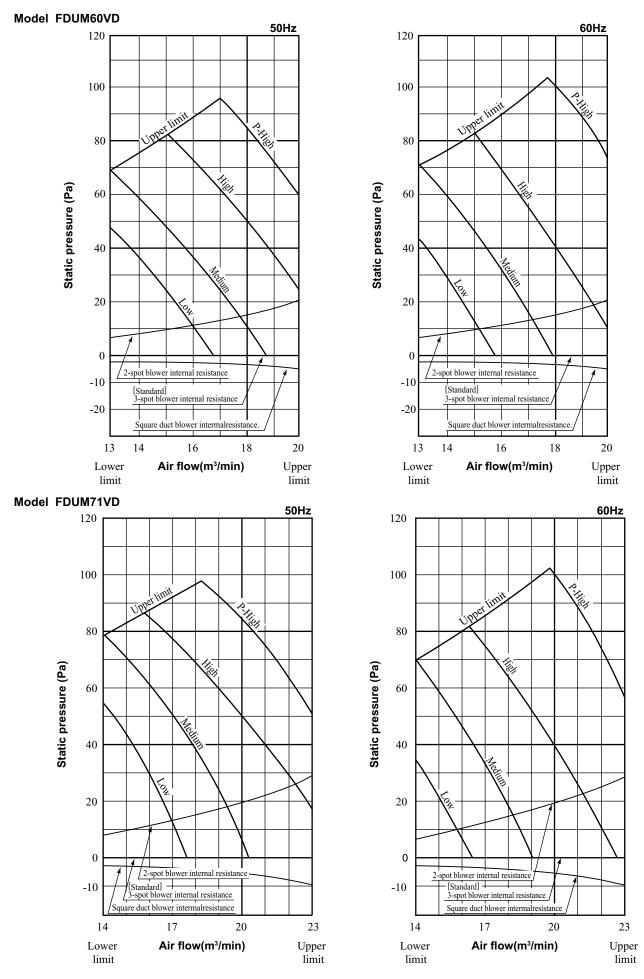


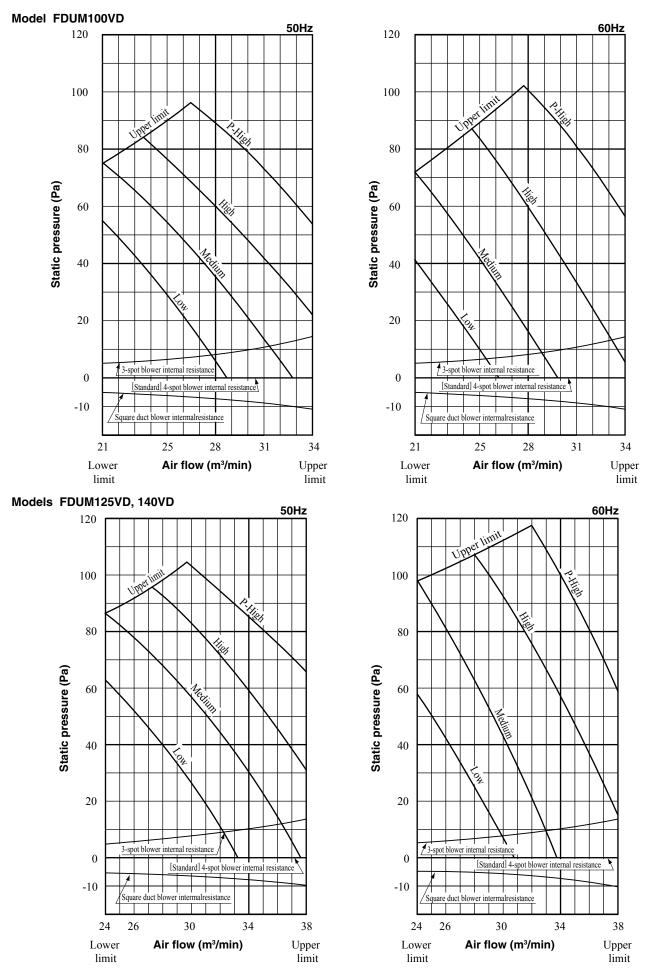

### (2) Duct connected-High static pressure type (FDU)

Model FDU71VD

### 200 180 160 External static pressure (Pa) 140 High 120 100 High static pressure setting 80 Standard pressure 60 er limi Standard static 20 setting 0 17 18 19 20 21 23 24 Lower Standard Upper limit air flow limit Air flow (m³/min)

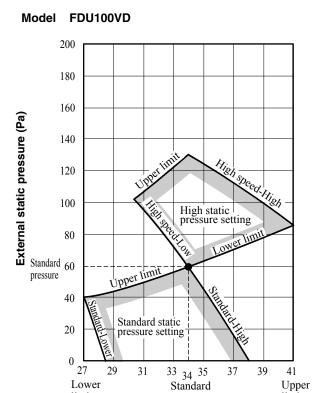


air flow

Air flow (m³/min)

limit

limit

### Models FDU125,140VD

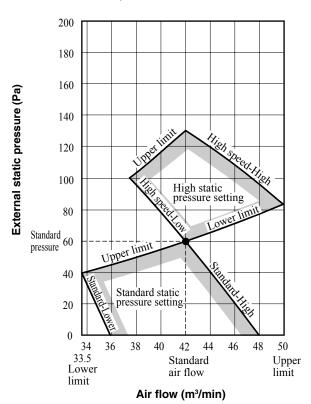

Notes 1) Factory default setting of fan speed is [STANDARD] which has standard static pressure.


If high static pressure setting is required, change setting to [HIGH SPEED 1] with remote controller on site.


(Regarding the setting method, refer to the user's manual of remote controller for detail)

- 2) When setting up high static pressure, do not operate the unit under the condition of 60Pa or lower of the external static pressure.
- 3) The fan speed of this model can be switched between two speeds.

### Model FDU200VD


### ■Standard (Factory Settings)

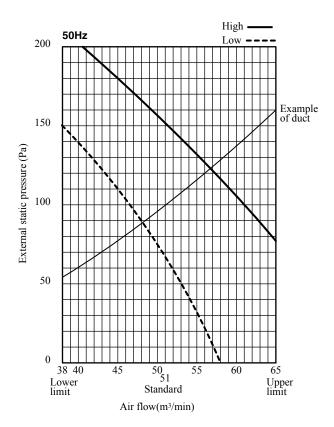

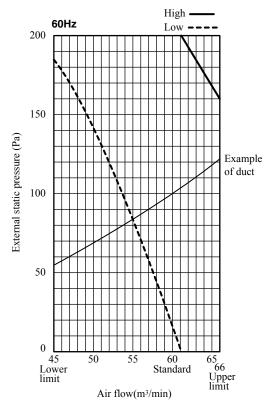


### ■When the fan controller kit is used (Option : Refer to page 290)

•Standard rating point rated air volume at 100Pa

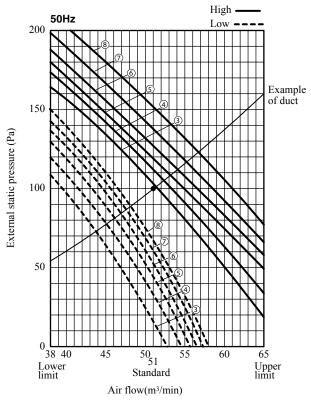


Note (1) Nos.②, ① of fan controller should not be used because the fan motor could produce electromagnetic noise.

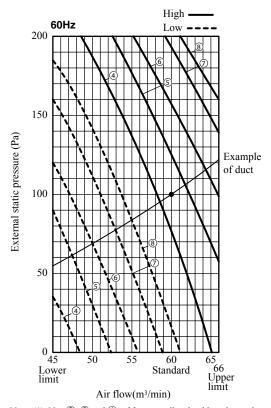


Note (1) Nos.③, ② and ① of fan controller should not be used because the fan motor could produce electromagnetic noise.

### Model FDU250VD


### ■ Standard (Factory Settings)

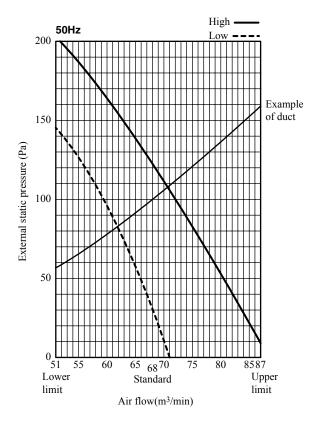

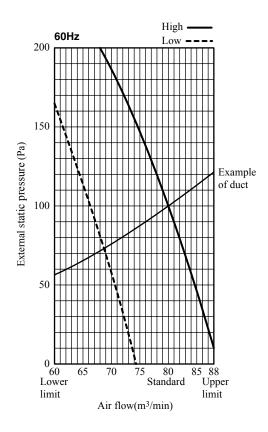


### ■When the fan controller kit is used (Option)

•Standard rating point rated air volume at 100Pa

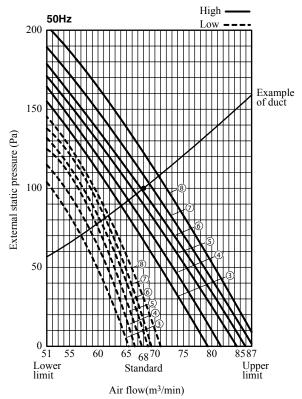

Note (1) Nos.②, ① of fan controller should not be used because the fan motor could produce electromagnetic noise.

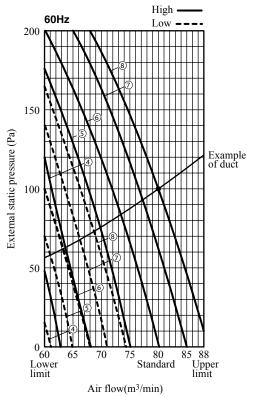

Note (1) Nos.③, ② and ① of fan controller should not be used because the fan motor could produce electromagnetic noise


### 1.6 TEMPERATURE AND VELOCITY DISTRIBUTION


(1) Ceiling cassett-4way compact type (FDTC)


Models FDTC40, 50, 60VD

Cooling Air flow: P-Hi

Louver position

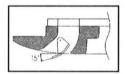


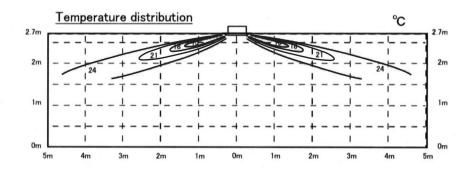


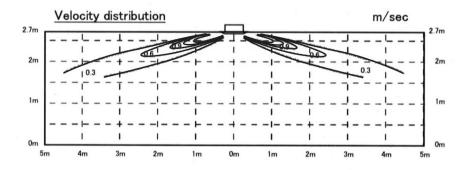


Heating Air flow : P-Hi

Louver position

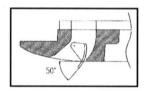

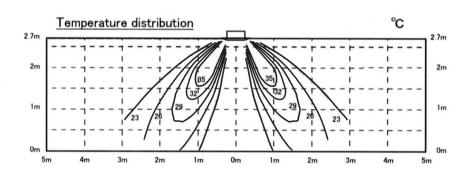


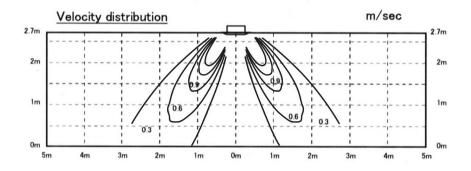



### (2) Ceiling cassett-4way type (FDT)

Models FDT40, 50VD


Cooling Air flow : P-Hi Louver position

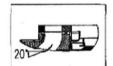


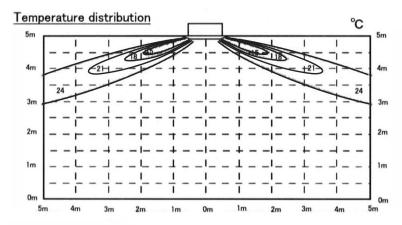


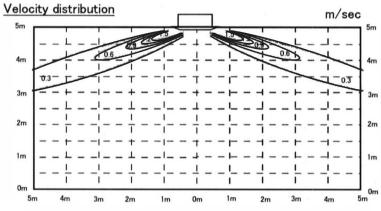


Heating Air flow : P-Hi Louver position

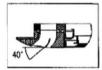


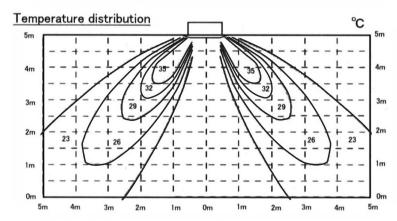


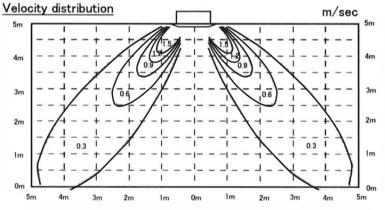

Models FDT60, 71VD Cooling Air flow : P-Hi Louver position

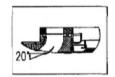


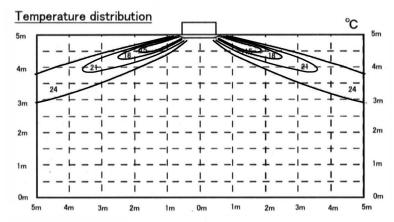


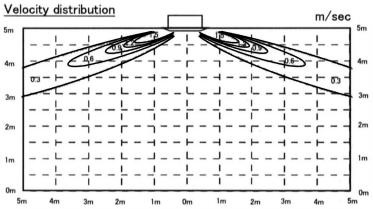

Heating Air flow : P-Hi
Louver position



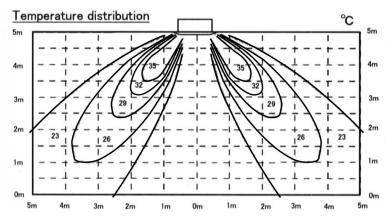


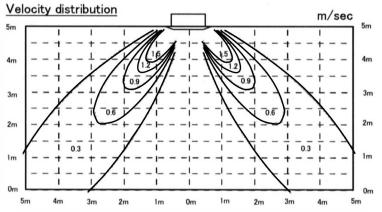



### Models FDT100, 125, 140VD

### Cooling Air flow : P-Hi

### Louver position

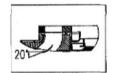


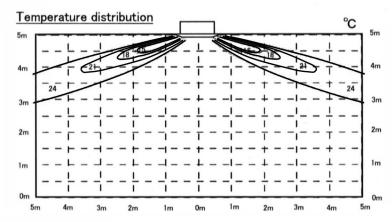


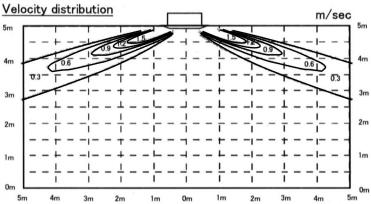

Heating Air flow : P-Hi
Louver position



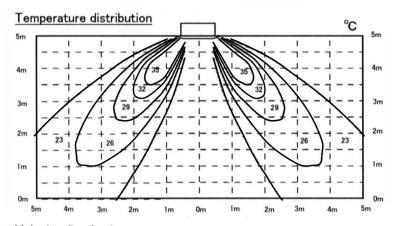

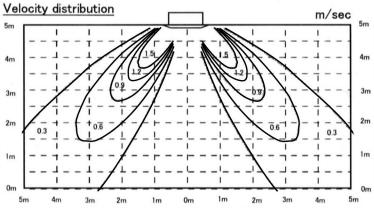


### (3) Ceiling suspended type (FDEN)


### Models FDEN40, 50VD

### Cooling Air flow: P-Hi

Louver position



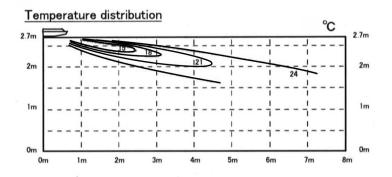


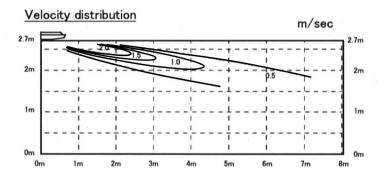


### Heating Air flow: P-Hi

### Louver position



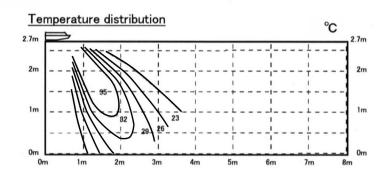


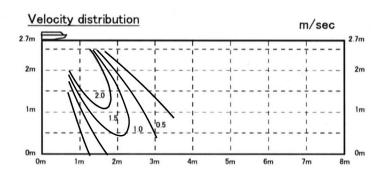



### Models FDEN60, 71VD

### Cooling Air flow: P-Hi

### Louver position

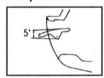

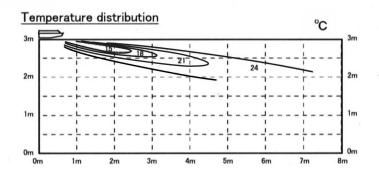


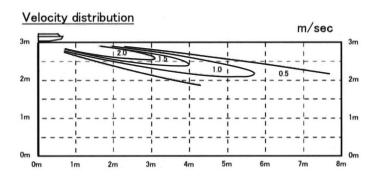


### Heating Air flow : P-Hi

### Louver position



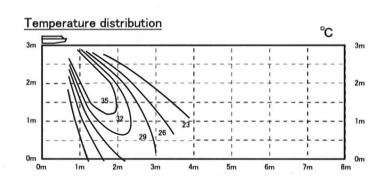


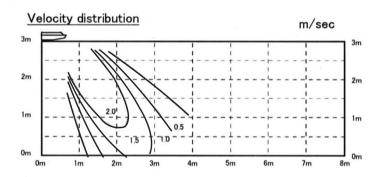



### Models FDEN100VD

### Cooling Air flow : P-Hi

### Louver position

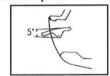

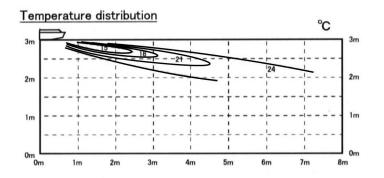


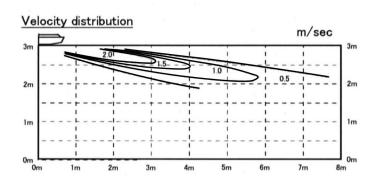


### Heating Air flow : P-Hi

### Louver position



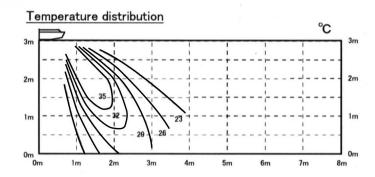


### Velocity distribution

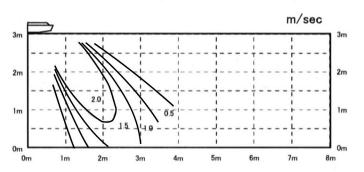



#### Models FDEN125, 140VD

#### Cooling Air flow: P-Hi

#### Louver position

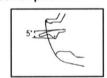


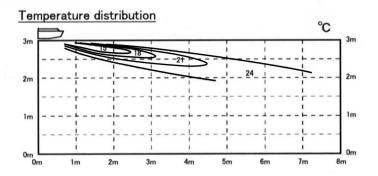


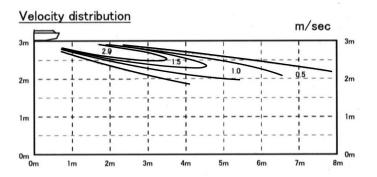


#### Heating Air flow : P-Hi

### Louver position

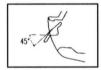

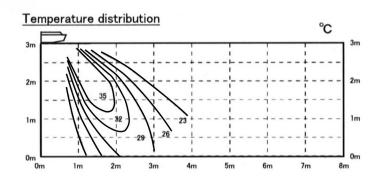

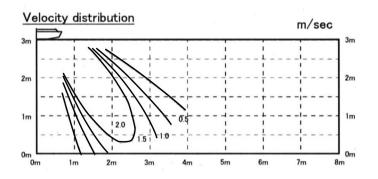


ISD09408


## 1.7 PIPING SYSTEM

#### (1) Single type


Models 40, 50, 60

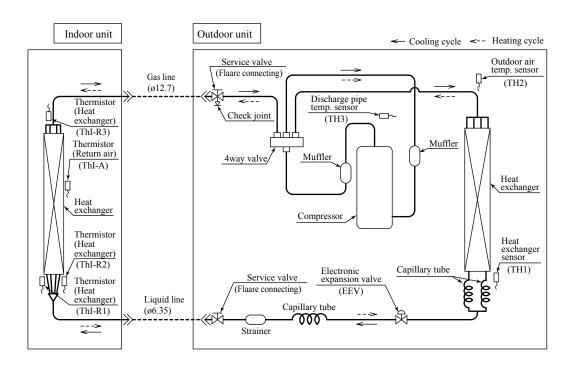


Model 71

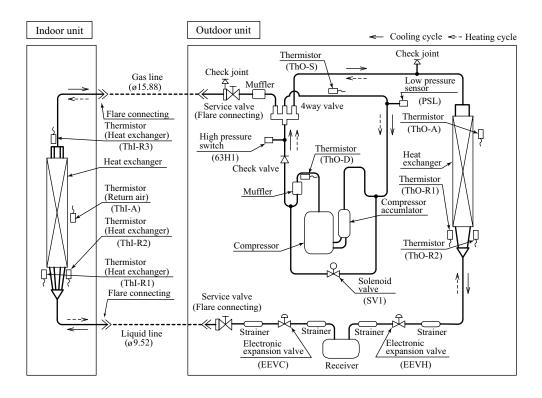


#### Models 100, 125, 140

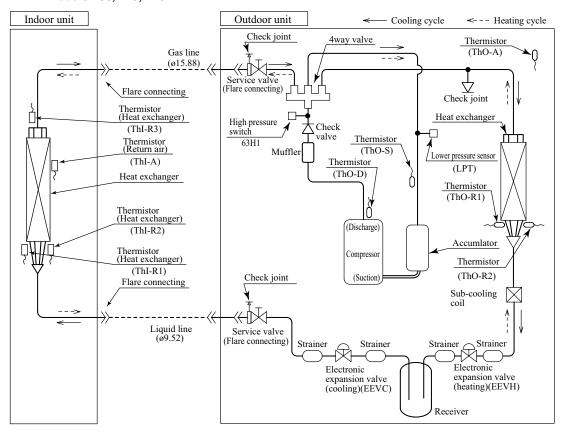


#### Models 200, 250

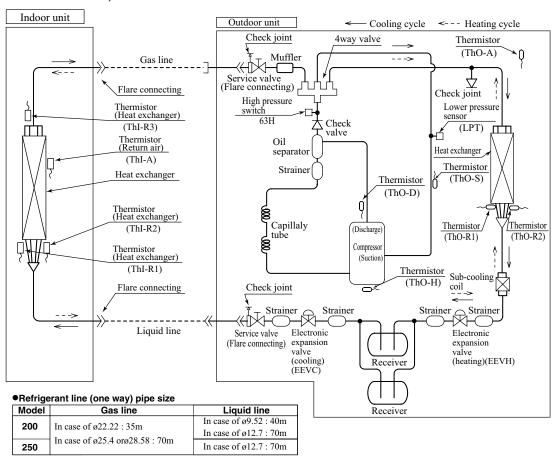


## (2) Twin type Model 71

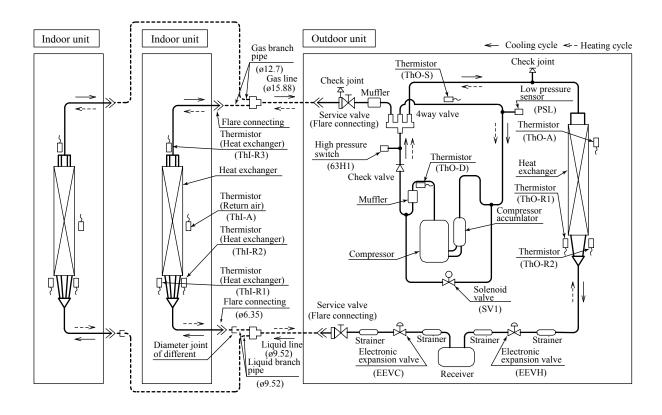

#### Models 100, 125, 140

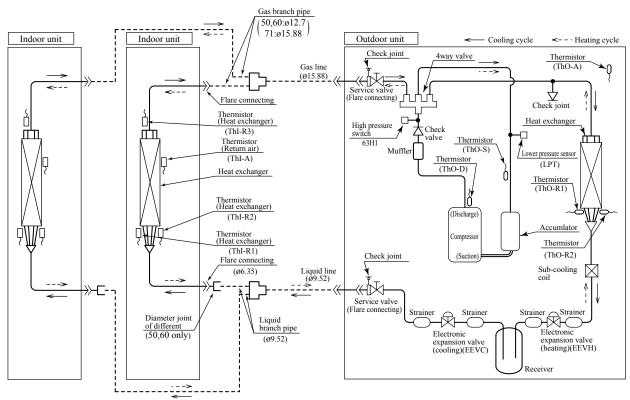

#### Models 200, 250

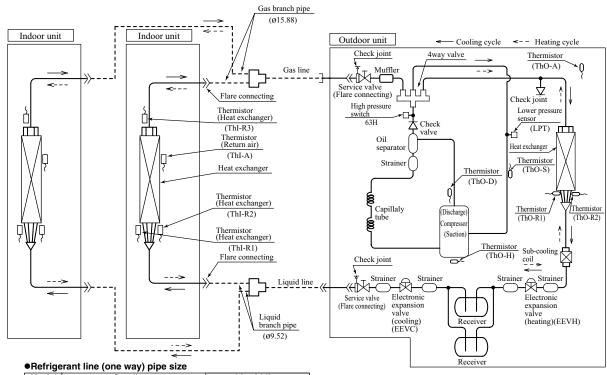

 Model
 Gas line
 Liquid line


 200
 In case of ø22.22 : 35m
 In case of ø9.52 : 40m

 In case of ø25.4 or ø28.58 : 70m
 In case of ø12.7 : 70m


 In case of ø12.7 : 70m
 In case of ø12.7 : 70m

## (3) Triple type


#### Model 140

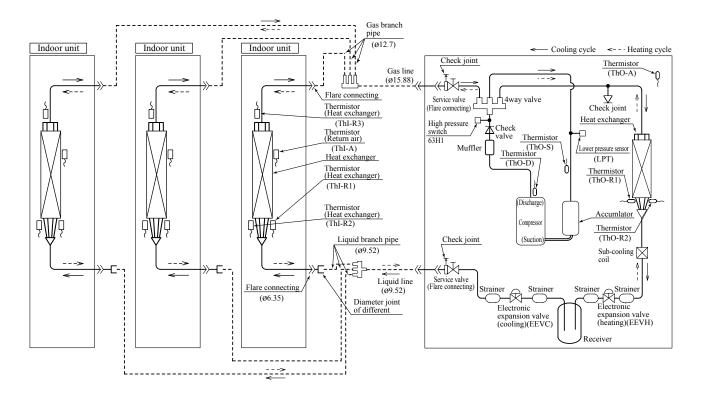

#### Model 200

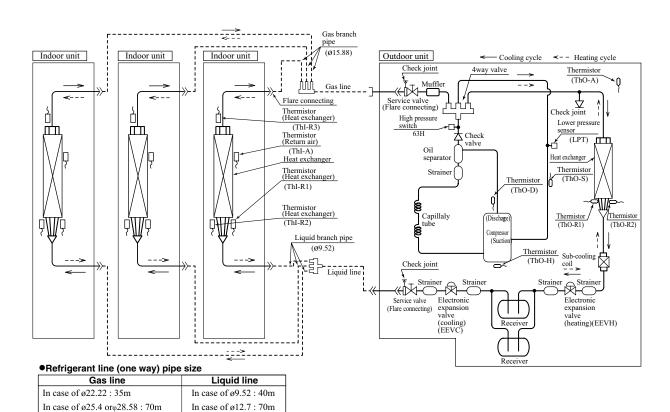

# (4) Double Twin type Models 200, 250

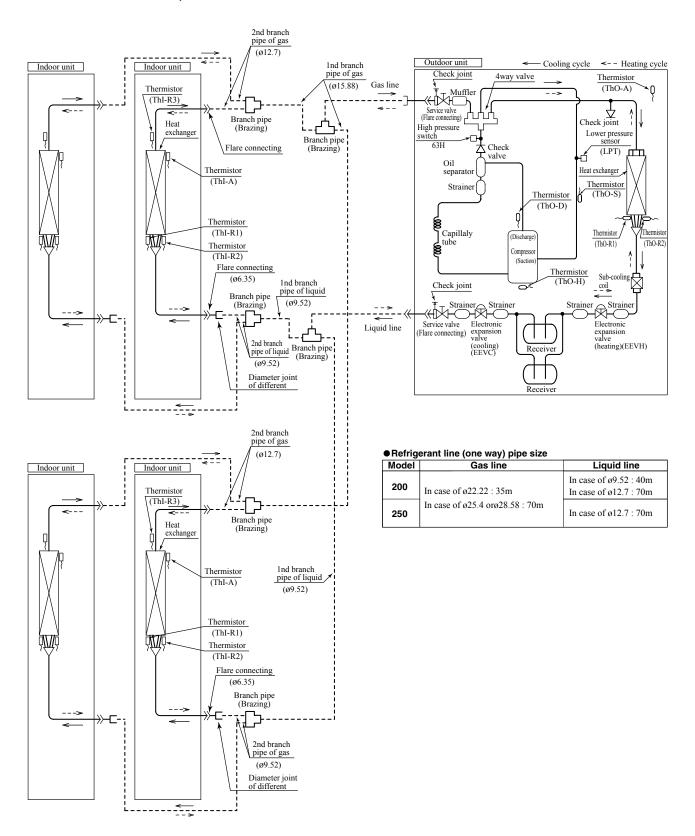

## **Preset point of the protective devices**

Parts name	Mark	Equipped unit	40, 50, 60 model	71, 100, 125, 140 model	200, 250 model					
Thermistor (for protection over- loading in heating)	Thı-R	Indoor unit		OFF 63°C ON 56°C						
Thermistor (for frost prevention)			OFF 1.0°C ON 10°C							
Thermistor (for protection high pressure in cooling.)	Tho-R (TH1)	Outdoor unit	OFF 53°C ON 63°C	OFF 51°C ON 65°C						
Thermistor (for detecting dis- charge pipe temp.)	Tho-D (TH3)	Outdoor unit	OFF 115°C ON 95°C	OFF 115°C OFF 135° ON 85°C ON 90°C						
High pressure switch (for protection)	63H1	Outdoor unit		OFF 4.15MPa ON 3.15MPa						
Low pressure sensor (for protection)	LPT	Outdoor unit		OFF 0.227MPa ON 0.079MPa						

### 1.8 RANGE OF USAGE & LIMITATIONS

		See next page.
Operating temperature ran	ge	When used below -5°C, install a snow hood (option). <fdc71 only="" ~250=""></fdc71>
Recommendable area to in	nstall	Considering to get sufficient heating capacity, the area where the averaged lowest ambient air temperature in day time during winter is above 0°C, and it has no accumulation of snow.
Installation site		The limitations of installation space are shown in the page for exterior dimensions.  Install the indoor unit at least 2.5m higher than the floor surface.
Temperature and humidity indoor unit in the ceiling (No	•	Model FDE Dew point temperature : 23°C or less, relative hummdity : 80% or less Other models Dew point temperature : 28°C or less, relative hummdity : 80% or less
Limitations on unit and pipi	ng installation	See page 154 and 155
Compressor	Cycle Time	7 minutes or more (from OFF to OFF) or (from ON to ON)
ON-OFF cycling	Stop Time	3 minutes or more
	Voltage range	Rating ±10%
Power source	Voltage drop at start-up	Min.85% of rating
	Phase-to-phase imbalance	3% or less


#### Note 1. Do not install the unit in places which:

- 1) Flammable gas may leak.
- 2) Carbon fiber, metal particles, powder, etc. are floating.
- 3) Cosmetic or special sprays are used frequently.
- 4) Exposed to oil splashes or steam (e.g. kitchen and machine plant).
- 5) Exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent).
- 6) Exposed to ammonia substance (e.g. organic fertilizer).
- 7) Matters affecting devices, such as sulfuric gas, chlorine gas, acid, alkali, etc. may generate or accumulate.
- 8) Chimney smoke is hanging.
- 9) Sucking the exhaust gas from heat exchanger.
- 10) Adjacent to equipment generating electromagnetic waves or high frequency waves.
- 11) There is light beams that affect the receiving device of indoor unit in case of the wireless specification.
- 12) Snow falls heavily.
- 13) At an elevation of 1000 meters or higher.
- 14) On mobile machine (e.g. vehicle, ship, etc.)
- 15) Splashed with water to indoor unit (e.g. laundry room).
- 16) Indoor units of twin, triple and double-twin specifications separately in a room with partition.
- Note 2. If ambient temperature and humidity exceed the above conditions, add polyurethane foam insulation (10mm or thicker) on the outer plate of indoor unit.


Note 3. Both gas and liquid pipes need to be coverd with 20mm or thicker heat insulation materials at the place where humidity exceeds 70%.

#### **Operating temperature range**

#### ■ Cooling

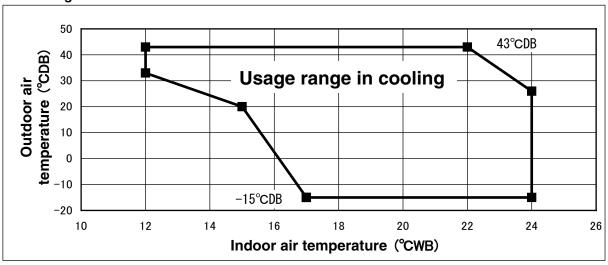

#### ■ Heating

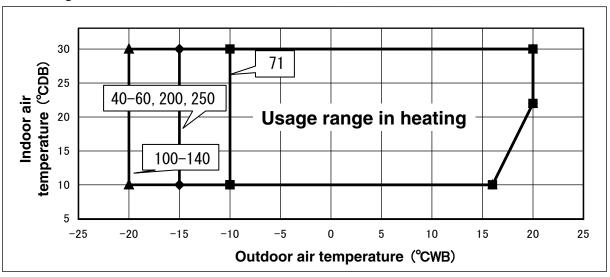

Decline in cooling and heating capacity or operation stop may occur when the outdoor unit is installed in places where natural wind can increase or decrease its design airflow rate.

PCA001Z561A

#### "CAUTION" Cooling operation under low outdoor air temperature conditions

PAC models can be operated in cooling mode at low outdoor air temperature condition within above temperature range. However in case of severely low temperature conditions if the following precaution is not observed, it may not be operated in spite of operable temperature range mentioned above and cooling capacity may not be established under certain conditions.

#### [Precaution]


In case of severely low temperature condition


- 1) Install the outdoor unit at the place where strong wind cannot blow directly into the outdoor unit.
- 2) If there is no installation place where can prevent strong wind from directly blowing into the outdoor unit, mount the flex flow adapter (prepared as optional part) or like such devices onto the outdoor unit in order to divert the strong wind.

#### [Reason]

Under the low outdoor air temperature conditions of  $-5^{\circ}$ C or lower, the outdoor fan is controlled at lower or lowest speed by outdoor fan control, but if strong wind directly blow into the outdoor unit, the outdoor heat exchanger temperature will drop more.

This makes high and low pressures to drop as well. This low pressure drop makes the indoor heat exchanger temperature to drop and will activate anti-frost control at indoor heat exchanger at frequent intervals, that cooling operation may not be established for any given time.

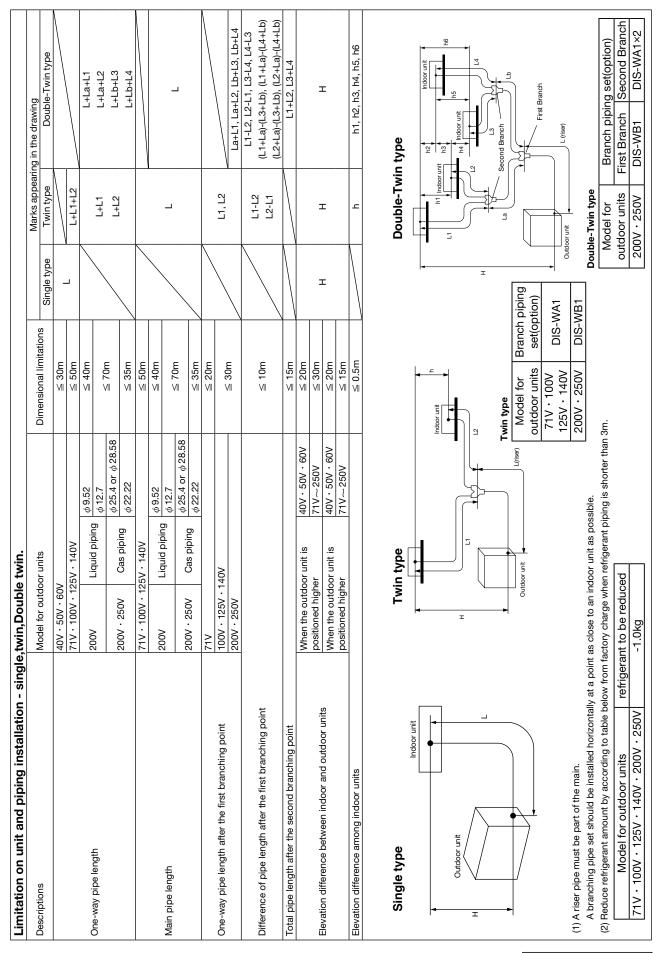

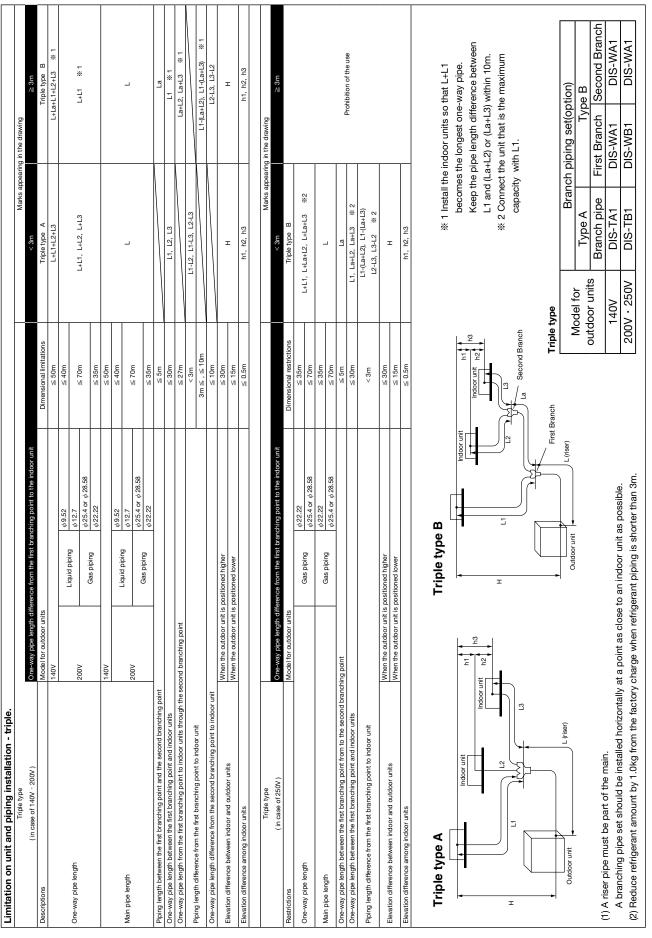

### 1.9 SELECTION CHART

Correct the cooling and heating capacity in accordance with the operating conditions. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown in the capacity tables (1.9.1) × Correction factors shown in he table (1.9.2) (1.9.3) (1.9.4).

**Caution:** In case that the cooling operation during low outdoor air temperature below -5°C is expected, install the outdoor unit where it is not influenced by natural wind. Otherwise protection control by low pressure will be activated much more frequently and it will cause insufficient capacity or breakdown of the compressor in worst case.

#### 1.9.1 Capacity tables

- (1) Ceiling cassette-4way compact type (FDTC)
  - (a) Single type

 Model
 FDTC40ZIXVD
 Indoor unit
 FDTC40VD
 Outdoor unit
 SRC40ZIX-S

 Cool Mode
 SRC40ZIX-S
 SRC40ZIX-S

COOI WIOU	<del>-</del>												
0.44		Indoor air temperature											
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		
un temp.	16°CWB		18°CWB		19°CWB		20°C	20°CWB		WB	24°C	:WB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
20	3.83	3.21	4.06	3.42	4.17	3.39	4.30	3.35	4.54	3.54	4.78	3.46	
25	3.97	3.27	4.19	3.47	4.31	3.43	4.44	3.40	4.70	3.59	4.97	3.51	
30	3.82	3.21	4.04	3.41	4.15	3.38	4.28	3.35	4.54	3.54			
35	3.62	3.13	3.87	3.36	4.00	3.33	4.12	3.30	4.36	3.49			
40	3.38	3.04	3.66	3.28	3.80	3.26	3.91	3.23	4.14	3.43			
43	3.20	2.98	3.49	3.22	3.63	3.21	3.76	3.19	4.02	3.39			

	Heat M	ode					
	Out	door Indoor air temperature					
	air te	emp.			°CDB		
	°CDB	°CWB	16	18	20	22	24
	-14.7	-15	2.56	2.53	2.48	2.43	2.38
	-9.6	-10	3.79	3.74	3.69	3.64	3.47
	-3.4	-4	4.19	4.17	4.06	3.74	3.54
	1.8	1	4.28	4.25	4.15	3.81	3.62
	4.9	4	4.36	4.34	4.23	3.89	3.69
	7.0	6	4.56	4.53	4.50	4.39	4.23
	11.2	10	4.99	4.96	4.92	4.89	4.85

PJA003Z377 A

Model FDTC50ZIXVD Indoor unit FDTC50VD Outdoor unit SRC50ZIX-S

COOI WOU	Cool Mode													
044		Indoor air temperature												
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB			
	16°CWB		18°CWB		19℃	:WB	20°C	:WB	22°C	:WB	24°C	WB		
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC		
20	4.79	3.60	5.07	3.79	5.22	3.75	5.37	3.71	5.67	3.88	5.98	3.79		
25	4.93	3.66	5.22	3.85	5.36	3.81	5.52	3.77	5.85	3.94	6.18	3.84		
30	4.76	3.59	5.04	3.78	5.18	3.74	5.34	3.70	5.66	3.88				
35	4.53	3.49	4.84	3.71	5.00	3.67	5.15	3.64	5.45	3.82				
40	4.23	3.37	4.58	3.61	4.75	3.59	4.89	3.55	5.17	3.73	·			
43	4.00	3.28	4.36	3.53	4.54	3.51	4.70	3.49	5.03	3.69				

	Heat Mode											
1	Out	door		Indoor air temperature								
1	air te	emp.			°CDB							
	°CDB	°CWB	16	18	20	22	24					
]	-14.7	-15	3.08	3.03	2.98	2.92	2.85					
	-9.6	-10	4.55	4.49	4.43	4.37	4.17					
	-3.4	-4	5.02	4.99	4.87	4.49	4.25					
]	1.8	1	5.12	5.10	4.97	4.58	4.34					
	4.9	4	5.22	5.20	5.08	4.67	4.43					
	7.0	6	5.45	5.43	5.40	5.27	5.08					
J	11.2	10	5.97	5.94	5.90	5.87	5.84					

PJA003Z377 🛕

Model FDTC60ZIXVD Indoor unit FDTC60VD Outdoor unit SRC60ZIX-S Cool Mode

Outdoor					Indo	oor air t	empera	ture				
air temp.	23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°C	DB
·	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	5.36	3.84	5.68	4.03	5.84	3.99	6.01	3.94	6.35	4.10	6.69	3.99
25	5.56	3.93	5.88	4.11	6.03	4.06	6.21	4.01	6.56	4.17	6.91	4.06
30	5.36	3.84	5.66	4.02	5.82	3.98	5.99	3.93	6.33	4.10		
35	5.07	3.72	5.42	3.93	5.60	3.89	5.77	3.85	6.10	4.02		
40	4.73	3.57	5.12	3.81	5.30	3.78	5.46	3.74	5.77	3.92		
43	4.48	3.47	4.88	3.72	5.08	3.70	5.27	3.68	5.58	3.86		

Heat Mode

Heat M	leat Mode										
Out	door	Indoor air temperature									
air te	emp.		°CDB								
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	3.82	3.76	3.69	3.62	3.54					
-9.6	-10	5.64	5.57	5.49	5.42	5.17					
-3.4	-4	6.21	6.18	6.05	5.57	5.28					
1.8	1	6.33	6.31	6.17	5.68	5.38					
4.9	4	6.46	6.43	6.30	5.80	5.49					
7.0	6	6.76	6.73	6.70	6.53	6.30					
11.2	10	7.44	7.40	7.37	7.33	7.29					

PJA003Z377 🛕

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows. TC: Total cooling capacity (kW)

 $SHC: Sensible \ heat \ capacity \ (kW) \\ HC: Heating \ capacity \ (kW)$ 

#### (b) Twin type

Model FDTC71VNPVD Indoor unit FDTC40VD (2 units) Outdoor unit FDC71VN

Cool Mod	Cool Mode											
0					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
dii tomp.	16°CWB		18°C	18°CWB 19°CWB		20°CWB		22°C	:WB	24°C	:WB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	6.96	6.16	7.39	6.59	7.61	6.53	7.84	6.47	8.31	6.86	8.78	6.72
25	6.86	6.12	7.44	6.61	7.72	6.57	7.98	6.51	8.49	6.92	8.91	6.75
30	6.67	6.05	7.17	6.51	7.41	6.46	7.67	6.42	8.14	6.82		
35	6.43	5.96	6.88	6.41	7.10	6.36	7.31	6.31	7.74	6.71		
40	6.00	5.80	6.50	6.29	6.75	6.25	6.94	6.19	7.34	6.60		
43	5.68	5.69	6.19	6.18	6.45	6.16	6.68	6.11	7.14	6.54		

Heat M	leat Mode										
Out	door		Indoor air temperature								
air t	emp.	°CDB									
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	4.53	4.51	4.50	4.48	4.46					
-9.6	-10	5.11	5.09	5.06	5.03	5.00					
-3.4	-4	5.69	5.66	5.62	5.59	5.55					
1.8	1	6.13	6.09	6.04	6.00	5.96					
4.9	4	7.78	7.71	7.52	6.92	6.56					
7.0	6	8.16	8.08	8.00	7.80	7.52					
11.2	10	8.86	8.75	8.64	8.52	8.41					

PJA003Z377 A

Model FDTC100VNPVD FDTC100VSPVD

Indoor unit FDTC50VD (2 units)

Outdoor unit FDC100VN FDC100VS

Cool Mode

OOOI WICE	Cool Mode												
Outdoor		Indoor air temperature											
air temp.	23°0	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		
an tomp.	16°CWB		18°CWB 19		19℃	19°CWB 20°CW		WB	22°C	WB	24°C	WB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
20	9.98	7.36	10.55	7.74	10.84	7.66	11.15	7.57	11.78	7.91	12.41	7.70	
25	9.71	7.25	10.28	7.64	10.56	7.55	10.87	7.47	11.49	7.82	12.12	7.62	
30	9.44	7.14	10.00	7.53	10.28	7.45	10.59	7.37	11.21	7.73			
35	9.05	6.98	9.68	7.41	10.00	7.35	10.30	7.28	10.90	7.63			
40	8.45	6.74	9.15	7.21	9.50	7.17	9.78	7.10	10.34	7.46			
43	8.00	6.56	8.72	7.06	9.08	7.03	9.40	6.97	10.05	7.37			

Heat M	Heat Mode										
Out	door		Indoor air temperature								
air t	emp.	°CDB									
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	6.89	6.51	6.13	5.75	5.50					
-9.6	-10	7.40	7.38	7.00	6.62	6.24					
-3.4	-4	7.53	7.51	7.49	7.11	6.74					
1.8	1	8.55	8.52	8.06	7.45	6.99					
4.9	4	10.28	10.14	9.33	8.47	7.84					
7.0	6	11.35	11.27	11.20	10.92	10.40					
11.2	10	12.19	12.10	12.02	11.73	10.69					

PJA003Z377 A

PJA003Z377 A

Model FDTC125VNPVD FDTC125VSPVD

Indoor unit FDTC60VD (2 units)

Outdoor unit FDC125VN FDC125VS

Cool Mode

OCCI IVIOU	i Mode												
0.44					Inde	oor air t	empera	ture					
Outdoor air temp.	23°0	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		
an temp.	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°C	:WB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
20	12.31	8.39	12.97	8.72	13.30	8.61	13.66	8.50	14.38	8.78	15.10		
25	12.05	8.27	12.71	8.61	13.03	8.50	13.39	8.39	14.11	8.69	14.83		
30	11.79	8.15	12.44	8.50	12.77	8.40	13.13	8.30	13.84	8.59			
35	11.31	7.94	12.10	8.36	12.50	8.29	12.86	8.19	13.58	8.50			
40	10.56	7.61	11.44	8.09	11.88	8.05	12.23	7.96	12.93	8.28			
43	10.00	7.37	10.90	7.88	11.35	7.85	11.76	7.79	12.57	8.16			

Heat M	leat Mode										
	door		Indoor	air temp	erature						
air t	emp.			°CDB							
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	8.62	8.14	7.67	7.19	6.88					
-9.6	-10	9.25	9.22	8.75	8.28	7.81					
-3.4	-4	9.41	9.39	9.36	8.89	8.42					
1.8	1	10.68	10.65	10.08	9.32	8.74					
4.9	4	12.85	12.68	11.74	10.58	9.80					
7.0	6	14.19	14.09	14.00	13.65	13.00					
11.2	10	15.16	15.06	14.97	14.66	13.36					

(c) Triple type

Model FDTC140VNTVD FDTC140VSTVD

Indoor unit FDTC50VD (3 units)

Outdoor unit FDC140VN FDC140VS

	е													
0.445.		Indoor air temperature												
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB			
an temp.	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB			
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC		
20	13.11	10.28	13.91	10.89	14.31	10.78	14.62	10.63	15.23	11.10	15.85	10.78		
25	12.92	10.20	13.78	10.84	14.21	10.74	14.48	10.59	15.04	11.05	15.59	10.71		
30	12.73	10.13	13.65	10.79	14.10	10.71	14.35	10.54	14.84	10.99				
35	12.53	10.05	13.51	10.74	14.00	10.67	14.21	10.50	14.64	10.93				
40	11.83	9.77	12.59	10.41	12.97	10.31	13.27	10.19	13.86	10.70				
43	11.20	9.53	12.04	10.21	12.35	10.11	12.70	10.00	13.39	10.56				

_	
	Heat Mode
1	Outdoor

	icat wode											
Out	door		Indoor a	air temp	erature							
air te	emp.			°CDB								
°CDB	°CWB	16	18	20	22	24						
-14.7	-15	9.85	9.31	8.76	8.22	7.86						
-9.6	-10	10.57	10.54	10.00	9.46	8.92						
-3.4	-4	10.75	10.73	10.69	10.16	9.63						
1.8	1	12.21	12.17	11.52	10.65	9.99						
4.9	4	14.69	14.49	13.36	12.09	11.20						
7.0	7.0 6		16.09	16.00	15.60	14.86						
11.2	10	17.47	17.36	17.26	16.75	15.27						

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions. Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW)

SHC: Sensible heat capacity (kW) HC: Heating capacity (kW)

PJA003Z377 A

#### (d) Double Twin type

Model FDTC200VSDVD Indoor unit FDTC50VD (4 units) Outdoor unit FDC200VS

Cool Mod	е												. !	Heat M	ode
0.44					Ind	oor air t	empera	ture					П	Outdoo	
Outdoor air temp.	23°0	DB	26°0	DB	27°0	CDB	28°CDB		31°CDB		33°CDB		П	air te	emp.
an temp.	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB			°CDB	°CW
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	П	-14.7	-15
20	20.36	14.90	21.49	15.63	22.06	15.45	22.70	15.28	23.99	15.95	25.28	15.53		-9.6	-10
25	19.71	14.62	20.82	15.37	21.37	15.20	22.00	15.04	23.26	15.72	24.52	15.31		-3.4	-4
30	19.07	14.36	20.15	15.12	20.69	14.95	21.30	14.79	22.53	15.49			П	1.8	1
35	18.10	13.96	19.37	14.82	20.00	14.70	20.60	14.55	21.80	15.26			П	4.9	4
40	16.90	13.47	18.30	14.43	18.97	14.33	19.54	14.19	20.68	14.92			Ιſ	7.0	6
43	16.00	13.12	17.44	14.11	18.16	14.05	18.81	13.95	20.01	14.72			Ιſ	11.2	10

I		door		Indoor air temperature								
ı	air te	emp.			°CDB							
I	°CDB	°CWB	16	18	20	22	24					
I	-14.7	-15	12.86	12.83	12.79	12.75	12.72					
I	-9.6	-10	14.51	14.47	14.42	14.37	14.32					
I	-3.4	-4	15.89	15.82	15.76	15.70	15.63					
ı	1.8	1	17.03	16.95	16.88	16.80	16.72					
I	4.9	4	21.70	21.57	21.06	19.38	18.37					
- 1												

PJA003Z377 🛦

22.68 22.54 22.40 21.84 21.06

24.90 | 24.73 | 24.57 | 24.40 | 24.23

Model FDTC250VSDVD Indoor unit FDTC60VD (4 units) Outdoor unit FDC250VS

Cool Mode Indoor air temperature Outdoor 23°CDB 26°CDB 27°CDB 28°CDB 31°CDB 33°CDB air temp. 16°CWB 18°CWB 19°CWB 20°CWB 22°CWB 24°CWB °CDB TC SHC TC SHC TC SHC TC SHC TC SHC TC SHC 27.58 17.62 28.38 17.41 29.99 18.00 25.45 17.16 26.87 17.84 31.60 17.48 20 24.64 16.79 26.72 17.26 27.50 17.07 29.08 17.67 25 26.03 17.48 30.65 17.17 30 23.84 16.42 25.18 17.12 25.86 16.92 26.63 16.73 28.17 17.35 35 22.63 15.88 24.21 16.72 25.00 16.58 25.75 16.40 27.25 17.04 40 21.13 15.23 22.88 16.18 23.71 16.08 24.43 15.91 25.85 16.56

22.70 15.69

23.51 15.57

25.02 16.29

	Heat Mode												
	Out	door	Indoor air temperature										
1	air te	emp.			°CDB								
	°CDB	°CWB	16	18	20	22	24						
	-14.7	-15	16.08	16.03	15.99	15.94	15.90						
	-9.6	-10	18.14	18.08	18.02	17.96	17.90						
	-3.4	-4	19.86	19.78	19.70	19.62	19.54						
	1.8	1	21.29	21.19	21.10	21.00	20.91						
	4.9	4	27.12	26.96	26.32	24.22	22.96						
	7.0	6	28.35	28.17	28.00	27.30	26.32						
	11.2	10	31.13	30.92	30.71	30.50	30.29						

PJA003Z377 🛕

#### (2) Ceiling cassette-4way type (FDT)

21.80 15.76

(a) Single type

20.00 14.74

43

Model FDT40ZIXVD Indoor unit FDT40VD Outdoor unit SRC40ZIX-S Cool Mode

O. Ada as		Indoor air temperature												
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB			
an temp.	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB			
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC		
20	3.83	3.27	4.06	3.51	4.17	3.42	4.30	3.34	4.54	3.54	4.78	3.35		
25	3.97	3.29	4.19	3.52	4.31	3.44	4.44	3.35	4.70	3.55	4.97	3.35		
30	3.82	3.27	4.04	3.50	4.15	3.42	4.28	3.33	4.54	3.54				
35	3.62	3.23	3.87	3.48	4.00	3.40	4.12	3.32	4.36	3.54				
40	3.38	3.20	3.66	3.46	3.80	3.39	3.91	3.31	4.14	3.53				
43	3.20	3.17	3.49	3.44	3.63	3.37	3.76	3.30	4.02	3.52				

Н	leat	Mode	

_	Heat IV	Heat Mode										
1	Out	door		Indoor	air temp	erature						
1	air te	emp.			°CDB							
	°CDB	°CWB	16	18	22	24						
]	-14.7	-15	2.56	2.53	2.48	2.43	2.38					
	-9.6	-10	3.79	3.74	3.69	3.64	3.47					
	-3.4	-4	4.19	4.17	4.06	3.74	3.54					
	1.8	1	4.28	4.25	4.15	3.81	3.62					
	4.9	4	4.36	4.34	4.23	3.89	3.69					
	7.0 6		4.56	4.53	4.50	4.39	4.23					
l	11.2	10	4.99	4.96	4.92	4.89	4.85					

PJF002Z192 🛕

Model FDT50ZIXVD Indoor unit FDT50VD Outdoor unit SRC50ZIX-S

Cool Mod	Cool Mode											
0.44					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
an temp.	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	4.79	3.85	5.07	4.10	5.22	4.02	5.37	3.94	5.67	4.16	5.98	3.98
25	4.93	3.88	5.22	4.13	5.36	4.05	5.52	3.97	5.85	4.19	6.18	4.00
30	4.76	3.84	5.04	4.09	5.18	4.01	5.34	3.93	5.66	4.16		
35	4.53	3.78	4.84	4.04	5.00	3.97	5.15	3.90	5.45	4.12		
40	4.23	3.70	4.58	3.99	4.75	3.92	4.89	3.85	5.17	4.08		
43	4.00	3.64	4.36	3.94	4.54	3.88	4.70	3.82	5.03	4.06		

Hoot Mode

Heat IV	oae										
Out	door		Indoor air temperature								
air te	emp.			°CDB							
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	3.08	3.03	2.98	2.92	2.85					
-9.6	-10	4.55	4.49	4.43	4.37	4.17					
-3.4	-4	5.02	4.99	4.87	4.49	4.25					
1.8	1	5.12	5.10	4.97	4.58	4.34					
4.9	4	5.22	5.20	5.08	4.67	4.43					
7.0	6	5.45	5.43	5.40	5.27	5.08					
11.2	10	5.97	5.94	5.90	5.87	5.84					

PJF002Z192 🛕

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero. (3) Symbols are as follows.

TC: Total cooling capacity (kW) SHC : Sensible heat capacity (kW)

HC: Heating capacity (kW)

 Model
 FDT60ZIXVD
 Indoor unit
 FDT60VD
 Outdoor unit
 SRC60ZIX-S

 Cool Mode
 SRC60ZIX-S
 SRC60ZIX-S

<u> </u>													
0.44		Indoor air temperature											
Outdoor air temp.	23°C	DB	26°0	DB	27°CDB		28°CDB		31°CDB		33°CDB		
an temp.	16°C	:WB	18°CWB		19°CWB		20°CWB		22°CWB		24°CWB		
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
20	5.36	4.57	5.68	4.91	5.84	4.79	6.01	4.67	6.35	4.96	6.69	4.69	
25	5.56	4.61	5.88	4.93	6.03	4.81	6.21	4.69	6.56	4.97	6.91	4.69	
30	5.36	4.57	5.66	4.91	5.82	4.79	5.99	4.67	6.33	4.96			
35	5.07	4.53	5.42	4.88	5.60	4.77	5.77	4.65	6.10	4.95			
40	4.73	4.47	5.12	4.84	5.30	4.74	5.46	4.63	5.77	4.94			
43	4.48	4.44	4.88	4.81	5.08	4.72	5.27	4.61	5.58	4.93			

Heat M	Heat Mode									
Out	door		Indoor	air temp	erature					
air t	emp.			°CDB						
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	3.82	3.76	3.69	3.62	3.54				
-9.6	-10	5.64	5.57	5.49	5.42	5.17				
-3.4	-4	6.21	6.18	6.05	5.57	5.28				
1.8	1	6.33	6.31	6.17	5.68	5.38				
4.9	4	6.46	6.43	6.30	5.80	5.49				
7.0	6	6.76	6.73	6.70	6.53	6.30				
11.2	10	7.44	7.40	7.37	7.33	7.29				

PJF002Z192 <u>A</u>

**Model FDT71VNVD** Indoor unit FDT71VD Outdoor unit FDC71VN Cool Mode

OCCI MICO														
0.44		Indoor air temperature												
Outdoor air temp.	23°C	DB	26°C	DB	27°CDB		28°CDB		31°CDB		33°CDB			
all tellip.	16°C	:WB	18°CWB		19°CWB		20°CWB		22°C	CWB	24°CWB			
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC		
20	6.96	5.45	7.39	5.80	7.61	5.69	7.84	5.58	8.31	5.88	8.78	5.62		
25	6.86	5.43	7.44	5.81	7.72	5.72	7.98	5.61	8.49	5.91	8.91	5.63		
30	6.67	5.38	7.17	5.75	7.41	5.65	7.67	5.55	8.14	5.85				
35	6.43	5.31	6.88	5.69	7.10	5.58	7.31	5.48	7.74	5.79				
40	6.00	5.20	6.50	5.60	6.75	5.51	6.94	5.41	7.34	5.73				

6.45 5.45 6.68

Heat Mode									
Out	door		Indoor	air temp	erature				
air te	emp.			°CDB					
°CDB	°CWB	16	18	20	22	24			
-14.7	-15	4.53	4.51	4.50	4.48	4.46			
-9.6	-10	5.11	5.09	5.06	5.03	5.00			
-3.4	-4	5.69	5.66	5.62	5.59	5.55			
1.8	1	6.13	6.09	6.04	6.00	5.96			
4.9	4	7.78	7.71	7.52	6.92	6.56			
7.0	6	8.16	8.08	8.00	7.80	7.52			
11.2	10	8.86	8.75	8.64	8.52	8.41			

PJF002Z192 <u>A</u>

ModelFDT100VNVD<br/>FDT100VSVDIndoor unitFDTC100VDOutdoor unitFDC100VN<br/>FDC100VS

6.19 5.53

Cool Mod	ool Mode													
0.14		Indoor air temperature												
Outdoor air temp.	23°0	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°CDB			
an temp.	16°C	WB	18°C	WB	19°C	WB	20°C	:WB	22°CWB 24°CWE		:WB			
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC		
20	9.98	7.24	10.55	7.64	10.84	7.47	11.15	7.29	11.78	7.64	12.41	7.24		
25	9.71	7.16	10.28	7.58	10.56	7.41	10.87	7.24	11.49	7.59	12.12	7.21		
30	9.44	7.09	10.00	7.52	10.28	7.36	10.59	7.19	11.21	7.55				
35	9.05	6.99	9.68	7.45	10.00	7.30	10.30	7.14	10.90	7.51				
40	8.45	6.84	9.15	7.34	9.50	7.20	9.78	7.05	10.34	7.44				
43	8.00	6.73	8.72	7.25	9.08	7.13	9.40	6.98	10.05	7.40				

	Heat Mode											
1	Out	door		Indoor	air temp	erature						
1	air te	emp.			°CDB							
	°CDB	°CWB	16	18	20	22	24					
	-14.7	-15	6.89	6.51	6.13	5.75	5.50					
	-9.6	-10	7.40	7.38	7.00	6.62	6.24					
	-3.4	-4	7.53	7.51	7.49	7.11	6.74					
╛	1.8	1	8.55	8.52	8.06	7.45	6.99					
	4.9	4	10.28	10.14	9.33	8.47	7.84					
	7.0	6	11.35	11.27	11.20	10.92	10.40					
	11.2	10	12.19	12.10	12.02	11.73	10.69					

PJF002Z192 🗥

Model FDT125VNVD Indoor unit FDT125VD Outdoor unit FDC125VN FDC125VS

Cool Mode

43

5.68 5.12

	Pool Mode											
Outdoor					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°CDB		28°CDB		31°CDB		33°CDB	
an temp.	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	12.31	8.65	12.97	9.06	13.30	8.89	13.66	8.72	14.38	9.08	15.10	8.69
25	12.05	8.56	12.71	8.98	13.03	8.81	13.39	8.65	14.11	9.02	14.83	8.64
30	11.79	8.47	12.44	8.90	12.77	8.74	13.13	8.58	13.84	8.95		
35	11.31	8.30	12.10	8.80	12.50	8.66	12.86	8.51	13.58	8.89		
40	10.56	8.05	11.44	8.60	11.88	8.49	12.23	8.34	12.93	8.75		
43	10.00	7.87	10.90	8.44	11.35	8.34	11.76	8.22	12.57	8.67		

Heat Mode

Heat IVI	eat wode							
Out	door		Indoor	air temp	erature			
air te	emp.			°CDB				
°CDB	°CWB	16	18	20	22	24		
-14.7	-15	8.62	8.14	7.67	7.19	6.88		
-9.6	-10	9.25	9.22	8.75	8.28	7.81		
-3.4	-4	9.41	9.39	9.36	8.89	8.42		
1.8	1	10.68	10.65	10.08	9.32	8.74		
4.9	4	12.85	12.68	11.74	10.58	9.80		
7.0	6	14.19	14.09	14.00	13.65	13.00		
11.2	10	15.16	15.06	14.97	14.66	13.36		

PJF002Z192 🗥

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions. Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW)
SHC: Sensible heat capacity (kW)
HC: Heating capacity (kW)

7.14 5.70

5.36

FDT140VNVD FDT140VSVD Model

Indoor unit FDT140VD

FDC140VN Outdoor unit FDC140VS

Cool Mode

Outdoor

air temp

°CDB

25

30

35

40

43

Cool Mode

0.44					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	26°CDB		27°CDB		DB	31°C	DB	33°CDB	
an tomp.	16°CWB		18°CWB		19℃WB		20°C	:WB	22°C	:WB	24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	13.11	9.51	13.91	10.01	14.31	9.88	14.62	9.71	15.23	10.07	15.85	9.71
25	12.92	9.43	13.78	9.96	14.21	9.85	14.48	9.67	15.04	10.02	15.59	9.64
30	12.73	9.36	13.65	9.92	14.10	9.81	14.35	9.62	14.84	9.96		
35	12.53	9.28	13.51	9.87	14.00	9.77	14.21	9.58	14.64	9.91		
40	11.83	9.01	12.59	9.54	12.97	9.43	13.27	9.28	13.86	9.69		
43	11.20	8.77	12.04	9.36	12.35	9.23	12.70	9.11	13.39	9.56		

Heat Mode

neal ivi										
Out	door		Indoor air temperature							
air te	emp.			°CDB						
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	9.85	9.31	8.76	8.22	7.86				
-9.6	-10	10.57	10.54	10.00	9.46	8.92				
-3.4	-4	10.75	10.73	10.69	10.16	9.63				
1.8	1	12.21	12.17	11.52	10.65	9.99				
4.9	4	14.69	14.49	13.36	12.09	11.20				
7.0	6	16.18	16.09	16.00	15.60	14.86				
11.2	10	17.47	17.36	17.26	16.75	15.27				

PJF002Z192 🗥

22

4.48

5.03

5.59

6.00

6.92

7.80

24

4.46

5.00

5.55

5.96

6.56

7.52

8.41

24

5.50

6.24

6.74

6.99

7.84

10.40

10.69

Indoor air temperature

CDB

20

4.50

5.06

5.62

6.04

7.52

8.00

8.64

(b) Twin type

Model FDT71VNPVD Cool Mode

23°CDB

16°CWB

SHC

5.66

5.65

5.64

5.63

5.61

5.60

TC

6.96

6.86

6.67

6.43

6.00

5.68

26°CDB

18°CWB

SHC

6.07

6.07

6.07

6.07

6.07

6.07

TC

7.39

7.44

7.17

6.88

6.50

6.19

Indoor unit FDT40VD (2 units)

27°CDB

19°CWB

TC

7.61

7.72

7.41

7.10

6.75

6.45

Indoor air tem

SHC

5.87

5.87

5.88

5.88

5.89

5.90

Outdoor unit FDC71VN

Heat Mode

16

4.53

5.11

5.69

6.13

7.78

8.16

8.86

18

4.51

5.09

5.66

6.09

7.71

8.08

8.75

empera	ture				door			
28°C	DB	DB	air temp.					
20°C	WB	22°C	WB	24°C	:WB	°C	DB	°CWB
TC	SHC	TC	SHC	TC	SHC	-14	4.7	-15
7.84	5.67	8.31	6.01	8.78	8.78 5.55		9.6	-10
7.98	5.66	8.49	6.00	8.91	5.54	-3	3.4	-4
7.67	5.67	8.14	6.02			_ 1	.8	1
7.31	5.69	7.74	6.06				.9	4
6.94	5.70	70 7.34 6.09				7	.0	6
6.68	6.68 5.72 7.14 6.11					11	1.2	10

8.52 PJF002Z192

Model FDT100VNPVD FDT100VSPVD Indoor unit FDT50VD (2 units)

Outdoor unit FDC100VN FDC100VS

Heat Mode

Outdoor					Indo	oor air t	empera	ture					Out	door		Indoor	air temp	erature	)
air temp.	23°0	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB	air t	emp.			°CDB		
an tomp.	16°C	:WB	18℃	:WB	19°C	WB	20°C	WB	22°C	WB	24°C	:WB	°CDB	°CWB	16	18	20	22	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	-14.7	-15	6.89	6.51	6.13	5.75	Г
20	9.98	7.80	10.55	8.29	10.84	8.12	11.15	7.96	11.78	8.38	12.41	8.01	-9.6	-10	7.40	7.38	7.00	6.62	
25	9.71	7.73	10.28	8.22	10.56	8.06	10.87	7.90	11.49	8.34	12.12	7.97	-3.4	-4	7.53	7.51	7.49	7.11	
30	9.44	7.66	10.00	8.16	10.28	8.01	10.59	7.85	11.21	8.30			1.8	1	8.55	8.52	8.06	7.45	
35	9.05	7.55	9.68	8.09	10.00	7.95	10.30	7.80	10.90	8.25			4.9	4	10.28	10.14	9.33	8.47	
40	8.45	7.40	9.15	7.97	9.50	7.85	9.78	7.70	10.34	8.17			7.0	6	11.35	11.27	11.20	10.92	-
43	8.00	7.29	8.72	7.88	9.08	7.77	9.40	7.64	10.05	8.13			11.2	10	12.19	12.10	12.02	11.73	-
																			=

11.73 PJF002Z192 🛕

PJF002Z192 🗥

Model FDT125VNPVD FDT125VSPVD Indoor unit FDT60VD (2 units)

Outdoor unit FDC125VN FDC125VS

Cool Mode

0.445.54					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	:DB
an temp.	16°C	:WB	18°C	:WB	19°C	:WB	20°C	:WB	22°C	:WB	24°C	WB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	12.31	9.43	12.97	10.03	13.30	9.76	13.66	9.49	14.38	10.00	15.10	9.40
25	12.05	9.38	12.71	9.99	13.03	9.73	13.39	9.46	14.11	9.99	14.83	9.39
30	11.79	9.34	12.44	9.96	12.77	9.70	13.13	9.44	13.84	9.97		
35	11.31	9.25	12.10	9.91	12.50	9.67	12.86	9.41	13.58	9.96		
40	10.56	9.12	11.44	9.83	11.88	9.60	12.23	9.36	12.93	9.93		
43	10.00	9.03	10.90	9.76	11.35	9.55	11.76	9.32	12.57	9.91		

 Heat M	leat Mode									
Out	door		Indoor	air temp	erature					
air te	emp.			°CDB						
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	8.62	8.14	7.67	7.19	6.88				
-9.6	-10	9.25	9.22	8.75	8.28	7.81				
-3.4	-4	9.41	9.39	9.36	8.89	8.42				
1.8	1	10.68	10.65	10.08	9.32	8.74				
4.9	4	12.85	12.68	11.74	10.58	9.80				
7.0	6	14.19	14.09	14.00	13.65	13.00				
11.2	10	15.16	15.06	14.97	14.66	13.36				

Note(1) These data show average statuses

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length: 7.5m

Level difference of Zero.

(3) Symbols are as follows. TC: Total cooling capacity (kW) SHC : Sensible heat capacity (kW)

HC: Heating capacity (kW)

Model FDT140VNPVD FDT140VSPVD

Indoor unit FDT71VD (2 units)

Outdoor unit FDC140VN FDC140VS

Cool Mode

O. dala au		Indoor air temperature													
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB			
dii tomp.	16°C	WB	18°C	WB	19°C	WB	20°C	WB	22°C	WB	24°C	WB			
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC			
20	13.11	10.43	13.91	11.12	14.31	10.89	14.62	10.64	15.23	11.20	15.85	10.66			
25	12.92	10.39	13.78	11.09	14.21	10.87	14.48	10.61	15.04	11.17	15.59	10.64			
30	12.73	10.34	13.65	11.06	14.10	10.85	14.35	10.59	14.84	11.15					
35	12.53	10.29	13.51	11.03	14.00	10.83	14.21	10.57	14.64	11.12					
40	11.83	10.12	12.59	10.85	12.97	10.64	13.27	10.42	13.86	11.03					
43	11.20	9.98	12.04	10.74	12.35	10.54	12.70	10.33	13.39	10.98					

Heat Mode

<u>H</u>	leat Mode												
	Out	door		Indoor air temperature									
	air te	emp.			°CDB								
٥	CDB	°CWB	16	18	20	22	24						
-	14.7	-15	9.85	9.31	8.76	8.22	7.86						
	-9.6	-10	10.57	10.54	10.00	9.46	8.92						
Ŀ	-3.4	-4	10.75	10.73	10.69	10.16	9.63						
	1.8	1	12.21	12.17	11.52	10.65	9.99						
	4.9	4	14.69	14.49	13.36	12.09	11.20						
	7.0	6	16.18	16.09	16.00	15.60	14.86						
1	11.2	10	17.47	17.36	17.26	16.75	15.27						

PJF002Z192 A

Model FDT200VSPVD

Indoor unit FDT100VD (2 units)

Outdoor unit FDC200VS

Cool Mode

Outdoor					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
dii tomp.	16°C	WB	18°C	WB	19°C	WB	20°C	WB	22°C	WB	24°C	:WB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	20.36	14.58	21.49	15.38	22.06	15.02	22.70	14.66	23.99	15.34	25.28	14.53
25	19.71	14.40	20.82	15.22	21.37	14.88	22.00	14.53	23.26	15.23	24.52	14.44
30	19.07	14.23	20.15	15.07	20.69	14.74	21.30	14.40	22.53	15.12		
35	18.10	13.98	19.37	14.90	20.00	14.60	20.60	14.28	21.80	15.02		
40	16.90	13.68	18.30	14.67	18.97	14.40	19.54	14.09	20.68	14.87		
43	16.00	13.46	17.44	14.50	18.16	14.25	18.81	13.97	20.01	14.78		

Heat Mode

i leat iv	neal Mode									
Out	door		Indoor	air temp	erature					
air t	emp.			°CDB						
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	12.86	12.83	12.79	12.75	12.72				
-9.6	-10	14.51	14.47	14.42	14.37	14.32				
-3.4	-4	15.89	15.82	15.76	15.70	15.63				
1.8	1	17.03	16.95	16.88	16.80	16.72				
4.9	4	21.70	21.57	21.06	19.38	18.37				
7.0	6	22.68	22.54	22.40	21.84	21.06				
11.2	10	24.90 24.73 24.57 24.40 24.23								

PJF002Z192 A

Model FDT250VSPVD

Indoor unit FDT125VD (2 units)

Outdoor unit FDC250VS

Cool Mode

Outdoor					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
dii tomp.	16°C	WB	18°C	WB	19°C	WB	20°C	WB	22°C	WB	24°C	:WB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	25.45	17.59	26.87	18.42	27.58	18.08	28.38	17.74	29.99	18.46	31.60	17.67
25	24.64	17.30	26.03	18.16	26.72	17.82	27.50	17.50	29.08	18.24	30.65	17.47
30	23.84	17.02	25.18	17.89	25.86	17.57	26.63	17.26	28.17	18.02		
35	22.63	16.61	24.21	17.60	25.00	17.33	25.75	17.03	27.25	17.81		
40	21.13	16.11	22.88	17.20	23.71	16.96	24.43	16.68	25.85	17.49		
43	20.00	15.74	21.80	16.89	22.70	16.69	23.51	16.45	25.02	17.31		

I ICat IV	leat Mode										
Out	door		Indoor air temperature								
air t	emp.			°CDB							
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	16.08	16.03	15.99	15.94	15.90					
-9.6	-10	18.14	18.08	18.02	17.96	17.90					
-3.4	-4	19.86	19.78	19.70	19.62	19.54					
1.8	1	21.29	21.19	21.10	21.00	20.91					
4.9	4	27.12	26.96	26.32	24.22	22.96					
7.0	6	28.35	28.17	28.00	27.30	26.32					
11.2	10	31.13 30.92 30.71 30.50 30.29									

PJF002Z192 A

(c) Triple type

Model FDT140VNTVD FDT140VSTVD

Indoor unit FDT50VD (3 units)

Outdoor unit FDC140VN FDC140VS

Cool Mode

COOI MOU												
Outdoor					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
dii tomp.	16°C	:WB	18℃	:WB	19°C	SHC TC SHC TC SHC TC	:WB					
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	13.11	11.21	13.91	12.00	14.31	11.78	14.62	11.55	15.23	12.21	15.85	11.70
25	12.92	11.16	13.78	11.97	14.21	11.76	14.48	11.52	15.04	12.18	15.59	11.67
30	12.73	11.11	13.65	11.94	14.10	11.74	14.35	11.50	14.84	12.16		
35	12.53	11.06	13.51	11.91	14.00	11.72	14.21	11.47	14.64	12.13		
40	11.83	10.89	12.59	11.72	12.97	11.52	13.27	11.31	13.86	12.02		
43	11.20	10.73	12.04	11.60	12.35	11.41	12.70	11.21	13.39	11.96		

Heat Mode

Heat IV	reat Mode									
Out	door		Indoor	air temp	erature					
air te	emp.			°CDB						
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	9.85	9.31	8.76	8.22	7.86				
-9.6	-10	10.57	10.54	10.00	9.46	8.92				
-3.4	-4	10.75	10.73	10.69	10.16	9.63				
1.8	1	12.21	12.17	11.52	10.65	9.99				
4.9	4	14.69	14.49	13.36	12.09	11.20				
7.0	6	16.18	16.09	16.00	15.60	14.86				
11.2	10	17.47	17.36	17.26	16.75	15.27				

PJF002Z192 🗥

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously. (2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Corresponding refrigerant pipi Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW)
SHC: Sensible heat capacity (kW)
HC: Heating capacity (kW)

Model FDT200VSTVD Indoor unit FDT71VD (3 units) Outdoor unit FDC200VS

Cool Mod	е											
0.11					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°CDB		28°CDB		31°CDB		33°CDB	
an temp.	16°CWB		18°CWB		19°C	19°CWB		20°CWB		22°CWB		:WB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	20.36	16.78	21.49	17.87	22.06	17.57	22.70	17.27	23.99	18.25	25.28	17.56
25	19.71	16.59	20.82	17.70	21.37	17.41	22.00	17.12	23.26	18.12	24.52	17.45
30	19.07	16.41	20.15	17.54	20.69	17.25	21.30	16.97	22.53	17.99		
35	18.10	16.13	19.37	17.34	20.00	17.09	20.60	16.82	21.80	17.87		
40	16.90	15.80	18.30	17.09	18.97	16.86	19.54	16.60	20.68	17.68		
43	16.00	15.56	17.44	16.89	18.16	16.69	18.81	16.46	20.01	17.56		

Heat Mode Outdoor Indoor air temperature air temp. °CDB °CDB °CWB 24 16 18 20 12.75 12.72 -14.7 -15 12.86 12.83 12.79 -9.6 -10 14.51 14.47 14.42 14.37 14.32 -3.4 15.89 15.82 15.76 | 15.70 | 15.63 1.8 17.03 16.95 16.88 | 16.80 | 16.72 4.9 4 21.70 21.57 21.06 19.38 18.37 7.0 6 22.68 | 22.54 | 22.40 | 21.84 | 21.06 11.2 10 24.90 24.73 24.57 24.40 24.23

PJF002Z192 A

#### (d) Double Twin type

Model FDT200VSDVD Indoor unit FDT50VD (4 units) Outdoor unit FDC200VS

Cool Mod	e											
0					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
an temp.	16°CWB		18°CWB		19°C	:WB	20°C	:WB	22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	20.36	16.78	21.49	17.87	22.06	17.57	22.70	17.27	23.99	18.25	25.28	17.56
25	19.71	16.59	20.82	17.70	21.37	17.41	22.00	17.12	23.26	18.12	24.52	17.45
30	19.07	16.41	20.15	17.54	20.69	17.25	21.30	16.97	22.53	17.99		
35	18.10	16.13	19.37	17.34	20.00	17.09	20.60	16.82	21.80	17.87		
40	16.90	15.80	18.30	17.09	18.97	16.86	19.54	16.60	20.68	17.68		
43	16.00	15.56	17.44	16.89	18.16	16.69	18.81	16.46	20.01	17.56		

Heat	Heat Mode									
Oı	ıtdoor		Indoor	air temp	erature					
air	temp.			°CDB						
°CDE	°CWB	16	18	20	22	24				
-14.7	-15	12.86	12.83	12.79	12.75	12.72				
-9.6	-10	14.51	14.47	14.42	14.37	14.32				
-3.4	-4	15.89	15.82	15.76	15.70	15.63				
1.8	1	17.03	16.95	16.88	16.80	16.72				
4.9	4	21.70	21.57	21.06	19.38	18.37				
7.0	6	22.68	22.54	22.40	21.84	21.06				
11.2	10	24.90	24.73	24.57	24.40	24.23				

PJF002Z192 🛕

Model FDT250VSDVD Indoor unit FDT60VD (4 units) Outdoor unit FDC250VS

COOI WOO	e											
0					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°CDB		28°CDB		31°CDB		33°CDB	
an temp.	16°CWB		18°C	18°CWB		19°CWB		20°CWB		22°CWB		WB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	25.45	19.02	26.87	20.19	27.58	19.64	28.38	19.08	29.99	20.07	31.60	18.82
25	24.64	18.87	26.03	20.07	26.72	19.54	27.50	18.99	29.08	20.02	30.65	18.80
30	23.84	18.72	25.18	19.95	25.86	19.43	26.63	18.91	28.17	19.97		
35	22.63	18.50	24.21	19.82	25.00	19.34	25.75	18.83	27.25	19.92		
40	21.13	18.25	22.88	19.65	23.71	19.20	24.43	18.71	25.85	19.86		
43	20.00	18.06	21.80	19.52	22.70	19.09	23.51	18.64	25.02	19.82		

_	Heat Mode										
1	Out	door		Indoor	air temp	erature					
1	air te	emp.			°CDB						
	°CDB	°CWB	16	18	20	22	24				
]	-14.7	-15	16.08	16.03	15.99	15.94	15.90				
	-9.6	-10	18.14	18.08	18.02	17.96	17.90				
	-3.4	-4	19.86	19.78	19.70	19.62	19.54				
	1.8	1	21.29	21.19	21.10	21.00	20.91				
	4.9	4	27.12	26.96	26.32	24.22	22.96				
	7.0	6	28.35	28.17	28.00	27.30	26.32				
	11.2	10	31.13	30.92	30.71	30.50	30.29				

PJF002Z192 🛕

#### (3) Ceiling suspended type (FDEN)

#### (a) Single type

Model FDEN40ZIXVD Indoor unit FDEN40VD Outdoor unit SRC40ZIX-S

Cool	Mode

0.11					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°CDB		27°C	27°CDB		28°CDB		DB	33°CDB	
	16°C	WB	18°C	WB 19°CWB		20°CWB		22°CWB		24°CWB		
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	3.83	2.96	4.06	3.13	4.17	3.09	4.30	3.04	4.54	3.20	4.78	3.09
25	3.97	3.01	4.19	3.18	4.31	3.13	4.44	3.08	4.70	3.24	4.97	3.13
30	3.82	2.96	4.04	3.13	4.15	3.08	4.28	3.04	4.54	3.20		
35	3.62	2.89	3.87	3.08	4.00	3.04	4.12	3.00	4.36	3.15		
40	3.38	2.80	3.66	3.01	3.80	2.98	3.91	2.94	4.14	3.10		
43	3.20	2.74	3.49	2.96	3.63	2.93	3.76	2.90	4.02	3.07		

Heat Mode

leat wode											
Out	door		Indoor air temperature								
air te	emp.			°CDB							
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	2.56	2.53	2.48	2.43	2.38					
-9.6	-10	3.79	3.74	3.69	3.64	3.47					
-3.4	-4	4.19	4.17	4.06	3.74	3.54					
1.8	1	4.28	4.25	4.15	3.81	3.62					
4.9	4	4.36	4.34	4.23	3.89	3.69					
7.0	6	4.56	4.53	4.50	4.39	4.23					
11.2	10	4.99	4.96	4.92	4.89	4.85					

PFA003Z902 A

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW)
SHC: Sensible heat capacity (kW)
HC: Heating capacity (kW)

 Model
 FDEN50ZIXVD
 Indoor unit
 FDEN50VD
 Outdoor unit
 SRC50ZIX-S

 Cool Mode
 Pool Mode
 Poo

COOI WIOU	<del>-</del>											
0.44					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	16°C	:WB	18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	4.79	3.31	5.07	3.47	5.22	3.42	5.37	3.36	5.67	3.49	5.98	3.36
25	4.93	3.37	5.22	3.52	5.36	3.46	5.52	3.41	5.85	3.54	6.18	3.41
30	4.76	3.30	5.04	3.46	5.18	3.40	5.34	3.35	5.66	3.49		
35	4.53	3.21	4.84	3.39	5.00	3.35	5.15	3.29	5.45	3.43		
40	4.23	3.10	4.58	3.30	4.75	3.27	4.89	3.22	5.17	3.36		
43	4.00	3.02	4.36	3.23	4.54	3.20	4.70	3.16	5.03	3.32		_

Heat Mode Outdoor Indoor air temperature air temp. °CDB °CDB °CWB 24 16 18 20 22 -14.7 -15 3.08 3.03 2.98 2.92 2.85 -9.6 -10 4.55 4.49 4.43 4.37 4.17 -3.4 5.02 4.99 4.87 4.25 4.49 1.8 5.12 5.10 4.97 4.58 4.34 4.9 4 5.22 5.20 5.08 4.67 4.43 7.0 6 5.40 5.08 5.45 5.43 5.27 11.2 10 5.97 5.94 5.90 5.87 5.84

PFA003Z902 A

Model FDEN60ZIXVD Indoor unit FDEN60VD Outdoor unit SRC60ZIX-S

Cool Mod	е														
0.44		Indoor air temperature													
Outdoor air temp.	23°0	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB				
an tomp.	16°CWB		18°CWB		19℃	:WB	20°CWB		22°CWB		24°CWB				
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC			
20	5.36	4.63	5.68	4.94	5.84	4.88	6.01	4.81	6.35	5.10	6.69	4.95			
25	5.56	4.69	5.88	5.00	6.03	4.93	6.21	4.87	6.56	5.15	6.91	4.99			
30	5.36	4.63	5.66	4.94	5.82	4.87	5.99	4.81	6.33	5.09					
35	5.07	4.53	5.42	4.87	5.60	4.81	5.77	4.75	6.10	5.04					
40	4.73	4.42	5.12	4.78	5.30	4.73	5.46	4.67	5.77	4.97	·				
43	4.48	4.35	4.88	4.72	5.08	4.67	5.27	4.63	5.58	4.93					

**Heat Mode** Outdoor Indoor air temperature air temp. °CDB °CDB °CWB 16 18 20 22 24 -14.7 -15 3.82 3.76 3.69 3.62 3.54 -9.6 -10 5.64 5.57 5.49 5.42 5.17 -3.4 -4 6.21 6.18 6.05 5.57 5.28 1.8 1 6.33 6.31 6.17 5.68 5.38 5.49 4.9 4 6.46 6.43 6.30 5.80 7.0 6 6.76 6.73 6.70 6.53 6.30 11.2 10 7.44 7.40 7.37 7.33 7.29

PFA003Z902 A

 Model
 FDEN71VNVD
 Indoor unit
 FDEN71VD
 Outdoor unit
 FDC71VN

 Cool Mode
 FDEN71VD
 Outdoor unit
 FDC71VN

					11							
Outdoor					Ina	oor air t	empera	ture				
air temp.	23°C	DB	26°CDB		27°C	27°CDB		28°CDB		DB	33°CDB	
an temp.	16℃	:WB	18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	6.96	5.18	7.39	5.47	7.61	5.39	7.84	5.31	8.31	5.57	8.78	5.38
25	6.86	5.14	7.44	5.49	7.72	5.43	7.98	5.35	8.49	5.61	8.91	5.41
30	6.67	5.07	7.17	5.40	7.41	5.33	7.67	5.27	8.14	5.53		
35	6.43	4.99	6.88	5.31	7.10	5.24	7.31	5.16	7.74	5.43		
40	6.00	4.84	6.50	5.19	6.75	5.14	6.94	5.06	7.34	5.33		
43	5.68	4.73	6.19	5.10	6.45	5.05	6.68	4.99	7.14	5.28		

_	Heat Mode										
1	Out	door		Indoor	air temp	erature					
1	air te	emp.			°CDB						
	°CDB	°CWB	16	18	20	22	24				
1	-14.7	-15	4.53								
	-9.6	-10	5.11	5.09	5.06	5.03	5.00				
	-3.4	-4	5.69	5.66	5.62	5.59	5.55				
	1.8	1	6.13	6.09	6.04	6.00	5.96				
	4.9	4	7.78	7.71	7.52	6.92	6.56				
	7.0	6	8.16	8.08	8.00	7.80	7.52				
	11.2	10	8.86	8.75	8.64	8.52	8.41				

PFA003Z902 <u>A</u>

 Model
 FDEN100VNVD
 Indoor unit
 FDEN100VD
 Outdoor unit
 FDC100VN

 FDC100VN
 FDC100VS

Cool Mode

OOOI WOO												
Outdoor					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
dii tomp.	16°C	:WB	18℃	:WB	19℃	:WB	20°C	:WB	22°C	:WB	24°C	:WB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	9.98	7.01	10.55	7.35	10.84	7.23	11.15	7.11	11.78	7.40	12.41	7.13
25	9.71	6.90	10.28	7.25	10.56	7.14	10.87	7.03	11.49	7.33	12.12	7.06
30	9.44	6.80	10.00	7.16	10.28	7.05	10.59	6.94	11.21	7.25		
35	9.05	6.66	9.68	7.05	10.00	6.96	10.30	6.86	10.90	7.17		
40	8.45	6.44	9.15	6.88	9.50	6.81	9.78	6.71	10.34	7.03		
43	8.00	6.29	8.72	6.74	9.08	6.68	9.40	6.60	10.05	6.95		

Heat Mode

Heat IV	oae					
Out	door		Indoor	air temp	erature	
air te	emp.			°CDB		
°CDB	°CWB	16	18	20	22	24
-14.7	-15	6.89	6.51	6.13	5.75	5.50
-9.6	-10	7.40	7.38	7.00	6.62	6.24
-3.4	-4	7.53	7.51	7.49	7.11	6.74
1.8	1	8.55	8.52	8.06	7.45	6.99
4.9	4	10.28	10.14	9.33	8.47	7.84
7.0	6	11.35	11.27	11.20	10.92	10.40
11.2	10	12.19	12.10	12.02	11.73	10.69

PFA003Z902 A

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions. Corresponding refrigerant piping length: 7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW) SHC: Sensible heat capacity (kW) HC: Heating capacity (kW)

Model FDEN125VNVD FDEN125VSVD

Indoor unit FDEN125VD

FDC125VN FDC125VS Outdoor unit

Cool Mode

0.44					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
an temp.	16℃	WB	18°C	WB	19°C	WB	20°C	:WB	22°C	WB	24°C	:WB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	12.31	8.36	12.97	8.72	13.30	8.56	13.66	8.42	14.38	8.71	15.10	8.36
25	12.05	8.26	12.71	8.62	13.03	8.47	13.39	8.33	14.11	8.64	14.83	8.30
30	11.79	8.15	12.44	8.53	12.77	8.39	13.13	8.25	13.84	8.56		
35	11.31	7.97	12.10	8.41	12.50	8.30	12.86	8.16	13.58	8.49		
40	10.56	7.69	11.44	8.19	11.88	8.10	12.23	7.97	12.93	8.32		
43	10.00	7.49	10.90	8.01	11.35	7.93	11.76	7.83	12.57	8.22		

Heat Mode

i ieat ivi	oue					
Out	door		Indoor	air temp	erature	
air te	emp.			°CDB		
°CDB	°CWB	16	18	20	22	24
-14.7	-15	8.62	8.14	7.67	7.19	6.88
-9.6	-10	9.25	9.22	8.75	8.28	7.81
-3.4	-4	9.41	9.39	9.36	8.89	8.42
1.8	1	10.68	10.65	10.08	9.32	8.74
4.9	4	12.85	12.68	11.74	10.58	9.80
7.0	6	14.19	14.09	14.00	13.65	13.00
11.2	10	15.16	15.06	14.97	14.66	13.36

PFA003Z902 A

Model FDEN140VNVD FDEN140VSVD

Cool Mode

Indoor unit FDEN140VD

Outdoor unit FDC140VN FDC140VS

Heat Mode

Outdoor					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
un temp.	16℃	WB	18°C	:WB	19°C	:WB	20°C	WB	22°C	WB	24°C	:WB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	13.11	8.68	13.91	9.06	14.31	8.91	14.62	8.73	15.23	8.96	15.85	8.55
25	12.92	8.60	13.78	9.01	14.21	8.88	14.48	8.68	15.04	8.90	15.59	8.49
30	12.73	8.53	13.65	8.96	14.10	8.84	14.35	8.64	14.84	8.84		
35	12.53	8.45	13.51	8.91	14.00	8.80	14.21	8.59	14.64	8.79		
40	11.83	8.17	12.59	8.58	12.97	8.45	13.27	8.29	13.86	8.57		
43	11.20	7.93	12.04	8.39	12.35	8.25	12.70	8.12	13.39	8.44		

	door	Indoor air temperature						
air te	emp.			°CDB				
°CDB	°CWB	16	18	20	22	24		
-14.7	-15	9.85	9.31	8.76	8.22	7.86		
-9.6	-10	10.57	10.54	10.00	9.46	8.92		
-3.4	-4	10.75	10.73	10.69	10.16	9.63		
1.8	1	12.21	12.17	11.52	10.65	9.99		
4.9	4	14.69	14.49	13.36	12.09	11.20		
7.0	6	16.18	16.09	16.00	15.60	14.86		
11.2	10	17.47	17.36	17.26	16.75	15.27		

PFA003Z902 A

(b) Twin type

Model FDEN71VNPVD Cool Mode

Indoor unit FDEN40VD (2 units)

Outdoor unit FDC71VN

Heat Mode

air temp.         23°CDB         26°CDB         27°CDB         28°CDB         31°CDB         33°CDB           16°CWB         18°CWB         19°CWB         20°CWB         22°CWB         24°CWB           °CDB         TC         SHC         TC	Outdoor					Indo	oor air t	empera	ture				
*** 16°CWB         18°CWB         19°CWB         20°CWB         22°CWB         24°CWB           °CDB         TC         SHC         TC         SHC		23°C	DB	26°C	DB	27°C	DB	28°CDB		31°CDB		33°C	:DB
20     6.96     5.68     7.39     6.04     7.61     5.96     7.84     5.88     8.31     6.21     8.78     6.0       25     6.86     5.64     7.44     6.06     7.72     6.00     7.98     5.92     8.49     6.25     8.91     6.0       30     6.67     5.58     7.17     5.98     7.41     5.91     7.67     5.84     8.14     6.17       35     6.43     5.50     6.88     5.89     7.10     5.82     7.31     5.74     7.74     6.08	an tomp.	16℃	WB	18℃	:WB	19℃	:WB	20°C	:WB	22°C	:WB	24°C	WB
25     6.86     5.64     7.44     6.06     7.72     6.00     7.98     5.92     8.49     6.25     8.91     6.0       30     6.67     5.58     7.17     5.98     7.41     5.91     7.67     5.84     8.14     6.17       35     6.43     5.50     6.88     5.89     7.10     5.82     7.31     5.74     7.74     6.08	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
30     6.67     5.58     7.17     5.98     7.41     5.91     7.67     5.84     8.14     6.17       35     6.43     5.50     6.88     5.89     7.10     5.82     7.31     5.74     7.74     6.08	20	6.96	5.68	7.39	6.04	7.61	5.96	7.84	5.88	8.31	6.21	8.78	6.02
35 6.43 5.50 6.88 5.89 7.10 5.82 7.31 5.74 7.74 6.08	25	6.86	5.64	7.44	6.06	7.72	6.00	7.98	5.92	8.49	6.25	8.91	6.04
	30	6.67	5.58	7.17	5.98	7.41	5.91	7.67	5.84	8.14	6.17		
40 6.00 5.36 6.50 5.78 6.75 5.72 6.94 5.65 7.34 5.99	35	6.43	5.50	6.88	5.89	7.10	5.82	7.31	5.74	7.74	6.08		
	40	6.00	5.36	6.50	5.78	6.75	5.72	6.94	5.65	7.34	5.99		
43 5.68 5.26 6.19 5.69 6.45 5.64 6.68 5.58 7.14 5.95	43	5.68	5.26	6.19	5.69	6.45	5.64	6.68	5.58	7.14	5.95		

i icat ivi	ouo									
Out	door		Indoor	air temp	erature					
air te	emp.		°CDB							
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	4.53	4.51	4.50	4.48	4.46				
-9.6	-10	5.11	5.09	5.06	5.03	5.00				
-3.4	-4	5.69	5.66	5.62	5.59	5.55				
1.8	1	6.13	6.09	6.04	6.00	5.96				
4.9	4	7.78	7.71	7.52	6.92	6.56				
7.0	6	8.16	8.08	8.00	7.80	7.52				
11.2	10	8.86	8.75	8.64	8.52	8.41				

PFA003Z902 A

Model FDEN100VNPVD FDEN100VSPVD

Indoor unit FDEN50VD (2 units)

Outdoor unit FDC100VN FDC100VS

Cool Mod	e											
0	Outdoor Outdoor											
air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
an temp.	16°C	WB	18℃	WB	19℃	WB	20°C	:WB	22°C	:WB	24°C	:WB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	9.98	6.78	10.55	7.09	10.84	6.97	11.15	6.85	11.78	7.11	12.41	6.83
25	9.71	6.68	10.28	6.99	10.56	6.88	10.87	6.76	11.49	7.03	12.12	6.76
30	9.44	6.57	10.00	6.89	10.28	6.78	10.59	6.68	11.21	6.95		
35	9.05	6.42	9.68	6.78	10.00	6.69	10.30	6.59	10.90	6.86		
40	8.45	6.20	9.15	6.60	9.50	6.53	9.78	6.43	10.34	6.71		
43	8.00	6.04	8.72	6.46	9.08	6.40	9.40	6.32	10.05	6.64		

	Heat M	ode					
1	Out	door		Indoor	air temp	erature	
1	air te	emp.			°CDB		
l	°CDB	°CWB	16	18	20	22	24
]	-14.7	-15	6.89	6.51	6.13	5.75	5.50
l	-9.6	-10	7.40	7.38	7.00	6.62	6.24
l	-3.4	-4	7.53	7.51	7.49	7.11	6.74
l	1.8	1	8.55	8.52	8.06	7.45	6.99
l	4.9	4	10.28	10.14	9.33	8.47	7.84
l	7.0	6	11.35	11.27	11.20	10.92	10.40
l	11.2	10	12.19	12.10	12.02	11.73	10.69

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW)

SHC: Sensible heat capacity (kW)

HC: Heating capacity (kW)

PFA003Z902 A

Model FDEN125VNPVD FDEN125VSPVD

Indoor unit FDEN60VD (2 units)

FDC125VN FDC125VS Outdoor unit

Cool Mod	le												_	Heat M	ode
0.44					Ind	oor air t	empera	ture					Ш	Outo	door
Outdoor air temp.	23°C	DB	26°0	DB	27°0	DB	28°0	DB	31°0	DB	33°0	CDB		air te	emp.
dii temp.	16°C	WB	18°C	WB	19°C	WB	20°C	WB	22°C	WB	24°C	CWB	$\prod$	°CDB	°CW
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	$\ [$	-14.7	-15
20	12.31	9.79	12.97	10.37	13.30	10.22	13.66	10.06	14.38	10.59	15.10	10.23	П	-9.6	-10
25	12.05	9.70	12.71	10.29	13.03	10.14	13.39	9.99	14.11	10.52	14.83	10.18	$\prod$	-3.4	-4
30	11.79	9.61	12.44	10.21	12.77	10.06	13.13	9.92	13.84	10.46			Ш	1.8	1
35	11.31	9.45	12.10	10.11	12.50	9.99	12.86	9.85	13.58	10.40			Ш	4.9	4
40	10.56	9.20	11.44	9.91	11.88	9.81	12.23	9.68	12.93	10.25			$\prod$	7.0	6
43	10.00	9.02	10.90	9.75	11.35	9.67	11.76	9.56	12.57	10.17			$\prod$	11.2	10

Out	door	Indoor air temperature						
air te	emp.			°CDB				
°CDB	°CWB	16	18	20	22	24		
-14.7	-15	8.62	8.14	7.67	7.19	6.88		
-9.6	-10	9.25	9.22	8.75	8.28	7.81		
-3.4	-4	9.41	9.39	9.36	8.89	8.42		
1.8	1	10.68	10.65	10.08	9.32	8.74		

15.16 15.06

14.97 | 14.66 | 13.36 PFA003Z902 A

12.85 | 12.68 | 11.74 | 10.58 | 9.80

14.19 | 14.09 | 14.00 | 13.65 | 13.00

Model FDEN140VNPVD FDEN140VSPVD

Indoor unit FDEN71VD (2 units)

Outdoor unit FDC140VN FDC140VS

Heat Mode

7.0

11.2

Hoot Mode

6

10

Cool Mode

Outdoor	Indoor air temperature											
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
an temp.	16°C	:WB	18°C	:WB	19°C	WB	20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	13.11	10.07	13.91	10.66	14.31	10.51	14.62	10.33	15.23	10.79	15.85	10.39
25	12.92	10.00	13.78	10.62	14.21	10.48	14.48	10.29	15.04	10.74	15.59	10.33
30	12.73	9.93	13.65	10.58	14.10	10.45	14.35	10.25	14.84	10.70		
35	12.53	9.86	13.51	10.54	14.00	10.42	14.21	10.21	14.64	10.65		
40	11.83	9.62	12.59	10.25	12.97	10.12	13.27	9.96	13.86	10.46		
43	11.20	9.41	12.04	10.09	12.35	9.94	12.70	9.81	13.39	10.36		

	door		Indoor	air temp	erature					
air t	emp.			°CDB						
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	9.85	9.31	8.76	8.22	7.86				
-9.6	-10	10.57	10.54	10.00	9.46	8.92				
-3.4	-4	10.75	10.73	10.69	10.16	9.63				
1.8	1	12.21	12.17	11.52	10.65	9.99				
4.9	4	14.69	14.49	13.36	12.09	11.20				

PFA003Z902 A

16.18 | 16.09 | 16.00 | 15.60 | 14.86 17.47 | 17.36 | 17.26 | 16.75 | 15.27

Model FDEN200VSPVD

Indoor unit FDEN100VD (2 units)

Outdoor unit FDC200VS

Cool Mod	e											
0.44.					Inde	oor air t	empera	ture				
Outdoor air temp.	23°0	DB	26°C	DB	27°C	DB	28°CDB		31°CDB		33°CDB	
an temp.	16°C	WB	18°C	:WB	19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	20.36	14.17	21.49	14.83	22.06	14.58	22.70	14.35	23.99	14.92	25.28	14.36
25	19.71	13.92	20.82	14.60	21.37	14.36	22.00	14.13	23.26	14.73	24.52	14.18
30	19.07	13.68	20.15	14.37	20.69	14.14	21.30	13.92	22.53	14.53		
35	18.10	13.32	19.37	14.11	20.00	13.92	20.60	13.71	21.80	14.34		
40	16.90	12.89	18.30	13.76	18.97	13.61	19.54	13.41	20.68	14.05		

_	Heat IV	oue					
1	Out	door		Indoor	air temp	erature	
1	air te	emp.			°CDB		
	°CDB	°CWB	16	18	20	22	24
]	-14.7	-15	12.86	12.83	12.79	12.75	12.72
	-9.6	-10	14.51	14.47	14.42	14.37	14.32
	-3.4	-4	15.89	15.82	15.76	15.70	15.63
	1.8	1	17.03	16.95	16.88	16.80	16.72
	4.9	4	21.70	21.57	21.06	19.38	18.37
	7.0	6	22.68	22.54	22.40	21.84	21.06
	11.2	10	24.90	24.73	24.57	24.40	24.23

PFA003Z902 A

Model FDEN250VSPVD Cool Mode

43

Indoor unit FDEN125VD (2 units)

16.00 | 12.57 | 17.44 | 13.49 | 18.16 | 13.36 | 18.81 | 13.20 | 20.01 | 13.89

Outdoor unit FDC250VS Heat Mode

Outdoor		Indoor air temperature												
air temp.	23°C	DB	26°C	DB	27°C	27°CDB		28°CDB		DB	33°CDB			
dii tomp.	16°C	WB	18°C	WB	19°C	WB	20°C	:WB	22°C	:WB	24°C	:WB		
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC		
20	25.45	17.05	26.87	17.77	27.58	17.46	28.38	17.17	29.99	17.78	31.60	17.08		
25	24 64	16 72	26.03	17 46	26.72	17 17	27 50	16 89	29.08	17.52	30.65	16 84		

air temp.									٠. ٠			
dii tomp.	16℃	:WB	18°C	:WB	19℃	:WB	20°C	:WB	22°C	:WB	24°C	:WB
°CDB	TC	SHC										
20	25.45	17.05	26.87	17.77	27.58	17.46	28.38	17.17	29.99	17.78	31.60	17.08
25	24.64	16.72	26.03	17.46	26.72	17.17	27.50	16.89	29.08	17.52	30.65	16.84
30	23.84	16.41	25.18	17.16	25.86	16.88	26.63	16.61	28.17	17.26		
35	22.63	15.95	24.21	16.82	25.00	16.60	25.75	16.34	27.25	17.01		
40	21.13	15.38	22.88	16.37	23.71	16.18	24.43	15.94	25.85	16.63		
43	20.00	14.97	21.80	16.01	22.70	15.86	23.51	15.66	25.02	16.42		

	door	Indoor air temperature								
air te	emp.	°CDB								
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	16.08	16.03	15.99	15.94	15.90				
-9.6	-10	18.14	18.08	18.02	17.96	17.90				
-3.4	-4	19.86	19.78	19.70	19.62	19.54				
1.8	1	21.29	21.19	21.10	21.00	20.91				
4.9	4	27.12	26.96	26.32	24.22	22.96				
7.0	6	28.35	28.17	28.00	27.30	26.32				
11.2	10	31.13	30.92	30.71	30.50	30.29				

PFA003Z902 A

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW) SHC : Sensible heat capacity (kW) HC: Heating capacity (kW)

#### (c) Triple type

Model FDEN140VNTVD FDEN140VSTVD

Indoor unit FDEN50VD (3 units)

Outdoor unit FDC140VN FDC140VS

Cool Mode

0.444.					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°C	DB	31°C	DB	33°CDB	
an temp.	16℃	WB	18°C	:WB	19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	13.11	9.46	13.91	9.97	14.31	9.82	14.62	9.63	15.23	10.00	15.85	9.60
25	12.92	9.39	13.78	9.92	14.21	9.79	14.48	9.59	15.04	9.95	15.59	9.54
30	12.73	9.32	13.65	9.88	14.10	9.75	14.35	9.55	14.84	9.90		
35	12.53	9.25	13.51	9.83	14.00	9.72	14.21	9.51	14.64	9.85		
40	11.83	9.00	12.59	9.53	12.97	9.40	13.27	9.24	13.86	9.65		
43	11.20	8.78	12.04	9.36	12.35	9.22	12.70	9.08	13.39	9.54		

Heat M	lode					
Out	door		Indoor	air temp	erature	
air t	emp.			°CDB		
°CDB	°CWB	16	18	20	22	24
-14.7	-15	9.85	9.31	8.76	8.22	7.86
-9.6	-10	10.57	10.54	10.00	9.46	8.92
-3.4	-4	10.75	10.73	10.69	10.16	9.63
1.8	1	12.21	12.17	11.52	10.65	9.99
4.9	4	14.69	14.49	13.36	12.09	11.20
7.0	6	16.18	16.09	16.00	15.60	14.86
11.2	10	17.47	17.36	17.26	16.75	15.27

PFA003Z902 A

Model FDEN200VSPVD

Indoor unit FDEN71VD (3 units)

Outdoor unit FDC200VS

Cool Mode

Outdoor					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
an tomp.	16°C	WB	18°C	:WB	19°C	:WB	20°C	WB	22°C	:WB	24°C	WB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	20.36	15.35	21.49	16.19	22.06	15.95	22.70	15.71	23.99	16.47	25.28	15.90
25	19.71	15.12	20.82	15.98	21.37	15.74	22.00	15.51	23.26	16.29	24.52	15.74
30	19.07	14.89	20.15	15.77	20.69	15.54	21.30	15.31	22.53	16.11		
35	18.10	14.56	19.37	15.53	20.00	15.34	20.60	15.12	21.80	15.93		
40	16.90	14.15	18.30	15.20	18.97	15.04	19.54	14.84	20.68	15.67		
43	16.00	13.85	17.44	14.95	18.16	14.81	18.81	14.64	20.01	15.52		

	Heat M	lode					
1	Out	door		Indoor	air temp	erature	
1	air te	emp.			°CDB		
	°CDB	°CWB	16	18	20	22	24
]	-14.7	-15	12.86	12.83	12.79	12.75	12.72
l	-9.6	-10	14.51	14.47	14.42	14.37	14.32
]	-3.4	-4	15.89	15.82	15.76	15.70	15.63
l	1.8	1	17.03	16.95	16.88	16.80	16.72
l	4.9	4	21.70	21.57	21.06	19.38	18.37
	7.0	6	22.68	22.54	22.40	21.84	21.06
	11.2	10	24.90	24.73	24.57	24.40	24.23

PFA003Z902 A

#### (d) Double Twin type

Model FDEN200VSDVD

Indoor unit FDEN50VD (4 units)

Outdoor unit FDC200VS

Cool Mode

0.44					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
an tomp.	16°C	:WB	18°C	:WB	19°CWE		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	20.36	13.72	21.49	14.31	22.06	14.07	22.70	13.84	23.99	14.34	25.28	13.78
25	19.71	13.47	20.82	14.07	21.37	13.83	22.00	13.61	23.26	14.13	24.52	13.59
30	19.07	13.22	20.15	13.84	20.69	13.61	21.30	13.39	22.53	13.93		
35	18.10	12.85	19.37	13.57	20.00	13.38	20.60	13.18	21.80	13.73		
40	16.90	12.40	18.30	13.21	18.97	13.05	19.54	12.86	20.68	13.43		
43	16.00	12.08	17.44	12.92	18.16	12.80	18.81	12.64	20.01	13.26		

	Heat Mode										
	Out	door		Indoor	air temp	erature	1				
	air te	emp.			°CDB						
	°CDB	°CWB	16	18	20	22	24				
	-14.7	-15	12.86	12.83	12.79	12.75	12.72				
	-9.6	-10	14.51	14.47	14.42	14.37	14.32				
	-3.4	-4	15.89	15.82	15.76	15.70	15.63				
	1.8	1	17.03	16.95	16.88	16.80	16.72				
	4.9	4	21.70	21.57	21.06	19.38	18.37				
	7.0	6	22.68	22.54	22.40	21.84	21.06				
Ш	11 2	10	24.90	24.73	24.57	24.40	24.23				

PFA003Z902 A

Model FDEN250VSDVD

Indoor unit FDEN60VD (4 units)

Outdoor unit FDC250VS Heat Mode

Cool Mode

Outdoor					Inde	oor air t	empera	ture					
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		
an tomp.	16°C	WB	18°CWB		19°CWB 20		20°C	20°CWB		22°CWB		24°CWB	
°CDB	TC SHC		TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
20	25.45 19.86		26.87	21.03	27.58	20.72	28.38	20.41	29.99	21.47	31.60	20.76	
25	24.64	19.58	26.03	20.77	26.72	20.47	27.50	20.17	29.08	21.25	30.65	20.56	
30	23.84	19.31	25.18	20.51	25.86	20.22	26.63	19.94	28.17	21.03			
35	22.63	18.90	24.21	20.22	25.00	19.97	25.75	19.70	27.25	20.82			
40	21.13 18.41		22.88	19.82	23.71	19.61	24.43	19.36	25.85	20.50			
43	43 20.00 18.04		21.80	19.51	22.70	19.34	23.51	19.12	25.02	20.31			

1 TOUT IV	icat wode										
	door		Indoor	air temp	erature						
air te	emp.			°CDB							
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	16.08	16.03	15.99	15.94	15.90					
-9.6	-10	18.14	18.08	18.02	17.96	17.90					
-3.4	-4	19.86	19.78	19.70	19.62	19.54					
1.8	1	21.29	21.19	21.10	21.00	20.91					
4.9	4	27.12	26.96	26.32	24.22	22.96					
7.0	6	28.35	28.17	28.00	27.30	26.32					
11.2	10	31.13	30.92	30.71	30.50	30.29					

PFA003Z902 A

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW) SHC: Sensible heat capacity (kW) HC: Heating capacity (kW)

#### (4) Duct connected-Low/Middle static pressure type (FDUM) (a) Single type

Model FDUM50ZIXVD

Indoor unit FDUM50VD

Outdoor unit SRC50ZIX-S

Cool Mod	Cool Mode												
0.44					Inde	oor air t	empera	ture					
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		
an temp.	16°C	:WB	18°C	:WB	19°C	WB	20°C	WB	22°C	WB	24°C	:WB	
°CDB	°CDB TC SHC		TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
20	20 4.79 3.69	5.07	3.90	5.22	3.86	5.37	3.82	5.67	4.00	5.98	3.91		
25	4.93	3.75	5.22	3.95	5.36	3.91	5.52	3.87	5.85	4.06	6.18	3.97	
30	4.76	3.68	5.04	3.88	5.18	3.84	5.34	3.81	5.66	4.00			
35	35 4.53 3.58		4.84	3.81	5.00	3.78	5.15	3.74	5.45	3.94			
40	40 4.23 3.46	3.46	4.58	3.71	4.75	3.69	4.89	3.66	5.17	3.85			
43	4.00	3.37	4.36	3.63	4.54	3.62	4.70	3.59	5.03	3.81			

Heat M	lode					
Out	door		Indoor	air temp	erature	
air t	emp.			°CDB		
°CDB	°CWB	16	18	20	22	24
-14.7	-15	3.08	3.03	2.98	2.92	2.85
-9.6	-10	4.55	4.49	4.43	4.37	4.17
-3.4	-4	5.02	4.99	4.87	4.49	4.25
1.8	1	5.12	5.10	4.97	4.58	4.34
4.9	4	5.22	5.20	5.08	4.67	4.43
7.0	6	5.45	5.43	5.40	5.27	5.08
11.2	10	5.97	5.94	5.90	5.87	5.84

PJR002Z391

Model FDUM60ZIXVD

Indoor unit FDUM60VD

Outdoor unit SRC60ZIX-S

Cool Mod	cool Mode												
0.44					Inde	oor air t	empera	ture					
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		
an temp.	16°C	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		:WB	
°CDB	TC SHC		TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
20	5.36	4.38	5.68	4.66	5.84	4.61	6.01	4.56	6.35	4.81	6.69	4.70	
25	5.56 4.46	5.88	4.73	6.03	4.68	6.21	4.63	6.56	4.87	6.91	4.75		
30	5.36	4.38	5.66	4.65	5.82	4.60	5.99	4.56	6.33	4.80			
35	5 5.07 4.27		5.42	4.56	5.60	4.53	5.77	4.49	6.10	4.74			
40	4.73 4.14		5.12	4.46	5.30	4.43	5.46	4.39	5.77	4.64			
43	4.48	4.05	4.88	4.38	5.08	4.36	5.27	4.33	5.58	4.59			

Teat Wode										
Out	door		Indoor	air temp	erature					
air te	emp.			°CDB						
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	3.82	3.76	3.69	3.62	3.54				
-9.6	-10	5.64	5.57	5.49	5.42	5.17				
-3.4	-4	6.21	6.18	6.05	5.57	5.28				
1.8	1	6.33	6.31	6.17	5.68	5.38				
4.9	4	6.46	6.43	6.30	5.80	5.49				
7.0	6	6.76	6.73	6.70	6.53	6.30				
11.2	10	7.44	7.40	7.37	7.33	7.29				

PJR002Z391

Model FDUM71VNVD

Indoor unit FDUM71VD

Outdoor unit FDC71VN

Cool Mod	ooi wode												
0.44					Ind	oor air t	empera	ture					
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		
an temp.	16°C	:WB	18°C	:WB	19°C	WB	20°C	WB	22°C	WB	24°C	WB	
°CDB	TC SHC		TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
20	20 6.96 5.30 25 6.86 5.26	7.39	5.61	7.61	5.53	7.84	5.45	8.31	5.73	8.78	5.54		
25		7.44	5.63	7.72	5.57	7.98	5.49	8.49	5.77	8.91	5.56		
30	6.67	5.20	7.17	5.54	7.41	5.47	7.67	5.41	8.14	5.68			
35	35 6.43 5.11		6.88	5.45	7.10	5.38	7.31	5.31	7.74	5.59			
40			6.50	5.34	6.75	5.28	6.94	5.21	7.34	5.49			
43	43 5.68 4.86		6.19	5.24	6.45	5.20	6.68	5.14	7.14	5.45			

Out	door		Indoor	air temp	erature	
air te	emp.			°CDB		
°CDB			18	20	22	24
-14.7	-15	4.53	4.51	4.50	4.48	4.46
-9.6	-10	5.11	5.09	5.06	5.03	5.00
-3.4	-4	5.69	5.66	5.62	5.59	5.55
1.8	1	6.13	6.09	6.04	6.00	5.96
4.9	4	7.78	7.71	7.52	6.92	6.56
7.0		8.16	8.08	8.00	7.80	7.52
11.2	10	8.86	8.75	8.64	8.52	8.41

PJR002Z391

Model FDUM100VNVD FDUM100VSVD

Indoor unit FDUM100VD

Outdoor unit FDC100VN FDC100VS

Cool Mode

000: 11100	7001 Wode												
0.44					Indo	oor air t	empera	ture					
Outdoor air temp.	23°C	DB	26°C	DB	27°C	27°CDB		28°CDB		DB	33°CDB		
an temp.	16°C	:WB	18°C	WB	19°C	:WB	20°C	:WB	22°C	:WB	24°C	:WB	
°CDB	1.0		TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
20	9.98	8.02	10.55	8.50	10.84	8.40	11.15	8.30	11.78	8.74	12.41	8.50	
25	9.71	7.92	10.28	8.41	10.56	8.31	10.87	8.22	11.49	8.66	12.12	8.43	
30	9.44	7.82	10.00	8.32	10.28	8.22	10.59	8.13	11.21	8.59			
35	9.05	7.68	9.68	8.21	10.00	8.14	10.30	8.05	10.90	8.51			
40	40 8.45 7		9.15	8.04	9.50	7.98	9.78	7.89	10.34	8.36			
43	8.00	7.30	8.72	7.90	9.08	7.85	9.40	7.78	10.05	8.28	,		

Heat Mode

**Heat Mode** 

Heat M	lode					
Out	door		Indoor	air temp	erature	
air te	emp.			°CDB		
-14.7 -15 -9.6 -10	°CWB	16	18	20	22	24
-14.7	-15	6.89	6.51	6.13	5.75	5.50
-9.6	-10	7.40	7.38	7.00	6.62	6.24
-3.4	-4	7.53	7.51	7.49	7.11	6.74
1.8	1	8.55	8.52	8.06	7.45	6.99
4.9	4	10.28	10.14	9.33	8.47	7.84
7.0	6	11.35	11.27	11.20	10.92	10.40
11.2	10	12.19	12.10	12.02	11.73	10.69

PJR002Z391

Note(1) These data show average statuses

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW) SHC : Sensible heat capacity (kW) HC: Heating capacity (kW)

Model FDUM125VNVD FDUM125VSVD

Indoor unit FDUM125VD

FDC125VN FDC125VS Outdoor unit

Cool Mode

044					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°CDB		28°CDB		31°CDB		33°CDB	
an temp.	16℃	WB	18℃	:WB	19℃	:WB	20°C	:WB	22°C	:WB	24°C	WB
°CDB TO	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	12.31	9.24	12.97	9.71	13.30	9.60	13.66	9.50	14.38	9.92	15.10	9.66
25	12.05	9.13	12.71	9.61	13.03	9.50	13.39	9.40	14.11	9.83	14.83	9.58
30	11.79	9.02	12.44	9.51	12.77	9.41	13.13	9.31	13.84	9.75		
35	11.31	8.82	12.10	9.38	12.50	9.31	12.86	9.21	13.58	9.67		
40	10.56	8.52	11.44	9.13	11.88	9.09	12.23	9.00	12.93	9.46		
43	10.00	8.30	10.90	8.93	11.35	8.90	11.76	8 84	12.57	9.35		

Heat Mode

neat ivi	neat Mode										
Out	door		Indoor	air temp	erature						
air te	emp.			°CDB							
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	8.62	8.14	7.67	7.19	6.88					
-9.6	-10	9.25	9.22	8.75	8.28	7.81					
-3.4	-4	9.41	9.39	9.36	8.89	8.42					
1.8	1	10.68	10.65	10.08	9.32	8.74					
4.9	4	12.85	12.68	11.74	10.58	9.80					
7.0	6	14.19	14.09	14.00	13.65	13.00					
11.2	10	15.16	15.06	14.97	14.66	13.36					

PJR002Z391

Model FDUM140VNVD FDUM140VSVD

Indoor unit FDUM140VD

FDC140VN Outdoor unit

FDC140VS

Cool Mode

Outdoor					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
dii tomp.	16°C	WB	18°C	:WB	19°C	:WB	20°C	:WB	22°C	:WB	24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	13.11	9.58	13.91	10.08	14.31	9.98	14.62	9.84	15.23	10.20	15.85	9.88
25	12.92	9.50	13.78	10.03	14.21	9.94	14.48	9.79	15.04	10.13	15.59	9.80
30	12.73	9.42	13.65	9.98	14.10	9.90	14.35	9.74	14.84	10.07		
35	12.53	9.33	13.51	9.92	14.00	9.86	14.21	9.69	14.64	10.00		
40	11.83	9.04	12.59	9.57	12.97	9.48	13.27	9.36	13.86	9.75		
43	11.20	8.78	12.04	9.36	12.35	9.25	12.70	9.16	13.39	9.61		

Heat Mode

	tdoor	Indoor air temperature								
air	emp.			°CDB						
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	9.85	9.31	8.76	8.22	7.86				
-9.6	-10	10.57	10.54	10.00	9.46	8.92				
-3.4	-4	10.75	10.73	10.69	10.16	9.63				
1.8	1	12.21	12.17	11.52	10.65	9.99				
4.9	4	14.69	14.49	13.36	12.09	11.20				
7.0	6	16.18	16.09	16.00	15.60	14.86				
11.2	10	17.47	17.36	17.26	16.75	15.27				

PJR002Z391

(b) Twin type

Model FDUM100VNPVD FDUM100VSPVD

Indoor unit FDUM50VD (2 units)

FDC100VN FDC100VS Outdoor unit

Heat Mode

Cool Mod	е											
0.44					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
dii terrip.	16°C	WB	18℃	:WB	19℃	:WB	20°C	WB	22°C	:WB	24°C	:WB
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	9.98	8.29	10.55	8.81	10.84	8.72	11.15	8.64	11.78	9.11	12.41	8.91
25	9.71	8.18	10.28	8.71	10.56	8.62	10.87	8.54	11.49	9.03	12.12	8.83
30	9.44	8.08	10.00	8.61	10.28	8.53	10.59	8.45	11.21	8.94		
35	9.05	7.93	9.68	8.49	10.00	8.43	10.30	8.36	10.90	8.85		
40	8.45	7.70	9.15	8.31	9.50	8.26	9.78	8.19	10.34	8.69		
43	8.00	7.53	8.72	8.16	9.08	8.12	9.40	8.07	10.05	8.61		

Out	door		Indoor a	air temp	erature					
air te	emp.			°CDB						
°CDB	°CWB	16 18 20 22 24								
-14.7	-15	6.89	6.51	6.13	5.75	5.50				
-9.6	-10	7.40	7.38	7.00	6.62	6.24				
-3.4	-4	7.53	7.51	7.49	7.11	6.74				
1.8	1	8.55	8.52	8.06	7.45	6.99				
4.9	4	10.28	10.14	9.33	8.47	7.84				
7.0	6	11.35	11.27	11.20	10.92	10.40				
11.2	10	12.19 12.10 12.02 11.73 10.69								

PJR002Z391

Model FDUM125VNPVD FDUM125VSPVD

Indoor unit FDUM60VD (2 units)

Outdoor unit FDC125VN FDC125VS

Cool Mode

OUGH WIGH												
0.44					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°CDB		28°CDB		31°CDB		33°CDB	
an temp.	16℃	16°CWB 18°CWB 19°CW		:WB	20°C	:WB	22°C	:WB	24°CWB			
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	12.31	9.40	12.97	9.90	13.30	9.79	13.66	9.68	14.38	10.13	15.10	9.86
25	12.05	9.30	12.71	9.81	13.03	9.69	13.39	9.58	14.11	10.04	14.83	9.78
30	11.79	9.19	12.44	9.71	12.77	9.60	13.13	9.50	13.84	9.96		
35	11.31	9.00	12.10	9.58	12.50	9.50	12.86	9.41	13.58	9.88		
40	10.56	8.70	11.44	9.34	11.88	9.29	12.23	9.20	12.93	9.69		
43	10.00	8.49	10.90	9.15	11.35	9.11	11.76	9.04	12.57	9.58		

Heat Mode

neat wode										
Out	door		Indoor	air temp	erature					
air te	emp.			°CDB						
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	8.62	8.14	7.67	7.19	6.88				
-9.6	-10	9.25	9.22	8.75	8.28	7.81				
-3.4	-4	9.41	9.39	9.36	8.89	8.42				
1.8	1	10.68	10.65	10.08	9.32	8.74				
4.9	4	12.85	12.68	11.74	10.58	9.80				
7.0	6	14.19	14.09	14.00	13.65	13.00				
11.2	10	15.16	15.06	14.97	14.66	13.36				

PJR002Z391

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW)

SHC: Sensible heat capacity (kW)

HC : Heating capacity (kW)

Model FDUM140VNPVD FDUM140VSPVD

Indoor unit FDUM71VD (2 units)

Outdoor unit FDC140VN FDC140VS

Cool Mode

0.445.54					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°0	DB	33°C	DB
an temp.	16°CWB		18°C	:WB	19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	13.11	10.32	13.91	10.95	14.31	10.80	14.62	10.61	15.23	11.11	15.85	10.71
25	12.92	10.25	13.78	10.91	14.21	10.77	14.48	10.57	15.04	11.07	15.59	10.66
30	12.73	10.19	13.65	10.87	14.10	10.74	14.35	10.54	14.84	11.02		
35	12.53	10.12	13.51	10.83	14.00	10.71	14.21	10.50	14.64	10.97		
40	11.83	9.88	12.59	10.55	12.97	10.41	13.27	10.25	13.86	10.79		
43	11.20	9.67	12.04	10.38	12.35	10.24	12.70	10.10	13.39	10.69		

пеан	Heat Mode										
Οι	tdoor		Indoor	air temp	erature						
air	temp.			°CDB							
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	9.85	9.31	8.76	8.22	7.86					
-9.6	-10	10.57	10.54	10.00	9.46	8.92					
-3.4	-4	10.75	10.73	10.69	10.16	9.63					
1.8	1	12.21	12.17	11.52	10.65	9.99					
4.9	4	14.69	14.49	13.36	12.09	11.20					
7.0	6	16.18	16.09	16.00	15.60	14.86					
11.2	10	17.47	17.47 17.36 17.26 16.75 15.27								

PJR002Z391

Model FDUM200VSPVD

Indoor unit FDUM100VD (2 units)

Outdoor unit FDC200VS

Cool Mode

Outdoor					Indo	oor air t	empera	ture				
air temp.	23°C	DB	26°C	DB	27°C	DB	28°C	DB	31°C	DB	33°C	DB
an tomp.	16°C	:WB	18°C	:WB	19℃	:WB	20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	20.36	16.19	21.49	17.14	22.06	16.93	22.70	16.73	23.99	17.60	25.28	17.12
25	19.71	15.94	20.82	16.91	21.37	16.71	22.00	16.51	23.26	17.40	24.52	16.93
30	19.07	15.71	20.15	16.69	20.69	16.49	21.30	16.30	22.53	17.21		
35	18.10	15.35	19.37	16.43	20.00	16.27	20.60	16.09	21.80	17.01		
40	16.90	14.92	18.30	16.08	18.97	15.95	19.54	15.78	20.68	16.72		
43	16.00	14.60	17.44	15.80	18.16	15.70	18.81	15.57	20.01	16.55		

Heat Mode

Heat Mode

10

11.2

I	Out	door		Indoor	air temp	erature				
ı	air te	emp.			°CDB					
I	°CDB	°CWB	16	18	20	22	24			
	-14.7	-15	12.86	12.83	12.79	12.75	12.72			
I	-9.6	-10	14.51	14.47	14.42	14.37	14.32			
I	-3.4	-4	15.89	15.82	15.76	15.70	15.63			
l	1.8	1	17.03	16.95	16.88	16.80	16.72			
l	4.9	4	21.70	21.57	21.06	19.38	18.37			
I	7.0	6	22.68	22.54	22.40	21.84	21.06			
l	11.2	10	24.90 24.73 24.57 24.40 24.23							

PJR002Z391

Model FDUM250VSPVD

Indoor unit FDUM125VD (2 units)

Outdoor unit FDC250VS

Cool Mode

<del>oooi moa</del>												
0.44					Indo	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°C	DB	27°C	DB	28°CDB		31°CDB		33°CDB	
an tomp.	16°C	:WB	18℃	:WB	19℃	:WB	20°C	WB	22°C	:WB		
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	25.45	18.84	26.87	19.79	27.58	19.57	28.38	19.37	29.99	20.24	31.60	19.73
25	24.64	18.49	26.03	19.46	26.72	19.25	27.50	19.05	29.08	19.94	30.65	19.45
30	23.84	18.16	25.18	19.13	25.86	18.93	26.63	18.75	28.17	19.65		
35	22.63	17.65	24.21	18.76	25.00	18.62	25.75	18.44	27.25	19.36		
40	21.13	17.04	22.88	18.26	23.71	18.15	24.43	17.99	25.85	18.92		
43	20.00	16.59	21.80	17.87	22.70	17.80	23.51	17.68	25.02	18.67		

 Heat M	ode					
Out	door		Indoor	air temp	erature	
air te	emp.			°CDB		
°CDB	°CWB	16	18	20	22	24
-14.7	-15	16.08	16.03	15.99	15.94	15.90
-9.6	-10	18.14	18.08	18.02	17.96	17.90
-3.4	-4	19.86	19.78	19.70	19.62	19.54
1.8	1	21.29	21.19	21.10	21.00	20.91
4.9	4	27.12	26.96	26.32	24.22	22.96
7.0	6	28.35	28.17	28.00	27.30	26.32
11.2	10	31.13	30.92	30.71	30.50	30.29

(c) Triple type

Model FDUM140VNTVD

Indoor unit FDUM50VD (3 units) Outdoor unit FDC140VN FDC140VS

FDUM140VSTVD Cool Mode

Indoor air temperature Outdoor 23°CDB 26°CDB 27°CDB 28°CDB 31°CDB 33°CDB air temp 16°CWB 18°CWB 19°CWB 20°CWB 22°CWB 24°CWB °CDB TC SHC TC SHC TC SHC TC SHC TC SHC TC SHC 20 13.11 10.55 13.91 11.20 14.31 11.09 14.62 10.95 15.23 11.46 15.85 11.15 11.15 12.92 10.47 13.78 14.21 11.06 15.04 11.40 15.59 11.08 25 14.48 10.90 12.73 10.40 14.10 11.02 14.35 10.86 14.84 11.34 30 13.65 11.10 35 12.53 10.32 13.51 11.05 14.00 10.98 14.21 10.81 14.64 11.28 40 11.83 | 10.04 12.59 10.72 12.97 10.63 13.27 | 10.50 13.86 11.05 11.20 9.80 12.35 10.42 12.70 10.32 13.39 10.91 43 12.04 10.52

	door		Indoor air temperature						
air te	emp.			°CDB					
°CDB	°CWB	16	18	20	22	24			
-14.7	-15	9.85	9.31	8.76	8.22	7.86			
-9.6	-10	10.57	10.54	10.00	9.46	8.92			
-3.4	-4	10.75	10.73	10.69	10.16	9.63			
1.8	1	12.21	12.17	11.52	10.65	9.99			
4.9	4	14.69	14.49	13.36	12.09	11.20			
7.0	6	16.18	16.09	16.00	15.60	14.86			

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero. (3) Symbols are as follows.

TC: Total cooling capacity (kW) SHC: Sensible heat capacity (kW)

HC: Heating capacity (kW)

PJR002Z391

17.47 17.36 17.26 16.75 15.27

PJR002Z391

Model FDUM200VSTVD Indoor unit FDUM71VD (3 units) Outdoor unit FDC200VS

Cool Mod	COOI Mode												
0.11					Ind	oor air t	empera	ture					
Outdoor air temp.	23°0	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB		
dii terrip.	16°C	16°CWB 18°		CWB 19°C		CWB 20°CWB		22°CWB		24°CWB			
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
20	20.36	15.72	21.49	16.62	22.06	16.37	22.70	16.13	23.99	16.95	25.28	16.38	
25	19.71	15.49	20.82	16.41	21.37	16.17	22.00	15.94	23.26	16.77	24.52	16.22	
30	19.07	15.27	20.15	16.20	20.69	15.97	21.30	15.75	22.53	16.60			
35	18.10	14.94	19.37	15.97	20.00	15.77	20.60	15.56	21.80	16.42			
40	16.90	14.54	18.30	15.65	18.97	15.48	19.54	15.28	20.68	16.17			
43	16.00	14.25	17.44	15.40	18.16	15.26	18.81	15.09	20.01	16.01		·	

Heat M	Heat Mode											
Out	door		Indoor	air temp	erature							
air te	emp.			°CDB								
°CDB	°CWB	16	16 18 20 22 24									
-14.7	-15	12.86	12.86   12.83   12.79   12.75   12.72									
-9.6	-10	14.51 14.47 14.42 14.37 14.										
-3.4	-4	15.89	15.82	15.76	15.70	15.63						
1.8	1	17.03	16.95	16.88	16.80	16.72						
4.9	4	21.70	21.57	21.06	19.38	18.37						
7.0	6	22.68   22.54   22.40   21.84   21.06										
11.2	10	24.90	24.73	24.57	24.40	24.23						

PJR002Z391

## (5) Duct connected - High static pressure type (FDU)(a) Single type

**Model FDU71VNVD** Indoor unit FDU71VD Outdoor unit FDC71VN Cool Mode

Outdoor					Inde	oor air t	empera	ture				
air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
un tomp.	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	6.96	5.80	7.39	6.18	7.61	6.12	7.84	6.06	8.31	6.40	8.78	6.24
25	6.86	5.77	7.44	6.20	7.72	6.16	7.98	6.10	8.49	6.45	8.91	6.28
30	6.67	5.70	7.17	6.11	7.41	6.06	7.67	6.00	8.14	6.35		
35	6.43	5.61	6.88	6.01	7.10	5.96	7.31	5.90	7.74	6.25		
40	6.00	5.45	6.50	5.89	6.75	5.85	6.94	5.79	7.34	6.14		
43	5.68	5.34	6.19	5.79	6.45	5.76	6.68	5.71	7.14	6.09		

_	neat iv	Teat Mode										
1	Out	door		Indoor	air temp	erature						
1	air t	emp.			°CDB							
	°CDB	°CWB	16	18	20	22	24					
	-14.7	-15	4.53	4.51	4.50	4.48	4.46					
	-9.6	-10	5.11	5.09	5.06	5.03	5.00					
	-3.4	-4	5.69	5.66	5.62	5.59	5.55					
╛	1.8	1	6.13	6.09	6.04	6.00	5.96					
	4.9	4	7.78	7.71	7.52	6.92	6.56					
	7.0	6	8.16	8.08	8.00	7.80	7.52					
╛	11.2	10	8.86	8.75	8.64	8.52	8.41					

PJD001Z306

 
 Model
 FDU100VNVD FDU100VSVD
 Indoor unit
 FDU100VD FDC100VS
 Outdoor unit FDC100VS
 FDC100VN FDC100VS

Indoor air temperature Outdoor 23°CDB 26°CDB 27°CDB 28°CDB 31°CDB 33°CDB air temp 16°CWB 18°CWB 19°CWB 20°CWB 22°CWB 24°CWB °CDB TC SHC TC SHC TC SHC TC SHC TC SHC SHC TC 20 9.98 10.55 11.15 8.55 9.02 8.81 8.22 10.84 8.64 11.78 12.41 8.73 25 8.12 10.28 8.94 9.71 8.64 10.56 8.55 10.87 8.46 11.49 12.12 8.74 30 9.44 8.01 10.00 8.54 10.28 8.45 10.59 8.37 11.21 8.86 7.86 10.90 8.77 35 9.05 9.68 8.43 10.00 8.36 10.30 8.28

8.20

8.06

9.78

9.40

8.12

8.00

10.34

10.05

8.61

8.53

	door		Indoor	air temp	erature	
air te	emp.			°CDB		
°CDB	°CWB	16	18	20	22	24
-14.7	-15	6.89	6.51	6.13	5.75	5.50
-9.6	-10	7.40	7.38	7.00	6.62	6.24
-3.4	-4	7.53	7.51	7.49	7.11	6.74
1.8	1	8.55	8.52	8.06	7.45	6.99
4.9	4	10.28	10.14	9.33	8.47	7.84
7.0	6	11.35	11.27	11.20	10.92	10.40
11.2	10	12.19	12.10	12.02	11.73	10.69

PJD001Z306

Model FDU125VNVD Indoor unit FDU125VD Outdoor unit FDC125VN FDU125VSVD FDC125VS

9.50

9.08

Cool Mode

40

43

Outdoor.					Ind	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
an temp.	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	12.31	10.15	12.97	10.76	13.30	10.65	13.66	10.53	14.38	11.10	15.10	10.82
25	12.05	10.05	12.71	10.67	13.03	10.55	13.39	10.44	14.11	11.02	14.83	10.75
30	11.79	9.95	12.44	10.58	12.77	10.47	13.13	10.36	13.84	10.94		
35	11.31	9.77	12.10	10.46	12.50	10.38	12.86	10.27	13.58	10.86		
40	10.56	9.48	11.44	10.23	11.88	10.17	12.23	10.08	12.93	10.68		
43	10.00	9.27	10.90	10.04	11.35	10.00	11.76	9.93	12.57	10.58		

Heat Mode

Heat Mode

Hoot Modo

Out	door	Indoor air temperature								
	emp.		macor	°CDB	orataro					
°CDB	°CWB	16	18	20	22	24				
-14.7	-15	8.62	8.14	7.67	7.19	6.88				
-9.6	-10	9.25	9.22	8.75	8.28	7.81				
-3.4	-4	9.41	9.39	9.36	8.89	8.42				
1.8	1	10.68	10.65	10.08	9.32	8.74				
4.9	4	12.85	12.68	11.74	10.58	9.80				
7.0	6	14.19	14.09	14.00	13.65	13.00				
11.2	10	15.16	15.06	14.97	14.66	13.36				

PJD001Z306

Note(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions.

7.64

7.47

9.15

8.72

8.24

8.10

8.45

8.00

 $Corresponding \ refrigerant \ piping \ length: 7.5m$ 

Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW)

SHC: Sensible heat capacity (kW)

HC: Heating capacity (kW)

Model FDU140VNVD FDU140VSVD FDC140VN FDC140VS Indoor unit FDU140VD Outdoor unit

Cool Mode

Outdoor					Indo	oor air t	empera	ture				
Outdoor air temp.	23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
un temp.	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	13.11	10.47	13.91	11.10	14.31	10.99	14.62	10.85	15.23	11.35	15.85	11.02
25	12.92	10.39	13.78	11.06	14.21	10.96	14.48	10.80	15.04	11.29	15.59	10.95
30	12.73	10.32	13.65	11.01	14.10	10.92	14.35	10.76	14.84	11.23		
35	12.53	10.24	13.51	10.96	14.00	10.89	14.21	10.71	14.64	11.17		
40	11.83	9.96	12.59	10.63	12.97	10.53	13.27	10.41	13.86	10.94		
43	11.20	9.72	12.04	10.44	12.35	10.33	12.70	10.22	13.39	10.81		

Heat Mode

Heat Mode

i leat iv	neal Mode										
Out	door		Indoor	air temp	erature						
air te	emp.			°CDB							
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	9.85	9.31	8.76	8.22	7.86					
-9.6	-10	10.57	10.54	10.00	9.46	8.92					
-3.4	-4	10.75	10.73	10.69	10.16	9.63					
1.8	1	12.21	12.17	11.52	10.65	9.99					
4.9	4	14.69	14.49	13.36	12.09	11.20					
7.0	6	16.18	16.09	16.00	15.60	14.86					
11.2	10	17.47	17.36	17.26	16.75	15.27					

PJD001Z306

Model FDU200VSVD Indoor unit FDU200VD Outdoor unit FDC200VS Cool Mode

Outdoor					Inde	oor air t	empera	ture				
Outdoor air temp.	23°C	DB	26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
dii tomp.	16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	20.36	14.80	21.49	15.51	22.06	15.35	22.70	15.20	23.99	15.85	25.28	15.46
25	19.71	14.51	20.82	15.24	21.37	15.08	22.00	14.93	23.26	15.60	24.52	15.23
30	19.07	14.24	20.15	14.97	20.69	14.82	21.30	14.68	22.53	15.35		
35	18.10	13.82	19.37	14.66	20.00	14.56	20.60	14.42	21.80	15.11		
40	16.90	13.32	18.30	14.25	18.97	14.17	19.54	14.04	20.68	14.75		
43	16.00	12.95	17.44	13.92	18.16	13.87	18.81	13.79	20.01	14.53		

Indoor air temperature

uooi		indoor all temperature								
emp.	°CDB									
°CWB	16	18	20	22	24					
-15	12.86	12.83	12.79	12.75	12.72					
-10	14.51	14.47	14.42	14.37	14.32					
-4	15.89	15.82	15.76	15.70	15.63					
1	17.03	16.95	16.88	16.80	16.72					
4	21.70	21.57	21.06	19.38	18.37					
6	22.68	22.54	22.40	21.84	21.06					
10	24.90	24.73	24.57	24.40	24.23					
	emp.  °CWB  -15  -10  -4  1  4  6	emp.  °CWB 16  -15 12.86  -10 14.51  -4 15.89  1 17.03  4 21.70  6 22.68	emp.  *CWB 16 18  -15 12.86 12.83  -10 14.51 14.47  -4 15.89 15.82  1 17.03 16.95  4 21.70 21.57  6 22.68 22.54	emp. °CDB °CWB 16 18 20 -15 12.86 12.83 12.79 -10 14.51 14.47 14.42 -4 15.89 15.82 15.76 1 17.03 16.95 16.88 4 21.70 21.57 21.06 6 22.68 22.54 22.40	emp. CDB  *CWB 16 18 20 22  -15 12.86 12.83 12.79 12.75  -10 14.51 14.47 14.42 14.37  -4 15.89 15.82 15.76 15.70  1 17.03 16.95 16.88 16.80  4 21.70 21.57 21.06 19.38  6 22.68 22.54 22.40 21.84					

PJD001Z306

Model FDU250VSVD Indoor unit FDU250VD Outdoor unit FDC250VS Cool Mode

Indoor air temperature Outdoor 23°CDB 26°CDB 27°CDB 28°CDB 31°CDB 33°CDB air temp. 16°CWB 18°CWB 19°CWB 20°CWB 22°CWB 24°CWB °CDB TC SHC TC SHC TC SHC TC SHC TC SHC TC SHC 25.45 18.84 29.99 20.24 19.73 20 26.87 19.79 27.58 19.57 28.38 19.37 31.60 26.72 19.25 27.50 25 24.64 18.49 26.03 19.46 19.05 29.08 19.94 30.65 19.45 25.18 19.13 25.86 18.93 28.17 19.65 30 23.84 18.16 26.63 18.75 35 22.63 17.65 24.21 18.76 25.00 18.62 25.75 18.44 27.25 19.36 40 21.13 17.04 22.88 18.26 23.71 18.15 24.43 17.99 25.85 18.92 20.00 16.59 21.80 17.87 22.70 17.80 23.51 17.68 25.02 18.67 43

Heat M	lode										
Out	door		Indoor air temperature								
air te	emp.		°CDB								
°CDB	°CWB	16	18	20	22	24					
-14.7	-15	16.08	16.03	15.99	15.94	15.90					
-9.6	-10	18.14	18.08	18.02	17.96	17.90					
-3.4	-4	19.86	19.78	19.70	19.62	19.54					
1.8	1	21.29	21.19	21.10	21.00	20.91					
4.9	4	27.12	26.96	26.32	24.22	22.96					
7.0	6	28.35	28.17	28.00	27.30	26.32					
11.2	10	31.13	30.92	30.71	30.50	30.29					

PJD001Z306

Note(1) These data show average statuses

Depending on the system control, there may be ranges where the operation is not conducted continuously.

(2) Capacities are based on the following conditions Corresponding refrigerant piping length: 7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW) SHC : Sensible heat capacity (kW) HC: Heating capacity (kW)

# 1.9.2 Correction of cooling and heating capacity in relation to air flow rate control (fan speed)

Fan speed	P-Hi or Hi <sup>(1)</sup>	Me	Lo
Coefficient	1.00	0.97	0.95

Note (1) Models FDU only.

# 1.9.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way equivalent piping length between the indoor and outdoor units.

#### (1) Models 40~60

Equivalent pip	7.5	10	15	20	25	30	35	
Heating	1	0.995	0.992	0.990	0.987	0.984	0.981	
	40 model	1	0.997	0.991	0.985	0.980	0.974	0.968
Cooling	50 model	1	0.996	0.989	0.981	0.973	0.966	0.958
	60 model	1	0.995	0.986	0.977	0.967	0.958	0.948

Note (1) Calculate the equivalent length using the following formula.

However, install the piping so that the equivalent length is within +5 m of the piping distance limit (actual length) for each respective piping system.

#### (2) Models 71 ~ 140

Equivale	Equivalent piping length <sup>(1)</sup> (m)			10	15	20	25	30	35	40	45	50	55
Heating	Heating		1	1	1	1	1	0.998	0.998	0.993	0.993	0.988	0.988
	71 model		1	0.996	0.989	0.982	0.975	0.968	0.961	0.954	0.947	0.940	0.933
	100 model	A 15 00	1	0.991	0.978	0.964	0.951	0.937	0.924	0.910	0.897	0.883	0.870
	125 model	φ 15.88	1	0.986	0.968	0.950	0.932	0.914	0.896	0.878	0.860	0.842	0.824
Cooling	140 model		1	0.985	0.966	0.946	0.927	0.907	0.888	0.868	0.849	0.829	0.810
Cooming	71 model		1.008	1.006	1.003	1	0.997	0.994	0.991	0.988	0.985	0.982	0.979
	100 model	φ 19.05	1.016	1.013	1.007	1.002	0.996	0.991	0.985	0.980	0.974	0.969	0.963
	125 model	ψ 19.03	1.022	1.018	1.009	1.001	0.992	0.984	0.975	0.967	0.958	0.950	0.941
	140 model		1.026	1.021	1.011	1.002	0.992	0.983	0.973	0.964	0.954	0.945	0.935

Note (1) Calculate the equivalent length using the following formula.

However, install the piping so that the piping length is within +5 m of the limit length (actual length) for the respective types.

#### (3) Models 200, 250

Equivale	ent piping length (1	) <b>(m)</b>	7.5	10	15	20	25	30	35	40	45	50	55	60	65	70	75
Heating	Heating			0.998	0.995	0.991	0.988	0.984	0.981	0.977	0.974	0.970	0.967	0.963	0.960	0.956	0.953
	200 model	4 25 4	1.007	1.005	1.002	0.998	0.995	0.991	0.988	0.984	0.981	0.977	0.974	0.970	0.967	0.963	0.960
	250 model	$\phi$ 25.4	1.012	1.008	1.002	0.996	0.990	0.984	0.978	0.972	0.966	0.960	0.953	0.947	0.941	0.935	0.929
Cooling	200 model	φ 22.22	1	0.997	0.991	0.984	0.978	0.971	0.965	_	_	ı	ı	_	1	-	_
Cooming	250 model	Ψ 22.22	1	0.995	0.985	0.975	0.965	0.954	0.944	_	_	-	-	_	_	_	_
	200 model	4 20 50	1.010	1.009	1.007	1.005	1.003	1.001	0.999	0.997	0.995	0.993	0.991	0.989	0.987	0.985	0.983
	250 model	$\phi$ 28.58	1.016	1.015	1.011	1.008	1.004	1.001	0.997	0.994	0.990	0.987	0.983	0.980	0.976	0.973	0.969

Note (1) Calculate the equivalent length using the following formula.

However, install the piping so that the piping length is within +5 m of the limit length (actual length) for the respective types.

• Equivalent Length =Actual Length + (Equivalent bend length x number of bends in the piping.) Equivalent length per bend.

Gas Pipe Diameter (mm)	φ12.7	φ 15.88	φ 19.05	φ 22.22	φ25.4	$\phi$ 28.58
<b>Equivalent Bend Length</b>	0.20	0.25	0.30	0.35	0.40	0.45

### 1.9.4 Height difference between the indoor unit and outdoor unit

When the outdoor unit is located below indoor units in cooling mode, or when the outdoor unit is located above indoor units in heating mode, the correction coefficient mentioned in the below table should be subtracted from the value in the above table.

Height difference between the indoor unit and outdoor unit in the vertical height difference	5m	10m	15m	20m	25m	30m
Adjustment coefficient	0.01	0.02	0.03	0.04	0.05	0.06


#### **Piping length limitations**

Model	40~60	71, 100, 125, 140	200, 250	
Max. one way piping length	30m	50m	70m <sup>(2)</sup>	
Max. vertical height difference	Outdoor unit is higher 20m Outdoor unit is lower 20m		t is higher 30m t is lower 15m	

Notes (1) Values in the table indicate the one way piping length between the indoor and outdoor units.

#### How to obtain the cooling and heating capacity

Example : The net cooling capacity of the model FDUM100VNVD with the air flow "High", the piping length of 15m, the outdoor unit located 5m lower than the indoor unit, indoor wet-bulb temperature at  $19.0^{\circ}$ C and outdoor dry-bulb temperature  $35^{\circ}$ C is

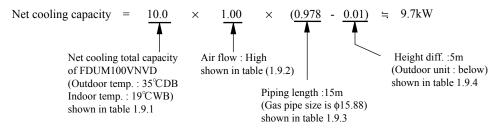

<sup>(2)</sup> When  $\phi$  22.22 gas pipe is applied to 200 and 250, maximum one way length is limited to 35m.

#### 1.10 APPLICATION DATA

#### 1.10.1 Installation of indoor unit

(1) Ceiling cassette-4way compact type (FDTC)

This manual is for the installation of an indoor unit.

For electrical wiring work (Indoor), refer to the electrical wiring work installation manual. For remote controller installation, refer to the installation manual attached to a remote controller. For wireless kit installation, refer to the installation manual attached to a wireless kit. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to the installation manual

This unit must always be used with the panel


#### SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself
- ⚠WARNING: Wrong installation would cause serious consequences such as injuries or death. ACAUTION: Wrong installation might cause serious consequences depending on circumstances.
- Both mentions the important items to protect your health and safety so strictly follow them by any means. The meanings of "Marks" used here are as shown as follows: Never do it under any circumstances.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit. Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

#### **↑** WARNING

#### Installation should be performed by the specialist.

If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the u

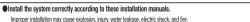

æ

Ø

0

Ø

Ø

Ø

0

Ø

Ø

Ø

a

0

• When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149).

If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accidents.

•Use the genuine accessories and the specified parts for installation.

If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.

Ventilate the working area well in case the refrigerant leaks during installation.

If the refrigerant contacts the fire, toxic gas is produced Install the unit in a location that can hold heavy weight.

allation may cause the unit to fall leading to acciden

• Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.

Improper installation may cause the unit to fall leading to accidents

• Do not mix air in to the cooling cycle on installation or removal of the air conditioner.

If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries

•Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit. Power source with insufficient capacity and improper work can cause electric shock and fire

•Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal. Loose connections or hold could result in abnormal heat generation or fire

• Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services

Improper fitting may cause abnormal heat and fire.

Check for refrigerant gas leakage after installation is completed.

If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic cas is produced.

●Use the specified pipe, flare nut, and tools for R410A. ing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle

Tighten the flare nut according to the specified method by with torque wrench.

If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur.

Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak • Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.

If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system.

Stop the compressor before removing the pipe after shutting the service valve on pump down work.

If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.

•Only use prescribed optional parts. The installation must be carried out by the qualified installer.

If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire Do not repair by yourself. And consult with the dealer about repair.

Consult the dealer or a specialist about removal of the air conditioner. Improper installation may cause water leakage, electric shock or fire

Turn off the power source during servicing or inspection work. If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.

• Do not run the unit when the panel or protection guard are taken off.

Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock

Shut off the power before electrical wiring work.

It could cause electric shock, unit failure and improper running

PJA012D786

Q

#### 

Perform earth wiring surely.


Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.

Earth leakage breaker must be installed.

Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.

Using the incorrect one could cause the system failure and fire.

Do not use any materials other than a fuse of correct capacity where a fuse should be used.

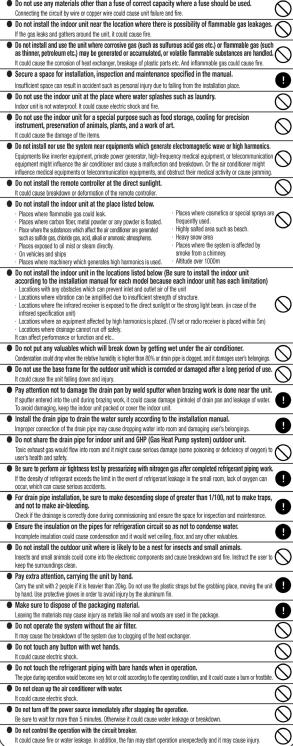

#### 1 Before installation

- Install correctly according to the installation manual.
- Confirm the following points:
- O Unit type/Power supply specification O Pipes/Wires/Small parts O Accessory items

#### Accessory itme

For unit	hanging		For refrigerant pipe			For draom pipe				
Flat washer (M10)	Level gauge (Insulation)	Pipe cover(big)	Pipe cover (small)	Strap	Pipe cover(big)	Pipe cover(small)	Drain hose	Hose clamp		
0		6	6	<u></u>	0	0		(1)		
8	4	1	1	4	1	1	1	1		
For unit hanging	in hoisting in the	insulation		For pipe cover fixing	For heat insulation of drain socket		For drain pipe connecting	For drain hose mounting		

#### 2 Selection of installation location for the indoor unit

① Select the suitable areas to install the unit under approval of the user

- Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
- Areas where there is enough space to install and service.
- Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
- Areas where there is no obstruction of airflow on both air return grille and air supply port.
- Areas where fire alarm will not be accidentally activated by the air conditioner
- Areas where the supply air does not short-circuit. Areas where it is not influenced by draft air.
- Areas not exposed to direct sunlight.
- Areas where dew point is lower than around 28°C and relative humidity is lower than 80%. This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above


If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.

- Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)

  Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
- Areas where there is no influence by the heat which cookware generates.
- Areas where not exposed to oil mist, powder and/or steam directly such as above fryer
- Areas where lighting device such as fluorescent light or incandescent light doesn't affect the
  - (A beam from lighting device sometimes affects the infrared receiver for the wireless remote controller and the air conditioner might not work properly.)
- @ Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.
- ③ If there are 2 units of wireless type, keep them away for more than 5m to avoid malfunction due to
- ① When plural indoor units are installed nearby, keep them away for more than 4m.

#### Space for installation and service


- When it is not possible to keep enough space between indoor unit and wall or between indoor units, close the air supply port where it is not possible to keep space and confirm there is no short circuit
- Install the indoor unit at a height of more than 2.5m above the floor.

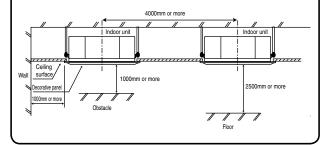

#### 3 Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant. O For grid ceiling
  - When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt
  - O In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.
- When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt. Prepare four (4) sets of suspension bolt, nut and spring washer (M10 or M8) on site.

#### Ceiling opening, Suspension bolts pitch, Pipe position

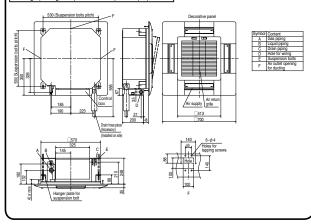

#### 4 Installation of indoor unit


- This units is designed for 2 x 2 grid ceiling.
- If necessary, please detach the T bar temporarily before you install it.

  If it is installed on a ceiling other than 2 x 2 grid ceiling, provide an inspection port on the control box
- Arrange the suspension bolt at the right position (530mm×530mm).
- Make sure to use four suspension bolts and fix them so as to be able to hold 500N load.
- Ensure that the lower end of the suspension bolt should be 45mm above the ceiling plane.

  Temporarily put the four lower nuts 88mm above the ceiling plane and the upper nuts on distant place from the lower nuts in order not to obstruct hanging the indoor unit or adjust the indoor unit position, and then hang the indoor unit.




5. Adjust the indoor unit position after hanging it by inserting the level gauge attached on the package into the air supply port and checking if the gap between the ceiling plane and the indoor unit is appropriate. In order to adjust the indoor unit position, adjust the lower nuts while the upper nuts are put on distant place. Confirm there is no backlash between the hanger plate for suspension bolt and

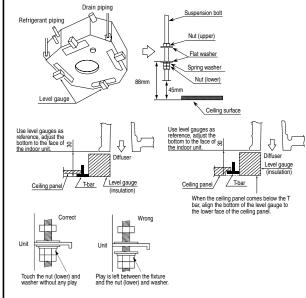

#### 4 Installation of indoor unit (continued)

- 6. Make sure to install the indoor unit horizontally. Confirm the levelness of the indoor unit with a level gauge or transparent hose filled with water. Keep the height difference at both ends of the indoor unit within 3mm
- Tighten four upper nuts and fix the unit after height and levelness

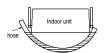

#### Caution

- Do not adjust the height by adjusting upper nuts. It will cause unexpected stress on the indoor unit
  and it will lead to deformation of the unit, failure of attaching a panel, and generating noise from the
- Make sure to install the indoor unit horizontally and set the gap between the unit underside and the ceiling plane properly. Improper installation may cause air leakage, dew condensation, water leakage and noise
- Even after decorative panel attached, still the unit height can be adjusted finely. Refer to the
- installation manual for decorative panel for details.

   Make sure there is no gap between decoration panel and ceiling surface, and between decoration panel and the indoor unit. The gap may cause air leakage, dew condensation and water leakage.
- In case decorative panel is not installed at the same time, or ceiling material is installed after the unit installed, but the cardboard template for installation attached on the package (packing material of cardboard box) on the bottom of the unit in order to avoid dust coming into the indoor unit.

#### **⑤** Refrigerant pipe

#### Caution

- Use the new refrigerant pipe.
   When re-using the existing pipe system for R22 or R407C, pay attention to the following items. Change the flare nuts with the attached ones (JIS category 2), and reprocess the flare parts.
- Do not use thin-walled pipes.
- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for
  - refrigeration pipe installation.

    In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes
- Do not use any refrigerant other than R410A.
- Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting
- into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.

  Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc
- Use special tools for R410 refrigerant.

#### Work procedure


- Remove the flare nut and blind flanges on the pipe of the indoor unit.
   Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove then
  - (Gas may come out at this time, but it is not abnormal.)
- Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
- Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit. \*\*Bend the pipe with as big radius as possible and do not bend the pipe repeatedly. In addition, do not twist and crush the pipes.
- Do a flare connection as follows:

  Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe,
- and then remove them.

  When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table below. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
- Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
- Make sure to insulate both gas pipes and liquid pipes completely
- ※ Incomplete insulation may cause dew condensation or water dropping Refrigerant is charged in the outdoor unit.

As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

Pipe diameter	Tightening torque N·m
ф 6.35	14 to 18
ф 9.52	34 to 42
ф 12.7	49 to 61
ф 15.88	68 to 82
ф 19.05	100 to 120

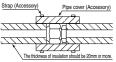

#### **6** Drain pipe


#### Caution


- Install the drain pipe according to the installation manual in order to drain properly Imperfection in draining may cause flood indoors and wetting the household goods etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
   Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and

#### 6 Drain pipe (continued)

#### Work procedure

- Make sure to insert the drain hose (the end mode of soft PVC) to the end of the step part of drain socket.
- Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut.
- Do not apply adhesives on this end

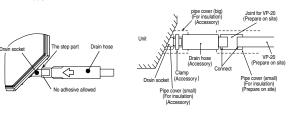


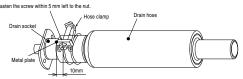


- 2. Prepare a joint for connecting VP-20 pipe, adhere and connect the joint to the drain hose (the end made of rigid PVC), and adhere and connect VP-20 pipe (prepare on site). X As for drain pipe, apply VP-20 made of rigid PVC which is on the market.
- Make sure that the adhesive will not get into the supplied drain hose.
- It may cause the flexible part broken after the adhesive is dried up and gets rigid.
- Do not bend or make an excess offset on the drain hose as shown in the picture. Bend or excess offset will cause drain leakage.



- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or tran in the midway
  - Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
  - Do not set up air vent.

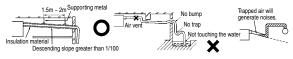


 When sharing a drain pipe for more than one unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP-30 or bigger size for main drain pipe.

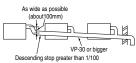

- Insulate the drain pipe.
  - Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
    - \* After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

#### Drain up


 The position for drain pipe outlet can be raised up to 600mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.

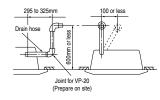

#### **6** Drain pipe (continued)

#### Drain test

- After installation of drain pipe, make sure that drain system work in good condition and no water leakage from joint and drain pan. Check if the motor sound of drain pump is normal or not.
- Do drain test even if installation of heating season.
- · For new building cases, make sure to complete the test before hanging the ceiling.
- 1. Pour water of about 1000cc into the drain pan in the indoor unit by pump so as not to get the electrical component wet.
- Make sure that water is drained out properly and there is no water leakage from any joints of the drain pipe at the test. Confirm that the water is properly drained out while the drain motor is operating. At the drain socket (transparent), it is possible to check if the water is drained out properly.
- 3. Unplug the drain plug on the indoor unit to remove remaining water on the drain pan after the test, and re-plug it. And insulate the drain pipe properly finally.

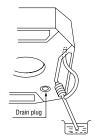

#### Drain pump operation

O In case electrical wiring work finished

Drain pump can be operated by remote controller (wired).

For the operation method, refer to Operation for drain pump in the installation manual for wiring work.


O In case electrical wiring work not finished

Drain pump will run continuously when the dip switch "SW7-1" on the indoor unit PCB is turned ON, the Connector CNB is disconnected, and then the power supply (220-240VAC on the terminal block [ 1 and 2] or [ L and N ] ) is turned ON.

Make sure to turn OFF "SW7-1" and reconnect the Connector CNB after the test

#### Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country. Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.
- 1. Remove a lid of the control box (1 screws).
- 2. Hold each wiring inside the unit and fasten them to terminal block securely.
- 3. Fix the wiring with clamp.
- 4. Install a lid of the control box back to original place.

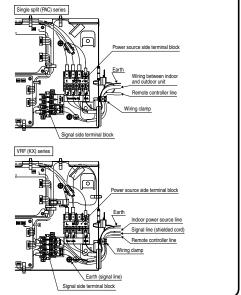

#### ® Panel installation

- After wiring work finished, install the panel on the indoor unit.
- Refer to attached panel installation manual for details. (see next page)

#### Accessory items

I	1	Hook	70	1 piece	For fixing temporarily
I	2	Chain	Necessary	2 pieces	
I	3	Bolt	() James	4 pieces	For installing the panel
ı	4	Screw	()PP	1 piece	For attaching a hook
ı	5	Screw	Ginn	2 pieces	For attaching a chain

- Attach the panel on the indoor unit after electrical wiring work.
- Refer to attached manual for panel installation for details. (See next page)

#### 

Check the following items after all installation work completed.

Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

## PANEL INSTALLATION MANUAL

PJA012D783 🛦

Please read this manual together with the indoor unit's installation manual

#### **⚠ WARNING**

Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.
 Loose connection or hold will cause abnormal heat generation or fire.




Make sure the power supply is turned off when electric wiring work.
 Otherwise, electric shock, malfunction and improper running may occur.



#### ① Checking the indoor unit installation position


- Read this manual together with the air conditioner installation manual carefully.
- Check if the gap between the ceiling plane and the indoor unit is correct by inserting the level gauge into the air outlet port of the indoor unit. (See below drawing)
- Adjust the installation elevation if necessary
- Remove the level gauge before you attach the panel

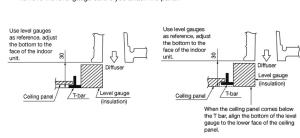

#### ② Orientation of the panel and return air grille installation


- 1. Take note that there is an orientation to install the panel.
- Attach the panel with the orientation shown on the below.
  Align the "PIPE SIDE" mark (on the panel) with the refrigerant pipes on the indoor unit.
- 2. The intake grille can also be attached in a rotated position by 90 degrees.

In case the orientation of the panel is not correct, it will lead to air leakage and also it is not possible to connect the louver motor wiring.

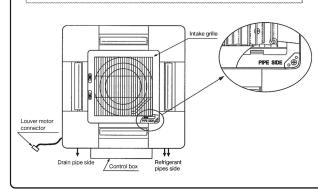


#### 3 Removing a corner panel

• Unscrew the screw from the corner area, pull the corner panel toward the direction

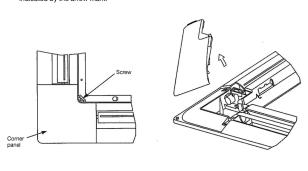

#### 4 Attaching a corner panel

• First insert the part "a" of a corner panel into the part "A" of the cover panel, engage two hooks and tighten the screw.

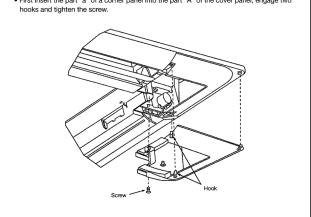


#### ⑤ Panel installation )

• Install the panel on the unit after completing the electrical wiring.

#### Accessories

1	Hook	70	1 piece	For fixing temporarily
2	Chain	Notice Control of the	2 pieces	
3	Screw	(Dames	4 pieces	For hoisting the panel
4	Screw	Quin.	1 piece	For attaching a hook
5	Screw	(Jun	2 pieces	For attaching a chain


1. Screw in two bolts out of the four supplied with the panel by about slightly less than 5mm. (● mark (A)(B)) [Figure 1]

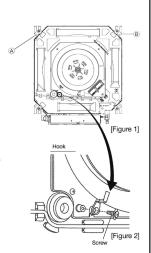

main body with the hook fixing screw (1 screw). [Figure 2]

2. Attach the hook supplied with the panel to the

- 3. Open the intake grille
- 4. Please remove the screw of a corner panel and remove a corner panel. (four places)
- 5. A panel is hooked on two bolts ( mark (A)(B)).

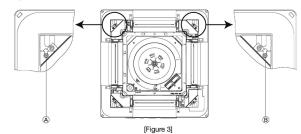

DATA LOADING

In case the louver No to be set is uncertain, set any louver temporarily. The louver will swing once when the setting is completed and it is possible to confirm the louver No and the position. After that, choose the correct louver No and set the top and bottom position.

Piping side

No.2


No.1 No.3

\_No.4


NOTICE

10


6. Please rotate a hook, put in the slot on the panel, and carry out fixing the panel temporarily. [Figure 4]

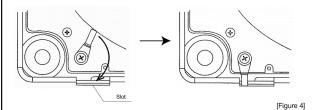


7. Tighten the two bolts used for fixing the panel temporarily and the other two.

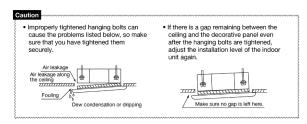


- 8. Please open the lid of a control box.
- 9. Like drain pump wiring, please band together by the clamp and put in louver motor wiring into a control box. [Figure 5]
- 10. Please connect a louver motor connector. [Figure 5]

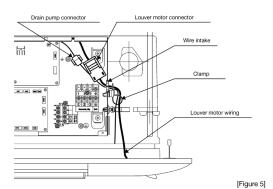

11. Attach two chains to the intake grille with two screws. [Figure 6]

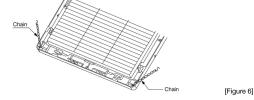

- 12. Replace the corner panels. Please also close a chain with a screw together then. [Figure 7]
- 13. Close the intake grill

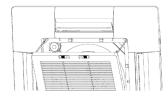

[Figure 7]

Make sure there is no stress given on the panel when adjusting the height of the indoor unit to avoid unexpected distortion. It may cause the distortion of panel or failing to close the air return grille

#### ${rac{1}{2}}$ How to set the airflow direction ${ m )}$

It is possible to change the movable range of the louver on the air outlet from the wired remote controller. Once the top and bottom position is set, the four-will swing within the range between the top and the bottom when swing operation is chosen. It is also possible to apply different setting to each louver.

"DATA LOADING "

∹≂N₀.i ▲⁻ The following is displayed if the number of the indoor units connected to the remote controller are more than one

\*6> \$ELECT I/U \* "I/U000

# 

#### 3 Press SET button. (determination of indoor unit) ed indoor unit is fixed.

[EXAMPLE]

"]/U001 " (displayed for two seconds) "DATA LOADING "

"≂=No.1 A"

#### 4 Press ▲ or ▼ button. (selection of louver No.) Select the louver No. to be set according to the right figure. [EXAMPLE]

## Press O SET button. (Determination of louver No.)

The louver No. to be set is confirmed and the display sho upper limit of the movable range.

### [EXAMPLE] If No. louver is selected $\begin{tabular}{ll} $\| N_0, \| \cup PPE(R2) & $\Rightarrow $" & \leftarrow $ current upper limit position \end{tabular}$

\*\*Rio. LPYEN: 2 \*\* — current upper imm position)

Select the upper limit of leuver morable range.
\*\*position 1 \*\* is the most horizontal, and "position 6 \*\* is the most downward.
\*\*position --\* is to return to the factory setting. If you need to change the setting to
the default setting, use "position--\*"

\*\*No. LIPYENI 9 \*\*

--\*\*No. LIPYENI 9 \*\*

--

Press SET button. (i in of the upper limit position)

The upper limit position is fixed and the setting position is displayed for two seconds. Then proceed to lower limit position selection display.

[EXAMPLE]
No.1 UPPER2 (displayed for two seconds) 

8 Press ▲ or ▼ button. (Selection of lower limit position)
Select the lower limit position of louver.
"position 1" is the most horizontal, and "position 6" is the most downwards.
"position --" is to return to the factory setting. If you need to change the setting to the default setting, use "position --".

## Press SET button. (i in of the lower limit position)

Upper limit position and lower limit position are fixed, and the set positions are displayed for two seconds, then setting is completed. After the setting is completed, the louver which was set moves from the original position to the lower limit position, and goes back to the original position again. (This operation is not performed if the indoor unit and or indoor unit fan is in operation.)

SET COMPLETE হল No.1 ▲

10 Press @ON/OFF button.
Louver adjusting mode ends and returns to the original display.

If the upper limit position number and the lower limit position number are set to the same position, the lower is fixed at that position auto swing does not function.

#### ATTENTION

If you press RESET button during settings, the display will return to previous display. If you press OONOFF! button during settings, the mode will be ended and return to original display, and the settings that have not been completed will become invalid.

When plural remote controllers are connected, louver setting operation cannot be set by slave remote controller.


- It it is necessary to fix the louver position manually, follow the procedure mentioned below.

  1. Shut off the main power switch.

  2. Unplug the connector of the louver motor which you want to fix the position.

  Make sure to insulate unplugged connectors electrically with a winyl tape.

  3. Adjust the louver position isolwily by hand so as to be within the applicable range mentioned below table.

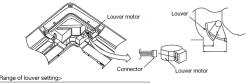

Vertical airflow direction Horizontal 23° Downwards 50° Dimension L (mm) 24 %It can be set between 24~40mm freely.

- Any automatic control or operation from the remote controller will be disabled on the louver whose
  position is fixed in the above way.
- position is fixed in the above way.

  Do not set a louver beyond the specified range. Failure to observe this instruction may result in dripping, dew condensation, the fouling of the ceiling and the malfunctioning of the unit.

PJF012D016

#### (2) Ceiling cassette-4way type (FDT)

This manual is for the installation of an indoor unit.

For electrical wiring work (Indoor), refer to the electrical wiring work installation manual. For remote controller installation, refer to the installation manual attached to a remote controller. For wireless kit installation, refer to the installation manual attached to a wireless kit. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to the installation manual attached to an outdoor unit

This unit must always be used with the panel

#### **SAFETY PRECAUTIONS**

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself
- AWARNING: Wrong installation would cause serious consequences such as injuries or death △CAUTION : Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
  - Never do it under any circumstances.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit. Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

#### **⚠ WARNING**

#### Installation should be performed by the specialist.

If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.

Ø

#### •Install the system correctly according to these installation manuals.

Improper installation may cause explosion, injury, water leakage, electric shock, and fire

0

●Check the density refered by the foumula (accordance with ISO5149) If the density exceeds the limit density, please consult the dealer and installate the ventilation system

•Use the genuine accessories and the specified parts for installation.

0

#### If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the u

Ventilate the working area well in case the refrigerant leaks during installation.

ø

If the refrigerant contacts the fire, toxic gas is produced •Install the unit in a location that can hold heavy weight.

Improper installation may cause the unit to fall leading to acciden



• Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes Improper installation may cause the unit to fall leading to accider

Do not mix air in to the cooling cycle on installation or removal of the air conditioner.



If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.

Power source with insufficient capacity and improper work can cause electric shock and fire



• Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.

Loose connections or hold could result in abnormal heat generation or fire



• Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services

Improper fitting may cause abnormal heat and fire ● Check for refrigerant gas leakage after installation is completed.

If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced. Use the specified pipe, flare nut, and tools for R410A.

0 0

Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle

Tighten the flare nut according to the specified method by with torque wrench.

If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period • Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can

Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.

0

0

Ø

0

● Connect the nines for refrigeration circuit securely in installation work before compressor is operated.

If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system. Stop the compressor before removing the pipe after shutting the service valve on pump down work.

If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration ci and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.

Only use prescribed optional parts. The installation must be carried out by the qualified installer.

If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fin • Do not repair by yourself. And consult with the dealer about repair.

Improper repair may cause water leakage, electric shock or fire Consult the dealer or a specialist about removal of the air conditioner.

Improper installation may cause water leakage, electric shock or fir

Turn off the power source during servicing or inspection work. If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan

Do not run the unit when the panel or protection guard are taken off.

Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get

Shut off the power before electrical wiring work.

It could cause electric shock, unit failure and improp

#### **⚠** CAUTION

Indoor unit is not waterproof. It could cause electric shock and fire.

For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding.

keep the surroundings clean.

Do not touch any button with wet hands.

Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdor

Do not control the operation with the circuit breaker

It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury

#### Perform earth wiring surely. Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could se unit failure and electric shock due to a short cir Farth leakage breaker must be installed. If the earth leakage breaker is not installed, it can cause electric shocks. Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current. . Using the incorrect one could cause the system failure and fire Do not use any materials other than a fuse of correct capacity where a fuse should be used Connecting the circuit by wire or copper wire could cause unit failure and fire Do not install the indoor unit near the location where there is possibility of flammable gas leakages If the gas leaks and gathers around the unit, it could cause fire. Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled t could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire Secure a space for installation, inspection and maintenance specified in the manual. a Insufficient space can result in accident such as personal injury due to falling from the installation place Do not use the indoor unit at the place where water splashes such as laundry. Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art. It could cause the damage of the items. Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics. Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunicatio equipment might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might nfluence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming Do not install the remote controller at the direct sunlight. t could cause breakdown or deformation of the remote controll Do not install the indoor unit at the place listed below Places where flammable gas could leak. Places where carbon fiber, metal powder or any powder is floated. Place where the substances which affect the air conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammonic atmospheres. Places where cosmetics or special sprays are frequently used. Highly salted area such as beach. Heavy snow area Places where the system is affected by Places exposed to oil mist or steam directly. On vehicles and ships smoke from a chimney Places where machinery which generates high harmonics is used Altitude over 1000m Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation) Locations with any obstacles which can prevent inlet and outlet air of the unit Locations where vibration can be amplified due to insufficient strength of structure. Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit) initiate by specification unity. Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where drainage cannot run off safely, t can affect performance or function and etc.. Do not put any valuables which will break down by getting wet under the air conditioner. Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use. It could cause the unit falling down and injury. Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit. If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit. Ø Install the drain pipe to drain the water surely according to the installation manual. mproper connection of the drain pipe may cause dropping water into room and damaging user's belonging: Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping world. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can Ø occur, which can cause serious accidents. Check if the drainage is correctly done during commissioning and ensure the space for inspection and mainte Ensure the insulation on the pipes for refrigeration circuit so as not to condense water ø Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables Do not install the outdoor unit where is likely to be a nest for insects and small animals. Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to Pav extra attention, carrying the unit by hand. Carry the unit with 2 people if it is heavier than 20kg, Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin. Make sure to dispose of the packaging material. als like nail and woods are used in the packag Do not operate the system without the air filter. It may cause the breakdown of the system due to clogging of the heat exchanger. It could cause electric shock. Do not touch the refrigerant piping with bare hands when in operation. The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbito Do not clean up the air conditioner with water. It could cause electric shock. Do not turn off the power source immediately after stopping the operation

# ■ Install correctly according to the installation manual. ■ Confirm the following points: Ounit type/Power supply specification OPipes/Wires/Small parts OAccessory items Accessory items For unit hanging For unit hanging

#### 2) Selection of installation location for the indoor unit

- 1) Select the suitable areas to install the unit under approval of the user
- Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user
  to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on
  the ceiling.
- Areas where there is enough space to install and service.
- Areas where it can be drained properly. Areas where drain pipe descending slope can be
- · Areas where there is no obstruction of airflow on both air return grille and air supply port.
- · Areas where fire alarm will not be accidentally activated by the air conditioner.
- · Areas where the supply air does not short-circuit.
- · Areas where it is not influenced by draft air.
- · Areas not exposed to direct sunlight.
- Areas where dew point is lower than around 28°C and relative humidity is lower than 80%
   This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above.

If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.


- Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
- Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
- · Areas where there is no influence by the heat which cookware generates.
- · Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
- Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.

(A beam from lighting device sometimes affects the infrared receiver for the wireless remote controller and the air conditioner might not work properly.)

- ②Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.
- ③If there are 2 units of wireless type, keep them away for more than 6m to avoid malfunction due to cross communication.
- When plural indoor units are installed nearby, keep them away for more than 4 to 5m.

#### Space for installation and service

- When it is not possible to keep enough space between indoor unit and wall or between indoor units, close the air supply port where it is not possible to keep space and confirm there is no short circuit of airflow.
- ●Install the indoor unit at a height of more than 2.5m above the floor.

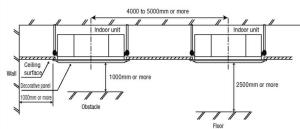

#### Set blow-out pattern

- Select the most proper number of blow-out air supply port direction from 4 way, 3 way or 2 way
  according to the shape of the room and installation position. (1 way is not available.)
- If it is necessary to change the number of air supply port, prepare the covering materials.
- ●Instruct the user not to use low fan speed when 2way or 3way air supply is used.
- Do not use 2way air supply port under high temperature and humidity environment. (Otherwise it could cause condensation and leakage of water.)
- It is possible to set the airflow direction port by port independently. Refer to tne user's manual for details.

#### ③Preparation before installation


- If suspension bolt becomes longer, do reinforcement of earthquake resistant.
  - OFor grid ceiling

When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.

- OIn case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.
- When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.

  Prepare four (4) sets of suspension bolt, nut and spring washer (M10 or M8) on site.


#### Ceiling opening, Suspension bolts pitch, Pipe position

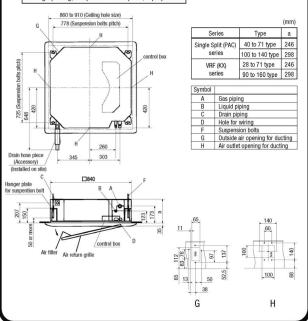

#### 4 Installation of indoor unit


#### Work procedure

- Prepare a ceiling hole with the size of from 860mm x 860mm to 910mm x 910mm referring to the template attached in the package.
- Arrange the suspension bolt at the right position (725mm×778mm).
- . Make sure to use four suspension bolts and fix them so as to be able to hold 500N load.
- 4. Ensure that the lower end of the suspension bolt should be 50mm above the ceiling plane. Temporarily put the four lower nuts 150mm above the ceiling plane and the upper nuts on distant place from the lower nuts in order not to obstruct hanging the indoor unit or adjust the indoor unit position, and then hang the indoor unit.
- 5. Adjust the indoor unit position after hanging it by inserting the level gauge attached on the package into the air supply port and checking if the gap between the ceiling plane and the indoor unit is appropriate. In order to adjust the indoor unit position, adjust the lower nuts while the upper nuts are put on distant place. Confirm there is no backlash between the hanger plate for suspension bolt and the lower nut and washer.

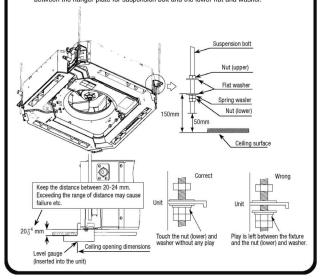

#### (4)Installation of indoor unit (continued)

- Make sure to install the indoor unit horizontally. Confirm the levelness of the indoor unit with a level gauge or transparent hose filled with water. Keep the height difference at both ends of the indoor unit within 3mm.
- 7. Tighten four upper nuts and fix the unit after height and levelness adjustment

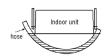

#### Caution

- Do not adjust the height by adjusting upper nuts. It will cause unexpected stress on the indoor unit and it will lead to deformation of the unit, failure of attaching a panel, and generating noise
- Make sure to install the indoor unit horizontally and set the gap between the unit underside and the ceiling plane properly. Improper installation may cause air leakage, dew condensation, water leakage and noise.
- Even after decorative panel attached, still the unit height can be adjusted finely. Refer to the installation manual for decorative panel for details.
- Make sure there is no gap between decoration panel and ceiling surface, and between decoration panel and the indoor unit. The gap may cause air leakage, dew condensation and water
- In case decorative panel is not installed at the same time, or ceiling material is installed after the unit installed, put the cardboard template for installation attached on the package (packing material of cardboard box) on the bottom of the unit in order to avoid dust coming into the indoor

#### **⑤Refrigerant pipe**

#### Caution


- ●Use the new refrigerant pipe.
- When re-using the existing pipe system for R22 or R407C, pay attention to the following items Change the flare nuts with the attached ones (JIS category 2), and reprocess the flare parts. Do not use thin-walled pipes.
- ●Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigeration pipe installation.
- In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes
- Do not use any refrigerant other than R410A.
- Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting,
- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R410 refrigerant.

#### Work procedure

- 1. Remove the flare nut and blind flanges on the pipe of the indoor unit.
  - \* Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
  - (Gas may come out at this time, but it is not abnormal.)
- Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
- 2. Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit \*Bend the pipe with as big radius as possible and do not bend the pipe repeatedly. In addition, do not twist and crush the pipes
  - %Do a flare connection as follows
  - Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving. torque to the nut with another spanner in order to avoid unexpected stress to the copper
  - When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table below. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
- 3. Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps
  - Make sure to insulate both gas pipes and liquid pipes completely.
    - \*Incomplete insulation may cause dew condensation or water dropping.
- 4. Refrigerant is charged in the outdoor unit.

As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit

Pipe diameter	Tightening torque N⋅m
ф 6.35	14 to 18
φ 9.52	34 to 42
♦ 12.7	49 to 61
ф 15.88	68 to 82
ø 19.05	100 to 120

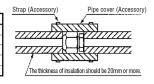

#### **6**Drain pipe


#### Caution

- Install the drain pipe according to the installation manual in order to drain properly.
- Imperfection in draining may cause flood indoors and wetting the household goods, etc.


  Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.

#### Work procedure


- 1. Make sure to insert the drain hose (the end mode of soft PVC) to the end of the step part of drain socket.
  - Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut

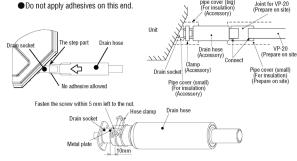


- 2. Prepare a joint for connecting VP-20 pipe, adhere and connect the joint to the drain hose (the end made of rigid PVC), and adhere and connect VP-20 pipe (prepare on site). XAs for drain pipe, apply VP-20 made of rigid PVC which is on the market.
  - Make sure that the adhesive will not get into the supplied drain hose It may cause the flexible part broken after the adhesive is dried up and gets rigid.
  - The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and water leakage

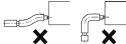

- 3. Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway.
  - Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
  - Do nt set up air vent

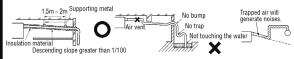


●When sharing a drain pipe for more than one unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP-30 or bigger size for main drain pipe.

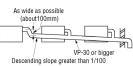

- 4. Insulate the drain pipe
- Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage
  - \*After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wran it with tapes to wran and make joint part gapless.

#### Drain up

 The position for drain pipe outlet can be raised up to 700mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.

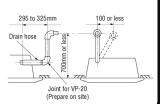

#### **6 Drain pipe (continued)**

#### Drain test

- After installation of drain pipe, make sure that drain system work in good condition and no water leakage from joint and drain pan. Check if the motor sound of drain pump is normal or not
- Do drain test even if installation of heating season
- For new building cases, make sure to complete the test before hanging the ceiling.
   Pour water of about 1000cc into the drain pan in the
- Pour water of about 1000cc into the drain pan in the indoor unit by pump so as not to get the electrical component wet.
   Make sure that water is drained out properly and there
- is no water leakage from any joints of the drain pipe at the test.

  Confirm that the water is properly drained out while the
  - Confirm that the water is properly drained out while the drain motor is operating. At the drain socket (transparent), it is possible to check if the water is drained out properly.
- Unplug the drain plug on the indoor unit to remove remain ing water on the drain pan after the test, and re-plug it. And insulate the drain pipe properly finally.





#### Drain pump operation


- Oln case electrical wiring work finished
- Drain pump can be operated by remote controller (wired).
- For the operation method, refer to Operation for drain pump in the installation manual for wiring work
- OIn case electrical wiring work not finished
- Drain pump will run continuously when the dip switch "SW7-1" on the indoor unit PCB is turned ON, the Connector CNB is disconnected, and then the power supply (230VAC on the terminal block ① and ②) is turned ON. Make sure to turn OFF "SW7-1" and reconnect the Connector CNB after the test.

#### **7Wiring-out position and wiring connection**

- Electrical installation work must be performed according to the installation manual by an
  electrical installation service provider qualified by a power provider of the country, and be
  executed according to the technical standards and other regulations applicable to electrical
  installation in the country.
  - Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.
- 1. Remove a lid of the control box (3 screws) and the wiring cover (2 screws).
- 2. Hold each wiring inside the unit and fasten them to terminal block securely.
- 3. Fix the wiring with clamps.
- 4. Install the removed parts back to original place

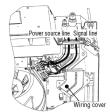

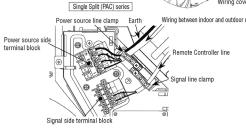

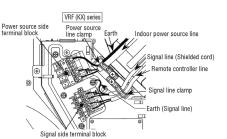

#### **®Panel installation**

- ●Attach the panel on the indoor unit after electrical wiring work.
- Refer to attached manual for panel installation for details. (See next page)

#### **9Check list after installation**


• Check the following items after all installation work completed

Check if;	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

#### (Maintenance)

#### The method of checking the dirt of drain pan

- It is possible to check the dirt for inlet of drain pan without detaching the panel.
  (Inspection is not possible when the high efficient filter and option spacer is installed.)
- 1. Open the air return grille and remove the panel corner cover on drain pan side.
- 2. Remove the cover of inspection window. (1screw)
- ${\bf 3}$  . Check the drain pan from the inspection window.
  - If the drain pan is very dirty, remove the drain pan and clean it.
- 4. After checking of the dirty of drain pan, restore the cover of the inspection window securely. Improper restoration of the cover may cause dew condensation and water leakage.

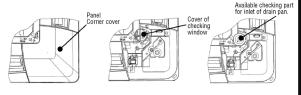

#### Attention for removing drain pan

• The fixing components have been attached the with drain pan. Pay attention to these components during installation and removing. Take off the hanging hook after removing four screws. During the installation of drain pan, fix the drain pan firmly by using four screws after hanging it up with the fixing hook.



To adjust finely, please turn a nut fastening the indoor unit using a spanner or similar tool from the opening on the con

# PANEL INSTALLATION MANUAL


PJF012D003A

Read this manual together with the indoor unit's installation manual.



Make sure the power supply is turned off when electric wiring work. Otherwise, electric shock, malfunction and improper running may occur



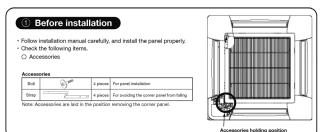


#### ② Checking the indoor unit installation position

- · Read this manual together with the air conditioner installation manual carefully.
- · Check if the opening size for the indoor unit is correct with the level gauge supplied in the indoor unit.
- Check if the gap between the ceiling plane and the indoor unit is correct by inserting the level gauge into the air outlet port of the indoor unit. (See below drawing)
- · Adjust the installation elevation if necessary.

# If there is a height difference beyond the design limit between the installation level of the indoor unit and the ceiling plane, the panel may be subject to excessive stress during installation, it may cause distortion and

The installation level of the indoor unit can be adjusted finely from the opening provided on the corner, even after panel is attached. from the opening provided on the corner, even after (Refer to (8) Attaching the panel for details.)

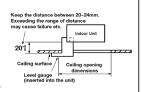



#### ③ Removing the air return grille


1. Hold the stoppers on the air return grille (2 places) toward


OPEN direction, open the air return grille.


2. Remove the hooks of the air return grille from the decorative panel while it is in the open position.

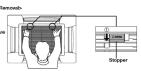

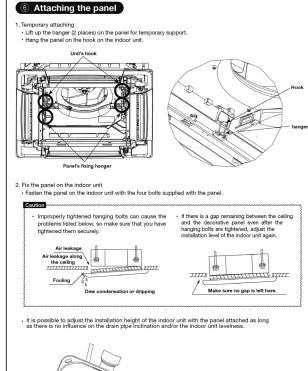


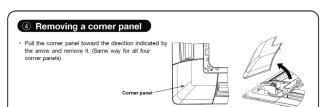

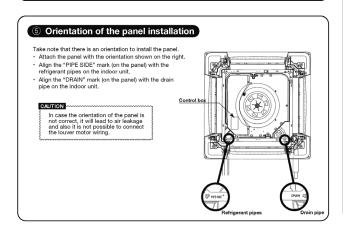

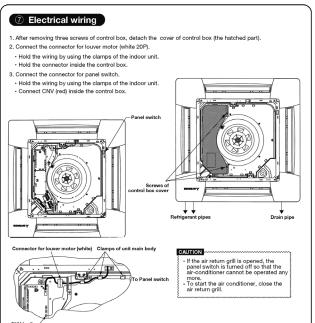

Make sure there is no stress given on the panel when adjusting the height of the indoor unit to avoid unexpected distortion. It may cause the distortion of panel or failing to close the air return grille.

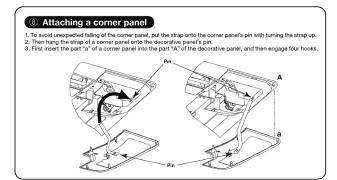



It is possible to change the movable range of the louver on the air outlet from the wired remote controller. Once the top and bottom positiset, the louver will swing within the range between the top and the bottom when swing operation is chosen. It is also possible to apply different setting to each louver.

1 Stop the air conditioner and press SET button and LOUVER button simultaneously for three seconds or more.

The following is displayed if the number of the indoor units connected to the remote controller is one. Go to step 4. " DATA LOADING "

" &\$ SELECT I∕U " "I/U000 🛕"

2 Press ▲ or ▼ button.(selection of indoor unit)

3 Press SET button. (determination of indoor unit)
Selected indoor unit is fixed.

[EXAMPLE]
" [/U001] " (displayed for two seconds) " DATA LOADING "

" ≂¬Nn.1 ▲"

#### NOTICE

For FDT type, in case the louver No to be set is uncertain, set any louver temporarily. The louver will swing once when the setting is completed and it is possible to confirm the louver No and the position.

After that, choose the correct louver No and set the top and bottom

4 Press ▲ or ▼ button. (selection of louver No.) Select the louver No. to be set according to the right figure.

[EXAMPLE]

5 Press St Set button. (Determination of louver No.)
The louver No. to be set is confirmed and the display shows the upper limit of the movable range.

6 Press ▲ or ▼ button. (selection of upper limit position)
Select the upper limit of louver movable range.
"position1" is the most horizontal, and "position 6" is the most downward. "position --" is to return to the factory setting. If you need to change the setting to the default setting, use "position --".

"No.1 UPPER1 ▼"(the most horizotal)

□ "No.1 UPPER2 □ "
□ "No.1 UPPER3 □ "
□ "No.1 UPPER4 □ "
□ "No.1 UPPER6 □ "(the most downwards)
□ "No.1 UPPER6 □ "(the most downwards)
□ "No.1 UPPER6 □ "(return to the default setting)

7 Press SET button (Fixing of the upper

limit position)

The upper limit position is fixed and the setting position is displayed for two seconds. Then proceed to lower limit position

KAMPLE]
No.1 UPPER2 (displayed for two seconds)

8 Press▲ or ▼ button (Selection of lower limit position)
Select the lower limit position of lower.

\*position 1\* is the most horizontal, and "position 6 "is the most downwards.

\*position -- " is to return to the factory setting. If you need to change the setting to the default setting, use "position --".

No.1 LOWERS 

(the most horizontal)

No.1 LOWERS 

(return to the default setting)

IIIIII DATA LOADING - 10 2.4.6.8 3.5.7.9



Drain h

(horizontal) 1)-(D)-(5)


#### 9 Press SET button (Fixing of the lower limit

Press School Prosition and lower limit position are fixed, and the set position in the property of the prosition are fixed, and the set positions are displayed for two seconds, then setting is completed. From the original position to the lower limit position, and goes back to the original position to the lower limit position, and goes back to the original position and the preformed if the indoor unit and/or indoor unit fan is in operation

N₀.1 U2 L6 (displayed for two seconds)

SET COMPLETE

হলNo.1 ▲

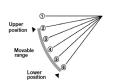

10 Press OON/OFF button.

If the upper limit position number and the lower limit position number are set to the same position, the louver is fixed at that position auto swing does not funtion.

#### ATTENTION

If you press RESET button during settings, the display will return to previous display. If you press ONOFE button during settings, the mode will be ended and return to original display, and the settings that have not been completed will be become invalid.


When plural remote controllers are connected, louver setting operation cannot be set by slave remote controller

- If it is necessary to fix the louver position manually, follow the procedure mentioned below.

  1. Shut off the main power switch.

  2. Unplug the connector of the louver motor which you want to fix the position. Make sure to insulate unplugged connectors electrically with a virryl tape.

  3. Adjust the louver position solewly by hand so as to be within the applicable range mentioned below table.

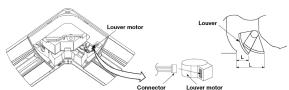

<b>*</b>	ď	Connector	Louver motor
<range louver="" of="" setting=""></range>			
Vertical airflow direction	Horizontal 0°	Downwards 45°	
Dimension L (mm)	43	26	

- Any automatic control or operation from the remote controller will be disabled on the louver whose position is fixed in the above way.
- Do not set a louver beyond the specified range. Failure to observe this instruction may result in dripping, dew condensation, the fouling of the ceiling and the malfunctioning of the unit.

#### 10 Attaching the air return grille

To attach the air return grille, follow the procedure described in Removing the air return grille in the reverse order.

1. Hang the hooks of the air return grille in the hole of the panel. (The hooks of the grille can be hanged in three side of the panel as following.)

2. After the grille is hanged, close the grille while the stoppers on the grille (2 places) are kept pressed to "OPEN" direction. When the grille comes to the original position, release the stoppers to hold the grille. Make sure to hear the sound of "CLICK" in both stoppers.

<Installation> The grill may be installed at one of these three sides. The grill cannot be installed at this side hing the air return grille from the hinge side.

Be careful in air return grille attaching, unstable attaching may cause grille falling. Repair or replace the distorted, broken stopper at once, or the grille falling may occur.

PFA012D621

#### (3) Ceiling suspended type (FDEN)

This manual is for the installation of an indoor unit.

For electrical wiring work (Indoor), refer to the electrical wiring work installation manual. For remote controller installation, refer to the installation manual attached to a remote controller. For wireless kit installation, refer to the installation manual attached to a wireless kit. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to the installation manual attached to a outdoor unit.

#### **SAFETY PRECAUTIONS**

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, \_ ★WARNING and \_ ★CAUTION ] ⚠WARNING: Wrong installation would cause serious consequences such as injuries or death. ACAUTION: Wrong installation might cause serious consequences depending on circumstances Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown as follows:
- Never do it under any circumstances. Always do it according to the instruction.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the
  customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

#### **⚠ WARNING**

#### •Installation should be performed by the specialist.

If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.

Install the system correctly according to these installation manuals.

Improper installation may cause explosion, injury, water leakage, electric shock, and fire

• When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149).

If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accidents



If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit

Ventilate the working area well in case the refrigerant leaks during installation.

If the refrigerant contacts the fire, toxic gas is produced

Install the unit in a location that can hold heavy weight.

Improper installation may cause the unit to fall leading to accident

•Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.

Improper installation may cause the unit to fall leading to accidents

Do not mix air in to the cooling cycle on installation or removal of the air conditioner.

If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries

Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit. Power source with insufficient capacity and improper work can cause electric shock and fire.

•Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in

order not to apply unexpected stress on the terminal. Loose connections or hold could result in abnormal heat generation or fire

• Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services

Improper fitting may cause abnormal heat and fire.

Check for refrigerant gas leakage after installation is completed.

If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced

Ouse the specified pipe, flare nut, and tools for R410A.

Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle

Tighten the flare nut according to the specified method by with torque wrench.

If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period.

Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.

●Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.

If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system.

•Stop the compressor before removing the pipe after shutting the service valve on pump down work.

If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.

•Only use prescribed optional parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire

Do not repair by yourself. And consult with the dealer about repair.

Improper repair may cause water leakage, electric shock or fir

Consult the dealer or a specialist about removal of the air conditioner.

Improper installation may cause water leakage, electric shock or fire ●Turn off the power source during servicing or inspection work.

wer is supplied during servicing or inspection work, it could cause el

• Do not run the unit when the panel or protection guard are taken off.

Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock

Shut off the power before electrical wiring work.

It could cause electric shock, unit failure and improper running

#### **↑** CAUTION

Indoor unit is not waterproof. It could cause electric shock and fire

instrument, preservation of animals, plants, and a work of art. It could cause the damage of the items.

0

ø

0

0

0

0

0

Ø

0

Ø

Œ

 $\bigcirc$ 

0

Ø

0

It could cause the unit falling down and injury.

If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water To avoid damaging, keep the indoor unit packed or cover the indoor unit


Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work

Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or bre

Do not control the operation with the circuit breaker.


It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury

#### Perform earth wiring surely Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could 😃 cause unit failure and electric shock due to a short circu Earth leakage breaker must be installed. Ø If the earth leakage breaker is not installed, it can cause electric shocks Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all Using the incorrect one could cause the system failure and fire. Do not use any materials other than a fuse of correct capacity where a fuse should be used. Connecting the circuit by wire or copper wire could cause unit failure and fire Do not install the indoor unit near the location where there is possibility of flammable gas leakages If the gas leaks and gathers around the unit, it could cause fire. Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire Secure a space for installation, inspection and maintenance specified in the manual. Ø Insufficient space can result in accident such as personal injury due to falling from the installation place Do not use the indoor unit at the place where water splashes such as laundry. Do not use the indoor unit for a special purpose such as food storage, cooling for precision Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunicatio equipment might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming Do not install the remote controller at the direct sunlight. t could cause breakdown or deformation of the remote control Do not install the indoor unit at the place listed below. Places where cosmetics or special sprays a Places where flammable gas could leak. Places where carbon fiber, metal powder or any powder is floated. frequently used. Highly salted area such as beach. Place where the substances which affect the air conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammonic atmospheres. Places exposed to oil mist or steam directly. Heavy snow area Places where the system is affected by smoke from a chimney. Altitude over 1000m On vehicles and ships Places where machinery which generates high harmonics is used Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation) Locations where vibration can be amplified due to insufficient strength of structure. Locations where vibration can be amplified due to insufficient strength of structure. Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam, (in case of the Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) Locations where drainage cannot run off safely. It can affect performance or function and etc... Do not put any valuables which will break down by getting wet under the air conditioner. n could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's be Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use. Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit. 0 Install the drain pipe to drain the water surely according to the installation manual. Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficuser's health and safety. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen occur, which can cause serious accidents. For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, Check if the drainage is correctly done during commissioning and ensure the space for inspection and maint Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables Do not install the outdoor unit where is likely to be a nest for insects and small animals. nsects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to seep the surroundings clean. Pay extra attention, carrying the unit by hand. Carry the unit with 2 people if it is heavier than 20kg, Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin. Make sure to dispose of the packaging material. Leaving the materials may cause injury as metals like nail and woods are used in the package Do not operate the system without the air filter. It may cause the breakdown of the system due to clogging of the heat exchanger Do not touch any button with wet hands. It could cause electric shock. $\ensuremath{\bullet}$ Do not touch the refrigerant piping with bare hands when in operation. The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or fros Do not clean up the air conditioner with water. It could cause electric shock. Do not turn off the power source immediately after stopping the operation

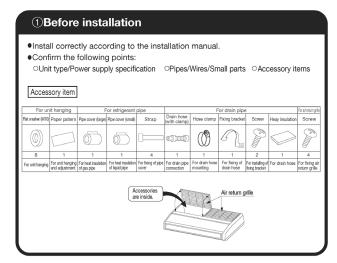

#### 2 Selection of installation location for the indoor unit

- ① Select the suitable areas to install the unit under approval of the user.
- Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
- Areas where there is enough space to install and service.
- · Areas where it can be drained properly. Areas where drain pipe descend-
- · Areas where there is no obstruction of airflow on both air return grille and air supply port.
- · Areas where fire alarm will not be accidentally activated by the air conditioner.
- · Areas where the supply air does not short-circuit.
- Areas where it is not influenced by draft air.
- · Areas not exposed to direct sunlight.
- Areas where dew point is lower than around 23°C and relative humidity is lower than 80%, This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above.
- Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
- · Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
- Areas where there is no influence by the heat which cookware generates.
- · Areas where not exposed to oil mist, powder and/or steam directly such as above fryer. · Areas where lighting device such as fluorescent light or incandescent light
- doesn't affect the operation. (A beam from lighting device sometimes affects the infrared receiver for the
- wireless remote controller and the air conditioner might not work properly.)
- (2) Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling
- ③ If there are 2 units of wireless type, keep them away for more than 6m to avoid malfunction due to cross communication.
- ④ When plural indoor units are installed nearby, keep them away for more than 4 to 5m.

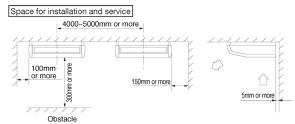

#### ③Preparation before installation


•If suspension bolt becomes longer, do reinforcement of earthquake resistant. O For grid ceiling

When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.

O In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.


When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt. Prepare four (4) sets of suspension bolt, nut and spring washer (M10) on site.

#### ③Preparation before installation (continued)

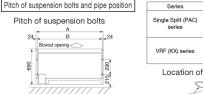

40 to 50type 1070 1022 60 to 71type 1320 1272 100 to 140type 1620 1572 36 to 56type 1070 1022 112 to 140type 1620 1572

Location of pipe outlets

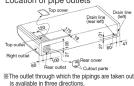

Haulage

Pipe position 235(Liquid piping) Refrigi

195(Gas piping)

•Move the box as close to the installation area as possible packed. •If it must be unpacked, wrap the unit with a nylon sling, and be careful not to damage the unit.

18

olf you need to lay the unit on a floor after unpacking, always put it with the intake grille facing upward.

# KK (Indoor unit)

Remove the screw and detach the side panel by sliding it toward the

Grille upside

Preparation before instalation

1. Remove the air return grille. Slide stoppers (4 places) of the catches. then pull out the pins (4 or 6 places).



direction indicated by the arrow mark. Side panel screw (1 each on the left and right) (M4)

2. Remove the side panel.

3. Remove the hanging plate. Remove the screw, and then loosen the fixing bolts. Unscrew 8-12mm

Hanging plate

Hanging plate

#### 4 Remote controller


Installation of remote controller

Up to two receiver or wired remote controller can be installed in one indoor unit

- When both wired and wireless remote controller are used It is necessary to set wired or wireless remote controller as slave. (For the method of changing the setting, refer to the installtion manual attached to remote controller or wireless kit.)
- When wired remote controller are used only (wireless type) It is necessary to remove the line that is connected to the receiver. Remove signal line connected to the receiver from primary side of terminal block (X, Y).

#### ATTENTION

- ①Insulate with tape the removed line.
- 2)The LED of that removed connector will not be able to make any

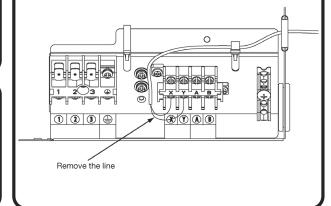

#### **5** Installation of indoor unit Work procedure Paper pattern 1. Select the suspension bolt locations and the pipe hole location. (1) Use enclosed paper pattern as a reference, and drill the holes for the suspension bolts and pipe \*Decide the locations based on direct measurements (2) Once the locations are properly placed, the paper pattern can be removed. Ceiling 2. Install the suspension bolts in place. 3. Fix with 4 suspension bolts, which can endure load of 500N. Hanging plate 4. Check the measurements given at the right Suspension bolt figure for the length of the suspension bolts 5. Fasten the hanging plate onto the suspension bolts. <No ceiling material to install against,> <When installed against a ceiling material,> > Air supply Hanging plate Suspension bolt Nut Washer (accessory) Suspension bolt Unit Ceiling surface Washer (accessory) ※Double nuts \*Double nuts Hanging plate \*Please fasten firmly with double nuts 6. Install the unit to the hanging plate.

Hanging plate

(For left-side drain connection, give the reverse slope.) then fasten it securely onto the indoor unit with screws \*To ensure smooth drain flow, install the unit with a descending slope toward the drain outlet. ⚠ CAUTION: Do not give the reversed slope, which may cause water leaks.

panel side to the rear side and

#### **6**Refrigerant pipe

(1) Slide the unit in from front side to get it hanged on the hanging plate with the bolts. (2) Fasten the four fixing bolts (M8: 2 each on the left and right sides) firmly. (3) Fasten the two screws (M4: 1 each on the left and right sides). **⚠WARNINIG**: Hang a side panel on from the

Use the new refrigerant pipe.

When re-using the existing pipe system for R22 or R407C, pay attention to the following items Change the flare nuts with the attached ones (JIS category 2), and reprocess the flare parts. Do not use thin-walled pipes.

- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigeration pipe installation In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than R410A.
   Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.

  Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt
- or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.

  •Use special tools for R410 refrigerant.

#### Work procedure

- Remove the flare nut and blind flanges on the pipe of the indoor unit.
  - \*\*Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them. (Gas may come out at this time, but it is not abnormal.)

    Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
- Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.Bend the pipe with as big radius as possible and do not bend the pipe repeatedly.
  - In addition, do not twist and crush the pipes. \*\*Do a flare connection as follows:
  - •Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected
- stress to the copper pipe, and then remove them.


  •When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table below. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.

  3. Cover the flare connection part of the indoor unit with attached insulation material
- after a gas leakage inspection, and tighten both ends with attached straps.

  •Make sure to insulate both gas pipes and liquid pipes completely.
- %Incomplete insulation may cause dew condensation or water dropping 4. Refrigerant is charged in the outdoor unit.

As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.




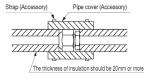


#### 6 Refrigerant pipe (continued)

The pipe can be connected from three different directions, (back, reight, top)

• When the pipe is routed through the back. If the bracket is removed, piping work will become easy. \*After piping, reinstall the removed bracket.

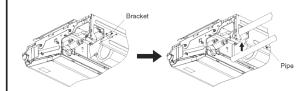

 When the pipe is routed through the back Cut the removed top cover, and install to the rear panel instead of rear cover.

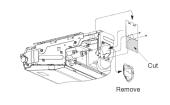

#### ⑦Drain pipe

The drain pipes may face out towards the back to the left, or to the right side.

#### Caution

- Install the drain pipe according to the installation manual in order to drain properly. Imperfection in draining may cause flood indoors and wetting the household goods, etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful andinflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.

- Connect the pipe securely to avoid water leakage from the joint.
  Insulate the pipe properly to avoid condensation drop.
  Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap
  in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.

#### Work procedure

- 1. Insert drain hose completely to the base, and tighten the drain hose clamp securely. ( adhesive must not be used.) \*When plumbing on the left side, move the rubber plug and the cylindrical insulating materials by the pipe connecting hole on
- the left side of the unit to the right side.

  Beware of a possible outflow of water that may
- occur upon removal of a drain plug.


  2. Fix the drain hose at the lowest point with a hose clamp supplied as an accessory \* Give a drain hose a gradient of 10mm as illustrated in the right drawing by laying it without leaving a slack.
  - Take head of electrical cables so that they may not run beneath the drain hose.
- A drain hose must be clamped down with a hose clamp There is a possibility that drain water overflows
- Connect VP-20(prepare on site) to drain hose, (adhesive must not be used.) W Use commercially available rigid PVC general pipe VP-20 for drain pipe.
- Do not to make the up-down bending and trap in the mid-way while assuming that the drain pipes is downhill. (more than 1/100)
- Never set up air vent.
- Insulate the drain pipe.
  - Insulate the drain hose clamp with the heat insulation supplied as accessories.
  - When the unit is installed in a humid place, consider precautions against dew condensation such as heat insulation for the drain pipe.

#### Drain test

- After installation of drain pipe, make sure that drain system work in good condition and no water leakage from joint and drain pan. Do drain test even if installation of heating season.

#### **®Wiring-out position and wiring connection**


- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the coun-
- Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the
- cord securely in order not to apply unexpected stress on the terminal. Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.
- Remove a lid of the electrical box (2 screws).
   Hold each wiring inside the unit and connect to a terminal block surely.
- 3. Fix the wiring by clamps.
- 4. Install the removed parts back to original place.

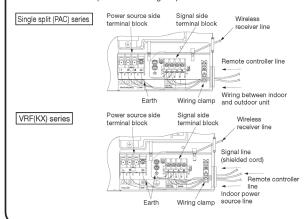

#### **Attaching the air return grille**

- The air return grille must be attached when electrical cabling work is completed.
- 1. Fix the chains tied to the air return 2. Close the air return grille. grille onto the indoor unit with screws supplied as accessories (4
  - This completes the unit installtion



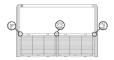

#### **(1)** Check list after installation

Check the following items after all installation work completed.

Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	


#### 11) How to set the airflow direction

It is possible to change the movable range of the louver on the air outlet from the wired remote controller. Once the top and bottom position is set, the louver will swing within the range between the top and the bottom when swing operation is chosen. It is also possible to apply different setting to each louver.

1. Stop the air conditioner and press SET button and

- LOUVER button simultaneously for three seconds or
- The following is displayed if the number of the indoor units
- The following is displayed if the number of the indoor units connected to the remote controller are more than one.

" 65¢ SELECT I/U " "I/II000

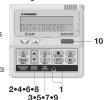

2. Press▲or▼button.(selection of indoor unit) Select the indoor unit of which the louver is set.

3. Press SET button.(determination of indoor unit) Selected indoor unit is fixed.

4. Press▲or▼ button.(selection of louver No.) •Select the louver No. to be set according to the right figure.

- 5. Press SET button.(Determination of louver No.)
  - •The louver No. to be set is confirmed and the display shows the upper limit of the movable range.

- 6. Press ▲ or ▼ button.(selection of upper limit position)
  - Select the upper limit of louver movable range.

    "position 1" is the most horizontal, and "position 6" is the most downward.

    "position --" is to return to the factory setting.





Press SET button.(Fixing of the upper limit position)

The upper limit position is fixed and the setting position is displayed for two seconds. Then proceed to lower limit position selection display.

```
[EXAMPLE]
No.1 UPPER2 (displayed for two sets)
   No.1 LOWERS $ (shows current setting)
```

Press ▲or ▼button.(Selection of lower limit position)
 Select the lower limit position of louver.
 "position 1" is the most horizontal, and "position 6 "is the most downwards.
 "position ---" is to return to the factory setting. If you need to change the setting to the default setting, use "position ---".

9. Press SET button.(Fixing of the lower limit position)

Upper limit position and lower limit position are fixed, and the set positions are displayed for two seconds, then setting is completed.

 After the setting is completed, the louver which was set moves from the original position to the lower limit position, and goes back to the original position again. (This operation is not performed if the indoor unit and/or indoor unit fan is in operation.)

(Example)
No.1 U2 L6 (displayed for two seconds)





10.Press @on/off button.

Louver adjusting mode ends and returns to the original display.

If the upper limit position number and the lower limit position number are set to the same position, the louver is fixed at that position auto swing does not funtion.

If you press RESET button during settings, the display will return to previous display. If you press OONOFF button during settings, the mode will be ended and return to original display, and the settings that have not been completed will become invalid.

When plural remote controllers are connected, louver setting operation cannot be set by slave remote controller.

PJR012D319 A

0

0

0

O

Ø

Ø

0

0

Ø

#### (4) Duct connected-Low/Middle static pressure type (FDUM)

This manual is for the installation of an indoor unit

For electrical wiring work (Indoor), refer to the electrical wiring work installation manual. For remote controller installation, refer to the installation manual attached to a remote controller. For wireless kit installation, refer to the installation manual attached to a wireless kit. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to the installation manual attached to an outdoor unit

#### **SAFETY PRECAUTIONS**

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work. in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, [AWARNING] and [ACAUTION]. MARNING: Wrong installation would cause serious consequences such as injuries or death ACAUTION: Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
- customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit. Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

#### **⚠WARNING**

#### Installation should be performed by the specialist.

If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.



Ø

0

Ø

0

A

Ø

0

0

ø

Ø

0

0

- $\bullet$  Install the system correctly according to these installation manuals.
- Improper installation may cause explosion, injury, water leakage, electric shock, and fire
- ●Check the density refered by the foumula (accordance with ISO5149)
  - If the density exceeds the limit density, please consult the dealer and installate the ventilation system

#### Ouse the genuine accessories and the specified parts for installation.


If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.

Ventilate the working area well in case the refrigerant leaks during installation.

If the refrigerant contacts the fire, toxic gas is pro ●Install the unit in a location that can hold heavy weight.

Improper installation may cause the unit to fall leading to accident

• Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.

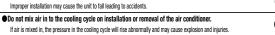

●Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit. Power source with insufficient capacity and improper work can cause electric shock and fire.

a • Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in 0

er not to apply unexpected stress on the terminal. Loose connections or hold could result in abnormal heat generation or fire

●Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services Improper fitting may cause abnormal heat and fire

● Check for refrigerant gas leakage after installation is completed. If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced

Ouse the specified pipe, flare nut, and tools for R410A. Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle

● Tighten the flare nut according to the specified method by with torque wrench.

If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period. ● Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can

Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.

● Connect the pipes for refrigeration circuit securely in installation work before compressor is operated. If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system

•Stop the compressor before removing the pipe after shutting the service valve on pump down work. If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.

Only use prescribed optional parts. The installation must be carried out by the qualified installer.

If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire ●Do not repair by yourself. And consult with the dealer about repair.

Improper repair may cause water leakage, electric shock or fire Consult the dealer or a specialist about removal of the air conditioner. mproper installation may cause water leakage, electric shock or fi

Turn off the power source during servicing or inspection work. If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan

Do not run the unit when the nanel or protection guard are taken off. Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get

burned, or electric shock. Shut off the power before electrical wiring work. Ø

It could cause electric shock, unit failure and improper runi

#### 

#### Perform earth wiring surely.

Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could use unit failure and electric shock due to a short circuit

Earth leakage breaker must be installed.

If the earth leakage breaker is not installed, it can cause electric shocks.

Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.

Jsing the incorrect one could cause the system failure and fire

Do not use any materials other than a fuse of correct capacity where a fuse should be used. Connecting the circuit by wire or copper wire could cause unit failure and fire.

 Do not install the indoor unit near the location where there is possibility of flammable gas leakages If the gas leaks and gathers around the unit, it could cause fire. Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such

as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled. ( It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.

Secure a space for installation, inspection and maintenance specified in the manual.

Insufficient space can result in accident such as personal injury due to falling from the installation place Do not use the indoor unit at the place where water splashes such as laundry.

Indoor unit is not waterproof. It could cause electric shock and fire Do not use the indoor unit for a special purpose such as food storage, cooling for precision

strument, preservation of animals, plants, and a work of art. It could cause the damage of the items. Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics.

Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming.

 Do not install the remote controller at the direct sunlight. It could cause breakdown or deformation of the remote controlle

#### Do not install the indoor unit at the place listed below.

Places where flammable gas could leak. Places where carbon fiber, metal powder or any powder is floated. Place where the substances which affect the air conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammonic atmospheres.

Places exposed to oil mist or steam directly. On vehicles and ships Places where machinery which generates high harmonics is used.

- Places where cosmetics or special sprays are
- frequently used.
- Highly salted area such as beach. Heavy snow area Places where the system is affected by
- smoke from a chimney. Altitude over 1000m
- Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit
  according to the installation manual for each model because each indoor unit has each limitation)
   Locations with any obstacles which can prevent inlet and outlet air of the unit
   Locations where vibration can be amplified due to insufficient strength of structure.

Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the

infrared specification unit)

initial or specification unity.

Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m).

Locations where drainage cannot run off safely.

can affect performance or function and etc.. Do not put any valuables which will break down by getting wet under the air conditioner

ion could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's bel

• Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use. It could cause the unit falling down and injury.

 Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leal To avoid damaging, keep the indoor unit packed or cover the indoor unit.

Install the drain pipe to drain the water surely according to the installation manual

Improper connection of the drain pipe may cause dropping water into room and damaging user's belon Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to

user's health and safety. Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can

occur, which can cause serious accidents • For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps and not to make air-bleeding.

Check if the drainage is correctly done during commissioning and ensure the space for inspection and mainte

 Ensure the insulation on the pipes for refrigeration circuit so as not to condense water Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables Do not install the outdoor unit where is likely to be a nest for insects and small animals.

Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean.

Pav extra attention, carrying the unit by hand.

Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin. Make sure to dispose of the packaging material.

Leaving the materials may cause injury as metals like nail and woods are used in the package Do not operate the system without the air filter.

It may cause the breakdown of the system due to clogging of the heat exchanger. Do not touch any button with wet hands. It could cause electric shock

Do not turn off the power source immediately after stopping the operation

 Do not touch the refrigerant piping with bare hands when in operation. The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or fro

 Do not clean up the air conditioner with water It could cause electric shock.

Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakd Do not control the operation with the circuit breaker.

It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury

OThis model is middle static ducted type air conditioning unit. Therefore, do not use this model for direct

#### **1** Before installation Install correctly according to the installation manual. Confirm the following points: OUnit type/Power supply specification OPipes/Wires/Small parts OAccessory items

6 6 0 6



#### **②Selection of installation location for the indoor unit**

- ① Select the suitable areas to install the unit under approval of the user.
  - Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
  - Areas where there is enough space to install and service.
  - · Areas where it can be drained properly. Areas where drain pipe descending slope can be
  - · Areas where there is no obstruction of airflow on both air return grille and air supply port.
  - Areas where fire alarm will not be accidentally activated by the air conditioner.
  - Areas where the supply air does not short-circuit.
  - · Areas where it is not influenced by draft air.
  - Areas not exposed to direct sunlight.
  - Areas where dew point is lower than around 28°C and relative humidity is lower than 80% This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensa tion drop if the air conditioner is operated under the severer condition than mentioned above.

If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.


- Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
- Areas where any items which will be damaged by getting wet are not placed such as food. table wares, server, or medical equipment under the unit.
- · Areas where there is no influence by the heat which cookware generates.
- Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
- Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation

(A beam from lighting device sometimes affects the infrared receiver for the wireless remote controller and the air conditioner might not work properly.)

2) Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.

#### Space for installation and service

Make installation altitude over 2.5m.

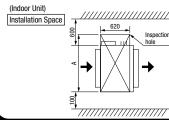

		UNIT: mm
22~56	71, 90	112, 140
50	60, 71	100~140
1100	1300	1720
	50	50 60, 71

#### 3 Preparation before installation


If suspension bolt becomes longer, do reinforcement of earthquake resistant.


When the suspension bolt length is over  $500\,\mathrm{mm}$ , or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.

Oln case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.

When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt. Prepare four (4) sets of suspension bolt, nut and spring washer (M10) on site.

Suspension Bolt Location 472

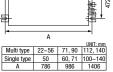

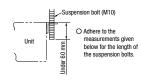

#### 3 Preparation before installation (continued) Pipe locations UNIT: mm 22~90 50~71 Removal opening for the humidifier pipe (outer panel hole ø14) Drain pip connection VP20(PVC pipe) Hole for electrical wiring 250 (outer panel hole ø35) Refrigerant gas pipe 460 (For natural drainage) drain pipe connection VP 20 (PVC pipe) Refrigerant liquid pipe Multi type Single type 510 480 Removal opening for the humidifier pipe (outer panel hole ø14) 405 8 Hole for electrical wiring (outer panel hole ø35) 155 Refrigerant gas pipe (For natural drainage) drain pipe connection VP 20 (PVC pipe) Refrigerant liquid pipe

#### (4)Installation of indoor unit

#### Installation

#### [Hanging] Hang the unit up. M10 nut<sub>∞</sub>





If the measurements between the unit and the ceiling hole do not match upon installation, it may be adjusted with the long holed installation tool.

#### Adjustment for horizontality

OEither use a level vial, or adjust the level according to the method below.

Adjust so the bottom side of the unit will be leveled with the water surface as Pipe side Pour water Water surface 0~5mm Let the pipe side be slightly sloped

Olf the unit is not leveled, it may cause malfunctions or inoperation of the float switch.

#### **5** Duct Work

- (1) A corrugated board (for preventing sputtering) is attached to the main body of the air conditioner (on the outlet port). Do not remove it until connecting the duct.
- An air filter can be provided on the main body of the air conditioner (on the inlet port). Remove it when connecting the duct on the inlet port.

#### (2)Blowout duct

Use according to the spot numbers shown in the table below with a 200 circular duct.

Multi type	22	36, 45, 56	71, 90	112, 140
Single type	-	50	56, 71	100~140
Snot numbers	1 ennt	2 ennte	3 nr 2 ennte	A or 3 enote

- The difference of the duct lengths between each spot should be less than 2:1.
- The ducts should be at their minimum lengths.
- Keep the bends to a minimum. (The bending radius should be as large as possible.)



- Tie and secure the connection to the duct flange of the main unit/blowout hole with a band. Then, apply insulation materials to the secured part for dew condensation prevention.
- Use of the sound and heat insulated flexible duct is recommended for condensation prevention and soundproofing. (sold separately; 1m, 2m, 4m available)
- Conduct the duct work before ceiling attachment.

#### 3Inlet port

- When shipped the inlet port lies on the back.
- When connecting the duct to the inlet port, remove the air filter if it is fitted to the inlet port.

#### (5) Duct Work (continued)

•When placing the inlet port to carry out suction from the bottom side, use the following procedure to replace the suction duct joint and the bottom plate



bottom plate and the duct joint on the inlet port side of the unit



and duct joint


ecure with a band, etc




Fit the duct join with a screw: fit the bottom plate

 Make sure to insulate the duct to prevent dewing on it. (4) Install the specific blowout duct in a location where the air will

- circulate to the entire room. The duct connection is specific to the 200 circular duct.
- Conduct the installation of the specific blowout hole and the connection of the duct before attaching them to the ceiling.
- Insulate the area where the duct is secured by a band for dew condensation prevention.

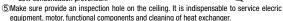

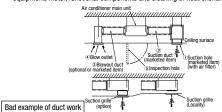

①If a duct is not provided at the suction side but it is substituted with the space over the ceiling, humidity in the space will increase by the influence of capacity of ventilation fan, strength of wind blowing against the out door air louver, weather (rainy day) and others.

a)Moisture in air is likely to condense over the external plates of the unit and to drip on the ceiling. Unit should be operated under the conditions as listed in the above table and within the limitation of wind volume. When the building is a concrete structure, especially immediately after the construction, humidity tends to rise even if the space over the ceiling is not substituted in place of a duct. In such occasion, it is necessary to insulate the entire unit with glass wool (25mm). (Use a wire net or equivalent to hold the glass wool in place.)


b)It may run out the allowable limit of unit operation (Example: When outdoor air temperature is 35°C DB, suction air temperature is 27°C WB) and it could result in such troubles as compressor overload, etc.,

c)There is a possibility that the blow air volume may exceed the allowable range of operation due to the capacity of ventilation fan or strength of wind blowing against external air louver so that drainage from be heat exchanger may fall to reach the drain pan but leak outside

(Example: drip on to the ceiling) with consequential water leakage in the room.

②If vibration damping is not conducted between the unit and the duct, and between the unit and the slab, vibration will be transmitted to the duct and vibration noise may occur. Also, vibration may be transmitted from the unit to the slab. Vibration damping must be performed.



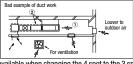

A specific cover plate is available when changing the 4 spot to the 3 spot, or when changing the 3 spot to the 2 spot.

Note: Do not change from 2 spot to 1 spot.

#### Connecting the air intake/vent ducts

1)Fresh Air Intake

Notice


[for air intake duct only]

OUse the side fresh air intake hole, or supply through a part of the suction duct.

[for simultaneous air intake/vent] OIntake air through the suction duct. (the side cannot be used)

2 Air Vent

OUse the side air vent hole (always use together with the air intake)

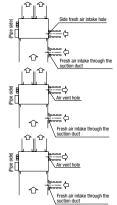

OUse the duct flange for the air intake/vent (sold separately; for 125 circular duct connection), and connect the 125 circular duct (tighten with band).

Oinsulate the duct to protect it from dew condensation.

#### **6**Refrigerant pipe

#### Caution

Use the new refrigerant pipe.

When re-using the existing pipe system for R22 or R407C, pay attention to the following items · Change the flare nuts with the attached ones (JIS category 2), and reprocess the flare parts.

· Do not use thin-walled pipes.


 Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigeration pipe installation. In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.

●Do not use any refrigerant other than R410A.

Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into

- refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.

  Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R410 refrigerant.

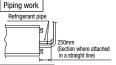

When conducting piping work, make sure to allow the pipes to be aligned in a straight line for at least 250 mm, as shown in the left illustration. (This is necessary for the drain pump

#### Work procedure

 Remove the flare nut and blind flanges on the pipe of the indoor unit.
 Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them. (Gas may come out at this time, but it is not abnormal.)

Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)

Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit. \*\*Bend the pipe with as big radius as possible and do not bend the pipe repeatedly. In addition, do not twist and crush the pipes

- No a flare connection as follows:
   Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper
- When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table below. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
- Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.

Make sure to insulate both gas pipes and liquid pipes completely.
 Incomplete insulation may cause dew condensation or water dropping.

Refrigerant is charged in the outdoor unit.

As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

Pipe diameter	Tightening torque N·m
ф 6.35	14 to 18
ф 9.52	34 to 42
ф 12.7	49 to 61
ф 15.88	68 to 82
ф 19.05	100 to 120

Strap (Accessory Pipe cover (Accessory) Manna. The thickness of insulation should be 20mm or m

#### 7 Drain pipe

#### Caution

- Install the drain pipe according to the installation manual in order to drain properly.
- Imperfection in draining may cause flood indoors and wetting the household goods, etc.

  Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.


#### Work procedure

1. Make sure to insert the drain hose (the end mode of soft PVC) to the end of the step part of drain socket.

Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut.


Do not apply adhesives on this end.

Do not use acetone-based adhesives to connect to the drain socket.

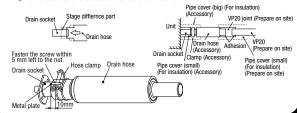


#### 7 Drain pipe (continued)


- 2. Prepare a joint for connecting VP-20 pipe, adhere and connect the joint to the drain hose (the end made of rigid PVC), and adhere and connect VP-20 pipe (prepare on site). As for drain pipe, apply VP-20 made of rigid PVC which is on the market
  - Make sure that the adhesive will not get into the supplied drain hose. It may cause the flexible part broken after the adhesive is dried up and gets rigid.
  - The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and

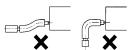

- 3. Make sure to make descending slope of greater than 1/100 and do not make up-down bend
  - Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
  - Do not set up air vent.

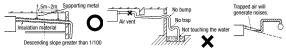


■When sharing a drain pipe for more than one unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP-30 or bigger size for main drain pipe.

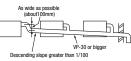

- 4 Insulate the drain nine
- Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
- X After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

#### Drain up


 The position for drain pipe outlet can be raised up to 600mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below

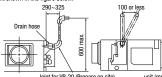


Otherwise, the construction point makes it same as drain pipe construction

- Conduct a drain test after completion of the electrical work
- During the trail, make sure that drain flows properly through the piping and that no water leaks from connections.
- In case of a new building, conduct the test before it is furnished with the ceiling. Be sure to conduct this test even when the unit is installed in the heating season.

- Supply about 1000 cc of water to the unit through the air outlet by using a feed water pump.
- Check the drain while cooling operation.

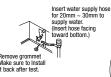


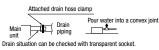

If the electrical work has not been completed, connect a convex joint in the drain pipe connection to provide a water inlet. Then, check if water leaks from the piping system and that drain flows through the drain pipe normally.


#### Outline of bottom drain piping work

 If the bottom drain piping can be done with a descending gradient (1/50-1/100), it is possible to connect the pipes as shown in the drawing below.

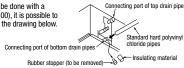

#### Uncoupling the drain motor connector

as illustrated in the drawing on the right.

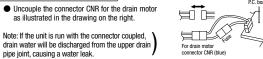

#### 7 Drain pipe (continued)

#### Drain pump operation

Oln case electrical wiring work finished

Drain pump can be operated by remote controller (wired).

For the operation method, refer to Operation for drain pump in the installation manual for wiring work.

Oln case electrical wiring work not finished

Drain pump will run continuously when the dip switch "SW7-1" on the indoor unit PCB is turned ON, the Connector CNB is disconnected, and then the power supply (230VAC on the terminal block ① and ②) is turned ON. Make sure to turn OFF "SW7-1" and reconnect the Connector CNB after the test.


#### **®Wiring-out position and wiring connection**

Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.

Be sure to use an exclusive circuit.

- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in
- order not to apply unexpected stress on the terminal.

  Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring
- Remove a lid of the control box (2 screws). Hold each wiring inside the unit and fasten them to terminal block securely.
- Fix the wiring with clamps
- Install the removed parts back to original place.

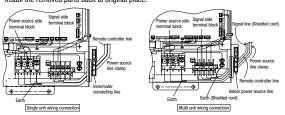

#### 9Check list after installation

Check the following items after all installation work completed.

Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

#### (11) Tap selection on blower unit (when the high peformance filter is used)

Following table shows the maximum external static pressure for models adapted to the fan setting speed (Hi, UH). Select at site the fan setting speed according to the external static pressure

				50/60Hz
Multi type		22~56	71, 90, 140	112
Single type		50	60, 71, 125, 140	100
Fan	Hi	60/60	60/60	60/60
Speed	UH	85/90	85/100	90/100
				Unit:Pa

#### **⚠** CAUTION

- Taps should not be used under external static pressure mentioned above.
- Dew condensation may occur with the unit and wet the ceiling or furniture.

  Do not use under external static pressure of 60Pa or less. Water drops may be blown from the diffuser outlet of the unit and wet the ceiling or furniture.

#### (5) Duct connected-High static pressure type (FDU)

#### (a) Models FDU71 $\sim$ 140

This manual is for the installation of an indoor unit.

For electrical wiring work (Indoor), refer to the electrical wiring work installation manual. For remote controller installation, refer to the installation manual attached to a remote controller. For wireless kit installation, refer to the installation manual attached to a wireless kit. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to the installation manual attached to an outdoor unit

#### **SAFETY PRECAUTIONS**

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself
- AWARNING: Wrong installation would cause serious consequences such as injuries or death. ACAUTION: Wrong installation might cause serious consequences depending on circumstances Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right: Never do it under any circumstances.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit. Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

#### **⚠ WARNING**

#### Installation should be performed by the specialist.

If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn

Install the system correctly according to these installation manuals.

Improper installation may cause explosion, injury, water leakage, electric shock, and fire.

●Check the density refered by the foumula (accordance with ISO5149).

If the density exceeds the limit density, please consult the dealer and installate the ventilation system Use the genuine accessories and the specified parts for installation.

If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.

Ventilate the working area well in case the refrigerant leaks during installation.

If the refrigerant contacts the fire, toxic gas is produced.

Install the unit in a location that can hold heavy weight. Improper installation may cause the unit to fall leading to accidents

lacktriangle Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.

stallation may cause the unit to fall leading to accidents

● Do not mix air in to the cooling cycle on installation or removal of the air conditioner

If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and inju

●Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit. Power source with insufficient capacity and improper work can cause electric shock and fire.

•Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in

order not to apply unexpected stress on the terminal Loose connections or hold could result in abnormal heat generation or fire.

●Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services

Improper fitting may cause abnormal heat and fire.

● Check for refrigerant gas leakage after installation is completed.

If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced.

Ouse the specified pipe, flare nut, and tools for R410A.

Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle

● Tighten the flare nut according to the specified method by with torque wrench. If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period

• Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can

Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also

cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.

Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.

If the compressor is operated when the service valve is open without connecting the pipe, it could cause explor to abnormal high pressure in the system.

• Stop the compressor before removing the pipe after shutting the service valve on pump down work.

If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.

Only use prescribed optional parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.

● Do not repair by yourself. And consult with the dealer about repair. Improper repair may cause water leakage, electric shock or fire

● Consult the dealer or a specialist about removal of the air conditioner

Improper installation may cause water leakage, electric shock or fire

Turn off the power source during servicing or inspection work. If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan

Do not run the unit when the panel or protection guard are taken off.

Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock.

Shut off the power before electrical wiring work.

It could cause electric shock, unit failure and improper running

### PJD012D052 🛦

0

Ø

Ø

0

Ø

Ø

#### 

#### Perform earth wiring surely.

Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.

Earth leakage breaker must be installed.

If the earth leakage breaker is not installed, it can cause electric shocks

Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.

Using the incorrect one could cause the system failure and fire

• Do not use any materials other than a fuse of correct capacity where a fuse should be used. Connecting the circuit by wire or copper wire could cause unit failure and fire.

 Do not install the indoor unit near the location where there is possibility of flammable gas leakages. If the gas leaks and gathers around the unit, it could cause fire

Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substant

ise the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire Secure a space for installation, inspection and maintenance specified in the manual.

sufficient space can result in accident such as personal injury due to falling from the installation place

 Do not use the indoor unit at the place where water splashes such as laundry Indoor unit is not waterproof. It could cause electric shock and fire.

• Do not use the indoor unit for a special purpose such as food storage, cooling for precision ment, preservation of animals, plants, and a work of art. It could cause the damage of the items.

• Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics. Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunica equipment might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming

Do not install the remote controller at the direct sunlight.

#### could cause breakdown or deformation of the remote controlle Do not install the indoor unit at the place listed below

Places where flammable gas could leak.

Places where the substances which affect the air conditioner are generated such as suffice gas, chloride gas, acid, alkali or ammonic atmospheres. Places exposed to oil mist or steam directly.

On vehicles and ships Places where machinery which generates high harmonics is used.

0

0

0

0

Ø

0

ø

0

0

0

0

0

Places where cosmetics or special sprays are

Highly salted area such as beach. Heavy snow area Places where the system is affect

· Altitude over 1000m

 Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)

recording to the installation maintain for each mode reclasse each moor that has each minual Locations with any obstacles which can prevent inlet and outlet air of the unit Locations where whration can be amplified due to insufficient strength of structure. Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam, (in case of the

infrared specification unit)

The continuous unity - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) - Locations where drainage cannot run off safely.

It can affect performance or function and etc..

 Do not put any valuables which will break down by getting wet under the air conditioner. on could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's be

Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use. It could cause the unit falling down and injury.

Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit

If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit. Install the drain pipe to drain the water surely according to the installation manual.

Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings

 Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety.

 Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents

• For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps and not to make air-bleeding.

Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance

• Ensure the insulation on the pipes for refrigeration circuit so as not to condense water. Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables

Do not install the outdoor unit where is likely to be a nest for insects and small animals.

Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean. Pay extra attention, carrying the unit by hand.

rry the unit with 2 people if it is heavier than 20kg, Do not use the plastic straps but the grabbing place, moving the unit hand. Use protective gloves in order to avoid injury by the aluminum fin.

 Make sure to dispose of the packaging material. Leaving the materials may cause injury as metals like nail and woods are used in the package

 Do not operate the system without the air filter. It may cause the breakdown of the system due to clogging of the heat exchanger.

Do not touch any button with wet hands.

 Do not touch the refrigerant piping with bare hands when in operation. The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbi

Do not clean up the air conditioner with water


It could cause electric shock. Do not turn off the power source immediately after stopping the operation.

Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown

Do not control the operation with the circuit breaker.

It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury

OThis model is middle static ducted type air conditioning unit. Therefore, do not use this model for direct blow type air conditioning unit.

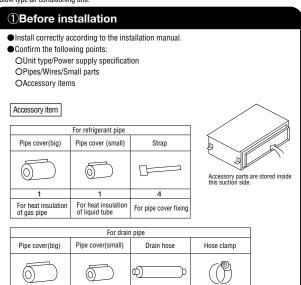

#### 2 Selection of installation location for the indoor unit

For drain pipe

For drain hose

- ① Select the suitable areas to install the unit under approval of the user.
  - Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user
    to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on
    the ceiling.
  - Areas where there is enough space to install and service.

For heat insulation

- Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
- Areas where there is no obstruction of airflow on both air return grille and air supply port.
- Areas where fire alarm will not be accidentally activated by the air conditioner.
- Areas where the supply air does not short-circuit.
- · Areas where it is not influenced by draft air.
- Areas not exposed to direct sunlight.

For heat insulation of drain socket

Areas where dew point is lower than around 28°C and relative humidity is lower than 80%.
 This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above.

If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.

- Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
   Areas where any items which will be damaged by getting wet are not placed such as food,
- table wares, server, or medical equipment under the unit.

  Areas where there is no influence by the heat which cookware generates.
- Areas where mere is no infindence by the heat which cookware generates.
   Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
- Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.


(A beam from lighting device sometimes affects the infrared receiver for the wireless remote controller and the air conditioner might not work properly.)

②Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.

Space for installation and service

Make installation altitude over 2.5m. (Indoor Unit)

#### Installation Space

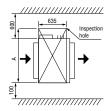

		UNIT: mi
Multi type	71	90, 112, 140
Single type	71	100, 125, 140
A	1200	1720

#### ③Preparation before installation


If suspension bolt becomes longer, do reinforcement of earthquake resistant.
 OFor grid ceiling


When the suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.


O In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.


When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.


Prepare four (4) sets of suspension bolt, nut and spring washer (M10) on site.

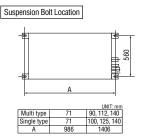

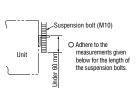

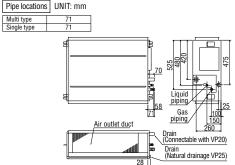

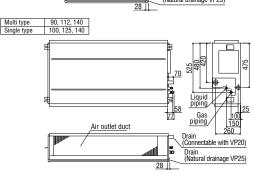

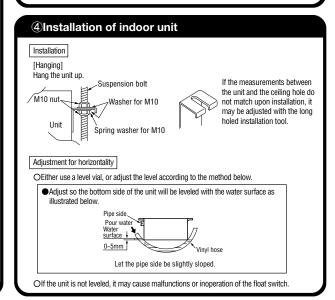

#### **5 Duct Work**

A corrugated board (for preventing sputtering) is attached to the main body of the air conditioner (on the outlet port). Do not remove it until connecting the duct.


① The air conditioner main unit does not have an air filter. Incorporate it into the easy-to-clean suction arille.

#### (2)Blowout duct

- The ducts should be at their minimum lengths.
- Keep the bends to a minimum. (The bending radius should be as large as possible.)


Bad example Good example Bad example

- Conduct the duct work before ceiling attachment.
- (3)Suction duct
- Make sure to insulate the duct to prevent dewing on it
- (4) Location and form of blow outlet should be selected so that air from the outlet will be distributed all over the room, and equipped with a device to control air volume
- Make sure provide an inspection hole on the ceiling. It is indispensable to service electic equipment, motor, functional components and cleaning of heat exchanger.

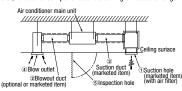

#### Bad example of duct work

- (1) If a duct is not provided at the suction side but it is substituted with the space over the ceiling. humidity in the space will increase by the influence of capacity of ventilation fan, strength of wind blowing against the out door air louver, weather (rainy day) and others.
- a)Moisture in air is likely to condense over the external plates of the unit and to drip on the ceiling. Unit should be operated under the conditions as listed in the above table and within the limitation of wind volume. When the building is a concrete structure, especially immediately after the construction, humidity tends to rise even if the space over the ceiling is not substituted in place of a duct. In such occasion, it is necessary to insulate the entire unit with glass wool (25mm). (Use a wire net or equivalent to hold the glass wool in place.)
- b)It may run out the allowable limit of unit operation (Example: When outdoor air temperature is 35°C DB, suction air temperature is 27°C WB) and it could result in such troubles as compressor overload, etc.
- $\label{eq:continuous} \mbox{c)} There is a possibility that the blow air volume may exceed the allowable range of operation$ due to the capacity of ventilation fan or strength of wind blowing against external air louver so that drainage from be heat exchanger may fall to reach the drain pan but leak outside (Example: drip on to the ceiling) with consequential water leakage in the room.
- 2 If vibration damping is not conducted between the unit and the duct, and between the unit and the slab, vibration will be transmitted to the duct and vibration noise may occur. Also, vibration may be transmitted from the unit to the slab. Vibration damping must be performed.

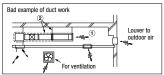


#### **6**Refrigerant pipe

#### Caution

- Use the new refrigerant pipe.
  - When re-using the existing pipe system for R22 or R407C, pay attention to the following items.

    Change the flare nuts with the attached ones (JIS category 2), and reprocess the flare parts.
- Do not use thin-walled pipes.
- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigeration pipe installation. In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than R410A.
- Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.
- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R410 refrigerant.

## Piping work

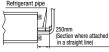

When conducting piping work, make sure to allow the pipes to be aligned in a straight line for at least 250 mm, as shown in the left illustration. (This is necessary for the drain pump to function)


#### **6** Refrigerant pipe (continued)

#### Work procedure

- to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then
  - (Gas may come out at this time, but it is not abnormal.)
- Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
- 2. Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit. \*\*Bend the pipe with as big radius as possible and do not bend the pipe repeatedly. In addition, do not twist and crush the pipes.
  - \*Do a flare connection as follows:
  - Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the coppe pipe, and then remove them.
  - When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table below. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
- Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
  - Make sure to insulate both gas pipes and liquid pipes completely.
     Incomplete insulation may cause dew condensation or water dropping.
- Refrigerant is charged in the outdoor unit.

As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

Pipe diameter	Tightening torque N·m
ф 6.35	14 to 18
ф 9.52	34 to 42
φ 12.7	49 to 61
ф 15.88	68 to 82
<b>д 19.05</b>	100 to 120

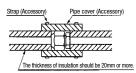

#### 7 Drain pipe


#### Caution


- Install the drain nine according to the installation manual in order to drain properly. Imperfection in draining may cause flood indoors and wetting the household goods, etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may
- cause corrosion of heat exchanger and bad smell.

  Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.

#### Work procedure


- 1. Make sure to insert the drain hose (the end mode of soft PVC) to the end of the step part of drain socket.
  - Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut.
  - Do not apply adhesives on this end.
  - Do not use acetone-based adhesives to connect to the drain socket.

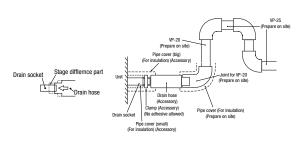

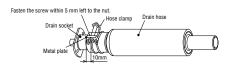


#### 7 Drain pipe (continued)


- Prepare a joint for connecting VP-20 pipe, adhere and connect the joint to the drain hose (the end made of rigid PVC), and adhere and connect VP-20 pipe (prepare on site). \*As for drain pipe, apply VP-20 made of rigid PVC which is on the market.
  - When installing drain pipe, use VP-20 for the pipe goes up the closest to the unit, and VP-25 or higher number product for farther pipes.
  - Make sure that the adhesive will not get into the supplied drain hose. It may cause the flexible part broken after the adhesive is dried up and gets rigid.
  - The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and water leakage.

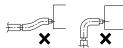

- 3. Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway.
  - Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
  - Do not set up air vent.

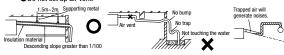

 When sharing a drain pipe for more than one unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP-30 or bigger size for main drain pipe.

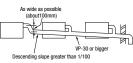


- 4. Insulate the drain pipe.
- Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage

\* After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless

#### Drain up

 The position for drain pipe outlet can be raised up to 600mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.

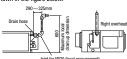



Otherwise, the construction point makes it same as drain pipe construction.

#### Drain test

- Conduct a drain test after completion of the electrical work.
- During the trail, make sure that drain flows properly through the piping and that no water leaks from connections.
- In case of a new building, conduct the test before it is furnished with the ceiling.
- Be sure to conduct this test even when the unit is installed in the heating season.

- Supply about 1000  $\rm cc$  of water to the unit through the air outlet by using a feed water pump. Check the drain while cooling operation.

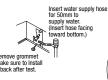


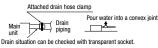

If the electrical work has not been completed, connect a convex joint in the drain pipe connection to provide a water inlet. Then, check if water leaks from the piping system and that drain flows through the drain pipe normally.


#### Outline of bottom drain piping work


If the bottom drain piping can be done with a descending gradient (1/50-1/100), it is possible to connect the pipes as shown in the drawing below.

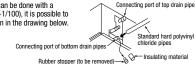

#### Uncoupling the drain motor connector

 Uncouple the connector CNR for the drain motor as illustrated in the drawing on the right.

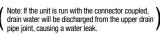

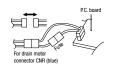

#### 7 Drain pipe (continued)

#### Drain pump operation

Oln case electrical wiring work finished

Drain pump can be operated by remote controller (wired)


For the operation method, refer to Operation for drain pump in the installation manual for wiring

Oln case electrical wiring work not finished

Drain pump will run continuously when the dip switch "SW7-1" on the indoor unit PCB is turned ON, the Connector CNB is disconnected, and then the power supply (230VAC on the terminal block 1 and 2) is turned ON. Make sure to turn OFF "SW7-1" and reconnect the Connector CNB after the test.

#### **8Wiring-out position and wiring connection**

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.
- Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring
- Remove a lid of the control box (2 screws). Hold each wiring inside the unit and fasten them to terminal block securely. Fix the wiring with clamps. Install the removed parts back to original place.

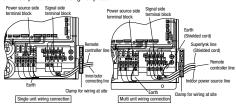

#### 9Check list after installation

Check the following items after all installation work completed.

Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

#### (11) Tap selection on blower unit (when the high peformance filter is used)

The fan tap's factory setting is "Standard." If you want to change it to the high static-pressure setting, you can avail yourself of the following two methods. Use one of the two methods to set the fan tap. Make sure to perform the functional setting with remote controller

Select [I/U FUNCTION] in the functional setting mode, and change the function number [02] [FAN SPEED SET].

For operation method, refer to the user's manual of the remote controller.

Function r	number A	Functional content B		Setting content C		Default setting	
02		Fan Speed Set			Standard	0	
Uz	<u>-</u>	ran speed set		High Speed 1			
		UNIT:	Pa				
Static		ard Tap	60				
Pressure	High Spe	ed 1 Tap	130				

#### - **⚠** CAUTION

If the external static pressure is 60Pa or less, do not set the fan speed to High speed 1. If High speed 1 setting is done, air outlet speed from indoor unit will increase and waterdrop may be blown out and wet the ceiling or the furniture.

PJD012D053

#### (b) Models FDU200, 250

This manual is for the installation of an indoor unit.

For electrical wiring work (Indoor), refer to the electrical wiring work installation manual. For remote controller installation, refer to the installation manual attached to a remote controller. For wireless kit installation, refer to the installation manual attached to a wireless kit. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to the installation manual attached to an outdoor unit.

#### **SAFETY PRECAUTIONS**

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself
- AWARNING: Wrong installation would cause serious consequences such as injuries or death. ACAUTION: Wrong installation might cause serious consequences depending on circumstances Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
- customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter
- cleaning, operation method and temperature setting method) with user's manual of this unit. Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

#### **↑** WARNING

#### Installation should be performed by the specialist.

If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn

Install the system correctly according to these installation manuals

#### Improper installation may cause explosion, injury, water leakage, electric shock, and fire

Check the density refered by the foundula (accordance with ISO5149). If the density exceeds the limit density, please consult the dealer and installate the ventilation syst

0

#### Use the genuine accessories and the specified parts for installation.

If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overtum of the uni

Ventilate the working area well in case the refrigerant leaks during installation. If the refrigerant contacts the fire, toxic gas is produced.

Ø 0

#### Install the unit in a location that can hold heavy weight.

Improper installation may cause the unit to fall leading to accident

• Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes Improper installation may cause the unit to fall leading to accidents



### Do not mix air in to the cooling cycle on installation or removal of the air conditioner.

If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.



Power source with insufficient capacity and improper work can cause electric shock and fire

• Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in



Loose connections or hold could result in abnormal heat generation or fire. • Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services



Check for refrigerant gas leakage after installation is completed.

order not to apply unexpected stress on the terminal.

Improper fitting may cause abnormal heat and fire

If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced



• Use the specified pipe, flare nut, and tools for R410A.

Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle Tighten the flare nut according to the specified method by with torque wrench.



If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period

● Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can



Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.

• Connect the pipes for refrigeration circuit securely in installation work before compressor is operated. If the compressor is operated when the service valve is open without connecting the pipe, it could cause explos

• Stop the compressor before removing the pipe after shutting the service valve on pump down work.

0 If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle. • Only use prescribed optional parts. The installation must be carried out by the qualified installer.

If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. Do not repair by yourself. And consult with the dealer about repair.

mproper repair may cause water leakage, electric shock or fire

Consult the dealer or a specialist about removal of the air conditioner. Improper installation may cause water leakage, electric shock or fire.

Turn off the power source during servicing or inspection work.

If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan

● Do not run the unit when the panel or protection guard are taken off.

Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get

Shut off the power before electrical wiring work.

It could cause electric shock, unit failure and improper running.

#### **⚠ CAUTION**

Perform earth wiring surely.

Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could use unit failure and electric shock due to a short circuit

Earth leakage breaker must be installed.

If the earth leakage breaker is not installed, it can cause electric shocks.

Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all noles under over current. sing the incorrect one could cause the system failure and fire



**a** 

Do not use any materials other than a fuse of correct capacity where a fuse should be used. Connecting the circuit by wire or copper wire could cause unit failure and fire


 Do not install the indoor unit near the location where there is possibility of flammable gas leakages If the gas leaks and gathers around the unit, it could cause fire.

 Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled. t could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.

Secure a space for installation, inspection and maintenance specified in the manu



 Do not use the indoor unit at the place where water splashes such as laundry. ndoor unit is not waterproof. It could cause electric shock and fire Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art.

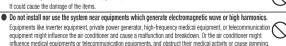

 Do not install the remote controller at the direct sunlight. It could cause breakdown or deformation of the remote controller

Do not install the indoor unit at the place listed below.

Places where flammable gas could leak.

Places where carbon fiber, metal powder or any powder is floated.

Place where the substances which affect the air conditioner are generated

such as sulfide gas, chloride gas, acid, alkali or ammonic atmospheres.

Places exposed to oil mist or steam directly.

Places where cosmetics or special sprays are

frequently used.
Highly salted area such as beach.
Heavy snow area Places where the system is affected by

smoke from a chimney. Altitude over 1000m

On vehicles and ships
Places where machinery which generates high harmonics is used

Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)
 Locations with any obstacles which can prevent inlet and outlet air of the unit

Locations where vibration can be amplified due to insufficient strength of structure

Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit)

so speciments and the second s

It can affect performance or function and etc Do not put any valuables which will break down by getting wet under the air conditioner.

uld drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's b Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use. It could cause the unit falling down and injury.

Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit

 Install the drain pipe to drain the water surely according to the installation manual nproper connection of the drain pipe may cause dropping water into room and damaging user's belongi

 Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit. Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to iser's health and safety.

 Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.

• For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps. and not to make air-bleeding

Check if the drainage is correctly done during commissioning and ensure the space for inspection and maint Ensure the insulation on the pipes for refrigeration circuit so as not to condense water.

ncomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuable

Do not install the outdoor unit where is likely to be a nest for insects and small animals Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean

Pay extra attention, carrying the unit by hand. Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin.

 Make sure to dispose of the packaging material. Leaving the materials may cause injury as metals like nail and woods are used in the package Do not operate the system without the air filter.

It may cause the breakdown of the system due to clogging of the heat exchange Do not touch any button with wet hands.


It could cause electric shock Do not touch the refrigerant piping with bare hands when in operation.

The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frost Do not clean up the air conditioner with water

Do not turn off the power source immediately after stopping the operation. Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown

Do not control the operation with the circuit breaker. It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury

OThis model is high static ducted type air conditioning unit. Therefore, do not use this model for direct blow type air conditioning unit.

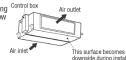


#### **1**Before installation

- Install correctly according to the installation manual.
- Confirm the following points:

OUnit type/Power supply specification OPipes/Wires/Small parts OAccessory items

> Accessory item

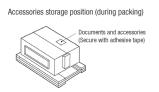

#### 2)Selection of installation location for the indoor unit

- 1) Select the suitable areas to install the unit under approval of the user
- · Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
- Areas where there is enough space to install and service.
- Areas where it can be drained properly. Areas where drain pipe descending slope can be
- Areas where there is no obstruction of airflow on both air return grille and air supply port.
- Areas where fire alarm will not be accidentally activated by the air conditioner.
   Areas where the supply air does not short-circuit.
- Areas where it is not influenced by draft air.
  Areas not exposed to direct sunlight.
- Areas where dew point is lower than around 28°C and relative humidity is lower than 80%. This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humid-ity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned

If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.

Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)

- Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
   Areas where there is no influence by the heat which cookware generates.
- Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
   Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation


(A beam from lighting device sometimes affects the infrared receiver for the wireless remote controller and the air conditioner might not work properly.)

②Check if the place where the air conditioner in sufficient work properly.)
②Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.

#### Space for installation and service


250 280 68 51 87

Make installation altitude over 2.5m

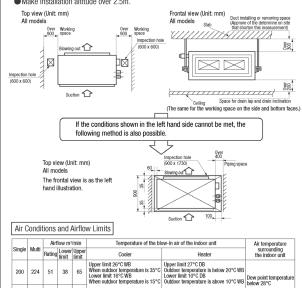

#### 3 Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant. OFor grid ceiling
- When the suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.
- Oln case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.
- When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt. Prepare four (4) sets of suspension bolt, nut and spring washer (M10) on site

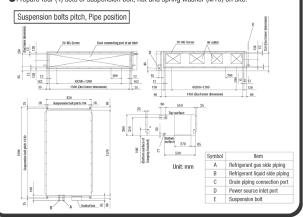


#### (4)Installation of indoor unit

#### Installation

#### [Hanging]

OHang the unit up.

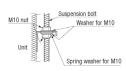


Olf the measurements between the unit and the ceiling hole do not match upon installation. it may be adjusted with the long holed installation tool.




[Method for Fixing the Suspension Bolt]

OSecure the suspension bolt with one of the methods shown in the following illustration.

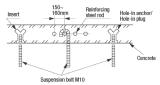

#### Horizontal Adjustment


OUse a level vial or adjust the level as shown in the following illustration.

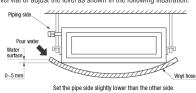


Olf it is not horizontal, the float switch malfunctions or does not function.

#### (Packing Tools)

The packing tools (4) are not necessary. Packing tools (4) should be removed.

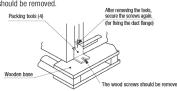


#### **5**Duck work

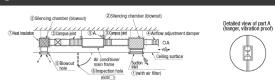

- ①Air filters are not provided with the main frame of the air conditioner. Assemble on to the suction grill which can be cleaned easily.
- ②Fit the silencing chamber according to the noise level tolerance inside the installation room. If it is particularly necessary to keep the noise level low, further silencing devices is required (always install them in offices, and conference rooms)
- 3In order to keep the vibration from transferring to the ceiling and the slab, use a campus joint for the duct and a vibration proof rubber for the main frame
- (4) Attach an airflow adjustment damper to the connection point of the OA duct so airflow adjustment may be possible after installation
- ⑤For the blowing outlet, select a shape and location where air may circulate, and a structure where airflow may be controlled.
- (6)An inspection hole must be made in the ceiling surface. This is necessary for the repair and maintenance of the electrical parts, motor and functional parts, as well as for cleaning the heat
- (7)Insulation must be performed for the duct to prevent water condensation on the duct. The thickness of the insulating material is 65 mm (JISA 9501).


#### A bad example of duct work

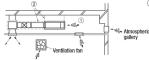

- 1) If the suction duct is not used, and the attic is used as a suction duct, the attic will become extremely humid depending on the performance of the ventilation fan, the strength of wind blowing to the atmospheric gallery and the climate (e.g., rainy days).
- a. Condensation occurs on the outer board of the unit and water may fall on the ceiling. Use the unit according to the air conditions in the above table and airflow limits. In concrete constructions, high humidity can occur in new constructions even when the attic is not used as a suction duct. In this case, insulate the entire unit with glass wool (25 mm) (use a metal net to hold the wool).
- b. Operation of the unit may exceed its limits (for example, when the temperature of the suction air is 24 °C with the outdoor temperature of 35 °C DB). In such a cases, problems such as an overload
- c. The volume of the air blowing in may increase due to the performance of the ventilation fan and the wind strength blowing against the atmospheric gallery. The air usage limit may be exceeded, and the water from the heat exchanger will not be able to drain to the drain pan. Instead it will drain outside and cause a water leak (to the ceiling).
- ②If vibration damping is not conducted between the unit and the duct, and between the unit and the slab, vibration will be transmitted to the duct and vibration noise may occur. Also, vibration may be transmitted from the unit to the slab. Vibration damping must be performed.

#### Simple setting method for duct measurement

The following shows the method when duct is used at one side of 250mm as 1Pa/m by frictional resistance per the unit length of the duct, and in case of 250 type (single unit)/280 type (multi unit). 60Hz rating airflow for a example.

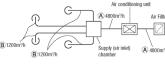

	Airflow	Duct (mm x mm)	
A	4800m³/h (80m³/min)	250 x 950	
B	1200m³/h (20m³/min)	250 x 310	

#### OCalculation of duct resistance (Simplified calculate as following table)

Straight piping port	Calculate at 1Pa per 1m length to 1Pa/m
Bending port	Calculate at 3 to 4 m straight pipe per 1 piece of binding pipe
Air outlet port	Calculate at 25Pa
Chamber	Calculate at 50Pa per 1 piece
Air inlet grille (with filter)	Calculate at 40Pa per 1 piece

1Pa/m Quadrangle duct lten Dimensions Airflow m³/h (m³/min) 100 250× 60 200 250× 90 250× 250× 120 140 450 (7.5) 250× 160 500 250× 170 250× 250× 250× 250× 190 230 270 600 (10) 800 1,000 1.200 (20) (B) 250× 310 1.400 250× 350 1,600 1,800 (30) 250× 390 250× 430 250× 470 2,000 2.400 (40) 250× 560 3,000 (50) 3,500 250× 650 250× 740 4,000 250× 830 4.500 250× 920 4.800 (80) 250× 950 250×1000 250×1090 5,500 6.000 (100) 250×1180

[Simplified duct dimension

selection table

#### **6**Refrigerant pipe

#### Caution

- ●Use the new refrigerant pipe.
- When re-using the existing pipe system for R22 or R407C, pay attention to the following items · Change the flare nuts with the attached ones (JIS category 2), and reprocess the flare parts.
- Do not use thin-walled pipes.
- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigeration pipe installation.
   In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes
- Do not use any refrigerant other than R410A. Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into
- refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.

  Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R410 refrigerant.
- The indoor unit pipes allow the maintenance panel to be removed. Therefore, regardless of the piping direction, there should be a straight section of 400 mm or more.

#### Work procedure

- 1. When brazing work, perform it while cool down around the brazing port with wet towels to prevent the overheating
- 2. After check the gas leak test, install the heat insulation (prepare on site) to the brazing port of the indoor unit.
  - Be sure to perform the heat insulation both of gas side piping with liquid side piping. If heat insulation does not install to the pipes, dew condensation may occurs and it may cause the water leakage.

The thickness of the heat insulation should be more than 20mm.

3. Refrigerant is charged in the outdoor unit.

As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

Single unit			Multi unit			
T 000	Liquid piping	φ 9.52	Type 224	Liquid piping	ф 9.52	Flaring
Type 200	Gas piping	ф 25.4	Type 224	Gas piping	ф 19.05	Flaring
T 050	Liquid piping	ф 12.7	Type 280	Liquid piping	ф 9.52	Flaring
Type 250	Gas piping	ф 25.4	Type 280	Gas piping	ф 22.22	Flaring


#### 7 Drain pipe

#### Caution


- Install the drain pipe according to the installation manual in order to drain properly. Imperfection in draining may cause flood indoors and wetting the household goods, etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain nine after installation
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance

#### Work procedure

- 1. Insert the supplied drain hose (the end made of soft PVC) to the step of the drain socket on the indoor unit and fix it securely with the clamp.
  - Do not apply adhesives on this end.

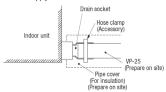


- 2. Prepare a joint for connecting VP-25 pipe, adhere and connect the joint to the drain hose (the end made of rigid PVC), and adhere and connect VP-25 pipe (prepare on site). As for drain pipe, apply VP-25 made of rigid PVC which is on the market.
   Make sure that the adhesive will not get into the supplied drain hose
  - It may cause the flexible part broken after the adhesive is dried up and gets rigid
  - The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and water leakage.

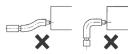


#### 7 Drain pipe (continued)

- $3. \ \ \text{Make sure to make descending slope of greater than 1/100 and do not make up-down bend}$ and/or trap in the midway.

  Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the
  - pipe as close place to the unit as possible when connecting the drain pipe.
  - Do not set up air vent.

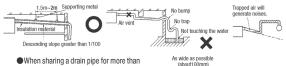


one unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP-30 or bigger size for main drain pipe.

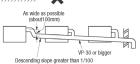

- 4. Insulate the drain pipe.
- Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage
  - X After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

#### Caution

When the duct is connected and the blowing device is operated, the pressure inside the unit becomes negative to the atmospheric pressure.

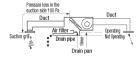

Example: As shown in the above illustration, if the pressure loss of the suction grill, air filter, and the suction side of the duct is 100 Pa, the drain water level during operation is  $\frac{1}{2}$ 10mm higher than when it is not operating.

#### Fixing Traps

The pressure loss varies depending on the clogging in the air filter. Therefore, make one trap (during the piping work) to prevent water from remaining in the drain pan. It is necessary to make a trap with a structure that allows cleaning. Use the T joint as demonstrated in the left illustration. Also, set the trap height as shown in the left illustration. Arrange the trap near to the unit.



■Make one trap along the drain pipe as the left illustration.

H1 = 100 mm or the static pressure of the blowing device H2 = 1/2 H1 or 50  $\sim$  100 mm

#### Drain test

Upon completion of drain piping, check by running water through it.


ORemove the side panel and gradually pour 1000 cc of water into the drain pan. Ensure that the water drains smoothly.

Also, ensure that there are no water leaks from the connections and joints.



#### **®Wiring-out position and wiring connection**

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.
  - Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work
- For the details of electrical wiring work, see attached instruction manual for electrical wiring
- Remove a lid of the control box (2 screws) and a hook which is located on top of it.
- 2. Hold each wiring inside the unit and fasten them to terminal block securely.
- 3. Fix the wiring with clamps.
- 4. Install the removed parts back to original place.

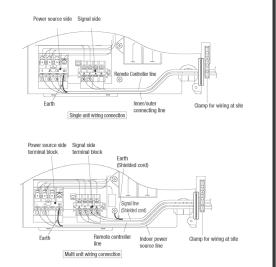

#### **9Check list after installation**

Check the following items after all installation work completed.

Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

### PJA012D729A

#### 1.10.2 Instullation of wired remote controller

Read together with indoor unit's installation manual.

#### **<b>∴WARNING**

Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.

Loose connection or hold will cause abnormal heat generation or fire.

Make sure the power supply is turned off when electric wiring work. Otherwise, electric shock, malfunction and improper running may occur.



#### **ACAUTION**

- DO NOT install the remote controller at the following places in order to avoid malfunction.
  - (1) Places exposed to direct sunlight
- (4) Hot surface or cold surface enough to generate condensation
- (2) Places near heat devices
- (5) Places exposed to oil mist or steam directly
- (3) High humidity places
- (6) Uneven surface



DO NOT leave the remote controller without the upper case.


In case the upper cace needs to be detached, protect the remote controller with a packaging box or bag in order to keep it away from water and dust.



Accessories	Remote controller, wood screw (ø3.5×16) 2 pieces		
Prepare on site	Remote controller cord (2 cores) the insulated thickness in 1mm or more.		
	[In case of embedding cord] Erectrical box, M4 screw (2 pieces)		
	[In case of exposing cord] Cord clamp (if needed)		

#### Installation procedure


- Open the cover of remote controller, and remove the screw under the buttons without fail.
- Remove the upper case of remote controller. Insert a flat-blade screwdriver into the dented part of the upper part of the remote controller, and wrench slightly.

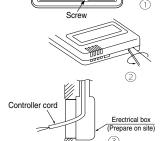


#### [In case of embedding cord]

3 Embed the erectrical box and remote controller cord beforehand.

Prepare two M4 screws (recommended length is 12-16mm) on site, and install the lower case to erectrical box. Choose either of the following two positions in fixing it with screws.

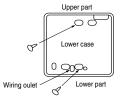


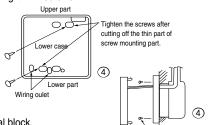

- Connect the remote controller cord to the terminal block. Connect the terminal of remote controller (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)
- Install the upper case as before so as not to catch up the remote controller cord, and tighten with the screws.

#### [In case of exposing cord]

- You can pull out the remote controller cord from left upper part or center upper part. Cut off the upper thin part of remote controller lower case with a nipper or knife, and grind burrs with a file etc.
- ④ Install the lower case to the flat wall with attached two wooden screws.

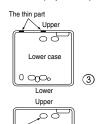


M4 screw × 2 (Prepare on site)

S Connect the remote controller cord to the terminal block.

Connect the terminal of remote controller (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)

Wiring route is as shown in the right diagram depending on the pulling out direction.

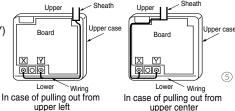

The wiring inside the remote controller case should be within 0.3mm² (recommended) to 0.5mm². The sheath should be peeled off inside the remote controller case.

The peeling-off length of each wire is as below.

Pulling out from upper left	Pulling out from upper center
X wiring : 215mm	X wiring : 170mm
Y wiring : 195mm	Y wiring : 190mm



- Install the upper case as before so as not to catch up the remote controller cord, and tighten with the screws.
- In case of exposing cord, fix the cord on the wall with cord clamp so as not to slack.

#### Installation and wiring of remote controller


- ① Wiring of remote controller should use  $0.3 \text{mm}^2 \times 2$  core wires or cables. (on-site configuration)
- ② Maximum prolongation of remote controller wiring is 600 m.

If the prolongation is over 100m, change to the size below.

But, wiring in the remote controller case should be under 0.5mm<sup>2</sup>. Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

#### Master/ slave setting when more than one remote controllers are used

A maximum of two remote controllers can be connected to one indoor unit (or one group of indoor units.)

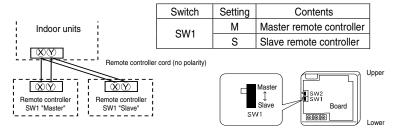

Set SW1 to "Slave" for the slave remote controller. It was factory set to "Master" for shipment.

Note: The setting "Remote controller thermistor enabled" is only selectable with the master remote controller in the position where you want to check room temperature.

The air conditioner operation follows the last operation of the remote controller regardless of the master/ slave setting of it.

#### The indication when power source is supplied

When power source is turned on, the following is displayed on the remote controller until the communication between the remote controller and indoor unit settled.

Master remote controller : "@WAIT@ M"
Slave remote controller : "@WAIT@ S"

At the same time, a mark or a number will be displayed for two seconds first.

This is the software's administration number of the remote controller, not an error cord.



When remote controller cannot communicate with the indoor unit for half an hour, the below indication will appear

Check wiring of the indoor unit and the outdoor unit etc.



#### The range of temperature setting

When shipped, the range of set temperature differs depending on the operation mode as below.

Heating: 16~30°C (55~86°F)

Except heating (cooling, fan, dry, automatic) : 18~30°C (62~86°F)

#### ●Upper limit and lower limit of set temperature can be changed with remote controller.

Upper limit setting: valid during heating operation. Possible to set in the range of 20 to 30°C (68 to 86°F). Lower limit setting: valid except heating (automatic, cooling, fan, dry) Possible to set in the range of 18 to 26°C (62 to 70°F).

When you set upper and lower limit by this function, control as below.

1. When ②TEMP RANGE SET, remote controller function of function setting mode is "INDN CHANGE" (factory setting), [ If upper limit value is set ]

During heating, you cannot set the value exceeding the upper limit.

[ If lower limit value is set ]

During operation mode except heating, you cannot set the value below the lower limit.

2. When ② TEMP RANGE SET, remote controller function of function setting mode is "NO INDN CHANGE" [If upper limit value is set ]

During heating, even if the value exceeding the upper limit is set, upper limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.

[ If lower limit value is set ]

During except heating, even if the value lower than the lower limit is set, lower limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.


#### ●How to set upper and lower limit value

1. Stop the air-conditioner, and press (SET) and (MODE) button at the same time for over three seconds .


The indication changes to "FUNCTION SET ▼".

- 2. Press ▼ button once, and change to the "TEMP RANGE ▲ " indication.
- 3. Press (SET) button, and enter the temperature range setting mode.
- 4. Select "UPPER LIMIT ▼" or "LOWER LIMIT ▲" by using ▲ ▼ button.
- 5. Press (SET) button to fix.
- 6. When "UPPER LIMIT ▼" is selected (valid during heating)
  - ① Indication: "  $\bigcirc \lor \land SETUP" \rightarrow "UPPER 30°C \lor"$

  - ③ Press (SET) button to fix. Indication example: "UPPER 26°C" (Displayed for two seconds) After the fixed upper limit value displayed for two seconds, the indication will return to "UPPER LIMIT ▼".
- 7. When "LOWER LIMIT ▲" is selected (valid during cooling, dry, fan, automatic)
  - ① Indication: " $\textcircled{b} \lor \land \mathsf{SET} \mathsf{UP}" \to "\mathsf{LOWER} \mathsf{18}^\circ\mathsf{C} \land "$
  - ② Select the lower limit value with temperature setting button ☑ △. Indication example: "LOWER 24°C ∨ ∧" (blinking)
  - ③ Press ◯ (SET) button to fix. Indication for example: "LOWER 24°C" (Displayed for two seconds) After the fixed lower limit value displayed for two seconds, the indication will return to "LOWER LIMIT" ".
- 8. Press ON/OFF button to finish.

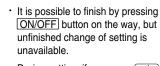

 During setting, if you press (RESET) button, you return to the previous screen.

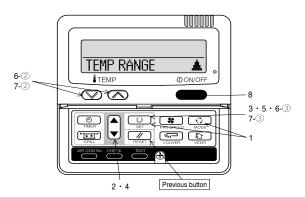

#### The functional setting

Refer to page 240

# How to set function Stop air-conditioner and press (SET) (MODE) buttons at the same time for over three seconds, and the "FUNCTION SET ▼" will be displayed.


**FUNCTION SET** 

- 2. Press (SET) button.
- Make sure which do you want to set, "

  FUNCTION ▼"

  (remote controller function) or "I/U FUNCTION ▲" (indoor unit function).

₹

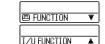


5. Press O (SET) button.


#### 6. [On the occasion of remote controller function selection]

DATA LOADING" (Indication with blinking)
 Display is changed to "01 GRILLE ↑↓SET".

② Press ▲ or ▼ button. "No. and function\*are indicated by turns on the remote controller function table, then you can select from them. (For example)

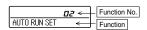

③ Press ○ (SET) button. The current setting of selected function is indicated. (for example) "AUTO RUN ON" ← If "02 AUTO RUN SET" is

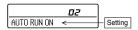

④ Press ▲ or ▼ button. Select the setting.




⑤ Press 〇 (SET)

"SET COMPLETE" will be indicated, and the setting will be completed.

Then after "No. and function" indication returns, Set as the same procedure if you want to set continuously ,and if to finish, go to 7.



Press ON/OFF button. Setting is finished.

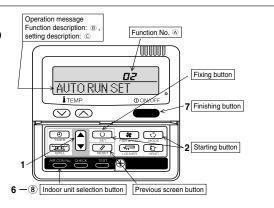

#### [On the occasion of indoor unit function selection]

① "DATA LOADING" (Blinking for 2 to 23 seconds to read the data) Indication is changed to "02 FAN SPEED SET". Go to ②.

#### [Note]


 If plural indoor units are connected to a remote controller, the indication is "I/U 000" (blinking) ← The lowest number of the indoor unit connected is indicated.




- (2) Press or button. Select the number of the indoor unit you are to set If you select "ALL UNIT ▼", you can set the same setting with all unites
- (3) Press (SET) button.
- ② Press ▲ or ▼ button.

"No. and function" are indicated by turns on the indoor unit function table, then you can select from them.

(For example)

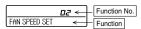

③ Press ○ (SET) button. The current setting of selected function is indicated. (For example) "STANDARD" ← If "02 FAN SPEED SET" is selected.

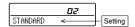

- Press or button. Select the setting.
- S Press (SET) button. "SET COMPLETE" will be indicated, and the setting will be completed.

Then after "No. and function" indication returns, set as the same procedure if you want to set continuously , and if to finish, go to 7.



※ When plural indoor units are connected to a remote controller, press the AIRCON NO.] button, which allows you to go back to the indoor unit selection screen. (example "I/U 000 ▲")

- It is possible to finish by pressing ON/OFF button on the way, but unfinished change of setting is unavailable.
- During setting, if you press (RESET) button, you return to the previous screen.
- Setting is memorized in the controller and it is saved independently of power failure.

#### [ How to check the current setting ]

When you select from "No. and funcion" and press set button by the previous operation, the "Setting" displayed first is the current setting.

(But, if you select "ALL UNIT ▼ ", the setting of the lowest number indoor unit is displayed.)

#### 1.10.3 Installation of outdoor unit

(1) Models SRC40  $\sim$  60ZIX-S

RWC012A029B

Model 40:50:60 R410A REFRIGERANT USED

- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to the respective installation manuals supplied with the units.
- . When install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between indoor and outdoor units, power supply voltage and etc.) and installation spaces.

#### **SAFETY PRECAUTIONS**

- We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into **WARNING** and **CAUTION**. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the WARNING and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in **CAUTION**. These are very important precautions for safety. Be sure to observe all of them without fail.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user.
- For installing qualified personnel, take precautions in respect to themselves by using suitable protective clothing, groves, etc., and then perform the installation works.
- Please pay attention not to fall down the tools, etc. when installing the unit at the high position.
- If unusual noise can be heard during operation, consult the dealer.
- . Symbols which appear frequently in the text have the following meaning



Observe instructions Strictly prohibited



Provide proper earthing

#### 



#### • Installation must be carried out by the qualified installer.

- If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction
- Install the system in full accordance with the instruction manual.

Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire

- Be sure to use only for household and residence. If this appliance is installed in inferior environment such as machine shop and etc., it can cause malfunction.
- Use the original accessories and the specified components for installation.

If parts other than those prescribed by us are used, It may cause water leaks, electric shocks, fire and personal injury.

- Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
- · Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury
- Ventilate the working area well in the event of refrigerant leakage during installation.

If the refrigerant comes into contact with naked flames, poisonous gas is produced.

 Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.

- Tighten the flare nut by torque wrench with specified method. If the flare nut were tightened with excess torque, this may cause burst and refrigerant leakage after a long period
- . Do not open the operation valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation.

If the compressor is operated in state of opening operation valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause bust or personal injury due to anomalously high pressure in the refrigerant

. The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit.

Power supply with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.

- Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment
- . Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat
- production or fire • This appliance must be connected to main power supply by means of a circuit breaker or switch (fuse:16A) with a contact

separation of at least 3mm.

- . Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. Loose connections or cable mountings can cause anomalous heat
- Arrange the wiring in the control box so that it cannot be
- pushed up further into the box. Install the service panel
- Incorrect installation may result in overheating and fire. Be sure to fix up the service panels.
- Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.
- · Be sure to switch off the power supply in the event of installation, inspection or servicing.

If the power supply is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.

 Stop the compressor before disconnecting refrigerant pipes in case of pump down operation.

If disconnecting refrigerant pipes in state of opening operation valves before compressor stopping, air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit.

. Only use prescribed optional parts. The installation must be carried out by the qualified installer.

If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.



 Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.

If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.

Do not processing, splice the power cord, or share a socket with other power plugs.

This may cause fire or electric shock due to defecting contact. defecting insulation and over-current etc.

- Do not bundling, winding or processing for the power cord. Or. do not deforming the power plug due to tread it. This may cause fire or heating.
- Do not run the unit with removed panels or protections. Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.
- Do not perform any change of protective device itself or its

The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.

# '10 • PAC-DB-142

#### **⚠** CAUTION



. Use the circuit breaker with sufficient breaking capacity.

If the breaker does not have sufficient breaking capacity, it can cause the unit malfunction and fire.

- Earth leakage breaker must be installed.
- If the earth leakage breaker is not installed, it can cause electric shocks.
- Install isolator or disconnect switch on the power supply wiring in accordance with the local codes and regulations.
- After maintenance, all wiring, wiring ties and the like, should be returned to their original state and wiring route, and the necessary clearance from all metal parts should be secured.
- Secure a space for installation, inspection and maintenance specified in the manual.

insufficient space can result in accident such as personal injury due to falling from the installation place.

• Take care when carrying the unit by hand.

If the unit weights more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.

- . Dispose of any packing materials correctly.
- Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.
- Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them.

Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables

• When perform the air conditioner operation (cooling or drying operation) in which ventilator is installed in the room. In this case, using the air conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the air into the room that may appropriate to ventilation (For example; Open the door a little). In addition, just as above, so set up the opening port if the room lapse into negative pressure status due to register of the wind for the high rise apartment etc.



Do not install the unit in the locations listed below.

- Locations where carbon fiber, metal powder or any powder is floating.
   Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur.
- Vehicles and ships.
- Locations where cosmetic or special sprays are often used.
- Locations with direct exposure of oil mist and steam such as kitchen and machine plant.
- Locations where any machines which generate high frequency harmonics are used.
- · Locations with salty atmospheres such as coastlines.
- Locations with heavy snow (If installed, be sure to provide base flame and snow hood mentioned in the manual).
- · Locations where the unit is exposed to chimney smoke.
- Locations at high altitude (more than 1000m high).
- · Locations with ammonic atmospheres.
- Locations where heat radiation from other heat source can affect the unit.
- · Locations without good air circulation.
- Locations with any obstacles which can prevent inlet and outlet air
  of the unit
- Locations where short circuit of air can occur (in case of multiple units installation).
- Locations where strong air blows against the air outlet of outdoor unit

It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.

- Do not install the outdoor unit in the locations listed below.
- Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood.
- Locations where outlet air of the outdoor unit blows directly to plants.
- Locations where vibration can be amplified and transmitted due to insufficient strength of structure.
- Locations where vibration and operation sound generated by the outdoor unit can affect seriously (on the wall or at the place near bed room).
- Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 5m).
- · Locations where drainage cannot run off safely.
- It can affect surrounding environment and cause a claim.
- Do not install the unit near the location where leakage of combustible gases can occur.

If leaked gases accumulate around the unit, it can cause fire.

 Do not install the unit where corrosive gas (such as sulfurous acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled.

Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire.

 Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics. Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.

Do not install the outdoor unit in a location where insects and small animals can inhabit.

Insects and small animals can enter the electric parts and cause.

damage or fire. Instruct the user to keep the surroundings clean.

• Do not use the base flame for outdoor unit which is corroded or damaged due to long periods of operation.

Using an old and damage base flame can cause the unit falling down

- and cause personal injury.

   Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used.

  Connecting the circuit with copper wire or other metal thread can
- cause unit failure and fire.

   Do not touch any buttons with wet hands.
- It can cause electric shocks.

   Do not touch any refrigerant pipes with your hands when the system is in operation.

During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.

- Do not touch the suction or aluminum fin on the outdoor unit. This may cause injury.
- Do not put anything on the outdoor unit and operating unit.
   This may cause damage the objects or injury due to falling to the object.

#### (Check before installation work)

- Model name and power source
- · Refrigerant piping length
- · Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

,	Accessories for outdoor unit					
1	Grommet (Heat pump type only)	4				
2	Drain elbow (Heat pump type only)	1				

	Option parts					
<b>a</b>	Sealing plate	1				
6	Sleeve	1				
0	Inclination plate	1				
0	Putty	1				
(	Drain hose (extension hose)	1				
A	Piping cover	-1				
$^{\odot}$	(for insulation of connection piping)	'				

	Necessary tools for the installation work		Wrench key (Hexagon) [4m/m]
	Necessary tools for the installation work	10	Vacuum pump
1	Plus headed driver	11	Vacuum pump adapter (Anti-reverse flow type)
2	Knife		(Designed specifically for R410A)
3	Saw	12	Gauge manifold (Designed specifically for R410A)
4	Tape measure	13	Charge hose (Designed specifically for R410A)
5	Hammer	14	Flaring tool set (Designed specifically for R410A)
6	Spanner wrench	15	Gas leak detector (Designed specifically for R410A)
7	Torque wrench [14.0~62.0N·m (1.4~6.2kgf·m)]	16	Gauge for projection adjustment
8	Hole core drill (65mm in diameter)	10	(Used when flare is made by using conventional flare tool)

#### Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant. A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit operation valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake.
   The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure.

Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.

- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

# '10 • PAC-DB-142

### 1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

**⚠CAUTION** 

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.

#### 1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When you have to unpack the unit for a compelling reason before you haul it to the installation point, hoist the unit with nylon slings or ropes and protection pads so that you may not damage the unit.



#### 2) Portage

• The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.



#### 3) Selection of installation location for the outdoor unit

Be sure to select a suitable installation place in consideration of following conditions.

- O A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- O A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
- O A place where the unit is not exposed to oil splashes.
- O A place where it can be free from danger of flammable gas leakage
- O A place where drain water can be disposed without any trouble.
- O A place where the unit will not be affected by heat radiation from other heat source.
- O A place where snow will not accumulate
- O A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- O A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
- O If a operation is conducted when the outdoor air temperature is -5 lower, the outdoor unit should be installed at a place where it is not influenced by natural wind.
- O A place where strong wind will not blow against the outlet air blow of the unit

#### 4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required. The bottom plate of unit and intake, outlet may be blocked by snow.
- Install the unit on the base so that the bottom is higher than snow cover surface.



2 Provide a snow hood to the outdoor unit on site. Regarding outline of a snow hood, refer to our technical manual.



3 Install the unit under eaves or provide the roof on site.



- Since drain water generated by defrost control may freeze, following measures are required.
- Don't execute drain piping work by using a drain elbow and drain grommets (optional parts). [Refer to Drain piping work.]
- Recommend setting Defrost Control (SW3-1) and Snow Guard Fan Control (SW3-2). [Refer to Setting SW3-1, SW3-2.]

- (2) If the unit can be affected by strong wind, following measures are required.
- Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.

1.Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen.


2.Install the outlet air blow side of the unit in a position perpendicular to the direction of wind.

Wind direction

#### 5) Installation space


- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controllers, please provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.

				(mm)
		Model 4	0, 50, 60	
Size Example installar	tion I	II	Ш	IV
L1	Open	280	280	180
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open

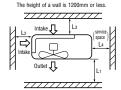

#### 6) Installation

- 1 Anchor bolt fixed position
- ② Notabilia for installation

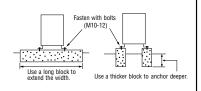

- In installing the unit, fix the unit's legs with bolts specified on the left.
- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5 mm or less.)
   Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

# 10 • PAC-DB-142


#### 2. REFRIGERANT PIPING WORK

#### 1) Restrictions on unit installation and use

• Check the following points in light of the indoor unit specifications and the installation site.

Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

	Restrictions	Dimensional restrictions	Marks appearing in the drawing on the right
Main pipe length		30m or less	L
Elevation difference between	When the outdoor unit is positioned higher,	20m or less	Н
indoor and outdoor units	When the outdoor unit is positioned lower,	20m or less	Н

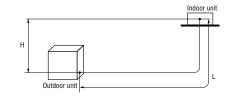

▲ CAUTION The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below.


Where an existing pipe system is utilized. ###Institute of the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, please see " 5. UTILIZATION OF EXISTING PIPING."

#### 2) Determination of pipe size

Determine refrigerant pipe size pursuant to the following guidelines based on the

	Model 40, 50, 60				
	Gas pipe Liquid				
Outdoor unit connected	φ 12.7 Flare	φ 6.35 Flare			
Refrigerant piping (branch pipeL)	φ 12.7	φ 6.35			
Indoor unit connected	φ 12.7	φ 6.35			

#### When pipe is brazing.

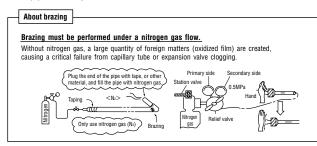

#### 3) Refrigerant pipe wall thickness and material

• Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size. NOTE • Select pipes having a wall thickness larger than the specified minimum pipe thickness.

Pipe diameter [mm]	6.35	12.7
Minimum pipe wall thickness [mm]	0.8	0.8
Pipe material*	O-type pipe	O-type pipe

<sup>\*</sup>Phosphorus deoxidized seamless copper pipe ICS 23.040.15, ICS 77.150.30

#### 4) On-site piping work

Take care so that installed pipes may not touch components within a unit. IMPORTANT lake care so that histalied pipes may not cool composition. Installed and/or vibrations.

How to remove the side cover | Please remove the screw of a side cover and remove to the front.

- Carry out the on site piping work with the operation valve fully closed.
- Give sufficient protection to a pipe end (compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical.(R100~R150)
   Do not bend a pipe repeatedly to correct
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.



Do not hold the valve cap area with a spanner.

 $\phi 6.35$ 9.1 16.6


Flared pipe end : A (mm)

	p	
Copper	In the case of a	a rigid (clutch) type
diameter	With an R410A tool	With a conventional too
$\phi$ 6.35	0.05	10.15
φ12.7	0~0.5	1.0~1.5
	Copper pipe outer diameter $\phi$ 6.35	pipe outer diameter With an R410A tool φ6.35

#### ↑ CAUTION Do not apply force beyond proper fastening torque in tightening the flare nut.

Fix both liquid and gas operation valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Operation valve size (mm)	Tightening torque (N·m)	Tightening angle (° )	Recommended length of a tool handle (mm)
φ6.35 (1/4")	14~18	45~60	150
φ12.7 (1/2°)	49~61	30~45	250

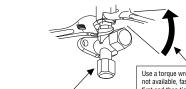

Use a torque wrench. If a torque wrench is not available, fasten the flare nut manually first and then tighten it further, using the left table as a guide.

# '10 • PAC-DB-142

#### 5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the operation valve's check ioint equipped on the outdoor unit side. While conducting a test, keep the operation valve shut all the time.
- a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
- b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
- c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
- d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient Temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
- e) If a pressure drop is observed in checking e) and a) d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

#### 6) Evacuation



#### Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- OUse a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

#### 7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

-		·-···g-·-··· g- ·-·-··		···
		Additional charge volume (kg) per meter of refrigerant piping (liquid pipe ¢ 6.35)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
	Model 40, 50, 60	0.02	1.40	15

- •This unit contains factory charged refrigerant covering 15m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 15m refrigerant piping.
  When refrigerant piping exceeds 15m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 15m.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size.
   For further information, please see "5. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required


Additional charge volume (kg) = { Main length (m) – Factory charged volume 15 (m) } x 0.02 (kg/m)

\*When an additional charge volume calculation result is negative,

- it is not necessary to charge refrigerant additionally.
- For an installation measuring 15 m or shorter in pipe length, please charge the refrigerant volume charged for shipment at the factory, when you recharge refrigerant after servicing etc.

#### 8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
- · Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
  - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation
    or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
  - · Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
  - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
  - · Both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

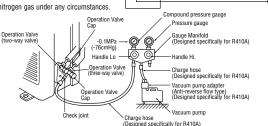

Outdoor unit

Gas side

Check inint

Indoor unit


Securely tighten the operation valve can and the check joint blind nut after adjustment.

Operation valve size (mm)	Operation valve cap tightening torque (N·m)	Check joint blind nut tightening torque (N·m)
φ6.35 (1/4")	20~30	10~12
φ12.7 (1/2")	25~35	10~12

#### (2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the operation valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will qasify upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
   When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes.
- Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.


NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.

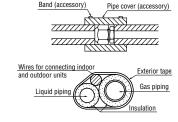

with putty or adequate caulking material.


 Condensed water may flow out from vicinity of operation valve or connected pipes.

· Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)

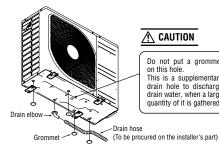

CAUTION Do not put a grommet on this hole. This is a supplementary drain hole to discharge

drain water, when a large quantity of it is gathered.

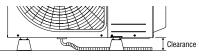

 When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an optional part) or concrete blocks.

Then, please secure space for the drain elbow and the drain hose.

#### 4. ELECTRICAL WIRING WORK For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country.

Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.

- •Do not use any supply cord lighter than one specified in parentheses for each type below.
- braided cord (code designation 60245 IEC 51).
- · ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
- · flat twin tinsel cord (code designation 60227 IEC 41);
- Use polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
- . Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
- If impropery grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- •The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an acccident such as an electric shock or a fire.
- . Do not turn on the power until the electrical work is completeted.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It dose not improve power factor, while it can cause an abnormal overheat accident)
- ·For power supply cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- . Fasten cables so that may not touch the piping, etc.
- •When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.


#### **∴** CAUTION

In case of faulty wiring connection, the indoor unit stops, and then the run lamp turns on and the timer lamp blinks.

Use cables for interconnection wiring to avoid loosening of the wires. CENELEC code for cables Required field cables

H05RNR4G1.5 (Example) or 245IEC57

- Harmonized cable type
- 300/500 volts
- R Natural-and/or synth, rubber wire insulation
- Polychloroprene rubber conductors insulation
- Stranded core
- Number of conductors
- One conductor of the cable is the earth conductor (vellow/areen)
- Section of copper wire (mm2)

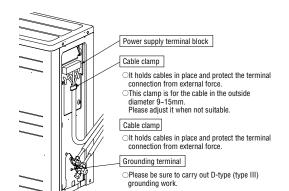

## Power cable, indoor-outdoor connecting wires

Outdoor unit

Indoor unit

Earth leakage breaker

Switchgear or Circuit breaker

1 2/N 3 ±

1 2/N 3 ±

≟ N L

- Always perform grounding system installation work with the power cord unplugged.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.



Always use an earth leakage circuit breaker designed for inverter circuits to CAUTION Always use all out an out of the prevent a faulty operation.

				Switchgea	r or Circuit Breaker	Power souce	Interconnecting and	
	Phase	Model	Earth leakage breaker	Switch breaker	Over current protector rated capacity	(minimum)	grounding wires (minimum)	
		40						
١	Single-phase	50	15A,30mA, 0.1sec or less	30A	16A	2.0mm <sup>2</sup>	1.5mm×4	
l		60	0.1366 01 1635					

- •The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- •Switchgear or Circuit breaker capacity which is calculated from MAX, over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

#### <Table of pipe size restrictions> ○:Standard pipe size ○:Usable △:Restricted to shorter pipe length limits Additional charge volume per meter of pipe 0.02ka/m 0.06ka/m Liquid pipe ø6.35 ø9.52 Pipe size ø12.7 Gas nine ø12.7

Usability 0 Δ 40 Maximum one-way pipe length 30 10 Length covered without additional charge 15 5 Usability 0 50 Maximum one-way pipe length 30 10 Length covered without additional charge 15 15 0 60 30 10 Maximum one-way pipe length Length covered without additional charge 15

Please consult with our distributor in the area, if you need to recover refrigerant and charge it again.

Any combinations of pipe sizes not listed in the table are not usable.

Formula to calculate additional charge volume

Additional charge volume (kg) = {Main pipe length (m) - Length covered without additional charge shown in the table (m)} × Additional charge volume per meter of pipe shown in the table (kg/m)

\* If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged

**Example)** When an 60 is installed in a 10m long existing pipe system (liquid  $\phi$  9.52, gas  $\phi$  12.7), the quantity of refrigerant to charge additionally should be (10m-5m) x 0.06kg/m = 0.3 kg.

**↑** WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the excising unit (in the order of (1), (2), (3) and (4))

- (1) Run the unit for 30 minutes for a cooling operation.
- (2) Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
- (3) Close the liquid side operation valve of the outdoor unit and pump down (refrigerant recovery)
- (4) Blow with nitrogen gas. \* If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
- For the flare nut, do not use the old one, but use the one supplied with the outdoor unit. Process a flare to the dimensions specified for R410A.

<Where the existing unit cannot be run for a cooling operation.>

Wash the pipe system or install a new pipe system.

• If you choose to wash the pipe system, please contact our distributor in the area.

## INSTALLATION TEST CHECK POINTS

Some loose pipe supports

5. UTILIZATION OF EXISTING PIPING

START

Are an outdoor unit and an indoor unit connected to the

Are the existing units our products?

Does the existing pine system to reuse satisfy all of the following? (1) The pipe length is 30m or less.
(2) The pipe size conforms to the table of pipe size restrictions.

(3) The elevation difference between the indoor and outdoor units conforms to the following restrictions.

Where the outdoor unit is above: 15m or less

Where the outdoor unit is below: 15m or less

YES

Is the unit to install in the existing pipe system a

Is the existing pipe system to reuse free of corrosion, flaws or dents?

Are there any branch pipes with no indoor unit connected?

Are heat insulation materials of the existing pipe system to

(Heat insulation is necessary for both gas and liquid pipes)

Aren't there any loose nine supports?

The existing pipe system is reusable

reuse free of peel-offs or deterioration?

No loose pipe supports

Is the existing nine system to reuse free of gas leaks? (Check whether refrigerant charge was required frequently for the system before)

Check whether an existing pipe system is reusable or not by using the following flow chart.

YES

NO Which of the following refrigeration oils

ether oil ester oil

does the existing unit use? Suniso, MS, Barrel Freeze, HAB, Freol,

\*Check with the flow chart developed for a case where an existing pipe system is reused for a

twin-triple-double-twin model published as a technical data sheet.

Change

Repair the damaged parts Repair

Check the pipe system for air tightness on the site.

Remove those branches

Repair the damaged parts.

Repair

Renair the damaged parts

The existing pipe system is not reusable.

Repair

Install a new pipe system.

Remove

Air tightness is OK

Change the branching pipe to a specified type.

Please make an

Change is impossible

Repair is impossible

Repair is impossible

Air tightness is

Remove is impossible

NO inquiry for

reusability

Check the following points again after completion of the installation, and before turnig on the power. Conduct a test run again and ensure that the unit operates properly, Explain to the customer how to use the unit and how to take care of the unit following the instruction manual

#### After installation

Power cables and	connecting wires	are securely	fixed to th	e terminal	block.
The power supply	voltage is correc	t as the ratin	g.		

The	drain	hose	is	fixed	securely.
One	ration	al valv	/Δ	ie full	v onen

_	opolar				., 000	•••			
	No gas	leaks	from	the	ioints	of	the	operational	valve

The	pipe	joints	for	indoor	and	outdoor	pipes	have	been	insulated.	

The reverse flow check cap is attached.

The cover of the pipe cover (A) faces downward to prevent rain from entering.

Gaps are properly sealed between the pipe covers (A) (B) and the wall surface / pipes.

#### (2) Model FDC71VN

Inverter driven single split PAC
71V
Designed for R410A refrigerant

This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to the respective installation manuals supplied with the units.

When install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between indoor and outdoor units, power supply voltage and etc.) and installation spaces

### **SAFETY PRECAUTIONS**

- •We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into WARNING and CAUTION. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the WARNING and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in CAUTION. These are very important precautions for safety. Be sure to observe all of them without fail.
- ●The meaning of "Marks" used here are as shown below.

Never do it under any circumstance.

Always do it according to the instruction

- •Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- •Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user

#### Check before installation work

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

# sult of a system

#### WARNING

- Installation must be carried out by the qualified installer.
   If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system maifunction.
- Install the system in full accordance with the instruction manual.
- Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire.
- Use the original accessories and the specified components for installation.
- If parts other than those prescribed by us are used, it may cause fall of the unit, water leaks, electric shocks, fire, refrigerant leak, substandard performance, control failure and personal injury.
- When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage accordance with ISO5149.

Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents.

- Ventilate the working area well in the event of refrigerant leakage during installation. If the refrigerant comes into contact with naked flames, poisonous gas is produced.
- After completed installation, check that no refrigerant leaks from the system.

If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous gas is produced.

• Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to hang up the unit at 4-point support.

An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit

- Install the unit in a location with good support.
- Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
- Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds.
   Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
- The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit.

Power supply with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.

- Be sure to shut off the power before starting electrical work.
   Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.
- Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work.
- Unconformable cables can cause electric leak, anomalous heat production or fire.

  Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent
- overloading the terminal blocks.

  Loose connections or cable mountings can cause anomalous heat production or fire.
- Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly incorrect installation may result in overheating and fire.



- Do not perform brazing work in the airtight room
   It can cause lack of oxygen.
- Use the prescribed pipes, flare nuts and tools for R410A.
- Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.
- Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much.

Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen.

- Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation.
- If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, you may incur frost bite or injury from an abrupt refigerant outflow and air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant
- Only use prescribed optional parts. The installation must be carried out by the qualified installer.
- If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- Do not perform any change of protective device itself or its setup condition
  The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.
- Be sure to switch off the power supply in the event of installation, inspection or servicing.
- If the power supply is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.
- Consult the dealer or an expert regarding removal of the unit.
   Incorrect installation can cause water leaks, electric shocks or fire.
- Stop the compressor before closing valve and disconnecting refrigerant pipes in case of pump down operation.
  If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or

If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit


- Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.
- If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.
- Do not run the unit with removed panels or protections
   Touching rotating equipments, hot surfaces or high voltage parts can cause personal parts.

Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.

- Be sure to fix up the service panels.
- Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.
- Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair.
  If you repair or modify the unit, it can cause water leaks, electric shocks or fire.



# Heavy

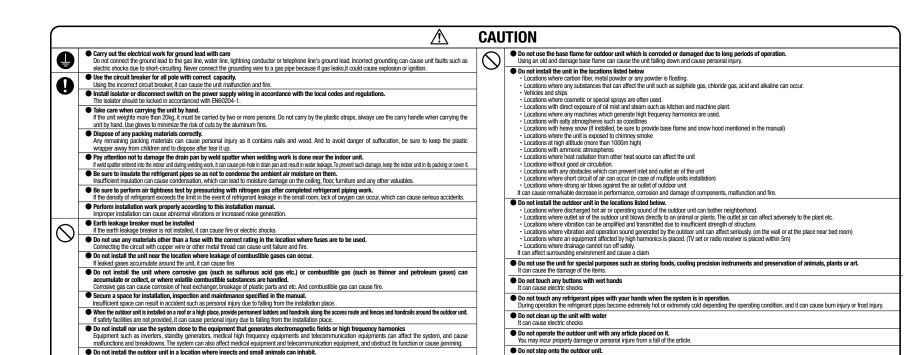

#### Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant. A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit operation valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system

a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charging
d)	Torque wrench
e)	Flare tool
f)	Protrusion control copper pipe gauge
g)	Vacuum pump adapter
h)	Gas leak detector
	b) c) d) e) f)

Dedicated R410A tools

### 1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity CAUTION when a bill is indiced with single to hadrest, the unit can be thrown off-balance and fall.

#### 1) Delivery

• Deliver the unit as close as possible to the installation site before removing it from the packaging.

Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.

• When some compelling reason necessitates the unpacking of the unit before it is carried in, use nylon slings or protective wood pieces so as not to damage the unit by ropes lifting it.

#### 2) Portage

You may incur injury from a drop or fall.

• The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.



Wooden nallet -

PAC-DB-142

# • PAC-DB-142

#### 3) Selection of installation location for the outdoor unit

Be sure to select a suitable installation place in consideration of following conditions.

- Q A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- O A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit
- O A place where the unit is not exposed to oil splashes.
- O A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- O A place where the unit will not be affected by heat radiation from other heat source.
- O A place where snow will not accumulate
- A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safety.
   A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
- O A place where strong wind will not blow against the outlet air blow of the unit.

#### 4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required. The bottom plate of unit and intake, outlet may be blocked by snow.
- Install the unit on the base so that the bottom is higher than snow cover surface.



Provide a snow hood to the outdoor unit on site.

Regarding outline of a snow hood, refer to our technical manual.



Install the unit under eaves or provide the roof on site.



Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (optional parts). [Refer to Drain piping work.]
- Recommend setting Defrost Control (SW3-1) and Snow Guard Fan Control (SW3-2). [Refer to Setting SW3-1, SW3-2.]
- (2) If the unit can be affected by strong wind, following measures are required.

Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.

 Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen



Install the outlet air blow side of the unit in a position perpendicular to the direction of wind.




3.The unit should be installed on the stable and level foundation. If the foundation is not level, tie down the unit with wires.



#### 5) Installation space


- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In
  order to facilitate servicing of controllers, please provide a sufficient space between units so that their top plates can be
  removed easily.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.

			(mm)	
	71V			
Size Example installation	I	II	Ш	
L1	Open	Open	500	
L2	300	250	Open	
L3	100	150	100	
L4	250	250	250	

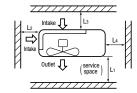


#### 6) Installation

(1) Anchor bolt fixed position

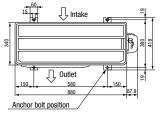

② Notabilia for installation

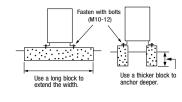

- In installing the unit, fix the unit's legs with bolts specified on the above.
- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5 mm or less.)

Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

# 7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind
will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.

### 2. REFRIGERANT PIPING WORK


#### 1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions		Dimensional	Marks appearing in the drawing on the right	
		restrictions	Single type	Twin type
One-way pipe length of refrigerant piping	- Model 71V	50m or less	L	L1+L1+L2
Main pipe length			L	L
One-way pipe length after the first branching point		20m or less	_	L1, L2
Difference of pipe length after the first branching point		10m or less	_	L1—L2
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher,	30m or less	Н	Н
	When the outdoor unit is positioned lower,	15m or less	Н	Н
Elevation difference between indoor units		0.5m or less	-	h




• The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, please see "6. UTILIZATION OF EXISTING PIPING."

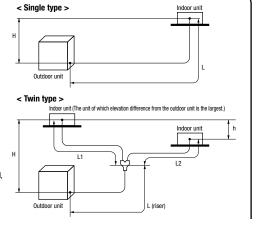

### 2) Determination of pipe size

Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

		Model 71V	
		Gas pipe	Liquid pipe
Outdoor ur	Outdoor unit connected		φ9.52 Flare
Refrigerant piping (branch pipeL)		φ15.88	φ9.52
In the case of a single time	Indoor unit connected	φ15.88	φ9.52
In the case of a single type	Capacity of indoor unit	Model 71V	
	Branching pipe set	DIS-WA1	
In the case of a help has	Refrigerant piping (branch pipe L1,L2)	φ12.7	φ9.52
In the case of a twin type	Indoor unit connected	φ12.7 φ6.35	
	Capacity of indoor unit	Model 40V×2	

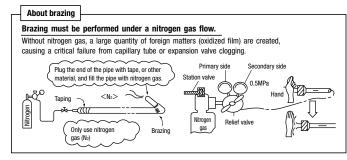

### **⚠** CAUTION

•When the 40V model is connected as an indoor unit, always use a φ9.52 liquid pipe for the branch (branching pipe – indoor unit) and a different diameter joint supplied with the branching pipe set for connection with the indoor unit (φ6.35).

If a  $\phi$ 6.35 pipe is used for connection with a branching pipe, a refrigerant distribution disorder may occur, causing one of the indoor units to fall short of the rated capacity.

- •A riser pipe must be a part of the main. A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible.
- A branching part must be dressed with a heat-insulation material supplied as an accessory.
- For the details of installation work required at and near a branching area, see the installation manual supplied with your branching pipe set.

### 3) Refrigerant pipe wall thickness and material

• Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

Pipe diameter [mm]	6.35	9.52	12.7	15.88
Minimum pipe wall thickness [mm]	0.8	0.8	0.8	1.0
Pipe material*	0-type pipe	0-type pipe	0-type pipe	0-type pipe

NOTE Select pipes having a wall thickness larger than the specified minimum pipe thickness.

\*Phosphorus deoxidized seamless copper pipe C1220T, JIS H3300

### 4) On-site piping work

Take care so that installed pipes may not touch components within a unit.
 If touching with an internal component, it will generate abnormal sounds and/or vibrations.

**How to remove the side cover** | Please remove the screw of a side cover and remove to the front.

- Carry out the on site piping work with the operation valve fully closed.
- Give sufficient protection to a pipe end (compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical.(R100~R150) Do not bend a pipe repeatedly to correct
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

Flared pipe 6	ena: A (mm)
Copper pipe outer diameter	A 0 -0.4
φ6.35	9.1
φ9.52	13.2
φ12.7	16.6
φ15.88	19.7

Flored pine and A (mm)

Copper pipe protrusion for flaring: B (mm)

Copper	In the case of a rigid (clutch) type				
pipe outer diameter	With an R410A tool	With a conventional tool			
φ6.35 φ9.52					
	0~0.5				
φ12.7		0.7~1.3			
$\phi$ 15.88					

### 

### Do not apply force beyond proper fastening torque in tightening the flare nut.

Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Operation valve siz (mm)	Tightening torque (N-m)	Tightening angle	Recommended length of a tool handle (mm)
φ6.35 (1/4")	14~18	45~60	150
φ9.52 (3/8")	34~42	30~45	200
φ12.7 (1/2")	49~61	30~45	250
φ15.88(5/8")	68~82	15~20	300




Use a torque wrench, If a torque wrench is not available, fasten the flare nut manually first and then tighten it further, using the left table as a guide.

## 10 • PAC-DB-142

### 5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the operation valve's check joint equipped on the outdoor unit side. While conducting a test, keep the operation valve shut all the time.
  - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
  - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops
  - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
  - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient Temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
- e) If a pressure drop is observed in checking e) and a) d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- 2 In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any

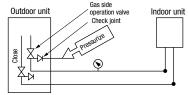

### 6) Evacuation

<Work flow>

When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise.

Check the system for a leaky point and then draw air to create a vacuum again.

Run the vacuum pump for at least one hour after the vacuum gauge shows -101kPa or lower. (-755mmHg or lower)

Confirm that the vacuum gauge indicator does not rise even if the system is left for one hour or more.

### Pay attention to the following points in addition to the above for the R410A and compatible machines.

Airtighteness test completed

Vacuuming begins

Vacuuming completed

Vacuum gauge check

Fill refrigerant

- OTo prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Ouse a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

### 7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe φ6.35)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Model 71V	2.35	20	0.06	2.95	30

- This unit contains factory charged refrigerant covering 30m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 30m refrigerant piping. When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.
- When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from the factory charged volume and adjust to 1.95kg.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, please see "6. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

Additional charge volume (kg) = { Main pipe length (m) - Length covered without additional charge 30 (m) } x 0.06 (kg/m) + Total length of branch pipes (m) x 0.06 (kg/m)

\*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

- For an installation measuring 3m or longer, but not more than 20m, in pipe length, please charge the standard refrigerant charge volume, when you recharge refrigerant after servicing etc.
- When refrigerant piping is shorter than 3m, recharge 1.95kg of refrigerant.

Ex.) For a 10m installation, charge 2.35 kg of refrigerant.

For a 25m installation, charge "2.35 + (25-20) x 0.06 = 2.65 kg."


### (2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the operation valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will quasify upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.


### 8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
  - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
  - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
  - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
  - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
  - Although it is verified in a test that this air conditioning unit shows satisfactory performance under JIS condensation test conditions, both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

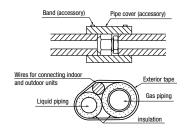

### 3. DRAIN PIPING WORK

• Execute drain piping by using a drain elbow and drain grommets supplied separately as optional parts, where water drained from the outdoor unit is a problem

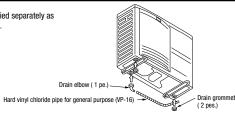

- O There are 3 drain holes provided on the bottom plate of an outdoor unit to discharge
- O When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an optional part) or concrete blocks.
- O Connect a drain elbow as shown in the illustration and close the other two drain holes with grommets.

### **4. ELECTRICAL WIRING WORK** For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country.

Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.


- •Do not use any supply cord lighter than one specified in parentheses for each type below.
- braided cord (code designation 60245 IEC 51).
- ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
- flat twin tinsel cord (code designation 60227 IEC 41);
- Do not use anything lighter than polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire. If impropery grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an acccident such as an electric shock or a fire.
- Do not turn on the power until the electrical work is completeted .
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It dose not improve power factor, while it can cause an abnormal
- For power supply cables, use conduits.
- •Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that may not touch the piping, etc.
- . When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.

### Power cable, indoor-outdoor connecting wires

Always perform grounding system installation work with the power cord unplugged.




Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

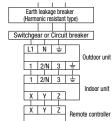


Model	Power source	Power cable thickness (mm²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness X number
71V	Single phase 3 wire 220-240V 50Hz	3.5	17	21	φ1.6mm	φ1.6mm x 3

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
   The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, follow the internal cabling regulations, Adapt it to the regulation in effect in each

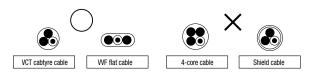

- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

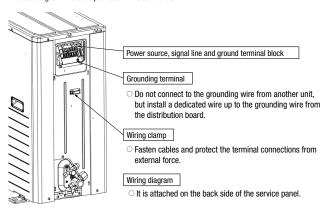

- Before conduct a test run, do not fail to make sure that the operation valves are closed.
- Turn on power 6 hours prior to a test run to energize the crank case heater.
- In case of the first operation after turning on power, even if the unit does not move for 30 minutes, it is not a breakdown.
- Always give a 3-minute or longer interval before you start the unit again whenever it is stopped.
- Removing the service panel will expose high-voltage live parts and high-temperature parts, which are quite dangerous.
   Take utmost care not to incur an electric shock or burns. Do not leave the unit with the service panel open.

**⚠** CAUTION

- When you operate switches for on-site setting, be careful not to touch a live part.
   You cannot check discharge pressure from the liquid operation valve charge port.
- The 4-way valve (20S) is energized during a heating operation.
- When power supply is cut off to reset the unit, give 3 or more minutes before you turn on power again after power is cut off.

If this procedure is not observed in turning on power again, "E-5" (Communication error) may occur.

### About insulation resistance

• An insulation resistance value may drop to several M ohms immediately after installation or when the unit is left for a long time without power, because refrigerant is gathered in the compressor. When the earth-leakage breaker is actuated due to low insulation resistance, please check the following:

Cooling during a test run

Heating during a test run

Normal or After the test operation

(1) Check whether a normal insulation resistance value is restored about 6 hours after power is turned. Turning on power will energize the compressor and heat it to evaporate refrigerant gathered in it.

ΟN

OFF

SW-5-3 SW-5-4

OFF

ON

(2) Check whether the earth-leakage breaker is a harmonic resistant type.

This unit is equipped with an inverter and therefore, the use of a harmonic resistant type earth-leakage breaker is necessary to prevent a false actuation.

### 1) Test run method

### Please remove a side cover.

- A test run can be initiated from an outdoor unit by using SW5-4 and SW5-4 for on-site setting.
- (2) Switching SW5-3 to ON will start the compressor.
- (3) The unit will start a cooling operation, when SW5-4 is OFF, or a heating operation, when SW5-4 is ON.
- (4) Do not fail to switch SW5-3 to OFF when a test run is completed.
- In case of the first operation after turning on the power supply, when the unit runs in the cooling mode at outside temperature 5°C or lower, it automatically changes into the cooling mode after it runs in the heating mode for 10 minutes.

### 2) Checking the state of the unit in operation

### Please remove a service panel.

Use check joints provided on the piping before and after the four-way valve installed inside the outdoor unit for checking discharge pressure and suction pressure.

As indicated in the table shown on the right, pressure detected at each point will vary depending on whether a cooling or heating operation has been selected.

	Check joint of the pipe	Charge port of the gas operation valve
Cooling operation	Discharge pressure (High pressure)	Suction pressure (Low pressure)
Heating operation	Suction pressure (Low pressure)	Discharge pressure (High pressure)

### 3) Setting SW3-1, SW3-2.

### Please remove a service panel.

- (1) Defrost control switching (SW3-1)
  - ·When this switch is turned ON, the unit will run in the defrost mode more frequently.
  - •Set this switch to ON, when installed in a region where outdoor temperature falls below zero during the season the unit is run for a heating operation.
- (2) Snow guard fan control (SW3-2)
  - •When this switch is turned on, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running.
  - ·When the unit is used in a very snowy country, set this switch to ON.

### 4) Failure diagnosis in a test run

•		•				
Error indicated on the		Printed circuit board LED(The cycles of 5 seconds)		Failure event	Action	
	remote control unit	Red LED	Green LED	Fallule event	Action	
	E34	Blinking once	Blinking continuously	Open phase	Check power cables for loose contact or disconnection	
	E40	Blinking once	Blinking continuously	63H1 actuation or operation with operation valves shut (occurs mainly during a heating operation)	Check whether the operation valves are open.     If an error has been canceled when 3 minutes have elapsed since	
	E49	Blinking once	Blinking continuously	Low pressure error or operation with operation valves shut (occurs mainly during a cooling operation)	a compressor stop, you can restart the unit by effecting Check Reset from the remote control unit.	

• If an error code other than those listed above is indicated, refer to the wiring diagram of the outdoor unit and the indoor unit.

### 5) The state of the electronic expansion valve.

The following table illustrates the steady states of the electronic expansion valve.

	Miles a server is toward as	When the unit com-	es to a normal stop	When the unit comes	to an abnormal stop
	When power is turned on	During a cooling operation	During a heating operation	During a cooling operation	During a heating operation
Valve for a cooling operation	Complete shut position	Complete shut position	Full open position	Full open position	Full open position
Valve for a heating operation	Full open position	Full open position	Complete shut position	Full open position	Full open position

### 6) Heed the following on the first operation after turning on the circuit breaker.

This outdoor unit may start in the standby mode (waiting for a compressor startup), which can continue up to 30 minutes, to prevent the oil level in the compressor from lowering on the first operation after turning on the circuit breaker. If that is the case, do not suspect a unit failure.

A failure to observe these instructions can result in a compressor breakdown.


Items to checkbefore a test run

 When you leave the outdoor unit with power supplied to it, be sure to close the panel.

Item No.used in the installation manual	Item	Check item	Check
		If brazed, was it brazed under a nitrogen gas flow?	
	Refrigerant	Were air-tightness test and vacuum extraction surely performed?	
	plumbing	Are heat insulation materials installed on both liquid and gas pipes?	
	F	Are operation valves surely opened for both liquid and gas systems?	
		Have you recorded the additional refrigerant charge volume and refrigerant pipe length on the panel's label?	
		Is the unit free of cabling errors such as uncompleted connection, an absent or reversed phase?	
	Electric wiring	Are properly rated electrical equipments used for circuit breakers and cables?	
		Doesn't cabling cross-connect between units, where more than one unit are installed?	
		Aren't indoor-outdoor signal wires connected to remote control wires?	
4		Do indoor-outdoor connecting cables connect between the same terminal numbers?	
· '		Are either VCT cabtyre cables or WF flat cables used for indoor-outdoor connecting cables?	
		Does grounding satisfy the D type grounding (type III grounding) requirements?	
		Is the unit grounded with a dedicated grounding wire not connected to another unit's grounding wire?	
		Are cables free of loose screws at their connection points?	
		Are cables held down with cable clamps so that no external force works onto terminal connections?	
	In do so south	Is indoor unit installation work completed?	
_	Indoor unit	Where a face cover should be attached onto an indoor unit, is the face cover attached to the indoor unit?	

Test run procedure Always carry out a test run and check the following in order as listed.

Turn	The contents of operation	Check			
1	Open the gas side operation valve fully.				
2	Open the liquid side operation valve fully.				
3	Close the panel.				
4	Where a remote control unit is used for unit setup on the installation site, follow instructions for unit setup on the installation site with a remote control unit.				
(5)	SW5-3 / SW5-4 OFF: the unit will start a cooling operation.				
(5)	SW5-3 / SW5-4 ON: the unit will start a heating operation.				
6	When the unit starts operation, press the wind direction button provided on the remote control unit to check its operation.				
7	Place your hand before the indoor unit's diffuser to check whether cold (warm) winds come out in a cooling (heating) operation.				
8	Make sure that a red LED is not blinking.				
9	When you complete the test run, please turn on SW5-3 for 1 second and be sure to end a test run.				
(10)	Where options are used, check their operation according to the respective instruction manuals.				

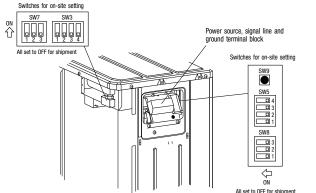


- %1 Do not operate SW3-3, SW5-1, SW5-2, SW8.
- ※2 Refer to TECHNICAL MANUAL about SW9. (Pump down SW)

- 219 -

'10 • PAC-DB-142

### 6. UTILIZATION OF EXISTING PIPING.

Check whether an existing pipe system is reusable or not by using the following flow chart.

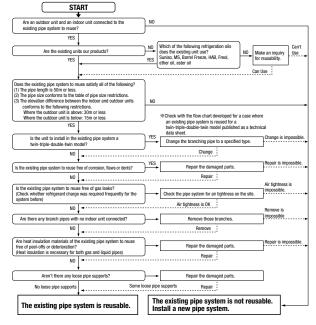

♠ WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the excising unit (in the order of (1), (2), (3) and (4))

- (1) Run the unit for 30 minutes for a cooling operation.
- (2) Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
- (3) Close the liquid side operation valve of the outdoor unit and pump down (refrigerant recovery)
- (4) Blow with nitrogen gas. \* If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
  - For the flare nut, do not use the old one, but use the one supplied with the outdoor unit, Process a flare to the dimensions specified for R410A.
  - ullet Turn on-site setting switch SW8-1 to the ON position. (Where the gas pipe size is  $\phi$  19.05)

<Table of pipe size restrictions>

②:Standard pipe size ○:Usable △:Restricted to shorter pipe length limits Cool ↓: Cooling capacity drop

Additio	nal charge volume per meter of pipe	0.06	0.08kg/m	
Dina sina	Liquid pipe	φ9.52	φ9.52	φ12.7
Pipe size	Gas pipe	φ12.7	φ15.88	<b>φ</b> 15.88
	Usability	Cool ↓	0	$\triangle$
71V	Maximum one-way pipe length	35	50	25
	Length covered without additional charge	30	30	15

- The pipe length should be at least 3m. If the pipe length is shorter than 3m, the quantity of refrigerant needs to be reduced. Please consult with our distributor in the area, if you need to recover refrigerant and charge it again.
- Any combinations of pipe sizes not listed in the table are not usable.
- <Pipe system after the branching pipe>
- ©:Standard pipe size ○:Usable

Additional	charging amount of ref	0.06kg/m		
Dina sina	Liquio	φ9.52		
Pipe size	Gas	Gas pipe		φ15.88
Model	Combination type	Combination type   Combination of capacity		
FDC71	Twin 40+40		0	0

 Any combinations of pipe sizes not listed in the tableare not usable.

<The model types of existing units of which branching pipes are reusable.>

The branching pipes used with models other than those listed above are not reusable.

Use our genuine branching pipes for R410A.

Formula to calculate additional charge volume

Additional charge volume (kg) = {Main pipe length (m) - Length covered without additional charge shown in the table (m)} × Additional charge volume per meter of pipe shown in the table (kg/m) + Total length of branch pipes (m) × Additional charge volume per meter of pipe shown in the table (kg/m)

\* If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.

**Example)** When an 71V (single installation) is installed in a 30m long existing pipe system (liquid  $\phi$  12.7, gas  $\phi$  15.88),

the quantity of refrigerant to charge additionally should be (30m-15m) x 0.08kg/m = 1.2 kg.

Example) When an 71V (twin installation) is installed in a 30m long existing pipe system

(main pipe length 20m, liquid  $\phi$  12.7, gas  $\phi$  15.88; pipe length after branching pipe 5m x 2, liquid  $\phi$  9.52, gas  $\phi$  12.7),

the quantity of refrigerant to charge additionally should be (20m-15m) x 0.08kg/m + 5m x 2 x 0.06kg/m = 1.0 kg.

<Where the existing unit cannot be run for a cooling operation.>

Wash the pipe system or install a new pipe system.

• If you choose to wash the pipe system, contact our distributor in the area.

Inverter driven single split PAC 100V · 125V · 140V

PSB012D923D

Designed for R410A refrigerant

This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to the respective installation manuals supplied with the units.

@Read this manual carefully before you set to installation work and carry it out according to the instructions contained in this manual.

### PRECAUTIONS FOR SAFETY

- When installing the equipment, carefully read the Precautions for safety and make sure that safety is maintained.
- The safety items contain important information regarding safety. Be sure to follow them. The symbols used and their meanings are as follows.

⚠ WARNING : Improper installation could result in serious accident causing death or serious injury.

⚠ CAUTION : Improper installation could result in serious accident.

- After installation, along with confirming that no abnormalities were seen from the operation test. Explain operating methods as well as maintenance methods to the user of this equipment, based on the owner's manual.
- For 3 phase power source outdoor unit, EN61000-3-2 and EN60555-3 are not applicable as consent by the utility company or notification to the utility company is given before usage.
- 3 phase power source unit, both indoor and outdoor, is suitable for installation in a commercial and light industrial environment. If installed as a house-hold appliance it could cause electromagnetic interference.
- 5 and 6 HP units of single phase power source are equipment complying with IEC 61000-3-12.
- Ask the customer to keep this manual together with the operation manual

### WARNING

- Ask your dealer or a specialized service provider to install the unit, Improper installation work performed on the part of a user can result in water leaks, electric shocks and/or a fire
- Carry out installation work properly in accordance with this installation manual. Improper installation work could result in water leaks, electric shocks, or a fire.
- When installing a unit in a small room, it is necessary to take appropriate precautions so that a refrigerant leak, if occurs, may not cause a buildup in excess of the concentration limit. For information on such precautions to prevent an excessive buildup, contact your dealer. If refrigerant leaks and builds up beyond the concentration limit, it can cause a lack-of-oxygen accident.
- Install the unit securely onto a structure that can withstand its weight with a good safety margin. Installation onto a structure that is not strong enough can cause an accident such as a fall or drop of the unit.
- Install the unit according to the installation instructions so that it can withstand strong winds, such as typhoons, and earthquakes. Improper installation work can cause an accident such as a fall of the unit.
- Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.
- In wiring, ensure solid cable connection using the specified cables and fasten cables securely so that the terminal block may not be subject to external force working through cables, Improper connection or fastening can cause heat generation and a resultant fire.
- In wiring, arrange cables suitably so that they may be contained neatly in place and then attach a lid and/or a service panel securely. Improper installation can cause heat generation and a resultant fire.
- Prevent any substance other than the specified refrigerant (R410A) such as air from entering the refrigerant cycle in installing or moving the air conditioning system.
   Contamination by air or a foreign substance can cause an abnormal pressure buildup inside the refrigerant cycle and a resultant explosion and personal injury.
- Use only parts supplied with the unit and specified supply parts for installation. The use of parts other than those approved by the manufacturer may cause a fall of the unit, water leaks, a fire, electric shocks, refrigerant leaks, performance degradation or control failures.
- Do not lay drain piping into a sewer where a toxic gas such as sulfuric gas is generated. There is a danger that a toxic gas will flow back into the room.
- If refrigerant gas leaks during installation work, ventilate the room. Refrigerant gas, if it comes into contact with bare fire, can cause the generation of a toxic gas.
- When installation work is completed, check the system for refrigerant gas leaks. If refrigerant gas leaks indoors and comes into contact with bare fire such as that of a fan heater, stove or cooking stove, it can cause the generation of a toxic gas.
- Sling the unit at the specified points with ropes properly rated for its weight in hoisting it for haulage. An improper hauling method can cause a fall of the unit resulting in death or serious personal injury.
- Always turn off power before you work inside the unit such as for installation or servicing. A failure to observe this instruction can cause a danger of receiving electric shocks.
- Do not open the operation valves (both liquid and gas valves) until refrigerant piping work, an air-tightness test and an air purge are completed. When refrigerant gas leaks during piping work, stop brazing pipes and ventilate the room. Refrigerant gas, when it comes into contact with bare fire, can cause the generation of a toxic gas.

### **Check before installation work**

### [ Accessory ] Edging 1 piece knock-out hole protection

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

### **CAUTION**

 Ground the unit. Do not connect the ground wire to gas piping, water piping, a lightning rod, or telephone ground wires. Improper grounding can result in electric shocks or fire when any trouble or earth leakage occurs.



- Be sure to install an earth leakage breaker. A failure to install an earth leakage breaker may result in the outbreak of fire or electric shocks.
- Do not install the unit in an area where a danger of flammable gas leaks exists. If a flammable gas does leak and build up around the unit, it can cause a fire.
- Install drain piping in accordance with the installation manual to ensure proper drainage and keep its temperature to prevent dew condensation. Improper piping work can cause water leaks and a soaking of household effects.
- Do not install the outdoor unit where winds from its fan blow directly onto a plant, etc. Winds can affect adversely to the plant, etc.
- Secure a space for inspection and maintenance as specified in the manual. An insufficient space can result in an accident such as a fall from the installation point and a resultant personal injury.
- When the outdoor unit is installed on a roof top or at an elevated point, provide permanent ladders and handrails along the access route and fences and handrails around the outdoor unit.
- In tightening a flare nut, use double spanners and observe the specified tightening torque. Care must be taken so as not to over-tighten a nut and damage the flare part. (Refer to the tightening torque) A loose or damaged flare part can cause a refrigerant gas leak and a resultant lack-of-oxygen accident.
- Dress the refrigerant piping with a heat insulation material for prevention of dew condensation. Improper heat insulation to prevent dew condensation can cause leaking or dripping water and a resultant soaking of household effects.
- When refrigerant piping work is completed, check it for air tightness with nitrogen gas and make sure that it does not have any leak. A refrigerant gas leak in a narrow room beyond the concentration limit can cause a lack-of-oxygen accident.

### PAC-DB-142

### Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant. A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit operation valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

	Dedicated R410A tools
a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charging
d)	Torque wrench
e)	Flare tool
f)	Protrusion control copper pipe gauge
g)	Vacuum pump adapter
h)	Gas leak detector

### 1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. A CAUTION When a unit is noisieu with shings for manage, and the shings for

### 1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When some compelling reason necessitates the unpacking of the unit before it is carried in, use nylon slings or protective wood pieces so as not to damage the unit by ropes lifting it.



### 2) Portage

• The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.

### 3) Selection of installation location for the outdoor unit

Be sure to select a suitable installation place in consideration of following conditions.

- O A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- O A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit
- O A place where the unit is not exposed to oil splashes.
- A place where it can be free from danger of flammable gas leakage.
- O A place where drain water can be disposed without any trouble.
- O A place where the unit will not be affected by heat radiation from other heat source.
- A place where snow will not accumulate.
- O A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- O A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- O A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment. O A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the
- unit, will not be generated and not remain.
- A place where strong wind will not blow against the outlet air blow of the unit.

### 4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required. The bottom plate of unit and intake, outlet may be blocked by snow.
- 1.Install the unit on the base so that the bottom is higher than snow cover surface.



2. Provide a snow hood to the outdoor unit on site. Regarding outline of a snow hood, refer to our technical manual



3.Install the unit under eaves or providen the roof on site



Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (optional parts). [Refer to Drain piping work.]
- Recommend setting Defrost Control (SW3-1) and Snow Guard Fan Control (SW3-2), [Refer to Setting SW3-1, SW3-2,]

- (2) If the unit can be affected by strong wind, following measures are required.

  Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.
- 1.Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen.



2.Install the outlet air blow side of

the unit in a position perpendicular


3. The unit should be installed on the stable and level foundation. If the foundation is not level. tie down the unit with wires.




### 5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur
- Where piling snow can bury the outdoor unit, provide proper snow guards.
- A barrier wall placed in front of the exhaust diffuser must not be higher than the unit.

			(mm	
	100V~140V			
Size Example installation	I	II	Ш	
Li	Open	Open	500	
L2	300	5	Open	
L3	150	300	150	
14	5	5	5	

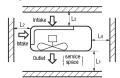

### 6) Installation

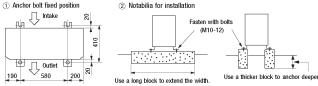

- In installing the unit, fix the unit's legs with bolts specified on the left.
- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the left illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5 mm or less.)
- Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

### 7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

• When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.

### 2. REFRIGERANT PIPING WORK

### 1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
   Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

						Marks appearting in the drawing	
One-way pipe length difference			e from the first branching point to the indoor unit		< 3m	≧ 3m	
Descriptions	Mod	el for outdoor units	Dimensional Iimitations	Single type	Twin type	Triple type A	Triple type B
One-way pipe length of	100V,125V		≦ 50m			-	-
refrigerant piping	140V		≥ 20111	L .	L+L1+L2	L+L1+L2+L3	L+La+L1+L2+L3
Main pipe length	100V,125V		≤ 50m	_		_	_
main pipe length	140V		2 50111	_	L	L	L
One-way pipe length between the first branching point from to the second branching point	140V		≦ 5m	_	-	-	La
One-way pipe length after the first	100V,125V 140V		≦ 30m	-	L1, L2	-	_
branching point						L1, L2, L3	L1 (1)
One-way pipe length after the first branching point and second branching point	140V		≦ 27 m	-	-	-	La+L2, La+L3 (1)
One way pine length difference	Twin type		≦ 10m			-	
One-way pipe length difference from the first branching point to	Triple type	140V	≦ 3m	_	L1-L2	L1-L2   ,   L2-L3   ,   L3-L1	
the indoor unit	ii ipio typo	1404	≦ 10m	1		_	L-(La+L2), L1-(La+L3) (1)
One-way pipe length difference from the second branching point to the indoor unit	140V		≦ 10m	-	-	-	L2—L3
Elevation difference between	When the outo	loor unit is positioned higher,	≦ 30m				Н
indoor and outdoor units	When the outo	loor unit is positioned lower,	≦ 15m	Н	Н	Н	
Elevation difference between indoor units			≦ 0.5m	_	h	h1, h2, h3	h1, h2, h3

- The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, see "6. UTILIZATION OF EXISTING PIPING."
- With the triple pipe connection, the way of use is different when the difference of one-way pipe length after the first branching point is 3m to 10m. For details, refer to the above table and right figure.

Note (1) Install the indoor units so that L + L1 becomes the longest one-way pipe.

Keep the pipe length difference between L1 and (La + L2) or (La + L3) within 10m.

### 2) Determination of pipe size


Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

		Model 100V Model 125V		25V		Model 140V			
		Gas pipe	Liquid pipe	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe
_		φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52
Oi	utdoor unit connected	Flare	Flare	Flare	Flare	Flare	Flare	Flare	Flare
Refrige	erant piping (branch pipeL)	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52
	Indoor unit connected	φ15.88	φ9.52	φ15.88	φ9.52			φ15.88	φ9.52
In the case of a single type	Capacity of indoor unit	Model 100V	Model VA40	Model 125V	Model VA50	] -	_	Model 140V	Model VA60
	Branching pipe set	DIS-1	WA1	DIS	-WA1	DIS	S-WA1	DIS	WA1
	Refrigerant piping (branch pipe L1,L2)	φ12.7	φ9.52	φ12.7	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52
In the case of a twin type	Indoor unit connected	φ12.7	φ6.35	φ12.7	φ6.35	φ15.88	φ6.35	φ15.88	φ9.52
	Capacity of indoor unit	Model 50V×2, Model VA20×2		Model 6	Model 60V×2		Model VA25×2		Model 30V×2
	Branching pipe set							DIS-	TA1
	Refrigerant piping (branch pipe L1,L2,L3)	-		-		-		φ12.7	φ9.52
In the case of a triple type A	Indoor unit connected							ф12.7	φ6.35
	Capacity of indoor unit							Model 50Vx3, Model VA20x3	
	Branching pipe set							DIS-	NA1
	Refrigerant piping (branch pipe La)							φ15.88	φ9.52
	Refrigerant piping (branch pipe L1)	1						φ12.7	φ9.52
In the case of a triple type B	Indoor unit connected	1	_	-	-	_		DIS-	WA1
	Refrigerant piping (branch pipe L2,L3)	1						φ12.7	φ9.52
	Indoor unit connected							φ12.7	φ6.35
	Capacity of indoor unit	1						Model 50V×3,	Model VA20×3


### **⚠** CAUTION

- When the 50V or 60V model is connected as an indoor unit, always use a φ9.52 liquid pipe for the branch (branching pipe indoor unit) and a different diameter joint supplied with the branching pipe set for connection with the indoor unit (φ6.35 on the liquid pipe side). If a  $\phi$ 6.35 pipe is used for connection with a branching pipe, a refrigerant distribution disorder may occur, causing one of the indoor units to fall short of
- A riser pipe must be a part of the main. A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible.
   A branching part must be dressed with a heat-insulation material supplied as an accessory.
   For the details of installation work required at and near a branching area, see the installation manual supplied with your branching pipe set.


### < Single type >

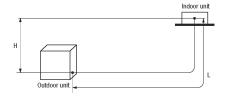


### < Twin type >

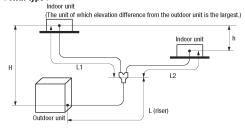

### < Triple type >

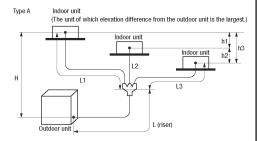

### < Triple type >

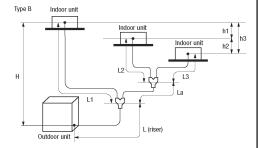


10 • PAC-DB-142


### '10 • PAC-DB-142

About brazing

### Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

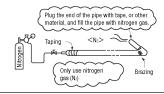

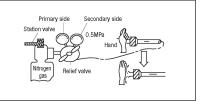

### 3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.
- This unit uses R410A. Always use 1/2H pipes having a 1.0mm or thicker wall for φ19.05 or larger pipes, because 0-type pipes do not meet the pressure resistance requirement.

Pipe diameter [mm]	6.35	9.52	12.7	15.88	22.22	25.4	28.58
Minimum pipe wall thickness [mm]	0.8	0.8	0.8	1.0	1.0	1.0	1.0
Pipe material*	0-type pipe	0-type pipe	0-type pipe	0-type pipe	1/2H-type pipe	1/2H-type pipe	1/2H-type pipe

\*Phosphorus deoxidized seamless copper pipe C1220T, JIS H3300

### NOTE

 Select pipes having a wall thickness larger than the specified minimum pipe thickness.

### 4) On-site piping work

**⚠IMPORTANT** 


 Take care so that installed pipes may not touch components within a unit. If touching with an internal component, it will generate abnormal sounds and/or vibrations.

How to remove the service panel


First remove the five screws (x mark) of the service panel and push it down into the direction of the arrow mark and then remove it by pulling it toward you.

- The pipe can be laid in any of the following directions: side right, front, rear and downward.
- Remove a knock-out plate provided on the pipe penetration to open a minimum necessary area and attach an edging material supplied as an accessory by cutting it to an appropriate length before laying a pipe.
- Carry out the on site piping work with the operation valve fully closed.
- Give sufficient protection to a pipe end (compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical.(R100~R150)
   Do not bend a pipe repeatedly to correct its form.
   Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.



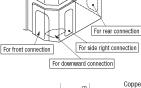

Α	Flared pipe	end: A (mm)
	Copper pipe outer diameter	A 0 -0.4
	φ6.35	9.1
	φ9.52	13.2
	φ12.7	16.6
	φ15.88	19.7

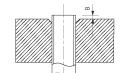

opper pipe protrusion for flaring: B (mm)								
Copper oipe outer	In the case of a rigid (clutch) type							
diameter	With an R410A tool	With a conventional tool						
$\phi$ 6.35								
$\phi$ 9.52	0~0.5	0.7~1.3						
$\phi$ 12.7	0~0.5	0.7~1.3						
φ15.88								


Tighten a flare joint securely with a double spanner.



### Do not apply force beyond proper fastening torque in tightening the flare nut.


Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Operation valve size (mm)	Tightening torque (N-m)	Tightening angle (°)	Recommended length of a tool handle (mm)
φ6.35 (1/4")	14~18	45~60	150
φ9.52 (3/8")	34~42	30~45	200
φ12.7 (1/2")	49~61	30~45	250
φ15.88 (5/8")	68~82	15~20	300

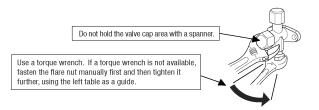

### 5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the operation valve's check joint equipped on the outdoor unit side. While conducting a test, keep the operation valve shut all the time.
- a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
- b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
- c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
- d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient Temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
- e) If a pressure drop is observed in checking e) and a) d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

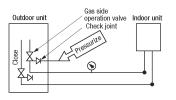

## 10 • PAC-DB-142


### 6) Evacuation

<Work flow> When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise.

Check the system for a leaky point and then draw air to create a vacuum again.

Run the vacuum pump for at least one hour after the vacuum gauge shows -101kPa or lower, (-755mmHg or lower) Confirm that the vacuum gauge indicator does not rise even if

the system is left for one hour or more.

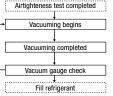

### Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- OUse a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

### 7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

<ol> <li>confide type</li> </ol>	<b>6</b> /				
Item Capacity	Standard refrigerant charge volume (kg)		Additional charge volume (kg) per meter of refrigerant piping (liquid pipe)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Model 100V					
Model 125V	2.0	0	0.06	3.8	30
Model 140V					

<Twin. triple. W-twin type>

Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional char per meter of re (liquid pipe)	ge volume (kg) frigerant piping	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge	
Capacity		charge volume (m)	Main pipe	Branch pipe	at the factory (kg)		
Model 100V							
Model 125V	2.0	0	0.06		3.8	30	
Model 140V							

- A standard refrigerant charge volume means a refrigerant charge volume for an installation with 0m long refrigerant piping.
- This unit contains factory charged refrigerant covering 30m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 30m refrigerant piping. When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.
- When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from the factory charged volume and adjust to 2.8kg.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, see "6. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

Model 100~140V Additional charge volume (kg) = { Main pipe length (m) - Length covered without additional charge 30 (m) } x 0.06 (kg/m) + Total length of branch pipes (m) x 0.06 (kg/m)

\*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

● To charge refrigerant again, recover refrigerant from the system first and then charge the volume calculated from the above table (Standard refrigerant charge volume + branch pipes charge volume)


### (2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the operation valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will passify upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel


### 8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
  - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
  - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
  - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
  - Give heat insulation to both gas and liquid side piges. Bundle a heat insulating material and a pige tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
  - Although it is verified in a test that this air conditioning unit shows satisfactory performance under JIS condensation test conditions, both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

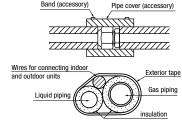

### 3. DRAIN PIPING WORK

• Execute drain piping by using a drain elbow and drain grommets supplied separately as optional parts, where water drained from the outdoor unit is a problem.

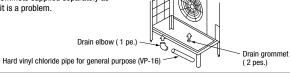

- O There are 3 drain holes provided on the bottom plate of an outdoor unit to discharge condensed water.
- O When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an optional part) or concrete blocks.
- Oconnect a drain elbow as shown in the illustration and close the other two drain holes with grommets.

### **4. ELECTRICAL WIRING WORK** For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.

- •Do not use any supply cord lighter than one specified in parentheses for each type below.
- braided cord (code designation 60245 IEC 51).
- ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
- flat twin tinsel cord (code designation 60227 IEC 41):


Do not use anything lighter than polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.

- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
   If impropery grounded, an electric shock or malfunction may result.
- •A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- •The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an acccident such as an electric shock or a fire.
- •Do not turn on the power until the electrical work is completeted
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It dose not improve power factor, while it can cause an abnormal overheat accident)
- For power supply cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them
  together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.


Power cable, indoor-outdoor connecting wires

 Always perform grounding system installation work with the power cord unplugged.

- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

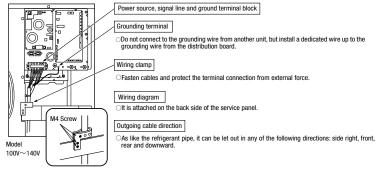




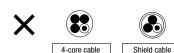



Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

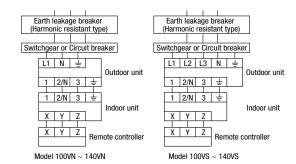

Model	Power source	Power cable thickness(mm²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness × number
100VN	Single phase 3 wire					
125VN	220-240V 50Hz	5.5	24	25		
140VN	220V 60Hz				φ1.6mm	φ1.6mm x 3
100VS	3 phase 4 wire				φι.σιιιι	ψ1.0iiiii x 0
125VS	380-415V 50Hz	3.5	15	27		
140VS	380V 60Hz					

At the connection with the duct type indoor unit.

Art the connection with the duct type moon time.									
Model	Power source	Power cable thickness (mm²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness $ imes$ number			
100VN	Single phase 3 wire		25	24					
125VN	220-240V 50Hz	50Hz 5.5	27	22					
140VN	140VN 220V 60Hz	8	28	32	φ1.6mm	φ1.6mm x 3			
100VS	3 phase 4 wire		16	26	φ 1.5	, , ,			
125VS		3.5	18	23					
140VS	380V 60Hz		19	21					

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchoear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

### ♠ WARNING

- Before conduct a test run, do not fail to make sure that the operation valves are closed.
- Turn on power 6 hours prior to a test run to energize the crank case heater.
- In case of the first operation after turning on power, even if the unit does not move for 30 minutes, it is not a breakdown.
- Always give a 3-minute or longer interval before you start the unit again whenever it is stopped.
- Removing the service panel will expose high-voltage live parts and high-temperature parts, which are quite

Take utmost care not to incur an electric shock or burns. Do not leave the unit with the service panel open.

- When you operate switches (SW3, SW5) for on-site setting, be careful not to touch a live part.
- ↑ CAUTION You cannot check discharge pressure from the liquid operation valve charge port.
  - The 4-way valve (20S) is energized during a heating operation.
  - When power supply is cut off to reset the unit, give 3 or more minutes before you turn on power again after power is cut off. If this procedure is not observed in turning on power again, "Communication error between outdoor and indoor unit" may occur.

### 1) Test run method

- (1) A test run can be initiated from an outdoor unit by using SW3-3 and SW3-4 for on-site setting.
- (2) Switching SW3-3 to ON will start the compressor.
- (3) The unit will start a cooling operation, when SW3-4 is OFF, or a heating operation, when SW3-4 is ON.
- (4) Do not fail to switch SW3-3 to OFF when a test run is completed.

### SW-3-3 SW-3-4 0FF Cooling during a test run ON ON Heating during a test run OFF Normal or After the test operation

### 2) Checking the state of the unit in operation

Use check joints provided on the piping before and after the four-way valve installed inside the outdoor unit for checking discharge pressure and suction pressure. As indicated in the table shown on the right, pressure detected at each point will vary depending on whether a cooling or heating operation has been selected.

	Check joint of the pipe	Charge port of the gas operation valve		
Cooling operation	Discharge pressure (High pressure)	Suction pressure (Low pressure)		
Heating operation	Suction pressure (Low pressure)	Discharge pressure (High pressure)		

### 3) Setting SW3-1, SW3-2, on-site

- (1) Defrost control switching (SW3-1)
  - ·When this switch is turned ON, the unit will run in the defrost mode more frequently.
- •Set this switch to ON, when installed in a region where outdoor temperature falls below zero during the season the unit is run for a heating operation.
- (2) Snow guard fan control (SW3-2)
  - ·When this switch is turned on, the outdoor unit fan will run for 10 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running.
  - ·When the unit is used in a very snowy country, set this switch to ON.

### 4) Failure diagnosis in a test run

Error indicated on the	Printed circuit board LED(The cycles of 5 seconds)		Failure event	Action		
remote control unit	remote control unit Red LED Green LED		Fallule event	Action		
E34	Blinking once Blinking continuously		Open phase	Check power cables for loose contact or disconnection		
E40	Blinking once	Blinking continuously	63H1 actuation or operation with operation valves shut (occurs mainly during a heating operation)	Check whether the operation valves are open.     If an error has been canceled when 3 minutes have elapsed.		
E49	E49 Blinking once Blinking continuously		Low pressure error or operation with operation valves shut (occurs mainly during a cooling operation)	since a compressor stop, you can restart the unit by effecting Check Reset from the remote control unit.		

• If an error code other than those listed above is indicated, refer to the wiring diagram of the outdoor unit and the indoor unit.

### 5) The state of the electronic expansion valve.

The following table illustrates the steady states of the electronic expansion valve

The following table indefation the stoady states of the diodestric expansion vary.									
	When power is turned on		nes to a normal stop	When the unit come	s to an abnormal stop				
	when power is turned on	During a cooling operation	During a heating operation	During a cooling operation	During a heating operation				
Valve for a cooling operation	Complete shut position	Complete shut position	Full open position	Full open position	Full open position				
Valve for a heating operation	Full open position	Full open position	Complete shut position	Full open position	Full open position				

### 6) Heed the following on the first operation after turning on the circuit breaker.

This outdoor unit may start in the standby mode (waiting for a compressor startup), which can continue up to 30 minutes, to prevent the oil level in the compressor from lowering on the first operation after turning on the circuit breaker. If that is the case, do not suspect a unit failure.

A failure to observe these instructions can result in a compressor breakdown.


### Items to checkbefore a test run

• When you leave the outdoor unit with power supplied to it, be sure to close the panel.

Item No.used in the installation manual	Item	Check item	Check
		If brazed, was it brazed under a nitrogen gas flow?	
	Refrigerant	Were air-tightness test and vacuum extraction surely performed?	
2	plumbing	Are heat insulation materials installed on both liquid and gas pipes?	
	pg	Are operation valves surely opened for both liquid and gas systems?	
		Have you recorded the additional refrigerant charge volume and refrigerant pipe length on the panel's label?	
		Is the unit free of cabling errors such as uncompleted connection, an absent or reversed phase?	
	Electric wiring	Are properly rated electrical equipments used for circuit breakers and cables?	
		Doesn't cabling cross-connect between units, where more than one unit are installed?	
		Aren't indoor-outdoor signal wires connected to remote control wires?	
4		Do indoor-outdoor connecting cables connect between the same terminal numbers?	
·		Are either VCT cabtyre cables or WF flat cables used for indoor-outdoor connecting cables?	
		Does grounding satisfy the D type grounding (type III grounding) requirements?	
		Is the unit grounded with a dedicated grounding wire not connected to another unit's grounding wire?	
		Are cables free of loose screws at their connection points?	
		Are cables held down with cable clamps so that no external force works onto terminal connections?	
_	landa an conte	Is indoor unit installation work completed?	
_	Indoor unit	Where a face cover should be attached onto an indoor unit, is the face cover attached to the indoor unit?	


Test run procedure	<ul> <li>Always carry out a test run and check the following in order as listed.</li> </ul>
--------------------	---

Turn	The contents of operation	Check			
1	Open the gas side operation valve fully.				
2	Open the liquid side operation valve fully.				
3	Close the panel.				
4	Where a remote control unit is used for unit setup on the installation site, follow instructions for unit setup on the installation site with a remote control unit.				
(5)	SW3-3 ON / SW3-4 OFF: the unit will start a cooling operation.				
(3)	SW3-3 ON / SW3-4 ON: the unit will start a heating operation.				
6	When the unit starts operation, press the wind direction button provided on the remote control unit to check its operation.				
7	Place your hand before the indoor unit's diffuser to check whether cold (warm) winds come out in a cooling (heating) operation.				
8	Make sure that a red LED is not blinking.				
9	When you complete the test run, do not forget to turn SW3-3 to the OFF position.				
10	Where options are used, check their operation according to the respective instruction manuals.				

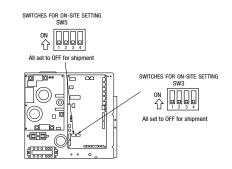

# '10 • PAC-DB-142

### 6. UTILIZATION OF EXISTING PIPING.

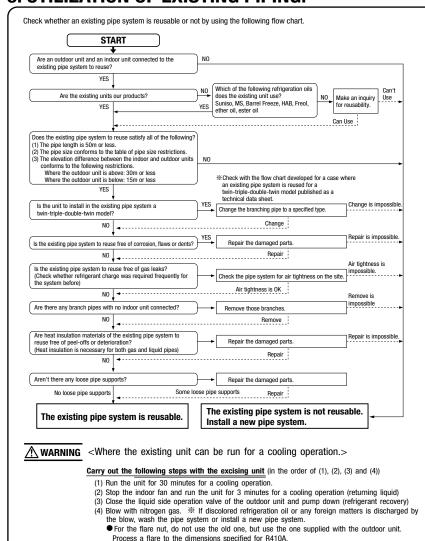

• Turn on-site setting switch SW5-1 to the ON position. (Where the gas pipe size is  $\phi$  19.05)

<Where the existing unit cannot be run for a cooling operation.>

If you choose to wash the pipe system, contact our distributor in the area.

Wash the pipe system or install a new pipe system.

- <Table of pipe size restrictions>
- ⊚:Standard pipe size ○:Usable
- △:Restricted to shorter pipe length limits

Additional	charging amount of refrigerant per 1m	ng amount of refrigerant per 1m 0.06kg/m		0.08kg/m	
Pipe size	Liquid pipe	φ9.52	φ9.52	φ12.7	φ12.7
ripe size	Gas pipe	φ15.88	φ19.05	φ15.88	φ19.05
	Usability	0	○※1	$\triangle$	△※1
100V	Maximum one-way pipe length	50	50	25	25
	Length covered without additional charge	30	30	15	15
	Usability	0	○%1	$\triangle$	△※1
125V	Maximum one-way pipe length	50	50	25	25
	Length covered without additional charge	30	30	15	15
	Usability	0	○※1	$\triangle$	△※1
140V	Maximum one-way pipe length	50	50	25	25
	Length covered without additional charge	30	30	15	15

- \*\*1 Because of its insufficient pressure resistance, **turn the dip switch SW5-1** provided on the outdoor unit board to the ON position for  $\phi$  19.05  $\times$  t1.0.
  - (In the case of a twin-triple-double-twin model, this also applies to the case where  $\phi$  19.05  $\times$  t1.0 is used in a pipe system after the first branching point.
  - However, you need not turn the dip switch SW5-1 to the ON position, if 1/2H pipes or pipes having 1.2 or thicker walls are used.
- 32 When the main pipe length exceeds 40m, a significant capacity drop may be experienced due to pressure loss in the liquid pipe system. Use  $\phi$  12.7 for the liquid main.
- %3 Keep the total pipe length, not one-way pipe length, below the specified maximum pipe length.
- When refrigerant piping is shoter than 3m, reduce refrigerant by 1kg from factory charged volume and adjust to 2.8kg.
- Any combinations of pipe sizes not listed in the table or marked with X in the table are not usable.

### <Pipe system after the branching pipe>

- ⊚:Standard pipe size ○:Usable ×:Not usable
- Any combinations of pipe sizes not listed in the table or marked with × in the table are not usable.

				After 1st branch *4			After 2nd branch		
Addition	Additional charging amount of refrigerant per 1m		0.06kg/m			0.06kg/m			
D: .	Liqui	d pipe	φ9.52			φ9.52			
Pipe size	Gas	pipe	φ12.7	7 φ15.88 φ19.05 × 1		φ12.7	φ15.88	φ19.05 ** 1	
Model	Combination type	Combination of capacity							
100V	Twin	50+50	0	0	×	-	_	-	
125V	Twin	60+60	0	0	×	-	_	-	
	Twin	71+71	×	0	0	_	_	_	
140V	Triple A	50+50+50	0	0	×	-	-	-	
	Triple B	50+50+50	×	O*5	○※5	0	0	×	

- \*4 Piping size after branch should be equal or smaller than main pipe size.
- 3.5 Piping size from first branch to indoor unit should be  $\phi 9.52$  (Liquid)  $/\phi 12.7$  (Gas).
- <The model types of existing units of which branching pipes are reusable.> Models later than Type 8.
  - ●FDC \* \* \* 8 □ □ □
  - ●FDCP \* \* \* 8 □ □ □

The branching pipes used with models other than those listed above are not reusable because of their insufficient pressure resistance. Please use our genuine branching pipes for R410A.

• \* \* \* are numbers representing horsepower.  $\square$   $\square$  is an alphanumeric letter.

### Formula to calculate additional charge volume

Additional charge volume (kg) = {Main pipe length (m) - Length covered without additional charge shown in the table (m)}  $\times$  Additional charge volume per meter of pipe shown in the table (kg/m) + Total length of branch pipes (m) $\times$  Additional charge volume per meter of pipe shown in the table (kg/m)

If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.
 Example) When an 140V (single installation) is installed in a 20m long existing pipe system (liquid φ12.7, gas φ19.05), the quantity of refrigerant to charge additionally should be (20m-15m) x 0.08kg/m = 0.4 kg.

### (4) Models FDC200, 250VS

This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to the respective installation manuals supplied with the units.

When install the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between indoor and outdoor units, power supply voltage and etc.) and installation spaces

### SAFETY PRECAUTIONS

- We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into AWARNING and ACAUTION. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the AWARNING and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in ACAUTION. These are very important precautions for safety. Be sure to observe all of them without fail.
- The meaning of "Marks" used here are as shown below.

Never do it under any circumstance.


Always do it according to the instruction

- For this outdoor unit, EN61000-3-2 is not applicable if consent by the utility company or nortification to the utility company is given before usage.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user

Inverter driven single split PAC 200V · 250V Designed for R410A refrigerant

### **Check before installation work**

### [ Accessory 1

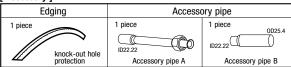

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

### WARNING



 Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system

Install the system in full accordance with the instruction manual.

Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire.

 Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause fall of the unit, water leaks, electric shocks, fire, refrigerant leak, substandard performance, control failure and personal injury.

● When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage accordance with ISO5149. Consult the expert about prevention measures, If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which

can cause serious accidents.

• Ventilate the working area well in the event of refrigerant leakage during installation. If the refrigerant comes into contact with naked flames, poisonous gas is produced.

After completed installation, check that no refrigerant leaks from the system.

If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous gas is produced.

 Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to hang up the unit at 4-point support.

An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit

Install the unit in a location with good support.

Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.

• Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.

• The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit.

Power supply with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire,

Be sure to shut off the power before starting electrical work.

Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.

 Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire.

 Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks

Loose connections or cable mountings can cause anomalous heat production or fire.

Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. Incorrect installation may result in overheating and fire.



### Do not perform brazing work in the airtight room

It can cause lack of oxygen.

Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.

• Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to

Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen.

● Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation.

If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant

• Only use prescribed optional parts. The installation must be carried out by the qualified installer.

If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.

 Do not perform any change of protective device itself or its setup condition The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.

Be sure to switch off the power supply in the event of installation, inspection or servicing.

If the power supply is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.

Consult the dealer or an expert regarding removal of the unit. Incorrect installation can cause water leaks, electric shocks or fire

• Stop the compressor before closing valve and disconnecting refrigerant pipes in case of pump down operation.

If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit



• Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.

Do not run the unit with removed nanels or protections.

Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric

Be sure to fix up the service panels.

Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water

Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair. If you repair or modify the unit, it can cause water leaks, electric shocks or fire.

### 10• PAC-DB-142

### Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant. A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit operation valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

	Dedicated R410A tools
a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charging
d)	Torque wrench
e)	Flare tool
f)	Protrusion control copper pipe gauge
g)	Vacuum pump adapter
h)	Gas leak detector

### 1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

Wooden pallet

**△** CAUTION

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position.

If not properly balanced, the unit can be thrown off-balance and fall.

### 1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When some compelling reason necessitates the unpacking of the unit before it is carried in, use nylon slings or protective wood pieces so as not to damage the unit by ropes lifting it.

### 3) Selection of installation location for the outdoor unit

Be sure to select a suitable installation place in consideration of following conditions.

- O A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit
- O A place where the unit is not exposed to oil splashes.
- O A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- O A place where the unit will not be affected by heat radiation from other heat source.
- A place where snow will not accumulate.
- O A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- O A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- O A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- O A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
- O A place where strong wind will not blow against the outlet air blow of the unit

### 4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required. The bottom plate of unit and intake, outlet may be blocked by snow.
- 1.Install the unit on the base so that the bottom is higher than snow cover surface.



2 Provide a snow hood to the outdoor unit on site Regarding outline of a snow hood, refer to our technical



3.Install the unit under eaves or provide the roof on site



Since drain water generated by defrost control may freeze, following measures are required.


- Don't execute drain piping work by using a drain elbow and drain grommets (optional parts). [Refer to Drain piping work.]
- Recommend setting Defrost Control (SW3-1) and Snow Guard Fan Control (SW3-2). [Refer to Setting SW3-1, SW3-2.]
- (2) If the unit can be affected by strong wind, following measures are required.

Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure

unit to face a wall of building, or provide a fence or a windbreak



1.Install the outlet air blow side of the 2.Install the outlet air blow side of the unit in a position perpendicular to the direction of

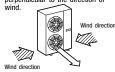

3.The unit should be installed on the stable and level foundation. If the foundation is not level. tie down the unit with wires



### 2) Portage


• The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.




### 5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.
- A barrier wall placed in front of the exhaust diffuser must not be higher than the unit.

			(mm	
	200V, 250V			
Size Example installation	I	II	Ш	
L1	Open	Open	500	
L2	300	5	Open	
L3	150	300	150	
L4	5	5	5	

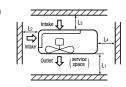

### 6) Installation

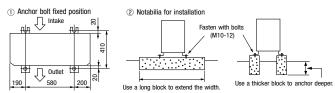

- In installing the unit, fix the unit's legs with bolts specified on the left.
- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the left illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5 mm or less.)

Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

### 7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

● When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.

### 1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
   Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Marks appearting in the drawing							Ma	rks appearting in the drawing	
	Or	e-way pipe	e length difference from the	first branching	point to the ind	oor unit	< 3m	≥ 3m	
Restrictions	Model for outdoor units		Dimensional restrictions	Single type	Twin type	Triple type A	Triple type B	W-twin type	
	200V I	iauid Pipina	φ9.52	≤ 40m			L+L1.L+L2.L+L3	L+L1m	
One-way pipe length of refrigerant piping		rquiu i iping	φ12.7	≤ 70m	l L	L+L1	2 1 21, 2 1 22, 2 1 20	2.2.()	L+La+L1, L+La+L2
3,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	200V- 250V	as piping	φ25.4 or φ28.58			L+L2	L+L1, L+La+L2, L+La+L3 (2) (type B)	Prohibitation of the use	L+Lb+L3, L+Lb+L4
	25UV		φ22.22	≤ 35m			, , , , , , , , , , , , , , , , , , , ,		
	200V L	iquid Piping	φ9.52 φ12.7	≤ 40m	-			L+L1 (1)	
Main pipe length	$\vdash$		φ12.7 φ25.4 or φ28.58	≤ 70m	-	L	L		L
	200V- 250V	as piping	φ23.4 01 φ26.36	≤ 35m	-			Prohibitation of the use	
One-way pipe length between the first branching	200V						-	La	
point from to the second branching point	250V ≤ 5				_	-	La	Prohibitation of the use	_
One-way pipe length after the first branching	250V		≤ 30m	_	_	L1, L2, L3	L1 (1)	La+L1, L+La+L2 Lb+L3, Lb+L4	
point			= 30111		_	L1, La+L2, L+La+L3 (2) (type B)	Prohibitation of the use	LD+L3, LD+L4	
One-way pipe length after the first branching point and second branching point	200V			≤ 27m	-	-	-	La+L2, La+L3(1)	-
	Twin type 200V		≤ 10m			-			
				≤ 3m			L1-L2   ,   L2-L3   ,   L3-L1		_
One-way pipe length difference from the first	Triple typ	e		≤ 10m	-	L1-L2		L1-(La+L2), L1-(La+L3) (1)	
branching point to the indoor unit		250V		≤ 3m			L1-(La+L2)   ,   L1-(La+L3)   ,   L2-L3   (2) (3) (6)	Prohibitation of the use	L1-L2   .   L3-L4
	W-twin ty	200V-	250V	≤ 10m			-	-	L1-L2   L3-L4     (L1+La)-(L3+Lb)   (L1+La)-(L4+Lb)     (L2+La)-(L3+Lb)   (L2+La)-(L4+Lb)
One-way pipe length difference from the second branching point to the indoor unit	200V			≤ 10m	-	-	_	L2—L3	L1-L2   ,   L3-L4
Total pipe length after the second branching point				≤ 15m	-	-	-	-	L1+L2, L3+L4
Elevation difference between indoor and outdoor			unit is positioned higher,	≤ 30m	н	н	н	н	н
units	When to	ne outdoor	unit is positioned lower,	≤ 15m					
Elevation difference between indoor units				≤ 0.5m	_	h	h1, h2, h3	h1, h2, h3	h1, h2, h3, h4, h5, h6

### **△** CAUTION

- For model 200V, always use \$\phi\$ 12.7mm liquid pipes, when the length of the main "L" exceeds 40m. If \$\phi\$ 9.52mm pipes are used in an installation having over 40m piping, they can cause performance degradation and/or water leaks from an indoor unit.

  The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, see "6. UTIL/ZATION OF EXSTING PIPING."

With the triple pipe connection, the way of use is different when the difference of one-way pipe length after the first branching point is 3m to 10m. For details, refer to the above table and right figure.

Note (1) Install the indoor units so that L+L1 becomes the longest one-way pipe. Keep the pipe length difference between L1 and La+L2) or (La+L3) within 10m. Note (2) Connect the unit that is the maximum capacity with L1.

### 2) Determination of pipe size

• Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

		Mode	el 200V			Mode	el 250V			
		Gas pipe	Liquid pipe	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe	
0	tdoor unit connected	φ22.22	φ9.52	φ22.22	φ12.7	φ22.22	φ12.7	φ22.22	φ12.7	
			Flare	Brazing	Flare	Brazing	Flare	Brazing	Flare	
Refrigera	nt piping (branch pipeL)	φ22.22	φ9.52 or φ12.7	φ22.22	φ12.7	φ22.22	φ12.7	φ22.22	φ12.7	
In the case of asingle type	Indoor unit connected	φ25.4	φ9.52	φ25.4	φ12.7	-		_	_	
ili tile case oi asiligie type	Capacity of indoor unit	Model 200	OV, Model VA80	Model 250V, N	lodel VA100			_		
	Branching pipe set	DIS	S-WB1	DIS-	WB1					
In the case of atwin type	Refrigerant piping (branch pipe L1,L2)	φ15.88	φ9.52	φ15.88	φ9.52					
in the case or atwin type	Indoor unit connected	φ15.88	φ9.52	φ15.88	φ9.52		_	-	-	
	Capacity of indoor unit	Model 100V×	2, Model VA40×2	Model 125V×2,	Model VA50×2					
	Branching pipe set	DI	S-TB1							
In the case of a triple type A	Refrigerant piping (branch pipe L1,L2,L3)	φ15.88							1	
III tile case of a triple type A	Indoor unit connected	φ15.88	φ15.88 φ9.52 -			_	-	-		
	Capacity of indoor unit	Model 71V×3, Model VA30×3								
	Branching pipe set	DIS	S-WB1	DIS-	WB1	DIS	-WB1	DIS-1	VB1	
	Refrigerant piping (branch pipe La,L1)	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52	
	Branching pipe set		S-WA1	DIS-I			-WA1	DIS-1		
In the case of a triple type B	Refrigerant piping (branch pipe L2,L3)	φ15.88	φ9.52	φ12.7	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52	
	Indoor unit connected	φ15.88	φ9.52	φ12.7	φ6.35	φ15.88	φ9.52	φ15.88	φ6.35	
	Capacity of indoor unit	Model 71V×3	, Model VA30×3	Model 60V×2	+ Model 125V	Model 71V×2+Model 100V Model VA30×2+Model VA40		Model VA25×2+Model VA50		
	Branching pipe set	DIS	S-WA1	DIS-1	VB1	DIS	DIS-WB1			
In the case of a W-twin type	Refrigerant piping (branch pipe La,Lb)	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52	1		
	Branching pipe set	DIS-1	WA1 × 2	DIS-WA	1×2	DIS-W	/A1 × 2	1		
in the case of a 17-twill type	Refrigerant piping (branch pipe L1,L2,L3,L4)	φ12.7	φ9.52	φ12.7	φ9.52	φ12.7	φ9.52	1 -		
	Indoor unit connected	φ12.7	φ6.35	φ12.7	φ6.35	φ12.7	φ6.35			
	Capacity of indoor unit	Model 50V×4,	Model VA20×4	Model	60V×4	Model	VA25×4			

### **⚠** CAUTION

- the branching pipe set for connection with the indoor unit ( $\phi$ 6.35 on the liquid pipe side).
- in the unanamy pure set in connection with a theraching pie, a refrigerant distribution disorder may occur, causing one of the indoor units to fall short of the rated capacity.


   A riser pipe must be a part of the main. A branching pipe, are st should be installed horizontally at a point as close to an indoor unit as possible.

   A branching part must be dreased with a heat-insulation material supplied as an accessory.


   For the details of installation work required at and near a branching area, see the installation manual supplied with your branching pipe set.

### 3) How to use pipe reducer.


φ22.22(0D) size of the refrigerant gas pipe can be used by using accessory pipe A,B.

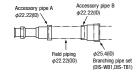


φ25.4(OD) size of the refrigerant gas pipe can be used by using accessory pipe A and joint pipe C.
 Ready joint C yourself. Need not accessory pipe B.

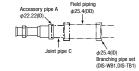


φ28.58(OD) size of the refrigerant gas pipe can be used by using accessory pipe A and joint pipe C,D. Ready joint C and D yourself.

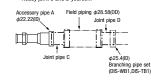

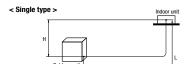


### < Twin type >

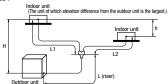


### < Triple type >


Type A

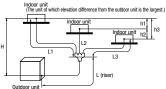

### < Triple type >

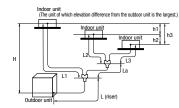


### < W-twin type >

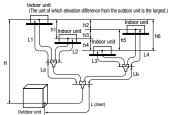

### About brazing

### Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

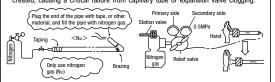

\*When an additional charge volume calculation result is negative,

it is not necessary to charge refrigerant additionally.

# 4) Refrigerant pipe wall thickness and material

Minimum pipe wall thickness [mm] Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe

0-type pipe | 0-type pipe | 0-type pipe | 0-type pipe | 1/2H-type pipe \*Phosphorus deoxidized seamless copper pipe C1220T, JIS H3300 Pipe material\* This unit uses R410A. Always use 1/2H pipes having a 1,0mm or thicker wall for φ19.05 or larger pipes, because 0-type pipes do not meet the pressure resistance requirement.

than the specified minimum pipe thickness. Select pipes having a wall thickness larger

1/2H-type pipe 1/2H-type pipe

NOTE

28.58 0.

25.4

22.22

15.88 0.

12.7 0.8

9.55

6.35 0.8

Pipe diameter [mm]

0.1

For rear connection For side right connection

For front connection

Model 200V

# 5) On-site piping work

 Take care so that installed pipes may not touch components within a unit. If touching with an internal component, it will generate abnormal sounds and/or vibrations. **<b>☆IMPORTANT** 

arrow mark and then remove it by pulling it toward you.

The pipe can be laid in any of the following directions: side right, front, rear and downward.

First remove the five screws (x mark) of the service panel and push it down into the direction of the How to remove the service panel

material Remove a knock-out plate provided on the pipe penetration to open a minimum necessary area and attach an edging supplied as an accessory by cutting it to an appropriate length before laying a pipe.


 Carry out the on site piping work with the operation valve fully closed.
 Compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.

●Bend a pipe to a radius as large as practical.(R100~8150) Do not bend a pipe repeatedly to correct its form.

●Bend a pipe the used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for F410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring bols be used by adjusting the measurement of protrusion B with a profusion control gauge. ●Use accessory pipes. For detailed installation procedures, consult with the installation manual attached to your accessory pipe. ●The pipe should be anchored every 1.5m or less to isolate the vibration.
■ Interpret a flare pint securely with a double spanner.

⋖ Copper pipe outer diameter  $\phi 15.88$ φ9.52 φ6.35 φ12.7



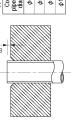

Cop	으운병	Ľ		_	Ð	
8	-				7	
					_0	
end: A (mm)	A 0.4	9.1	13.2	16.6	19.7	
Flared pipe end: A (mm)	Copper pipe outer diameter	φ6.35	φ9.52	φ12.7	φ15.88	

Conn	pipe of	φę:	φ9.	φ12	φ15.	
				3		
-						
		1111	7111	7	7	
		III			_0	
	1777	7777	.222	23		
_		_	_		_	

Ľ	<u>-ਵਾ</u> ਹ		ũ	
-	1116		7	
			V	
Г				

	ge en	9Ф	φ	φ	φ16	
		:///		2		
				<u></u>	$\neg$	
	+	_		7	6	
ſ	_					

				_0	
0-0.4	9.1	13.2	16.6	19.7	

•			
			6
Г	4		

ſ						
L					_0	
	4.0	9.1	3.2	9.9	9.7	

Contraction of the Contraction o					_
_	4	~	~	_	

۵.					
				6	
0.4	_	2	9	7	

3	pipe	Ф	Ф	•	Φ	
						_
	₹#					

		30.10	00.3			Do not hold the valve cap area with a spa			n is not available,	en tighten it
	φ6.35	φ9.52	φ12.7	φ15.88		old the valve			orque wrencl	ly first and th
111111111111111111111111111111111111111					_	Do not			Use a torque wrench. If a torque wrench is not available,	fasten the flare nut manually first and then tighten it
					1	nmended length ool handle (mm)	150	200	250	300

ip area with a spanner.

	Don			Use a torque wrench. If	fasten the flare nut man	further, using the left tal
ning torque Tightening angle Recommended length	of a tool handle (mm)	150	200	250	300	450
Tightening angle	( °	45~60	30~45	30~45	15~20	15~20
ning torque	(N-m)	1~18	1~42	9~61	3~82	0~150

ible as a guide

φ6.35 (1/4") φ9.52 (3/8") Do not apply force beyond proper fastening torque in tightening the flare nut. Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and

then fasten them, applying appropriate fastening torque.

CAUTION

M

6) Air tightness test

① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the operation valve's check joint equipped on the outdoor unit side. While condecting a test, keep the operation valve stur all the firms.

a) Balse the pressure to 0.5 MPa, and then stop, Leave if for minutes to see if the pressure drops.

b) Then raise the pressure to 1.5 MPa, and stop. Leave if for more minutes to see if the pressure drops.

c) Then raise the pressure to 1.5 MPa, and stop. Leave if for more minutes to see if the pressure drops.

d) If no pressure drop is observed with an installation pressurated for the specified level and left for about one day, it is acceptable. When the ambient Temperature fall 1°C, the pressure also fall approximately 0.0.0 MPa. The pressure if changed, should be compensated for.

e) If a pressure drop is observed in checking e) and a) – d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an alr-lightness test again.

② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances

Pay attention to the following points in addition to the above for the R410A and compatible machines. Airtighteness test completed Vacuuming begins

Oto prevent a different oil from entiering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).

Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system. Vacuuming completed Vacuum gauge check Fill refrigerant Run the vacuum pump for at least one hour after the vacuum gauge shows -101kRa or lower (-755mmHg or lower) Confirm that the vacuum gauge indicator does not rise even if the system is left for one hour or more.

<Twin, triple, W-twin type>

Refrigerant volume charged for shipment at the factory (kg) 5.4 7.2 Branch pipe Additional charge volume (kg) per meter of refrigerant piping (liquid pipe) 90.0 90.0 Main pipe 0.12 Pipe length for standard refrigerant charge volume (m) 0 Standard refrigerant 3.6 Tem Tem Model V200 Model V250 Capacity

Installation's pipe length (m) covered without additional refrigerant charge

93

Pipe length for Additional charge volume (kg) Refrigerant volume standard refrigerant per meter of refrigerant piping charged for shipment charge volume (m) (liquid pipe) at the factory (kg) 0.06 (Liquid piping  $\phi 9.52$ ) Item Standard refrigerant charge volume (kg) <Single type>

(1) Calculate a required refrigerant charge volume from the following table

8) Additional refrigerant charge

When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a

vacuum again.

Evacuation

<Work flow>

Installation's pipe length (m) covered without additional refrigerant charge 9

7.2 Model 250V

5.4

0.12 (Liquid piping \$12.7)

0

3.6

Model 200V

Capacity

Moder Eavy

A standard refrigerant charge volume means a refrigerant charge volume for an installation with 0m long refrigerant piping.

A standard refrigerant charge volume means a refrigerant charge volume for an installation with up to 30m refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 30m refrigerant piping.

When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.

When refrigerant piping is shoter than 3m, reduce refrigerant by 1kg from factory charged volume and adjust to 4.4kg/Model 200V) or 6.2kg/Model 250V).

Formula to calculate the volume of additional refrigerant required

Additional charge volume (kg) = { Main pipe length (m) – Length covered without additional charge 30 (m) \$ x 0.12 (kg/m) + Total length of branch pipes (m) x 0.06 (kg/m) In the case of  $\phi$ 9.52mm liquid piping | Additional charge volume (kg) = { Main pipe length (m) - Length covered without additional charge 30 (m) } x 0.06 (kg/m) x 0.06 (kg/m) + Total length of branch pipes (m) x 0.06 (kg/m) in the case of  $\phi$ 1.27mm liquid piping | Additional charge volume (kg) = { Main nine length (m) - Length covered without additional charme 30 (m) x 0.05 (kg/m) + Total length of branch of bra Model 200V

To charge refrigerant again, recover refrigerant from the system first and then charge the volume calculated from the above table

(Standard refrigerant charge volume + branch pipes charge volume)

- (2) Charging refrigerant
- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.

  Since R410A refrigerant always from the liquid side service port with the operation value side. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant she taken so that refrigerant may be discharged from the cylinder in the figure phase on the cylinder valve is throttled down or a dedicated conversion tool to charge figured-phase efficiental valves refrigerant in mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.

   In the protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.

   In the protect the compressor however adjust charge could be conditions as the charge obtains.

   In the protect the compressor however, adjust charge could be conditions. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.
- NOTE
  - Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.

# 9) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
   (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulation map to heat insulation may be a configuration or personal injury from burns heat must be recursely theat insulation parts (pier over from dipping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
   What indoor units fare joints with heat insulation parts (pier over) for heat insulation probing and liquid pipes).
   Give heat insulation and pipes. Burdle a test insulation material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressed pipes. Burdle a test insulation material and a pipe tightly together so that no gaps may be left between them and wrap them together with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

### Gas piping Wires for connecting indoor and outdoor units

# **DRAIN PIPING WORK**

 Execute drain piping by using a drain elbow and drain grommets supplied separately as optional parts, where water drained from the outdoor unit is a problem. Connect a drain elbow as shown in the illustration and close the other two drain holes with grommets.

When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied There are 3 drain holes provided on the bottom plate of an outdoor unit to discharge condensed water.

separately as an optional part) or concrete blocks.

Drain gromme

 On not turn on the power until the electrical work is completed.
 On not use a condensive capacitor for power factor improvement under any circumstances. (It dose not improve power factor, while it can cause an abnormal overheat accident)

•For power supply cables, use conduits.

•bo not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them  When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a

together can result in the malfunctioning or a failure of the unit due to electric noises

Fasten cables so that may not touch the piping, etc.

Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable

failure of the unit, if water penetrates into the box.)


# For details of electrical cabling, refer to the indoor unit installation manual **ELECTRICAL WIRING WORK**

fard vinyl chloride pipe for general purpose (VP-16) Drain elbow (1 pe.) -

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical

- Do not use any supply cord lighter than one specified in parentheses for each type below.

  - braided cord (code designation 60245 IEC 51),
  - ordinary tough rubber sheathed cord (code designation 60245 IEC 53) flat twin tinsel cord (code designation 60227 IEC 41);
- Do not use anything lighter than polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
  - If impropery grounded, an electric shock or malfunction may result.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections. Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire Grounding terminals are provided in the control box •The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable. result in an acccident such as an electric shock or a fire.

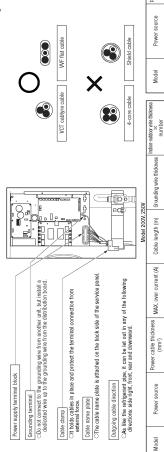

<ul> <li>◆Always perform grounding system installation work with the power cord unplugged.</li> </ul>
Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation

Outdoor unit

Switchgear or Circuit breaker

L1 L2 L3 N ±

1 2/N 3 ± 2/N 3 ±

Earth leakage breaker (Harmonic resistant type)

Power cable, indoor-outdoor connecting wires

Indoor unit

igned

| X | Y | Z | Remote controller Model 200V, 250V

presentations when in the above belies not runtil without instance. For units with healests, refer to the installation instanction instructions of the indoor unit.

Switchgar or direct installed expends which is calculated from MAC oner current solution be regulation in each country.

Solution is a reason which is calculated from MAC oner current solution be regulation in each country in each country.

Solution is a reason of the assumption that a metal or place countries to each of the capter of the solution in the season principle. For an installation is falled to these conditions, follow the internal calling greatlations. Adapt it to be equalition in effect in each country. φ1.6mm 8 Power cable thickness (mm<sup>-3</sup>) 5.5 2007 2507

φ1.6mm x 3

**₱**1.6mm

19

3 phase 4 wire 380-415V 50Hz 380V 60Hz

200V 250V

Grounding wire thickness

Cable length (m)

MAX. over current (A)

Model 200V, 250V

### 5. TEST RUN

MARNING
 MARNING

A failure to observe these instructions can result in a compressor breakdown.

Defore conduct a test run, do not fail to make sure that the operation valves are closed.

 Turn on power 6 hours prior to a test run to energize the crank case heater.

 Always give a 3-minute or longer interval before you start the unit again whenever it is stopped. However, the service panel will expose inditi-voltage live parts and high-temperature parts, which are quite dangerous. Take utmost care not to incur an electric shock or burns. Do not leave the unit with the service panel open.

♠ CAUTION

When you operate switches (SW3, SW5) for on-site setting, be careful not to touch a live part.
 \*\u00e40 variout of check discharge pressure from the fliquid operation valve charge port.
 \*\u00e41 read vary valve (20\$) is energized during a hearing operation.
 \*\u00e4 When power supply is cut off to reset the unit, give 3 or more minutes before you turn on power again after power is cut off. If this procedure is not observed in turning on power again, "Communication error between outdoor and indoor unit" may occur.

## 1) Test run method

(1) A test nun can be initiated from an outdoor unit by using SW3-3 and SW3-4 for on-site setting. (2) Switching SW3-3 to OW Wil start the compressor. (3) The unit will start a cooling operation, when SW3-4 is OFF, or a heating operation, when SW3-4 is OW. (4) Do not fail to switch SW3-3 to OFF when a test run is completed.

Use check joints provided on the piping before and after the four-way valve installed inside the unitdoor unif or checking idisblargel pressure and suction pressure. As indicated in the table shown on the right, pressure detected at each point will vary depending on whether a cooling or heating operation has been selected. 2) Checking the state of the unit in operation

3) Setting SW3-1, SW3-2, J7 on-site

### Heating during a test run Normal or After the test operation Cooling during a test run SW-3-3 SW-3-4 ON OFF OFF OFF OFF

	Check joint of the pipe	Charge port of the gas operation valve
Cooling operation	Discharge pressure (High pressure)	Suction pressure (Low pressure)
Heating operation	Suction pressure (Low pressure)	Discharge pressure (High pressure)

•When this switch is turned on, the outdoor unit fan will run for 10 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running. (1) Defrost control switching (SWB-1). When this switch is turned ON, when unit will run in the defrost mode more frequently. -Set this switch to ON, when installed in a region where outdoor femperature falls below zero during the season the unit is run for a heating. ·When the unit is used in a very snowy country, set this switch to ON.

### d **†**∃ each other.

# 4) Failure diagnosis in a test run

•When the option parts that change air flow from outlet are used, cut (open) J7. Cut the jumper wire into two parts and ensure that they are kept isolated from

(3) Higth pressure control (J7)

			Failure event	Action
remote control unit	Red LED	Green LED		
E34	Blinking once	Blinking continuously Open phase	Open phase	Check power cables for loose contact or disconnection
E40	Blinking once	Blinking continuously	Blinking continuously (occurs mainly during a heating operation)	<ol> <li>Check whether the operation valves are open.</li> <li>If an error has been canceled when 3 minutes have els</li> </ol>
E49	Blinking once	Blinking continuously	Blinking continuously (occurs mainly during a cooling operation)	since a compressor stop, you can restart the unit by effecting Check Reset from the remote control unit.
lf on orror on	dt andt andte ob	orodo botoli coc	The management of the second s	tion realization the part that acceptus acceptus

lapsed

tion

If an error code other than those listed above is indicated, refer to the wiring diagram of the outdoor unit and the indoor unit.

## The state of the electronic expansion valve. The following table

states of the electronic expansion valve.

		When the unit con	nes to a normal stop	when the unit comes	s to an abnormal stop
	when power is turned on	During a cooling operation	During a heating operation	During a cooling operation	During a heating operation
Valve for a cooling operation	Complete shut position	Complete shut position	Full open position	Full open position	Full open position
Valve for a heating operation	Full open position	Full open position	Complete shut position	Full open position	Full open position

# 6) Heed the following on the first operation after turning on the circuit breaker.


This outdoor unit may start in the standby mode (waiting for a compressor startup), which can continue up to 30 minutes, to prevent the oil level in the compressor from lowering on the first operation after turning on the circuit breaker. If that is the case, do not suspect a unit failure.

Items	s to chec	Items to checkbefore a test run	When you leave the outdoor unit with power supplied to it, st run be sure to close the panel.	d to it,
Item No. installati	Item No.used in the installation manual	Item	Check item	Check
			If brazed, was it brazed under a nitrogen gas flow?	
	0	Refrigerant	were art-rightness test and vacuum extraction surely performed?  Are heat insulation materials installed on both liquid and gas pipes?	
		filliallinid	Are operation valves surely opened for both liquid and gas systems?	
			Have you recorded the additional refrigerant charge volume and refrigerant pipe length on the panel's label?	
			is the unit free of cabling errors such as uncompleted connection, an absent or reversed phase?	
			Are properly rated electrical equipments used for circuit breakers and cables?	
			Doesn't cabling cross-connect between units, where more than one unit are installed?	
			Aren't indoor-outdoor signal wires connected to remote control wires?	
	4	Electric	Do indoor-outdoor connecting cables connect between the same terminal numbers?	
		wiring	Are either VCT cabtyre cables or WF flat cables used for Indoor-outdoor connecting cables?	
			Does grounding satisfy the D type grounding (type III grounding) requirements?	
			is the unit grounded with a dedicated grounding wire not connected to another unit's grounding wire?	
			Are cables free of loose screws at their connection points?	
			Are cables held down with cable clamps so that no external force works onto terminal connections?	
		den en eper	Is indoor unit installation work completed?	
		IIII Joopiii	Where a face cover should be attached onto an indoor unit, is the face cover attached to the indoor unit?	
Test	Test run procedure		<ul><li>Always carry out a test run and check the following in order as listed.</li></ul>	.pa
Tum			The contents of operation	Check
Θ	Open the ga	Open the gas side operation valve fully.	e fully.	
0	Open the liq	Open the liquid side operation valve fully.	the fully.	
®	Close the panel.	mel.		
9	Where a remot	e control unit is used for u	Where a remote control unit is used for unit setup on the installation site, please follow instructions for unit setup on the installation site with a remote control unit.	
(4	SW3-3 0N /	SW3-4 OFF: the unit	SW3-3 0N / SW3-4 OFF; the unit will start a cooling operation.	
9	SW3-3 0N /	SW3-4 ON: the unit	SW3-3 ON / SW3-4 ON: the unit will start a heating operation.	
9	When the un	nit starts operation, p	When the unit starts operation, press the wind direction button provided on the remote control unit to check its operation.	
6	Place your f.	and before the indoc	Place your hand before the indoor unit's diffuser to check whether cold (warm) winds come out in a cooling (heating) operation.	
@	Make sure t	Make sure that a red LED is not blinking.	blinking.	
6	When you o	omplete the test run,	When you complete the test run, do not forget to turn SW3-3 to the OFF position.	
(2)	Where optio	ns are used, check tl	Where options are used, check their operation according to the respective instruction manuals.	
		SWITCHES FO	SWITCHES FOR ON-SITE SETTING	
		100	COULD SWITCHES FOR ON-SITE SETTING	SETTING

	SWITCHES FOR ON-SITE SETTING SW3 ON DISCRETE SETTING	All set to OFF for shipment	
			(cooc cooc) (cooc cooc) (cooc cooc)
SWITCHES FOR ON-SITE SETTING SW5	ON STATE OF For Shipment		

(2) Snow guard fan control (SW3-2)

# 6. UTILIZATION OF EXISTING PIPING.

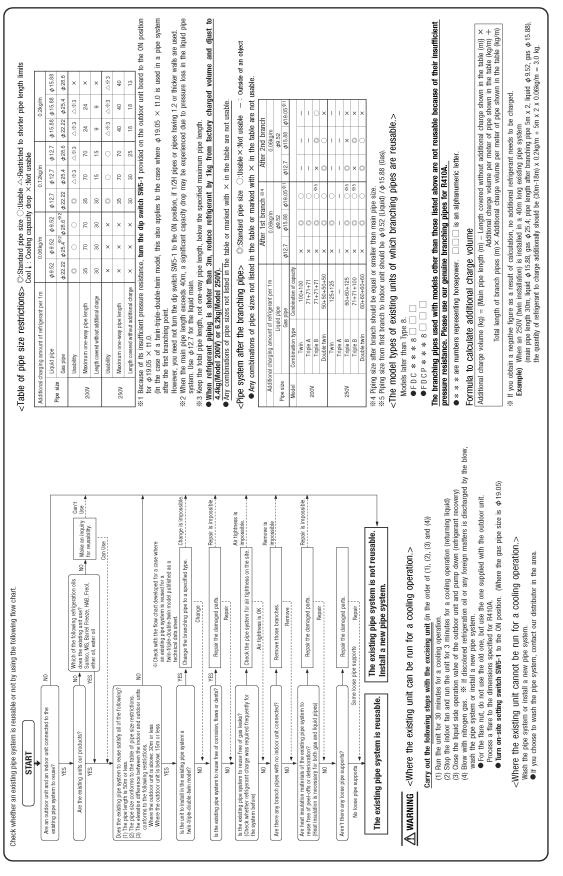




### (5) Method for connecting the accessory pipe (Models FDC200,250 only)

Be sure to use the accessory pipe to connect the operation valve on the gas side with the field pipe.


- ① Referring to Table ① and Table ②, prepare the straight pipe and the elbow in the field, which are used in the construction examples (A) ~ (D) applicable to the connecting direction.
- ② Firstly, use the accessory pipe to assemble the connecting pipe assembly outside the outdoor unit.
  - As shown in the figures of construction examples  $\bigcirc$   $\sim$   $\bigcirc$  applicable to the connecting direction(chain double dashed line), braze the accessory pipe and the parts prepared in the above  $\bigcirc$ .
- 3 After assembly of the connecting pipe, connect it to the service valve on the gas side inside the outdoor unit.
- Tighten the flare nut with appropriate torque.
- 4 After connection of the connecting pipe assembly to the service valve on the gas side, braze the connecting pipe assembly and the field pipe.

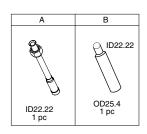

Appro	opriate torque
φ 19.05	100~120N·m

### Table ① Parts used for the connecting pipe assembly

No.	Name	Qty.	Remarks
1	Accessory pipe A	1	Accessories
2	Straight pipe ①	1	Procured in the field
3	Straight pipe ②	1 or 0	Procured in the field (Not required for downward direction)
4	Elbow	1 or 0	Procured in the field (Not required for downward direction)

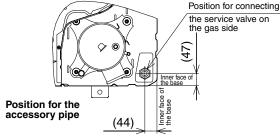

### Table ② Length of the straight pipe (prepared in the field)

	Pipe size	Downward	® Forward	© Rightward	D Backward
Straight pipe 1	φ22.22×t1.6	above 415mm	185~235mm	185~235mm	185~235mm
Straight pipe2	φ22.22×t1.6	-	above 125mm	above 125mm	above 405mm


- Be sure to use pipes of 1/2H material, and wall thickness above 1mm. (Pressure resistance of O-type pipe is not enough)
- Switch ON SW5-1 on the control PCB, if O-type pipe must be used and bent with the bender.
   During heating operation, the high-pressure protection may be actuated under the condition lower than the normal pressure, and the heating capacity may decrease.


### **About brazing**

### Be sure to braze while supplying nitrogen gas.


If no nitrogen gas is supplied, a large amount of impurity (oxidized fi lm) will be generated, which may clog the capillary tube and the expansion valve, resulting in fatal malfunction.

Branching pipe set can be used by using the accessory pipe B.
 When \$\phi 22.22(\text{OD})\$ size of the indoor unitgas pipe is used, the accessory pipe B is unnecessory.

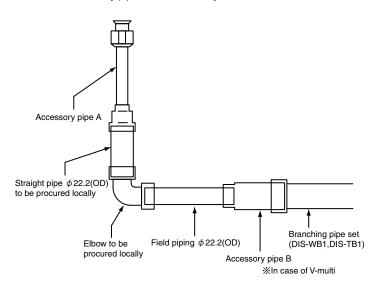


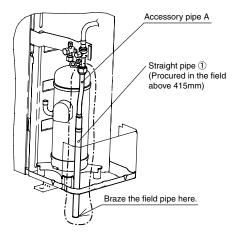


### Construction example (A) (Downward)

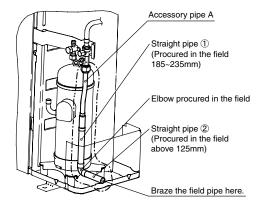

Construction example © (Rightward)

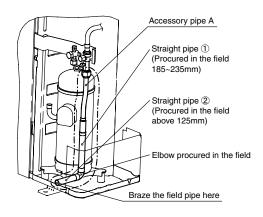

### Construction example (B) (Forward)

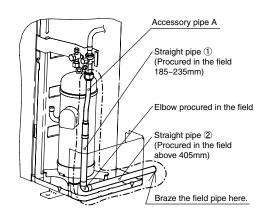

Construction example (D) (Backward)

### 1.10.4 Electric wiring work installation

Electrical wiring work must be performed by an electrician qualified by a local power provider according to the electrical installation technical standards and interior wiring regulations applicable to the installation site.

### Security instructions


- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, ⚠WARNING and ACAUTION .


AWARNING: Wrong installation would cause serious consequences such as injuries or death. A CAUTION: Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any means.


- The meanings of "Marks" used here are as shown on the right:
  - Never do it under any circumstances.
- Accord with following items. Otherwise, there will be the risks of electric shock and fire caused by overheating or short circuit.


### **↑**WARNING

•Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.

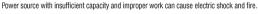


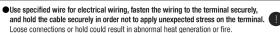

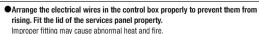

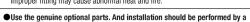

specialist. If you install the unit by yourself, it could cause water leakage, electric shock and fire

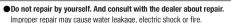



Improper installation may cause water leakage, electric shock or fire. Turn off the power source during servicing or inspection work.

If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan

Shut off the power before electrical wiring work. It could cause electric shock, unit failure and improper running.

### **ACAUTION**

### Perform earth wiring surely.

Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.

●Earth leakage breaker must be installed.

If the earth leakage breaker is not installed, it can cause electric shocks.

Make sure to install earth leakage breaker on power source line. (countermeasure thing to high harmonics.)

Absence of breaker could cause electric shock

• Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.

Using the incorrect one could cause the system failure and fire

Do not use any materials other than a fuse of correct capacity where a fuse should be used.

Connecting the circuit by wire or copper wire could cause unit failure and fire

Use power source line of correct capacity.

Using incorrect capacity one could cause electric leak, abnormal heat generation and fire.

Do not mingle solid cord and stranded cord on power source and signal side terminal block.

In addition, do not mingle difference capacity solid or stranded cord. Inappropriate cord setting could cause loosing screw on terminal block, bad electrical  $% \left( 1\right) =\left( 1\right) \left( 1\right) \left$ contact, smoke and fire.

Do not turn off the power source immediately after stopping the operation. Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.

Do not control the operation with the circuit breaker.

It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

PSB012D966

### **①Electrical Wiring Connection**

- Use three-core cable as wiring between indoor and outdoor unit. As for detail, refer to "INSTAL-LATION MANUAL" of outdoor Unit.
- Set earth of D-type.

O

0

0

0

- Keep "remote controller line" and "power source line" away from each other on constructing of unit outside.
- Run the lines (power source, remote controller and "between indoor and outdoor unit") upper ceiling through iron pipe or other tube protection to avoid the damage by mouse and so on.
- Do not add cord in the middle of line route (of power source, remote controller and "between indoor and outdoor unit") on outside of unit. If connecting point is flooded, it could cause problem as for electric or communication. (In the case that it is necessary to set connecting point on the way, perform thorough waterproof measurement.)
- Do not connect the power source line [220V/240V/380V/415V] to signal side terminal block. Otherwise, it could cause failure.
- Screw the line to terminal block without any looseness, certainly.
- Do not turn on the switch of power source, before all of line work is done.
- Connection of the line ("Between indoor and outdoor unit", Earth and Remote controller)
- ①Remove lid of control box before connect the above lines, and connect the lines to terminal block according to number pointed on label of terminal block.

In addition, pay enough attention to confirm the number to lines, because there is electrical polarity except earth line. Furthermore, connect earth line to earth position of terminal block of power source.

- 2Install earth leakage breaker on power source line. In addition, select the type of breaker for inverter circuit as earth leakage breaker.
- (3)If the function of selected earth leakage breaker is only for earth-fault protection, hand switch (switch itself and type "B" fuse) or circuit breaker is required in series with the earth leakage
- (4) Install isolator or disconnect switch on the power supply wiring in accordance with the local codes and regulations


The isolator should be set in the box with key to prevent touching by another person when servicing.

### Cable connection for single unit installation

(1) As for connecting method of power source, select from following connecting patterns. In principle, do not directly connect power souce line to inside unit.


\*As for exceptional connecting method of power souce, discuss with the power provider of the country with referring to technical documents, and follow its instruction

(2) For cable size and circuit breaker selection, refer to the outdoor unit installation manual

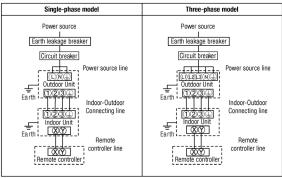

### Cable connection for a V multi configuration installation

- ①Connect the same pairs number of terminal block "①, ②, and ③"and "  $\otimes$  and  $\otimes$  " between master and slave indoor units.
- 2Do the same address setting of all inside units belong to same refrigerant system by rotary switch SW2 on indoor unit's PCB (Printed circuit board).
- ③Set slave indoor unit as "slave 1" through "slave 3" by address switch SW5-1, 5-2 on PCB.
- 4When the AIR CON NO. button on the remote control unit is pressed after turning on the power, an indoor unit's address number will be displayed. Do not fail to confirm that the connected indoor unit's numbers are displayed on the remote control unit by pressing the 
  or 
  button

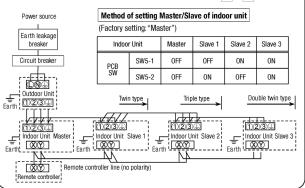

### **2** Remote Control, Wiring and functions

- D0 N0T install it on the following places
- 1)Places exposed to direct sunlight
- 2)Places near heat devices
- 3High humidity places
- 4 Hot surface or cold surface enough to generate condensation
- ⑤Places exposed to oil mist or steam directly.
- (6)Uneven surface

### Installation and wiring of remote controller

- ①Install remote controller referring to the attached installation manual
- ②Wiring of remote controller should use 0.3mm<sup>2</sup> ×2 core wires or cables.
- The insulation thickness is 1mm or more. (on-site configuration)
- $\begin{tabular}{ll} \begin{tabular}{ll} \beg$ 
  - If the prolongation is over 100m, change to the size below.

But, wiring in the remote controller case should be under 0.5mm<sup>2</sup>. Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.


100 - 200m	$0.5 \text{mm}^2 \times 2 \text{ cores}$
Under 300m	0.75mm <sup>2</sup> × 2 cores
Under 400m	$1.25$ mm $^2 \times 2$ cores
Under 600m	$2.0 \text{mm}^2 \times 2 \text{ cores}$

- Avoid using multi-core cables to prevent malfunction.
- (5) Keep remote controller line away from earth (frame or any metal of building).
- (6)Make sure to connect remote controller line to the remote controller and terminal block of indoor unit. (No polarity)

### Control plural indoor units by a single remote controller.

- ①A remote controller can control plural indoor units (Up to 16).
- In above setting, all plural indoor units will operate under same mode and temperature setting. (2) Connect all indoor units with 2 core remote controller line.
- Set unique remote control communication address from "0" to "F" to each inside unit by the rotary switch SW2 on the indoor unit's PCB.

After a unit is energized, it is possible to display an indoor unit address by pressing [AIR CON NO.] button on the remote control unit. Press the or button to make sure that all indoor units connected are displayed in order.

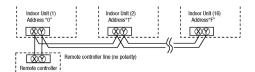

### Confirming method of indoor units

When indoor unit address number is displayed on remote controller, pushing the  $\bigcirc$  (MODE) button to make the indoor unit with that number blow air (Display example:" I/U001  $\stackrel{\clubsuit}{\approx}$ ") Push the  $\bigcirc$  (MODE) button again to stop the operation.

However, this operation is invalid on the air-conditioning running

### Master/ slave setting when more than one remote control unit are used


A maximum of two remote control units can be connected to one indoor unit (or one group of indoor units.)

The air conditioner operation follows the last operation of the remote controller regardless of the master/slave setting of it.

Acceptable combination is "two (2) wired remote controllers", "one (1) wired remote controller and one (1) wireless kit" or "two (2) wireless kits".

Set SW1 (wired remote controller) or SW1-2 (wireless kit) to "Slave" for the slave remote control unit. It was factory set to "Master" for shipment.

Note:The setting "Remote control unit sensor enabled" is only selectable with the master remote control unit in the position where you want to check room temperature.

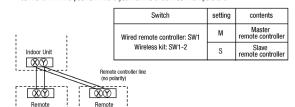

### **3Trial operation**

### The method of trial cooling operation

Operate the remote control unit as follows.

- 1. Starting a cooling test run.
- ①Start the system by pressing the ②ON/OFF button.
- ②Select " & (Cool)" with the (MODE) button.
- ③Press the TEST button for 3 seconds or longer.
- The screen display will switch to: " TEST RUN ▼ "
- ②When the ○○ (SET) button is pressed while " \$\$ TEST RUN ▼ " is indicated, a cooling test run will start.
  - The screen display will switch to "  $\$  TEST RUN ".
- 2. Ending a cooling test run

Pressing the OON/OFF button, the (TEMP) button or (MODE) button will end a cooling test run. (Cooling test run will end after 30 minutes pass.)

"恭 TEST RUN" shown on the screen will go off.

### Checking operation data

Operation data can be checked with remote control unit operation.

- 1. Press the CHECK button.

  The display change " OPER DATA T
- 2. Press the (SET) button while
- to remote controller, " DATA LOADING" is displayed (blinking indication during data loading).
- Next, operation data of the indoor unit will be displayed. Skip to step 7.
- When plural indoor units is connected, the smallest address number of indoor unit among all connected indoor unit is displayed.

[Example]:

- "Ы\$ SELECT I/U" (blinking 1 seconds)→
  "I/U000 ▲" blinking.
- 5. Select the indoor unit number you would like to have data displayed with the
- ▲ v button.

  6. Determine the indoor unit number with the
- (SET) button.
  (The indoor unit number changes from
- blinking indication to continuous indication)
  "I //IOOO " (The address of selected
- "I/U000" (The address of selected indoor unit is blinking for 2 seconds.)

Number		Data Item
01	*	(Operation Mode)
02	SET TEMP	(Set Temperature)
03	RETURN AIR_&	(Return Air Temperature)
04	■SENSOR *c	(Remote Controller Thermistor Temperature)
05	THI-R1c	(Indoor Unit Heat Exchanger Thermistor / U Bend)
06	THI-R2c	(Indoor Unit Heat Exchanger Thermistor /Capillary)
07	THI-R3c	(Indoor Unit Heat Exchanger Thermistor /Gas Header)
08	I/U FANSPEED	(Indoor Unit Fan Speed)
09	DEMAND Hz	(Frequency Requirements)
10	ANSWER Hz	(Response Frequency)
11	I/U EEVP	(Pulse of Indoor Unit Expansion Value)
12	TOTAL I/U RUN	H (Total Running Hours of The Indoor Unit)
21	OUTDOOR &	(Outdoor Air Temperature)
22	THO-R1	(Outdoor Unit Heat Exchanger Thermistor)
23	TH0-R2 &	(Outdoor Unit Heat Exchanger Thermistor)
24	COMP Hz	(Compressor Frequency)
25	HPMPa	(High Pressure)
26	LPMPa	(Low Pressure)
27	Td to	(Discharge Pipe Temperature)
28	COMP BOTTOM &	(Comp Bottom Temperature)
29	CTAMP	(Current)
30	TARGET SH to	(Target Super Heat)
31	SHb	(Super Heat)
32	TDSH	(Discharge Pipe Super Heat)
33	PROTECTION No.	(Protection State No. of The Compressor)
34	O/U FANSPEED	(Outdoor Unit Fan Speed)
35	63H1	(63H1 On/Off)
36	DEFROST	(Defrost Control On/Off)
37	TOTAL COMP RUN	H (Total Running Hours of The Compressor)
38	0/U EEV 1P	(Pulse of The Outdoor Unit Expansion Valve EEVC)
39	0/U EEV2P	(Pulse of The Outdoor Unit Expansion Valve EEVH)
*Deper	nding on outdoor uni	t model, there are data not shown.

DATA LOADING " (A blinking indication appears while data loaded.)

Next, the operation data of the indoor unit is indicated.

7. Upon operation of the 🔊 🔻 button, the current operation data is displayed in order from data number 01.

The items displayed are in the above table.

\*Depending on models, the items that do not have corresponding data are not displayed.

- 8. To display the data of a different indoor unit, press the AIR CON NO. button, which allows you to go back to the indoor unit selection screen.
- 9. Pressing the  $\bigcirc$ ON/OFF button will stop displaying data.

Pressing the  $\bigcirc$  (RESET) button during remote control unit operation will undo your last operation and allow you to go back to the previous screen.

If two (2) remote controllers are connected to one (1) inside unit, only the master controller is available for trial operation and confirmation of operation data. (The slave remote controller is not available.)

### Trail operation of drain pump

Drain pump operation from remote control unit is possible. Operate a remote control unit by following the steps described below.

- To start a forced drain pump operation.
- ①Press the TEST button for three seconds or longer.

The display will change " # TEST RUN ▼ "

- ②Press the ▼ button once and cause " DRAIN PUMP ♦ " to be displayed.
- (SET) button is pressed, a drain pump operation will start.

Display: " & TO STOP '

- 2. To cancel a drain pump operation.
- ①If either ③ (SET) or ②ON/OFF button is pressed, a forced drain pump operation will stop. The air conditioning system will become OFF.

### **4** Function Setting by Remote Controller The functional setting ● The initial function setting for typical using is performed automatically for a remote control unit and an indoor unit by the door unit connected, when remote controller and inside unit are connected. As long as they are used in a typical manner, there wiil be no need to change the initial settings. If you would like to change the initial setting marked " ()", set your desired setting as for the selected item. The procedure of functional setting is shown as the following diagram. As for detail of setting, refer to the installation manual of remote controller. [Flow of function setting] : While indoor unit do not operate, press " " (SET) and " " (MODE) button for 3 seconds at the same time. Start Finalize : Press " O " (SET) button. Reset : Press " (RESET) button. Select : Press button. End : Press OON/OFF button It is possible to finish above setting on the way, and unfinished change of setting is unavailable. " ( )": Initial settings " ( ) " : Automatic criterion As for detail, refer to the installation manual of remote controller. During air-conditioner stopping push (SET) + (MODE) button simultaneously for 3 seconds Record and save the setting Consult the technical data etc for each control details FUNCTION SET ▼ ☐ FUNCTION ▼ (Remote controller function) Function 01 GRILLE ↑↓ SET setting ↑↓ INVALID 50Hz ZONE ONLY When you use at 50Hz area 60Hz ZONE ONLY 02 AUTO RUN SE 03 M⊠DITEMPS ⊕⊠⊠ WIII mperature setting button is not working 04 🖭 MODE SW er Alic Mode button is not working 05 OD ON/OFF SW On/Off button is not working ⊕⊠ YALID ⊕⊠ INVALID Fan speed button is not working 07 🖾 LOUVER SW uver button is not working 08 @ TIMER SW ⊕@ YALID ⊕@ IWALID 0 Timer button is not working 09 PISPASOR SET Remote thermistor is not working. Remote thermistor is working. Remote thermistor is working, and to be set for producing +3.0°C increase in temperature. Remote thermistor is working, and to be set for producing +2.0°C increase in temperature. Remote thermistor is working, and to be set for producing +2.0°C increase in temperature. ■SENSOR +3.05 ■SENSOR +2.05 ■SENSOR +1.05 Remote thermistor is working, and to be set for producing -1.0°C increase in temperature. SENSOR - 1.01 Remote thermistor is working, and to be set for producing -2.0°C increase in temperature. Remote thermistor is working, and to be set for producing -3.0°C increase in temperature 10 AUTO RESTART 11 VENT LINK SET NO YENT Connect the Single split series and the VRF series to the indoor board CNT and indoor board CND respectively, If a ventilation device is connected, been geared with the motion of indoor device, the ventilation device is operated/stopped. By connecting the ventilation device with the Single split series device to indoor board CNT, the VRF series device to CND, you can operate/slop the ventilation device independently by the handling of ventilation button. NO VENT LINK 12 TEMP RANGE SET If you change the range of set temperature, the indication of set temperature will vary following the control. If you change the range of set temperature, the indication of set temperature will not vary following the control, and keep the set temperature. INDN CHANGE NO INDN CHANGE 13 I/UFAN Airflow of fan becomes the three speed of 🍇 🚮 - 🍇 🛍 or 🗞 🛍 - 💸 🛍 - 💸 🛍 Airflow of fan becomes the two speed of \$241 - \$111 Airflow of fan is fixed at one speed. If you want to change the remote control function "14 ⇒¬POSITION", You must change the indoor function "04 ⇒¬POSITION" accordingly. ○ You can select the louver stop position in the four. 14 동구POSITION The louver can stop at any position. 15 MODEL TYPE HEAT PUMP COOLING ONLY 16 EXTERNAL CONTROL SET If you input into the indoor printed circuit board CNT from outside, the indoor device will be operated independently following the input from outside. If you input into indoor printed circuit board CNT from outside, All units which share the same one remote control FOR ALL UNITS network work following the input from outside. 17 ROOM TEMP INDICATION SET In normal working indication, indoor unit temperature is indicated instead of airflow. (Only the master remote control can be indicated.) 18 \*\*MINDICATION INDICATION OF eating preparation indication should not be indicated 19 tc/'FSET perature indication is by degree C ON/OFF button (finished)

Note 1: The initial setting marked " X " is decided by connected indoor and outdoor unit, and is automatically defined as following table


domina de	defined as following table.					
Function No.	Item	Default	Model			
Function 02 of	AUTO RUN SET	AUTO RUN ON	"Auto-RUN" mode selectable indoor unit.			
remote controller	HUTU KUN SET	AUTO RUN OFF	Indoor unit without "Auto-RUN" mode			
Function 06 of	SSEIFAN SPEED SW	은國 YALID	Indoor unit with two or three step of air flow setting			
remote controller	FESTLHIA OLEEN OM	은 INVALID	Indoor unit with only one of air flow setting			
Function 07 of	© LOUVER SW	⊕⊠⊒ YALID	Indoor unit with automatically swing louver			
remote controller	FEET COUNCIL ON	⊕ 🖾 INVALID	Indoor unit without automatically swing louver			
	I/U FAN	HI-MID-LO	Indoor unit with three step of air flow setting			
Function 13 of		HI-LO	Indoor unit with two step of air flow setting			
remote controller	170 FHN	HI-MID				
		1 FAN SPEED	Indoor unit with only one of air flow setting			
Function 15 of	NODEL TYPE	HEAT PUMP	Heat pump unite			
remote controller	NUCL TITE	COOLING ONLY	Exclusive cooling unite			

### Note 2: Fan setting of "HIGH SPEED"


	Fan tap		Indoor unit air flow setting				
			8atil - 8ati - 8ati - 8adi	Sati - Sai() - Sa(()	\$2a41 - \$2a()[)	Statil - Statil	
	FAN OPEED OF	STANDARD	UH - Hi - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Me	
	FAN SPEED SET	HIGH SPEED1, 2	UH - UH - Hi - Me	UH - Hi - Me	UH - Me	UH - Hi	

Initial function setting of some indoor unit is "HIGH SPEED"

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit. But only master indoor unit is received the setting change of indoor unit function "05 EXTERNAL

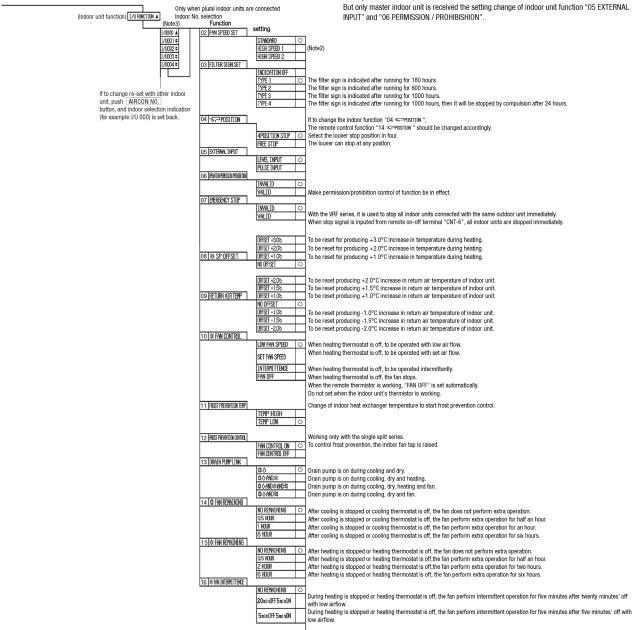

### **5** Control mode switching ●The control content of indoor units can be switched in following way. ( is the default setting) Switch No. Control Conten SW2 Indoor unit address (0-Fh) SW5-1 Master/Slave Switching (plural /Slave unit Setting) SW5-2 SW6-1~4 Model capacity setting ON Operation check, Drain motor test run SW7-1 0FF Normal operation

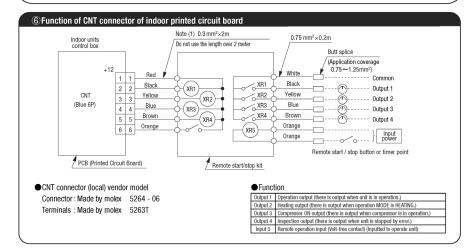

Error Code of indoor unit

red (checking)

Off

Off

Off

Blinking once

Blinking once

Blinking once

Blinking once

Off

llinking for three tir

Blinking once

Blinking once

Off

Not sure

Off

E1

E5

E6

E7

E8

E9

E10

E14

E16

E19

E28

Over E30

LED on indoor circuit board

green (normal)

Off

Continuous blinking

Not sure

Continuous blinking

Continuous blinking

Continuous blinking

Continuous blinking

Normal Fault on power, indoor power off or lack

Fault on the transmission between indoor circuit board and remote co

ault on outdoor-indoor transmi

ndoor heat exchange sensor interro hort-circuit ndoor air inhaling sensor broken or

he temperature of heat exchange

connections
The communication fault for master/slav indoor units

Configuration fault on running checking model

Continuous blinking Float SW actions (only with FS

Continuous blinking Remote controller sensor interrupted
Continuous blinking Outdoor unit checking (outdoor circuit box
LED checking)

Continuous blinking Fan motor abnormal

oor computer abnorm

### **7**Troubleshooting

The operation data is saved when the situation of abnormal operation happen, and the data can be confirmed by remote controller.

[Operating procedure]

1. Press the CHECK button.

The display change " OPER DATA ▼ " 2. Once, press the ▼ button, and the display change " ERROR DATA 🔼 "

- 3. Press the (SET) button and abnormal operation data mode is started.
- 4. When only one indoor unit is connected to remote controller, following is displayed.
- The case that there is history of abnormal operation.
- → Error code and " DATA LOADING" is displayed. [Example]: [E8] (ERROR CODE)

"DATA | NADING" is displayed (blinking indication during data loading). Next, the abnormal operation data of the indoor unit will be displayed. Skip to step 8.

- ②The case that there is not history of abnormal operation.
- ightarrow " NO ERROR" is displayed for 3 seconds and this mode is closed. 5. When plural indoor units is connected, following is displayed.
- 1)The case that there is history of abnormal operation.
- →Error code and the smallest address number of indoor unit among all connected indoor unit is displayed.
- [Example]: [E8] (ERROR CODE)
- " I/U000 ▲ " blinking
  ②The case that there is not history of abnormal operation.
- → Only address number is displayed.
- 6. Select the indoor unit number you would like to have data displayed with the 🛕 🔻 button.
- 7. Determine the indoor unit number with the O (SET) button.

[Example]: [E8] (ERROR CODE)

" I/U000 ▲ " (The address of selected indoor unit is blinking for 2 seconds.)

[E8] "DATA LOADING" (A blinking indication appears while data loaded.) Next, the abnormal operation data is indicated.

If the indoor unit doing normal operation is selected, NO ERROR " is displayed for 3 seconds and address of indoor unit is displayed.

8. By the 🛕 🔻 button, the abnormal operation data is displayed. Displayed data item is based on 3 Trial operation

\*Depending on models, the items that do not have corresponding data are not displayed.

9. To display the data of a different indoor unit, press the AIR CON No. button, which allows you to go back to the indoor unit slection screen. 10.Pressing the OON/OFF button will stop displaying data

Pressing the (RESET) button during remote control unit operation will undo your last operation and allow you to go back to the previous screen.

Olf two (2) remote controllers are connected to one (1) indoor unit, only the master controller is available for trial operation and confirmation of operation data. (The slave remote controller is not available.)

### -242 -

### 1.10.5 Instructions for branching pipe set (DIS-WA1, WB1, TA1, TB1)

For R410A PSB012D865 ∕§\

### **WARNING / CAUTION**

- This set is for R410A refrigerant.
- Select a branching pipe set correctly rated for the combined total capacity of connected indoor units and install it according to this manual. An improperly installed branching pipe set can cause degraded performance or an abnormal unit stop.
- Provide good heat insulation to the pipes by following instructions contained in this manual.
- Improper heat insulation can result in degraded performance or a water leak accident from condensation.
- Please make sure that only parts supplied as accessories or the manufacturer's approved parts are used in installing the unit, because a leak of refrigerant can result in a lack-of-oxygen accident, if it reaches a concentration beyond the tolerable limit.

This manual explains how to use a branching pipe set that is indispensable in connecting pipes for a twin/triple/W-twin configuration installation (system). For the details of piping work, unit installation work and electrical installation work, please refer to the installation manuals and installation guides supplied with your outdoor and indoor units.


### 1. Branching pipe set specifications

- (2) Connect pipes as illustrated in the table below. The pipe from an outdoor unit must be brazed to the pipe connection port "①" and the pipes from indoor units to "②," "③" and "④."

Branching pipe set type	Supported outdoor/inc	door unit combinations	Part lists				
brancining pipe set type	Outdoor unit model	Indoor unit model	Branching pipe set for a liquid pipe	Branching pipe set for a gas pipe	Different diameter pipe joint	Heat insulation material	
	3HP	1.5HP+1.5HP	ID9.52	ID15.88	Joint A		
	4HP	2HP+2HP			ID9.52 □ 2 pieces		
DIS-WA1		1.5HP+2.5HP	ا پر <sub>جہا</sub> ا		Flare joint (for indoor unit side connection)		
(Two-way branching set)	5HP	2.5HP+2.5HP 2HP+3HP			(,		
		3HP+3HP	ID9.52	ID15.88 ID15.88	Joint B 2 pieces OD15.88 D12.7		
	6HP	2HP+4HP	1 piece	1 piece	الار الر الكالوال الكانوال	One each for liquid and gas	
	8HP	4HP+4HP	ID9.52 ① ② ② ② ② ③ 1D12.7 ③ 3 1D9.52 1 piece	<u>ID15.88</u>			
DIS-WB1 (Two-way branching set)		3HP+5HP			Joint C 1 piece 0D12.7 D9.52		
	10HP	5HP+5HP		1 piece ID15.88		One each for liquid and gas	
DIS-TA1 (Three-way branching set)	6HP	2HP+2HP+2HP	109.52 1 piece	ID12.7 ① ① ① ① ② ③ ④ ID15.88 1 piece	Joint A  ID9.52	One each for liquid and gas	
DIS-TB1 (Three-way branching set)	8HP	3HP+3HP+3HP	109.52 (2) (3) 109.52 (4)	1D15.88 1D25.4 1 piece	Joint A   2 pieces	One each for liquid and gas	


(3) To connect pipes for a Double Twin installation (involving 4 indoor units), please see 2-7. "Double Twin configuration." (4) A branching pipe set must always be installed into the posture as illustrated in the drawing below.

ID stands for inner diameter and OD, outer diameter.

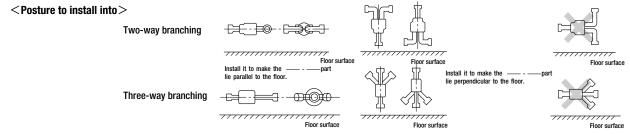

### 2. Pipe connecting procedure

Braze the different diameter pipe joint found in the set matching the connected outdoor and indoor unit capacities according to the instructions set out below.

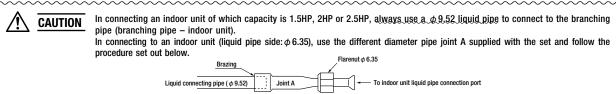

### 2-1 DIS-WA1

	combinations Indoor unit model	Liquid branching pipe	Gas branching pipe
ЗНР	1.5HP+1.5HP		Joint B
	2HP+2HP	Flare joint ( φ 6.35)   Joint A	Joint B 3 ID12.7
4НР	1.5HP+2.5HP	Connecting pipe (\$\phi 9.52\$)	D12.7   Joint B   D12.7   Joint B   D12.7   D15.88   D15.7   D15.88   D15.7   D15.88   D15.
	2.5HP+2.5HP	(φ6.35)	Joint B   ID15.883   ID15.883   ID15.7
5HP	2HP+3HP	Flare joint $(\phi 6.35)$ Joint A Connecting pipe $(\phi 9.52)$ $\odot$ CAUTION ID9.52 Reference	Joint B 2 1012.7  ID15.88 3
	знр+знр	ID9.52 ID9.52 ID9.52	ID15.88 ID15.88 ② ② ③ ③ ID15.88
6НР	2HP+4HP	Flare joint $(\phi 6.35)$ Connecting pipe $(\phi 9.52)$	Joint B (2)   ID15.88   ID15.88

### 2-2 DIS-WB1

	combinations	Liquid branching pipe	Gas branching pipe		
Outdoor unit model	Indoor unit model	1	31,1		
8HP	3HP+5HP	ID9.52	ID15.88		
uii	4HP+4HP	↑① ☐ ☐ ③ Joint C ID9.52	ID23.4 3 3 ID15.88		
10HP	5HP+5HP	ID12.73————————————————————————————————————	ID15.88 ID25.4 3 3		
		ID9.52	ID15.88		

### 2-3 DIS-TA1 Applicable to the difference in length of pipes after the branch being less than 3 m \* Connection is not allowed when the difference in length of pipes is larger than 3 m.

	ombinations Indoor unit model	Liquid branching pipe	Gas branching pipe
6НР	2HP+2HP+2HP	Connecting pipe Joint A ( $\phi$ 9.52)  ID9.52 Flare joint ( $\phi$ 6.35)  Joint A CAUTION Reference	1012.7 ① ② ③ ④

### 2-4 DIS-TB1 Applicable to the difference in length of pipes after the branch being less than 3 m \*Connection is not allowed when the difference in length of pipes is larger than 3 m.

Supported of	ombinations	Liquid branching pipe	Gas branching pipe
Outdoor unit model	Indoor unit model	Liquid branching pipe	das branching pipe
8НР	3HP+3HP+3HP	1D9.52 1————————————————————————————————————	1D15.88 1D25.4 3


### ▷ OLD Model list

mod	lel name	
FDT	ΓA251R	
FDE	ENA251R	
FDI	KNA251R	
FDI	JRA251R	
FDI	JMA252R	

Note When connect the indoor unit of an old model that is shown in the model list use the joint supplied with the branch piping set like \*A

### 2-5. Triple type for same model/same capacity or different model/same capacity

When the difference in length of pipes after the branch is longer than 3 m and shorter than 10 m

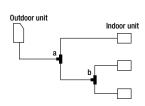


Outdoor unit model	Indoor unit model	Branching pipe	Branching pipe set type	Liquid branching pipe	Gas branching pipe
		a		Flare joint (\$\phi 6.35\$)  Connecting pipe  (\$\phi 9.52\$)  ID9.52 \( \frac{\phi}{\phi} \) \( \frac{\phi}{\phi} \) \( \frac{\phi}{\phi} \) \( \frac{\phi \lambda \text{TION}}{\phi \text{CAUTION}} \)  Reference	Joint B (2)
6HP	2HP+2HP+2HP	b	DIS-WA1	Flare joint (\$\phi 6.35\$)  Connecting pipe (\$\phi 9.52\$)  ID9.52  Description  Reference	Joint B 3 P J J J J J J J J J J J J J J J J J J
	3HP+3HP+3HP-	a DIS-WB1	DIS-WB1	ID9.52 ID9.52	ID15.88 ID25.4 ] ② ID15.88
8HP		b	DIS-WA1	ID9.52 ID9.52 3	ID15.88 ID15.88 ID15.88

### 2-6. Triple type for same model/different capacity or different model/different capacity

Applicable to the difference in length of pipes after the branch being less than 3 m

\* Connection is not allowed when the difference in length of pipes is larger than 3 m.

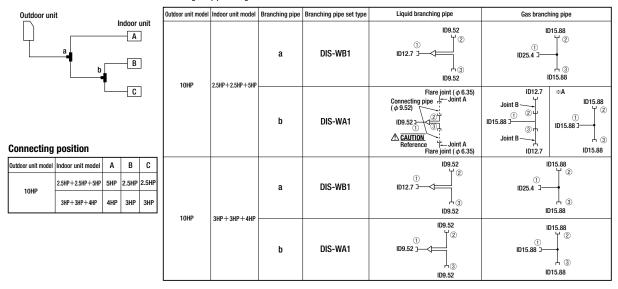

Note When connect the indoor unit of an old model that is shown in the model list, use the joint supplied with the branch piping set like \* A.

### 2-7. Double Twin type

Pipes should be connected as follows for a Double Twin installation (4 connected indoor units. The capacity of an outdoor unit available for this configuration is either 8HP or 10HP only):

s either 8HP or 10	HP only).		•			<u> </u>
Outdoor unit capacity	Indoor unit capacity	Branching pipe	Branching pipe set type	Outdoor unit model	Liquid branching pipe	Gas branching pipe
8HP 10HP	2HP×4 units			8HP	ID9.52	
IUNF	2.5HF \ 4 UIII.5	a	DIS-WB1		Joint C 109.52	ID15.88
Outdoor unit b	b Indoor unit			10HP	ID9.52  ID12.7 3  ID9.52	ID15.88
b b			DIG WA4	8НР	Flare joint ( $\phi$ 6.35)  Connecting pipe Joint A ( $\phi$ 9.52)	ID12.7  Joint B  Joint B  Joint B
		b	DIS-WA1	10HP	Moderation State   S	## ID15.88   ID12.7   Joint B


Note When connect the indoor unit of an old model that is shown in the model list, use the joint supplied with the branch piping set like \* A.

### 3. Heat insulation work

(1) Condensation can also occur on liquid pipes with this model. Please provide good heat insulation to both liquid and gas pipes.

(2) For the heat insulation of a branching pipe, always use the heat insulation material supplied with the set and provide heat insulation according to the instructions set out below.

It has an adhesive layer on the entire inner face.
 Remove a separator and wrap it around the branching pipe.

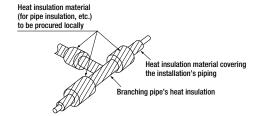

2. Apply a heat insulation material (to be procured locally) to the joint between the branching pipe's heat insulation and the heat insulation material covering the installation's piping as described above and wrap a tape over the gap shown as a hatched (///) area to complete dressing of the piping.


### 2. V MULTI SYSTEM


### **CONTENTS**

2.1 GENERAL INFORMATION	246
2.1.1 How to read the model name	246
2.1.2 Table of models	247
2.1.3 Table of system combinations	247
2.2 SPECIFICATIONS	248
(1) Indoor units	248
(a) Ceiling cassette-4way type (FDT)	248
(b) Ceiling suspended type (FDEN)	254
(2) Outdoor units	260
(3) Operation chart	269
2.3 EXTERIOR DIMENSIONS	272
2.4 ELECTRICAL WIRING	272
2.5 NOISE LEVEL	272
2.6 TEMPERATURE AND VELOCITY DISTRIBUTION	272
2.7 PIPING SYSTEM	272
2.8 RANGE OF USAGE & LIMITATIONS	272
2.9 SELECTION CHART	272
2.10 APPLICATION DATE	272

### **2.1 GENERAL INFORMATION**

### 2.1.1 How to read the model name

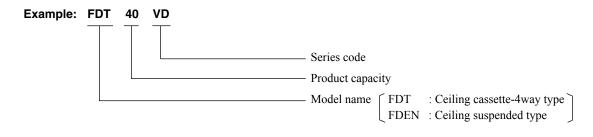

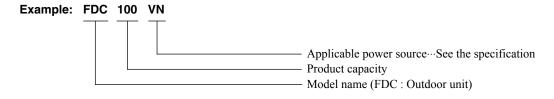

### 2.1.2 Table of models

Model Capacity	40	50	60	71	100	125
Ceiling cassette-4way type (FDT)	0	0	0	0	0	0
Ceiling suspended type (FDEN)	0	0	0	0	0	0
Outdoor unit to be combined (FDC)	FDC71VN (3 Horse Power) FDC100VN FDC100VS (4 Horse Power)	FDC125VN FDC125VS (5 Horse Powe	FDC140V FDC140V er) (6 Horse P	S (8 Hors		C250VS Horse Power)

### 2.1.3 Table of system combinations

Outdoor unit	Туре	Indoor unit assembly capacity	Branch pipe set (Optional)
FDC71VN		40+40	
FDC100VN FDC100VS	Twin	50+50	DIS-WA1
FDC125VN FDC125VS		60+60 50+71	228
FDC140VN	Twin	71+71	
FDC140VS	<b>40VS</b> Triple 50+50+5	50+50+50	DIS-TA1
	Twin	100+100	DIC WD1
	Twin	71+125	DIS-WB1
FDC200VS	Triple	71+71+71	DIS-TB1
	Double Twin	50+50+50+50	DIS-WA1  DIS-TA1  DIS-WB1
	Twin	125+125	DIS-WB1
	Triple	60+60+125	DIS-TR1
FDC250VS	Triple	71+71+100	DIS-1B1
	Double Twin	60+60+60+60	

Notes(1) Always use the branch piping set (optional) at branches in the refrigerant piping.

(2) If wireless specifications are used, use 1 wireless indoor unit in combination with wired indoor units.

(3) The combinations except the above table forbids.

### 2.2 SPECIFICATIONS

### (1) Indoor units

### (a) Ceiling Cassette-4way type (FDT)

Adapted to RoHS directive

	Model	FDT40VD			
Item		Panel T-PSA-3AW-E			
Power source		220-240V~50H	220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	4.0	4.5		
Sound Pressure Level	dB(A)	P-Hi: 39 Hi: 33	Me: 31 Lo: 30		
Exterior dimensions Height x Width x Depth	mm	Unit 246 × Panel 35 ×			
Exterior appearance (Munsell color)		Plaster (6.8Y8.9/0.2) n			
Net weight	kg	UNIT 22 P	PANEL 5.5		
Heat exchanger		Louver fin & inner	r grooved tubing		
Air handling equipment Fan type & Q'ty		Turbo f	fan × 1		
Motor <starting method=""></starting>	W	50 < Direct	50 < Direct line start >		
Air flow (Standard)	CMM	P-Hi: 20 Hi: 18	P-Hi: 20 Hi: 18 Me: 16 Lo: 14		
Available static pressure	Pa	0	0		
Outdoor air intake		Poss	sible		
Air filter, Q'ty		Pocket plastic ne	et × 1 (Washable)		
Shock & vibration absorber		Rubber sleeve	(for fan motor)		
Insulation (noise & heat)		Polyureth	ane form		
Remote controller		wired : RC-E4 (option) wirel	ess : RCN-T-36W-E (option)		
Room temperature control		Thermostat b	y electronics		
Safety equipment		Overload protecti Frost protectio			
Installation data	mm	Liquid line : q			
Refrigerant piping size	mm	Gas line : c	φ 12.7 (1/2")		
Connecting method		Flare p	piping		
Drain pump		Built-in Dr	ain pump		
Drain		Hose Connecta	able with VP20		
Insulation for piping		Necessary (both L	Necessary (both Liquid & Gas lines)		
Standard Accessories		Mounting kit	Mounting kit, Drain hose		

### Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	)°C	7℃	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.(5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

### Adapted to **RoHS** directive

Model		FDT5	50VD		
Item		Panel <b>T-PS</b>	Panel <b>T-PSA-3AW-E</b>		
Power source		220-240V~50Hz	z / 220V ~ 60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	5.0	5.4		
Sound Pressure Level	dB(A)	P-Hi: 39 Hi: 33	Me: 31 Lo: 30		
Exterior dimensions Height x Width x Depth	mm	Unit 246 × Panel 35 ×			
Exterior appearance (Munsell color)		Plaster (6.8Y8.9/0.2) no			
Net weight	kg	UNIT 22 P	PANEL 5.5		
Heat exchanger		Louver fin & inner	r grooved tubing		
Air handling equipment Fan type & Q'ty		Turbo f	Turbo fan × 1		
Motor <starting method=""></starting>	W	50 < Direct	line start >		
Air flow (Standard)	CMM	P-Hi : 20 Hi : 18	P-Hi: 20 Hi: 18 Me: 16 Lo: 14		
Available static pressure	Pa	0	0		
Outdoor air intake		Poss	sible		
Air filter, Q'ty		Pocket plastic ne	et x 1 (Washable)		
Shock & vibration absorber		Rubber sleeve	(for fan motor)		
Insulation (noise & heat)		Polyuretha	ane form		
Remote controller		wired : RC-E4 (option) wirele	ess : RCN-T-36W-E (option)		
Room temperature control		Thermostat by	y electronics		
Safety equipment		Overload protecti Frost protectic			
Installation data Refrigerant piping size	mm	<u> </u>	Liquid line : $\phi$ 6.35 (1/4")  Gas line : $\phi$ 12.7 (1/2")		
Connecting method		Flare p	, ,		
Drain pump			Built-in Drain pump		
Drain		Hose Connecta	Hose Connectable with VP20		
Insulation for piping		Necessary (both L	Necessary (both Liquid & Gas lines)		
Standard Accessories		Mounting kit	Mounting kit, Drain hose		

### Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air temperature	
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

### Adapted to **RoHS** directive

Model		FDT60VD				
Item		Panel <b>T-PS</b>	Panel <b>T-PSA-3AW-E</b>			
Power source		220-240V~50Hz	z / 220V ~ 60Hz			
Operation data		Cooling	Heating			
Nominal capacity	kW	5.6	6.7			
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 33	Me:31 Lo:30			
Exterior dimensions Height x Width x Depth	mm	Unit 246 × Panel 35 ×	- 1- 11- 11- 11- 11- 11- 11- 11- 11- 11			
Exterior appearance (Munsell color)		Plaster (6.8Y8.9/0.2) ne				
Net weight	kg	UNIT 24 P	ANEL 5.5			
Heat exchanger		Louver fin & inner	grooved tubing			
Air handling equipment Fan type & Q'ty		Turbo fa	Turbo fan × 1			
Motor <starting method=""></starting>	W	50 < Direct	line start >			
Air flow (Standard)	CMM	P-Hi: 28 Hi: 18	P-Hi:28 Hi:18 Me:16 Lo:14			
Available static pressure	Pa	0				
Outdoor air intake		Poss	ible			
Air filter, Q'ty		Pocket plastic ne	t × 1 (Washable)			
Shock & vibration absorber		Rubber sleeve	(for fan motor)			
Insulation (noise & heat)		Polyuretha	ane form			
Remote controller		wired : RC-E4 (option) wirele	ess : RCN-T-36W-E (option)			
Room temperature control		Thermostat by	y electronics			
Safety equipment		Overload protecti Frost protectio				
Installation data	mm	Liquid line : d	6.35 (1/4")			
Refrigerant piping size	111111	Gas line ∶∉	Gas line : φ 12.7 (1/2")			
Connecting method		Flare p	piping			
Drain pump			Built-in Drain pump			
Drain		Hose Connecta	Hose Connectable with VP20			
Insulation for piping		Necessary (both Li	Necessary (both Liquid & Gas lines)			
Standard Accessories		Mounting kit,	, Drain hose			

Notes (1) The data are measured at the following conditions.

· · · · · · · · · · · · · · · · · · ·						
Item	Indoor air t	emperature	e Outdoor air temperature			
Operation	DB	WB	DB	WB		
Cooling	27°C	19°C	35°C	24°C		
Heating	20	)°C	7°C	6°C		

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz. (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

### Adapted to **RoHS** directive

	Model	FDT7	71VD		
Item		Panel <b>T-PS</b>	Panel T-PSA-3AW-E		
Power source		220-240V~50H	z / 220V~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	7.1	8.0		
Sound Pressure Level	dB(A)	P-Hi : 46 Hi : 35	Me: 33 Lo: 31		
Exterior dimensions Height x Width x Depth	mm	Unit 246 × Panel 35 ×			
Exterior appearance (Munsell color)		Plaster (6.8Y8.9/0.2) no	· · · · · · ·		
Net weight	kg	UNIT 24 P	PANEL 5.5		
Heat exchanger		Louver fin & inner	r grooved tubing		
Air handling equipment Fan type & Q'ty		Turbo f	Turbo fan × 1		
Motor <starting method=""></starting>	W	50 < Direct	line start >		
Air flow (Standard)	CMM	P-Hi : 28 Hi : 21	P-Hi:28 Hi:21 Me:19 Lo:17		
Available static pressure	Pa	0	0		
Outdoor air intake		Poss	sible		
Air filter, Q'ty		Pocket plastic ne	et x 1 (Washable)		
Shock & vibration absorber		Rubber sleeve	(for fan motor)		
Insulation (noise & heat)		Polyureth	ane form		
Remote controller		wired : RC-E4 (option) wirele	ess : RCN-T-36W-E (option)		
Room temperature control		Thermostat by	y electronics		
Safety equipment		Overload protecti Frost protectic			
Installation data Refrigerant piping size	mm	• • •	Liquid line : φ 9.52 (3/8")  Gas line : φ 15.88 (5/8")		
Connecting method		Flare p			
Drain pump		Built-in Dr			
Drain pamp			Hose Connectable with VP20		
Insulation for piping		Necessary (both L			
Standard Accessories			Mounting kit, Drain hose		

### Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT10	00VD	
Item		Panel <b>T-PSA-3AW-E</b>		
Power source		220-240V~50H	220-240V~50Hz / 220V~60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	10.0	11.2	
Sound Pressure Level	dB(A)	P-Hi:51 Hi:40	Me: 37 Lo: 35	
Exterior dimensions Height x Width x Depth	mm	Unit 298 × Panel 35 ×		
Exterior appearance (Munsell color)		Plaster (6.8Y8.9/0.2) no		
Net weight	kg	UNIT 27 P	PANEL 5.5	
Heat exchanger		Louver fin & inner	r grooved tubing	
Refrigerant control		_	-	
Air handling equipment Fan type & Q'ty		Turbo f	Turbo fan × 1	
Motor <starting method=""></starting>	W	140 < Direct	140 < Direct line start >	
Air flow (Standard)	CMM	P-Hi: 37 Hi: 27	P-Hi: 37 Hi: 27 Me: 24 Lo: 20	
Available static pressure	Pa	0	0	
Outdoor air intake		Poss	Possible	
Air filter, Q'ty		Pocket plastic ne	t x 1 (Washable)	
Shock & vibration absorber		Rubber sleeve	(for fan motor)	
nsulation (noise & heat)		Polyuretha	ane form	
Remote controller		wired : RC-E4 (option) wirele	ess : RCN-T-36W-E (option)	
Room temperature control		Thermostat by	y electronics	
Safety equipment		Overload protecti Frost protectic		
Installation data	mm	Liquid line : $\phi$	9.52 (3/8")	
Refrigerant piping size	mm	Gas line $:\phi$	Gas line : φ 15.88 (5/8")	
Connecting method		Flare p	piping	
Drain pump		Built-in Dr	ain pump	
Drain		Hose Connecta	able with VP20	
Insulation for piping		Necessary (both L	iquid & Gas lines)	
Standard Accessories		Mounting kit,	, Drain hose	

Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDT1:	25VD		
Item		Panel <b>T-PS</b>	Panel <b>T-PSA-3AW-E</b>		
Power source		220-240V~50H	220-240V~50Hz / 220V~60Hz		
Operation data		Cooling	Cooling Heating		
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]		
Sound Pressure Level	dB(A)	P-Hi: 51 Hi: 42	Me: 40 Lo: 37		
Exterior dimensions Height x Width x Depth	mm	Unit 298 × Panel 35 ×			
Exterior appearance (Munsell color)		Plaster (6.8Y8.9/0.2) n			
Net weight	kg	UNIT 27 F	PANEL 5.5		
Heat exchanger		Louver fin & inne	r grooved tubing		
Refrigerant control		<del>-</del>	-		
Air handling equipment Fan type & Q'ty		Turbo fan × 1			
Motor <starting method=""></starting>	W	140 < Direct line start >			
Air flow (Standard)	CMM	P-Hi: 37 Hi: 30 Me: 27 Lo: 23			
Available static pressure	Pa	0			
Outdoor air intake		Poss	sible		
Air filter, Q'ty		Pocket plastic ne	et x 1 (Washable)		
Shock & vibration absorber		Rubber sleeve	Rubber sleeve (for fan motor)		
nsulation (noise & heat)		Polyureth	nane form		
Remote controller		wired : RC-E4 (option) wirel	less : RCN-T-36W-E (option)		
Room temperature control		Thermostat b	by electronics		
Safety equipment		Overload protect Frost protection			
nstallation data		Liquid line : φ 9.52 (3/8")			
Refrigerant piping size	mm	Gas line : φ 15.88 (5/8") φ 15	5.88 (5/8") x 1.0 φ 15.88 (5/8")		
Connecting method		Flare p	piping		
Drain pump		Built-in Dr	rain pump		
Drain		Hose Connectable with VP20			
nsulation for piping		Necessary (both L	iquid & Gas lines)		
Standard Accessories		Mounting kit	t, Drain hose		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
  - During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz. (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

# (b) Ceiling suspended type (FDEN)

#### Adapted to RoHS directive

	Model			
		FDEN	40VD	
Item				
Power source		220-240V~50H	z / 220V ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	4.0	4.5	
Power factor	%	97 /	98	
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 39	Me:38 Lo:37	
Exterior dimensions Height x Width x Depth	mm	210 × 1,0	170 × 690	
Exterior appearance (Munsell color)		Plaster (6.8Y8.9/0.2) n		
Net weight	kg	2	8	
Heat exchanger		Louver fin & inne	r grooved tubing	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 2		
Motor <starting method=""></starting>	W	25 < Direct line start >		
Air flow (Standard)	CMM	P-Hi:13 Hi:11 Me:9 Lo:7		
Available static pressure	Pa	0		
Outdoor air intake		Not possible		
Air filter, Q'ty		Pocket plastic ne	et × 2 (Washable)	
Shock & vibration absorber		Rubber sleeve	(for fan motor)	
Insulation (noise & heat)		Polyureth	ane form	
Remote controller		wired: RC-E4 (option) wi	reless : RCN-E1R (option)	
Room temperature control		Thermostat b	y electronics	
Safety equipment			Internal thermostat for fan motor Frost protection thermostat	
Installation data Refrigerant piping size	mm	Liquid line : φ 6.35 (1/4")  Gas line : φ 12.7 (1/2")		
Connecting method		Flare	piping	
Drain pump		_		
Drain		Hose Connectable with VP20		
Insulation for piping		Necessary (both Liquid & Gas lines)		
Standard Accessories		Mounting kit	Mounting kit, Drain hose	

Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20	°C	7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
- (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDEN:	50VD	
Item				
Power source		220-240V~50H;	-,, -, -, -, -, -, -, -, -, -, -, -,	
Operation data		Cooling	Heating	
Nominal capacity	kW	5.0	5.4	
Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 39	Me: 38 Lo: 37	
Exterior dimensions Height x Width x Depth	mm	210 × 1,0	70 × 690	
Exterior appearance (Munsell color)		Plaster (6.8Y8.9/0.2) no		
Net weight	kg	28	8	
Heat exchanger		Louver fin & inner	r grooved tubing	
Refrigerant control			-	
Air handling equipment Fan type & Q'ty		Centrifuga	Centrifugal fan × 2	
Motor <starting method=""></starting>	W	25 < Direct line start >		
Air flow (Standard)	CMM	P-Hi:13 Hi:11	P-Hi:13 Hi:11 Me:9 Lo:7	
Available static pressure	Pa	0	0	
Outdoor air intake		Not po	Not possible	
Air filter, Q'ty		Pocket plastic ne	Pocket plastic net × 2 (Washable)	
Shock & vibration absorber		Rubber sleeve	(for fan motor)	
Insulation (noise & heat)		Polyureth	ane form	
Remote controller		wired : RC-E4 (option) wired	reless : RCN-E1R (option)	
Room temperature control		Thermostat b	y electronics	
Safety equipment			Internal thermostat for fan motor Frost protection thermostat	
Installation data Refrigerant piping size	mm	•	Liquid line : $\phi$ 6.35 (1/4")  Gas line : $\phi$ 12.7 (1/2")	
Connecting method		Flare p		
Drain pump		_	-	
Drain		Hose Connecta	able with VP20	
Insulation for piping			Necessary (both Liquid & Gas lines)	
Standard Accessories			Mounting kit, Drain hose	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber. During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz. (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

	Model	FDEN60VD		
Item				
Power source		220-240V~50Hz	z / 220V ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	5.6	6.7	
Sound Pressure Level	dB(A)	P-Hi : 50 Hi : 41	Me:39 Lo:38	
Exterior dimensions Height x Width x Depth	mm	210 × 1,32	20 × 690	
Exterior appearance (Munsell color)		Plaster (6.8Y8.9/0.2) ne		
Net weight	kg	37	7	
Heat exchanger		Louver fin & inner	r grooved tubing	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4		
Motor <starting method=""></starting>	W	20 × 2 < Direct line start >		
Air flow (Standard)	CMM	P-Hi: 22 Hi: 18 Me: 14 Lo: 12		
Available static pressure	Pa	0		
Outdoor air intake		Not po	Not possible	
Air filter, Q'ty		Pocket plastic ne	t × 2 (Washable)	
Shock & vibration absorber		Rubber sleeve (for fan motor)		
Insulation (noise & heat)		Polyuretha	ane form	
Remote controller		wired : RC-E4 (option) wir	reless : RCN-E1R (option)	
Room temperature control		Thermostat by	y electronics	
Safety equipment			Internal thermostat for fan motor Frost protection thermostat	
Installation data		Liquid line : φ 6.35 (1/4")		
Refrigerant piping size	mm	Gas line : φ 12.7 (1/2")		
Connecting method		Flare p	piping	
Drain pump		-		
Drain		Hose Connectable with VP20		
Insulation for piping		Necessary (both Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB	WB	DB	WB
Cooling	27°C 19°C		35°C	24°C
Heating	20°C		7°C	6℃

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.

- (2) This packaged air-conditioner is manufactured and tested in comormity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.
  During operation these value are somewhat higher due to ambient temperature.

  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

		FDEN	71VD	
Item				
Power source		220-240V~50Hz	z / 220V ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	7.1	8.0	
Sound Pressure Level	dB(A)	P-Hi : 50 Hi : 41	Me:39 Lo:38	
Exterior dimensions Height x Width x Depth	mm	210 × 1,32	20 × 690	
Exterior appearance (Munsell color)		Plaster (6.8Y8.9/0.2) ne		
Net weight	kg	37	7	
Heat exchanger		Louver fin & inner	r grooved tubing	
Air handling equipment Fan type & Q'ty		Centrifugal fan × 4		
Motor <starting method=""></starting>	W	20 × 2 < Direct line start >		
Air flow (Standard)	CMM	P-Hi: 22 Hi: 18 Me: 14 Lo: 12		
Available static pressure	Pa	0		
Outdoor air intake		Not possible		
Air filter, Q'ty		Pocket plastic net × 2 (Washable)		
Shock & vibration absorber		Rubber sleeve (for fan motor)		
Insulation (noise & heat)		Polyuretha	ane form	
Remote controller		wired : RC-E4 (option) wir	reless : RCN-E1R (option)	
Room temperature control		Thermostat by	y electronics	
Safety equipment			Internal thermostat for fan motor Frost protection thermostat	
Installation data Refrigerant piping size	mm	Liquid line : φ 9.52 (3/8") Gas line : φ 15.88 (5/8")		
Connecting method		Flare piping		
Drain pump		_		
Drain		Hose Connectable with VP20		
Insulation for piping		Necessary (both Liquid & Gas lines)		
Standard Accessories		Mounting kit, Drain hose		

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Item	Model		FDEN1	100VD		
Operation data         Cooling         Heating           Nominal capacity         kW         10.0         11.2           Sound Pressure Level         dB(A)         P-Hi: 46 Hi: 44 Me: 41 Lo: 39           Exterior dimensions Height x Width x Depth         mm         250 x 1,620 x 690           Exterior appearance (Munsell color)         Plaster White (6.8Y8.9/0.2) near equivalent           Net weight         kg         49           Heat exchanger         Louver fin & inner growed tubing           Air handling equipment Fan type & Q'ty         Centrifugal fan x 4           Fan type & Q'ty         Come tin inner growed tubing           Air flow (Standard)         CMM         P-Hi: 28 Hi: 26 Me: 23 Lo: 21           Available static pressure         Pa         0           Outdoor air intake         Not possible           Air filter, Q'ty         Pocket plastic net x 2 (Washable)           Shock & vibration absorber         Rubber sleeve (for fan motor)           Insulation (noise & heat)         Polyurethane form           Remote controller         Wired: RC-E4 (option) wireless: RCN-E1R (option)           Room temperature control         Thermostat by electronics           Safety equipment         Installation data           Refrigerant piping size         Gas line: x) 15.88 (5/8") <th colspan="2">Item</th> <th></th> <th></th>	Item					
Nominal capacity   kW   10.0   11.2	Power source		220-240V~50H	z / 220V ~ 60Hz		
Sound Pressure Level         dB(A)         P-Hi: 46 Hi: 44 Me: 41 Lo: 39           Exterior dimensions Height x Width x Depth         mm         250 x 1,620 x 690           Exterior appearance (Munsell color)         Plaster White (6.8Y8.90.2) near equivalent           Net weight         kg         49           Heat exchanger         Louver fin & inner grooved tubing           Air handling equipment Fan type & Oty         Centrifugal fan x 4           Fan type & Oty         W         30 x 2 < Direct line start >           Air flow (Standard)         CMM         P-Hi: 28 Hi: 26 Me: 23 Lo: 21           Available static pressure         Pa         0           Outdoor air intake         Not possible           Air filter, Q'ty         Pocket plastic net x 2 (Washable)           Shock & vibration absorber         Rubber sleeve (for fan motor)           Insulation (noise & heat)         Polyurethane form           Remote controller         wired: RC-E4 (option) wireless: RCN-E1R (option)           Room temperature control         Thermostat by electronics           Installation data         Internal thermostat for fan motor           Frost protection thermostat         Internal thermostat for fan motor           Frost protection thermostat         Flare piping           Connecting method         Flare piping	Operation data		Cooling	Heating		
Exterior dimensions         mm         250 × 1,620 × 690           Exterior appearance (Munsell color)         Plaster White (6.8Y8.9/0.2) near equivalent           Net weight         kg         49           Heat exchanger         Louver fin & inner grooved tubing           Air handling equipment Fan type & O'ty         Centrifugal fan × 4           Fan type & O'ty         W         30 × 2 < Direct line start >           Air flow (Standard)         CMM         P-Hi: 28 Hi: 26 Me: 23 Lo: 21           Available static pressure         Pa         0           Outdoor air intake         Not possible           Air filter, Q'ty         Pocket plastic net × 2 (Washable)           Shock & vibration absorber         Rubber sleeve (for fan motor)           Insulation (noise & heat)         Polyurethane form           Remote controller         wired: RC-E4 (option) wireless: RCN-E1R (option)           Room temperature control         Thermostat by electronics           Internal thermostat for fan motor           Fost protection thermostat           Internal thermostat for fan motor           Frost protection thermostat           Internal thermostat for fan motor           Frost protection thermostat           Internal thermostat for fan motor         Frost protection thermostat <t< td=""><td>Nominal capacity</td><td>kW</td><td>10.0</td><td>11.2</td></t<>	Nominal capacity	kW	10.0	11.2		
Height x Width x Depth  Exterior appearance (Munsell color)  Net weight  Heat exchanger  Air handling equipment Fan type & O'ty  Motor <starting method="">  Air filow (Standard)  Cumbour in intake  Air filter, O'ty  Shock &amp; vibration absorber  Remote controller  Remote controller  Remote controller  Safety equipment  Safety equipment  Refrigerant piping size  Connecting method  Tent yield  Refrigerant piping size  Tent yield  Refrigerant piping size  Pa  Pa  Pa  Pa  Pa  Pa  Pa  Pa  Pa  P</starting>	Sound Pressure Level	dB(A)	P-Hi: 46 Hi: 44	Me: 41 Lo: 39		
(Munsell color)     (6.8Y8.9/0.2) near equivalent       Net weight     kg     49       Heat exchanger     Louver fin & inner grooved tubing       Air handling equipment Fan type & Q'ty     Centrifugal fan × 4       Motor <starting method="">     W     30 × 2 &lt; Direct line start &gt;       Air flow (Standard)     CMM     P-Hi : 28 Hi : 26 Me : 23 Lo : 21       Available static pressure     Pa     0       Outdoor air intake     Not possible       Air filter, Q'ty     Pocket plastic net × 2 (Washable)       Shock &amp; vibration absorber     Rubber sleeve (for fan motor)       Insulation (noise &amp; heat)     Polyurethane form       Remote controller     wired : RC-E4 (option) wireless : RCN-E1R (option)       Room temperature control     Thermostat by electronics       Safety equipment     Internal thermostat for fan motor       Frost protection thermostat     Frost protection thermostat       Installation data     Eiquid line : \( \phi \) 15.88 (5/8")       Refrigerant piping size     Gas line : \( \phi \) 15.88 (5/8")       Connecting method     Flare piping       Drain pump     —       Drain     Hose Connectable with VP20</starting>		mm	250 × 1,6	20 × 690		
Heat exchanger  Air handling equipment Fan type & Q'ty  Motor <starting method=""> W  Air flow (Standard) CMM  Available static pressure  Outdoor air intake  Air filter, Q'ty  Shock &amp; vibration absorber  Insulation (noise &amp; heat)  Remote controller  Safety equipment  Safety equipment  Refrigerant piping size  Connecting method  Drain pump  Drain  Drain  Air flow (Standard)  W  A30 × 2 &lt; Direct line start &gt;  Centrifugal fan × 4  Centrifugal fan × 4</starting>			1 132-121			
Air handling equipment Fan type & Q'ty  Motor <starting method=""> W  30 × 2 &lt; Direct line start &gt;  Air flow (Standard) CMM P-Hi : 28 Hi : 26 Me : 23 Lo : 21  Available static pressure Pa  Outdoor air intake Not possible  Air filter, Q'ty Pocket plastic net × 2 (Washable)  Shock &amp; vibration absorber Insulation (noise &amp; heat) Remote controller Remote controller  Safety equipment  Installation data Refrigerant piping size Connecting method  Drain  Polyumethane  Gas line : \$\phi\$ 15.88 (5/8")  Connecting method  Flare piping  Drain  Motor <starting (for="" (polyumethane)="" (washable)="" 2="" 21="" 23="" 26="" 4="" :="" air="" busine="" centrifugal="" fan="" flare="" frost="" gent="" gentrifugal="" in="" intake="" internal="" lo="" me="" method="" motor="" motor)="" net="" not="" outdoor="" piping="" plastic="" poket="" possible="" protection="" rubber="" sleeve="" square="" star="" tale="" td="" teleping="" teleping<="" thermostat="" ×=""><td>Net weight</td><td>kg</td><td>49</td><td>9</td></starting></starting>	Net weight	kg	49	9		
Fan type & Q'ty  Motor <starting method=""> W  30 × 2 &lt; Direct line start &gt;  Air flow (Standard) CMM  P-Hi : 28 Hi : 26 Me : 23 Lo : 21  Available static pressure Pa  Outdoor air intake  Air filter, Q'ty  Pocket plastic net × 2 (Washable)  Shock &amp; vibration absorber  Insulation (noise &amp; heat)  Remote controller  Room temperature control  Safety equipment  Installation data Refrigerant piping size  Connecting method  Pali : 26 Me : 23 Lo : 21  Outdoor air intake  Not possible  Not possible  Not possible  Not possible  Not possible  Pocket plastic net × 2 (Washable)  Rubber sleeve (for fan motor)  Rubber sleeve (for fan motor)  Insulation (noise &amp; heat)  Polyurethane form  wired : RC-E4 (option) wireless : RCN-E1R (option)  Thermostat by electronics  Internal thermostat for fan motor  Frost protection thermostat  Liquid line : \$\phi\$ 9.52 (3/8")  Gas line : \$\phi\$ 15.88 (5/8")  Connecting method  Flare piping  Drain pump  Hose Connectable with VP20</starting>	Heat exchanger		Louver fin & inner	r grooved tubing		
Air flow (Standard)  Available static pressure  Outdoor air intake  Air filter, Q'ty  Pocket plastic net × 2 (Washable)  Shock & vibration absorber  Insulation (noise & heat)  Remote controller  Room temperature control  Safety equipment  Installation data Refrigerant piping size  Connecting method  Drain  Air filter, 2'ty  Pocket plastic net × 2 (Washable)  Rot pocket plastic net × 2 (Washable)  Rubber sleeve (for fan motor)  Insulation (noise & heat)  Intermal thermostat by electronics  Internal thermostat for fan motor  Frost protection thermostat  Liquid line: \$\phi\$ 9.52 (3/8")  Gas line: \$\phi\$ 15.88 (5/8")  Connecting method  Flare piping  Drain pump  Hose Connectable with VP20			Centrifugal fan × 4			
Available static pressure Pa 0 Outdoor air intake Not possible Air filter, Q'ty Pocket plastic net × 2 (Washable) Shock & vibration absorber Insulation (noise & heat) Polyurethane form Remote controller Wired: RC-E4 (option) Wireless: RCN-E1R (option) Room temperature control Internal thermostat by electronics Safety equipment Installation data Refrigerant piping size Pair Gas line: \$\phi\$ 9.52 (3/8") Connecting method Flare piping Drain Pump Hose Connectable with VP20	Motor <starting method=""></starting>	W	30 × 2 < Direct line start >			
Outdoor air intake       Not possible         Air filter, Q'ty       Pocket plastic net × 2 (Washable)         Shock & vibration absorber       Rubber sleeve (for fan motor)         Insulation (noise & heat)       Polyurethane form         Remote controller       wired: RC-E4 (option) wireless: RCN-E1R (option)         Room temperature control       Thermostat by electronics         Safety equipment       Internal thermostat for fan motor         Frost protection thermostat       Frost protection thermostat         Installation data       Liquid line: \$\phi\$ 9.52 (3/8")         Refrigerant piping size       Gas line: \$\phi\$ 15.88 (5/8")         Connecting method       Flare piping         Drain pump       —         Drain       Hose Connectable with VP20	Air flow (Standard)	CMM	P-Hi: 28 Hi: 26 Me: 23 Lo: 21			
Air filter, Q'ty  Shock & vibration absorber Insulation (noise & heat)  Remote controller Room temperature control  Safety equipment Installation data Refrigerant piping size  Connecting method  Drain  Pocket plastic net × 2 (Washable)  Rubber sleeve (for fan motor)  Internat thermostat by electronics  Internal thermostat for fan motor  Frost protection thermostat  Liquid line: \$\phi 9.52 (3/8")  Gas line: \$\phi 15.88 (5/8")  Flare piping  Hose Connectable with VP20	Available static pressure	Pa	0			
Shock & vibration absorber Insulation (noise & heat) Remote controller Remote controller Room temperature control Safety equipment Installation data Refrigerant piping size Connecting method Drain Drain  Rubber sleeve (for fan motor) Roubyurethane form wired: RC-E4 (option) wireless: RCN-E1R (option) Thermostat by electronics Internal thermostat for fan motor Frost protection thermostat Liquid line: \$\phi\$ 9.52 (3/8") Gas line : \$\phi\$ 15.88 (5/8")  Hose Connectable with VP20	Outdoor air intake		Not po	essible		
Insulation (noise & heat)       Polyurethane form         Remote controller       wired: RC-E4 (option) wireless: RCN-E1R (option)         Room temperature control       Thermostat by electronics         Safety equipment       Internal thermostat for fan motor         Frost protection thermostat         Installation data       Liquid line: φ 9.52 (3/8")         Refrigerant piping size       Gas line : φ 15.88 (5/8")         Connecting method       Flare piping         Drain pump       —         Drain       Hose Connectable with VP20	Air filter, Q'ty		Pocket plastic ne	et × 2 (Washable)		
Remote controller       wired: RC-E4 (option) wireless: RCN-E1R (option)         Room temperature control       Thermostat by electronics         Safety equipment       Internal thermostat for fan motor         Frost protection thermostat         Installation data       Liquid line: φ 9.52 (3/8")         Refrigerant piping size       Gas line : φ 15.88 (5/8")         Connecting method       Flare piping         Drain pump       —         Drain       Hose Connectable with VP20	Shock & vibration absorber		Rubber sleeve	(for fan motor)		
Room temperature control       Thermostat by electronics         Safety equipment       Internal thermostat for fan motor         Installation data       Frost protection thermostat         Refrigerant piping size       Gas line : φ 9.52 (3/8")         Connecting method       Flare piping         Drain pump       —         Drain       Hose Connectable with VP20	Insulation (noise & heat)		Polyureth	ane form		
Safety equipment  Installation data Refrigerant piping size  Connecting method  Drain pump  Internal thermostat for fan motor Frost protection thermostat  Liquid line: \$\phi\$ 9.52 (3/8")  Gas line: \$\phi\$ 15.88 (5/8")  Flare piping  Hose Connectable with VP20	Remote controller		wired : RC-E4 (option) wired	reless : RCN-E1R (option)		
Safety equipment         Frost protection thermostat           Installation data         Liquid line : φ 9.52 (3/8")           Refrigerant piping size         Gas line : φ 15.88 (5/8")           Connecting method         Flare piping           Drain pump         —           Drain         Hose Connectable with VP20	Room temperature control		Thermostat b	y electronics		
Refrigerant piping size         Gas line : ∮ 15.88 (5/8")           Connecting method         Flare piping           Drain pump         —           Drain         Hose Connectable with VP20	Safety equipment					
Drain pump — Hose Connectable with VP20		mm				
Drain pump — Hose Connectable with VP20	Connecting method					
	Drain pump					
Insulation for piping Necessary (both Liquid & Gas lines)	Drain		Hose Connectable with VP20			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
Standard Accessories Mounting kit, Drain hose	Standard Accessories		Mounting kit			

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6℃

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
  (3) Sound pressure level indicates the value in an anechoic chamber.

  During operation these value are somewhat higher due to ambient temperature.
  (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.
  (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

Model		FDEN1	125VD	
Power source	$\overline{}$	220-240V~50H;	z / 220V ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	12.5	14.0	
Sound Pressure Level	dB(A)	P-Hi: 50 Hi: 46	Me:44 Lo:43	
Exterior dimensions Height x Width x Depth	mm	250 × 1,6	20 × 690	
Exterior appearance (Munsell color)		Plaster (6.8Y8.9/0.2) no		
Net weight	kg	49	9	
Heat exchanger		Louver fin & inner	r grooved tubing	
Refrigerant control		-	-	
Air handling equipment Fan type & Q'ty		Centrifuga	Centrifugal fan × 4	
Motor <starting method=""></starting>	W	40 × 2 < Direct line start >		
Air flow (Standard)	CMM	P-Hi: 32 Hi: 29 Me: 26 Lo: 23		
Available static pressure	Pa	0	0	
Outdoor air intake		Not po	essible	
Air filter, Q'ty		Pocket plastic ne	et × 2 (Washable)	
Shock & vibration absorber		Rubber sleeve	(for fan motor)	
Insulation (noise & heat)		Polyureth	ane form	
Remote controller		wired : RC-E4 (option) wired	reless : RCN-E1R (option)	
Room temperature control		Thermostat b	y electronics	
Safety equipment			Internal thermostat for fan motor Frost protection thermostat	
Installation data Refrigerant piping size	mm	•	Liquid line : φ 9.52 (3/8")  Gas line : φ 15.88 (5/8")	
Connecting method			Flare piping	
Drain pump			-	
Drain		Hose Connecta	Hose Connectable with VP20	
Insulation for piping		Necessary (both L	Necessary (both Liquid & Gas lines)	
Standard Accessories		Mounting kit	, Drain hose	

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C 19°C		35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.
- During operation these value are somewhat higher due to ambient temperature.
- (4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz. (5) When wireless remote controller is used, fan is 3 speed setting (Hi-Me-Lo) only.

(2) Outdoor units Adapted to RoHS directive

	Model			
ltare.		FDC7	FDC71VN	
Item				
Power source		220-240V~50H	<u> </u>	
Operation data		Cooling	Heating	
Nominal capacity	kW	7.1 [ 3.2 (Min.)~8.0 (Max.)]	8.0 [ 3.6 (Min.) ~ 9.0 (Max.)]	
Sound Pressure Level	dB(A)	48	8	
Exterior dimensions Height x Width x Depth	mm	750 × 96	88 × 340	
Exterior appearance		Stucco	White	
(Munsell color)		(4.2Y7.5/1.1) n	ear equivalent	
Net weight	kg	60	0	
Refrigerant equipment Compressor type & Q'ty		2YC45D	DXD × 1	
Starting method		Direct lii	ne start	
Refrigerant oil	l	0.65 FVC50K		
Heat exchanger		Straight fin & inner grooved tubing		
Refrigerant control		Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Propeller fan × 1		
Motor <starting method=""></starting>	W	86 < Direct	line start >	
Air flow (Standard)	CMM	Cooling: 60,	Heating: 50	
Shock & vibration absorber		Rubber sleeve (fo	or Compressor)	
Electric heater	W	20 (Crank c	ase heater)	
Safety equipment		Internal thermosi Abnormal discharge te		
Installation data		Liquid line : $\phi$	9.52 (3/8")	
Refrigerant piping size	mm	Gas line $:\phi$	5 15.88 (5/8")	
Connecting method		Flare p	piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher)		
Refrigerant Quantity		R410A 2.95kg in outdoor unit (incl.	the amount for the piping of : 30m)	
Drain ,		Holes size ¢	,	
Insulation for piping		Necessary (both L	iquid & Gas lines)	
Standard Accessories		,(,	·	

Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C 19°C		35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

During operation these value are somewhat higher due to ambient temperature.

(4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

Model		FDC10	00VN		
Power source		220-240V~50Hz	z / 220V ~ 60Hz		
Operation data		Cooling Heating			
Nominal capacity	kW	10.0 [ 4.0 (Min.)~11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]		
Sound Pressure Level	dB(A)	49	9		
Exterior dimensions Height x Width x Depth	mm	845×97	0×370		
Exterior appearance (Munsell color)		Stucco (4.2Y7.5/1.1) ne			
Net weight	kg	81	1		
Refrigerant equipment Compressor type & Q'ty		RMT5126N	MDE2 × 1		
Starting method		Direct lin	ne start		
Refrigerant oil	l	0.9 M-I	MA68		
Heat exchanger		Straight fin & inner	er grooved tubing		
Refrigerant control		Electronic exp	pansion valve		
Air handling equipment Fan type & Q'ty		Propeller fan × 1			
Motor <starting method=""></starting>	W	86 < Direct l	line start >		
Air flow (Standard)	CMM	Cooling: 75,	Heating: 73		
Shock & vibration absorber		Rubber sleeve (fo	or Compressor)		
Electric heater	W	20 (Crank ca	ase heater)		
Safety equipment		Internal thermost Abnormal discharge ter			
Installation data	mm	Liquid line : $\phi$	9.52 (3/8")		
Refrigerant piping size	mm	Gas line $:\phi$	15.88 (5/8")		
Connecting method		Flare p	piping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 154		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl. th	he amount for the piping of : 30m)		
Drain		Holes size $\phi$	b 20 x 3pcs		
Insulation for piping		Necessary (both Liquid & Gas lines)			
Standard Accessories		Edgi	Edging		

# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.

	Model			
Item		FDC1	FDC100VS	
		380-415V 3N~50Hz / 380V 3N~60Hz		
Power source				
Operation data	1344	Cooling	Heating	
Nominal capacity	kW	10.0 [ 4.0 (Min.) ~ 11.2 (Max.)]	11.2 [ 4.0 (Min.) ~ 12.5 (Max.)]	
Sound Pressure Level	dB(A)	49	9	
Exterior dimensions Height x Width x Depth	mm	845 × 97	0 × 370	
Exterior appearance		Stucco	White	
(Munsell color)		(4.2Y7.5/1.1) n	ear equivalent	
Net weight	kg	83	3	
Refrigerant equipment Compressor type & Q'ty		RMT5126I	MDE3 × 1	
Starting method		Direct lii	ne start	
Refrigerant oil	l	0.9 M-MA68		
Heat exchanger		Straight fin & inner grooved tubing		
Refrigerant control		Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Propeller fan × 1		
Motor <starting method=""></starting>	W	86 < Direct	line start >	
Air flow (Standard)	CMM	Cooling: 75,	Heating: 73	
Shock & vibration absorber		Rubber sleeve (fo	or Compressor)	
Electric heater	W	20 (Crank c	ase heater)	
Safety equipment		Internal thermosi Abnormal discharge te		
Installation data		Liquid line : $\phi$	9.52 (3/8")	
Refrigerant piping size	mm	Gas line ∶ ¢	15.88 (5/8")	
Connecting method		Flare p	piping	
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher)		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl. the amount for the piping of : 30m)		
Drain		Holes size d	, ,	
Insulation for piping		Necessary (both L	· · · · · · · · · · · · · · · · · · ·	
Standard Accessories		Edg	•	

# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C 19°C		35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.

Model		FDC12	25VN	
Power source		220-240V~50Hz	z / 220V ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]	
Sound Pressure Level	dB(A)	Cooling: 50	Heating: 51	
Exterior dimensions Height x Width x Depth	mm	845 × 97	0 × 370	
Exterior appearance (Munsell color)		Stucco (4.2Y7.5/1.1) no		
Net weight	kg	81	1	
Refrigerant equipment Compressor type & Q'ty		RMT5126N	MDE2 × 1	
Starting method		Direct lir	ne start	
Refrigerant oil	l	0.9 M-	MA68	
Heat exchanger		Straight fin & inne	r grooved tubing	
Refrigerant control		Electronic exp	pansion valve	
Air handling equipment Fan type & Q'ty		Propeller	fan × 1	
Motor <starting method=""></starting>	W	86 < Direct	line start >	
Air flow (Standard)	CMM	Cooling: 75,	Heating: 73	
Shock & vibration absorber		Rubber sleeve (fo	or Compressor)	
Electric heater	W	20 (Crank ca	ase heater)	
Safety equipment		Internal thermost Abnormal discharge te		
Installation data	mm	Liquid line : $\phi$	, ,	
Refrigerant piping size		Gas line $:\phi$	15.88 (5/8")	
Connecting method		Flare p	piping	
Refrigerant line (one way) length	_	Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher)   Max.15m (Outdoor unit is lower)  *1.See page 154		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl. t	he amount for the piping of : 30m)	
Drain		Holes size $\phi$	· · · · · · · · · · · · · · · · · · ·	
Insulation for piping		Necessary (both Liquid & Gas lines)		
Standard Accessories		Edging		

# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C	19°C	35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.

Model		FDC12	25VS	
Power source		380-415V 3N ~ 50Hz	z / 380V 3N ~ 60Hz	
Operation data		Cooling	Heating	
Nominal capacity	kW	12.5 [ 5.0 (Min.)~14.0 (Max.)]	14.0 [ 4.0 (Min.) ~ 16.0 (Max.)]	
Sound Pressure Level	dB(A)	Cooling: 50 H	Heating : 51	
Exterior dimensions Height x Width x Depth	mm	845 × 970	0 × 370	
Exterior appearance (Munsell color)		Stucco \ (4.2Y7.5/1.1) ne		
Net weight	kg	83	3	
Refrigerant equipment Compressor type & Q'ty		RMT5126N	/IDE3 × 1	
Starting method		Direct line start		
Refrigerant oil	l	0.9 M-MA68		
Heat exchanger		Straight fin & inner grooved tubing		
Refrigerant control		Electronic expansion valve		
Air handling equipment Fan type & Q'ty		Propeller	fan × 1	
Motor <starting method=""></starting>	W	86 < Direct li	line start >	
Air flow (Standard)	CMM	Cooling: 75, F	Heating: 73	
Shock & vibration absorber		Rubber sleeve (fo	or Compressor)	
Electric heater	W	20 (Crank ca	ase heater)	
Safety equipment		Internal thermosta Abnormal discharge ter		
Installation data Refrigerant piping size	mm -	Liquid line : φ: Gas line : φ	· ,	
Connecting method		Flare pi		
Refrigerant line (one way) length		Max.50m		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154	
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl. th	ne amount for the piping of : 30m)	
Drain		Holes size $\phi$	20 x 3pcs	
Insulation for piping		Necessary (both Lic	quid & Gas lines)	
Standard Accessories		Edgiı	ing	

# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C 19°C		35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

During operation these value are somewhat higher due to ambient temperature.

(4) The operation data indicates when the air-conditioner is operated at 400V50Hz or 380V60Hz.

Model		FDC14	40VN		
Item					
Power source		220-240V ~ 50Hz	z / 220V ~ 60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)]	16.0 [ 4.0 (Min.) ~ 16.5 (Max.)]		
Sound Pressure Level	dB(A)	51	1		
Exterior dimensions Height x Width x Depth	mm	845 × 970	0 × 370		
Exterior appearance (Munsell color)		Stucco (4.2Y7.5/1.1) ne			
Net weight	kg	81	1		
Refrigerant equipment Compressor type & Q'ty		RMT5126M	MDE2 × 1		
Starting method		Direct lin	ne start		
Refrigerant oil	l	0.9 M-N	MA68		
Heat exchanger		Straight fin & inner grooved tubing			
Refrigerant control		Electronic exp.	pansion valve		
Air handling equipment Fan type & Q'ty		Propeller	fan × 1		
Motor <starting method=""></starting>	W	86 < Direct I	line start >		
Air flow (Standard)	CMM	Cooling: 75, I	Heating: 73		
Shock & vibration absorber		Rubber sleeve (fo	or Compressor)		
Electric heater	W	20 (Crank ca	ase heater)		
Safety equipment		Internal thermosta Abnormal discharge ter			
Installation data Refrigerant piping size	mm	Liquid line : $\phi$ Gas line : $\phi$	. ,		
Connecting method		Flare p			
Refrigerant line (one way) length		Max.50m	r J		
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	*1.See page 154 and 155		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl. th	he amount for the piping of : 30m)		
Drain		Holes size $\phi$			
Insulation for piping		Necessary (both Li	iquid & Gas lines)		
Standard Accessories	İ	Edgi	ing		

# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C 19°C		35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound pressure level indicates the value in an anechoic chamber.

During operation these value are somewhat higher due to ambient temperature.

(4) The operation data indicates when the air-conditioner is operated at 230V50Hz or 220V60Hz.

Model		FDC140	ovs		
Item					
Power source		380-415V 3N~50Hz	/ 380V 3N ~ 60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	14.0 [ 5.0 (Min.) ~ 14.5 (Max.)] 16.0 [ 4.0 (Min.) ~ 16.5 (Min.)			
Sound Pressure Level	dB(A)	51			
Exterior dimensions Height x Width x Depth	mm	845 × 970	× 370		
Exterior appearance (Munsell color)		Stucco W (4.2Y7.5/1.1) nea			
Net weight	kg	83			
Refrigerant equipment Compressor type & Q'ty		RMT5126MI	DE3 × 1		
Starting method		Direct line	e start		
Refrigerant oil	l	0.9 M-M	IA68		
Heat exchanger		Straight fin & inner grooved tubing			
Refrigerant control		Electronic expa	nsion valve		
Air handling equipment Fan type & Q'ty		Propeller fan × 1			
Motor <starting method=""></starting>	W	86 < Direct lir	ne start >		
Air flow (Standard)	CMM	Cooling: 75, H	leating : 73		
Shock & vibration absorber		Rubber sleeve (for	Compressor)		
Electric heater	W	20 (Crank cas	se heater)		
Safety equipment		Internal thermostal Abnormal discharge tem			
Installation data	mm	Liquid line : $\phi$ 9	0.52 (3/8")		
Refrigerant piping size	111111	Gas line : φ1	5.88 (5/8")		
Connecting method		Flare pip	ping		
Refrigerant line (one way) length		Max.50m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 154 and 155		
Refrigerant Quantity		R410A 3.8kg in outdoor unit (incl. the	e amount for the piping of : 30m)		
Drain		Holes size φ 2	20 x 3pcs		
Insulation for piping		Necessary (both Liq	uid & Gas lines)		
Standard Accessories		Edgin	ng		

# Notes (1) The data are measured at the following conditions.

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C 19°C		35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.

Model		FDC2	00VS		
Item					
Power source		380-415V 3N∼50H:	z / 380V 3N ~ 60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	20.0 [ 7.0 (Min.)~22.4 (Max.)]	22.4 [ 7.6 (Min.)~25.0 (Max.)]		
Sound Pressure Level	dB(A)	57	7		
Exterior dimensions Height x Width x Depth	mm	1,300 × 9	70 × 370		
Exterior appearance (Munsell color)		Stucco (4.2Y7.5/1.1) no			
Net weight	kg	12	2		
Refrigerant equipment Compressor type & Q'ty		GTC5150N	ID70K × 1		
Starting method		Direct line start			
Refrigerant oil	l	1.45 M-MA32R			
Heat exchanger		Straight fin & inner grooved tubing			
Refrigerant control		Electronic exp	pansion valve		
Air handling equipment Fan type & Q'ty		Propeller fan × 2			
Motor <starting method=""></starting>	W	86 × 2 < Direc	ct line start >		
Air flow (Standard)	CMM	Cooling: 150,	Heating: 145		
Shock & vibration absorber		Rubber sleeve (fo	or Compressor)		
Electric heater	W	33 (Crank ca	ase heater)		
Safety equipment		Internal thermost Abnormal discharge te			
nstallation data	mm	Liquid line : $\phi$	9.52 (3/8")		
Refrigerant piping size	111111	Gas line $:\phi$	22.22 (7/8")		
Connecting method		Liquid : Flare /	Gas: Brazing		
Refrigerant line (one way) length		Max.70m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher)			
Refrigerant Quantity		R410A 5.4kg (Pre-charged up to the	piping length of 30m) Outdoor unit		
Orain		Holes size q	<i>ф</i> 20 × 3pcs		
nsulation for piping		Necessary (both L	Necessary (both Liquid & Gas lines)		
Standard Accessories		Connecting p	pipe, Edging		

# Notes (1) The data are measured at the following conditions.

Item	Indoor air temperature		Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C 19°C		35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.

Model		FDC2	50VS		
Item					
Power source		380-415V 3N~50Hz	z / 380V 3N~60Hz		
Operation data		Cooling	Heating		
Nominal capacity	kW	25.0 [ 10.0 (Min.)~28.0 (Max.)]	28.0 [ 9.5 (Min.)~31.5 (Max.)]		
Sound Pressure Level	dB(A)	Cooling: 57 Heating: 58			
Exterior dimensions Height x Width x Depth	mm	1,505 × 9	70 × 370		
Exterior appearance (Munsell color)		Stucco (4.2Y7.5/1.1) no			
Net weight	kg	14	40		
Refrigerant equipment Compressor type & Q'ty		GTC5150N	ND70K × 1		
Starting method		Direct line start			
Refrigerant oil	l	1.45 M-MA32R			
Heat exchanger		Straight fin & inner grooved tubing			
Refrigerant control		Electronic expansion valve			
Air handling equipment Fan type & Q'ty		Propeller fan × 2			
Motor <starting method=""></starting>	W	86 × 2 < Direc	ct line start >		
Air flow (Standard)	CMM	Cooling: 150,	Heating: 145		
Shock & vibration absorber		Rubber sleeve (fo	or Compressor)		
Electric heater	W	33 (Crank ca	ase heater)		
Safety equipment		Internal thermost Abnormal discharge te			
Installation data	mm	Liquid line : $\phi$	5 12.7 (1/2")		
Refrigerant piping size	1111111	Gas line $:\phi$	5 22.22 (7/8")		
Connecting method		Liquid : Flare /	Gas : Brazing		
Refrigerant line (one way) length		Max.70m			
Vertical height difference between outdoor unit and indoor unit		Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	%1.See page 154		
Refrigerant Quantity		R410A 7.2kg (Pre-charged up to the	piping length of 30m) Outdoor unit		
Drain		Holes size ¢	φ 20 × 3pcs		
Insulation for piping		Necessary (both L	iquid & Gas lines)		
Standard Accessories		Connecting p	pipe, Edging		

# Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature
Operation	DB WB		DB	WB
Cooling	27°C 19°C		35°C	24°C
Heating	20°C		7°C	6°C

- (2) This packaged air-conditioner is manufactured and tested in conformity with the ISO.

# (3) Operation chart

The V Multi is a system that allows for different models and capacities of indoor units to be connected so the individual operating characteristics of the indoor and outdoor are provided. Use the procedure shown in Item (c) to calculate the combined operating characteristics.

# (a) Operating characteristic of outdoor unit

(220-240V 50Hz/220V 60Hz)

Item	Model	FDC71VN	FDC100VN	FDC125VN	FDC140VN
Cooling power consumption	kW	2.02/2.02	2.62/2.62	3.91/3.91	4.51/4.51
Heating power consumption	K VV	2.16/2.16	2.60/2.60	3.63/3.63	4.40/4.40
Cooling running current		10.4/10.4	11.7/12.3	17.3/18.2	20.4/21.4
Heating running current	A	11.1/11.1	11.6/12.2	16.2/16.9	19.5/20.4
Inrush current (L.R.A) < Max. running current>	A	5 < 17>		5 <24>	

(380-415V 50Hz/380V 60Hz)

Item	Model	FDC100VS	FDC125VS	FDC140VS
Cooling power consumption	kW	2.62/2.62	3.91/3.91	4.51/4.51
Heating power consumption	K VV	2.60/2.60	3.63/3.63	4.40/4.40
Cooling running current	Δ.	3.8/4.0	5.5/5.9	6.5/6.9
Heating running current	A	3.8/4.0	5.1/5.5	6.3/7.0
Inrush current (L.R.A) < Max. running current>	A		5 <15>	

(380-415V 50Hz/380V 60Hz)

Item	Model	FDC200VS	FDC250VS
Cooling power consumption	1-337	6.34/6.34	8.71/8.71
Heating power consumption	kW	6.20/6.20	7.75/7.75
Cooling running current		9.1/9.1	12.7/12.7
Heating running current	A	9.0/9.0	11.4/11.4
Inrush current (L.R.A) <max. current="" running=""></max.>	A	5 <19>	5 <22>

Note(1) This packaged air-conditioner is manufactured and tested in conformity with the following standard. ISO-T1 "UNITARY AIR-CONDITIONERS"

# (b) Operating characteristic of indoor unit

**FDT Series** (220-240V 50Hz/220V 60Hz)

Item	Model	FDT40VD	FDT50VD	FDT60VD	FDT71VD	FDT100VD	FDT125VD
Cooling power consumption	kW	0.03-0.03/0.03	0.04-0.04/0.04	0.10-0.	10/0.10	0.14-0.	14/0.14
Heating power consumption	KW	0.03-0.03/0.03	0.04-0.04/0.04	0.10-0.	10/0.10	0.14-0.	14/0.14
Cooling running current	_	0.20-0.18/0.20	0.20-0.18/0.20	0.30-0.	28/0.30	0.45-0.	40/0.45
Heating running current	A	0.20-0.18/0.20	0.20-0.18/0.20	0.30-0.	28/0.30	0.45-0.	40/0.45

FDEN Series (220-240V 50Hz/220V 60Hz)

Item	Model	FDEN40VD	FDEN50VD	FDEN60VD	FDEN71VD	FDEN100VD	FDEN125VD
Cooling power consumption	kW	0.05-0.	06/0.06	0.10-0.11/0.11	0.10-0.12/0.14	0.14-0.16/0.16	0.16-0.18/0.20
Heating power consumption	KW	0.05-0.	06/0.06	0.09-0.10/0.10	0.10-0.11/0.13	0.13-0.15/0.15	0.15-0.17/0.18
Cooling running current		0.25-0.	26/0.29	0.46-0.48/0.50	0.50-0.53/0.67	0.65-0.67/0.77	0.77-0.78/0.91
Heating running current	A	0.23-0.	25/0.28	0.42-0.44/0.46	0.46-0.48/0.63	0.59-0.63/0.70	0.70-0.72/0.83

Notes(1) This packaged air-conditioner is manufactured and tested in conformity with the following standard. ISO-T1 "UNITARY AIR-CONDITIONERS"

<sup>(2)</sup> The values shown in the above table are common to both cooling and heating operations.

#### (c) Calculation of total operation characteristics

Since the operation characteristics of V Multi system depend on combination of indoor unit, calculate the total operation characteristics of the system by using the formulas below according to speciations of each indoor unit or outdoor unit.

#### 1) 1 Phase models

#### a) Total power consumption

Total power consumption (kW) = Power consumption of outdoor unit +  $\sum$  (Power consumption of indoor unit)

#### b) Total running current

Total running current (A) = Running current of outdoor unit +  $\sum$  (Running current of indoor unit)

#### c) Total power factor

Total power factor (%) = [Total power consumption (W) / Total running current (A)  $\times$  Power source]  $\times$  100 Total operation characteristics = Operation characteristic value of outdoor unit + Operation characteristic value of indoor unit

[Example]

(Conditions) Operation Voltage ...... Indoor unit: 220 V, 50 Hz

Outdoor unit: 220 V, 50 Hz

Operation mode ...... Cooling and Heating

Unit----- Outdoor unit: FDC140VN × 1 unit

Indoor unit: FDT71VD  $\times$  2 units

### Operation characteristics of each unit

(Cooling/Heating)

Item Model	FDC140VN	FDT71VD
Power consumption (kW)	4.51/4.40	0.10/0.10
Running current (A)	20.4/19.5	0.30/0.30

#### ① Total power consumption (kW)

(Cooling) 
$$4.51 + (0.10 \times 2) = 4.71$$

(Heating) 
$$4.40 + (0.10 \times 2) = 4.60$$

# ② Total running current (A)

(Cooling) 
$$20.4 + (0.30 \times 2) = 21.0$$

(Heating) 
$$19.5 + (0.30 \times 2) = 20.1$$

#### 3 Total power factor (%)

(Cooling) 
$$\frac{4.71 \times 1000}{21.0 \times 220} \times 100 = 99 \%$$

(Heating) 
$$\frac{4.60 \times 1000}{20.1 \times 220} \times 100 = 99 \%$$

#### 2) 3 Phase models

### a) Total power consumption

Total power consumption (kW) = Power consumption of outdoor unit +  $\sum$  (Power consumption of indoor unit)

#### b) Total running current

Total running current (A) = Running current of outdoor unit +  $[\Sigma (Running current of indoor unit) \times 1/3]$ 

#### c) Total power factor

Total power factor (%) = [Total power consumption (W) /  $\sqrt{3}$  × Total running current (A) × Power source] × 100 Total operation characteristics = Operation characteristic value of outdoor unit + Operation characteristic value of indoor unit [Example]

(Conditions) Operation Voltage ...... Indoor unit: 220 V, 50 Hz

Outdoor unit: 380 V, 50 Hz

Operation mode ...... Cooling and Heating

Unit----- Outdoor unit: FDC200VS  $\times$  1 unit

Indoor unit: FDT71VD × 1 unit, FDT125VD × 1 unit

### Operation characteristics of each unit

(Cooling/Heating)

Item Model	FDC200VS	FDT71VD	FDT125VD
Power consumption (kW)	6.34/6.20	0.10/0.10	0.14/0.14
Running current (A)	9.1/9.0	0.30/0.30	0.45/0.45

① Total power consumption (kW)

(Cooling) 
$$6.34 + 0.100 + 0.14 = 6.58$$
 (kW)

(Heating) 
$$6.20 + 0.100 + 0.14 = 6.44$$
 (kW)

2 Total running current (A)

(Cooling) 
$$9.1 + \left[ (0.30 + 0.45) \times \frac{1}{3}) \right] = 9.6 \text{ (A)}$$
  
(Heating)  $9.0 + \left[ (0.30 + 0.45) \times \frac{1}{3}) \right] = 9.5 \text{ (A)}$ 

(Heating) 
$$9.0 + \left[ (0.30 + 0.45) \times \frac{1}{3} \right] = 9.5 \text{ (A)}$$

3 Total power factor (%)

(Cooling) 
$$\frac{6.58 \times 1000}{\sqrt{3} \times 9.6 \times 380} \times 100 = 99\%$$

(Cooling) 
$$\frac{6.58 \times 1000}{\sqrt{3} \times 9.6 \times 380} \times 100 = 99 \%$$
(Heating) 
$$\frac{6.44 \times 1000}{\sqrt{3} \times 9.5 \times 380} \times 100 = 99 \%$$

# 2.3 EXTERIOR DIMENSIONS (1) Indoor units (a) Ceiling cassette-4way type (FDT) ......See page 94 (b) Ceiling suspended type (FDEN) ......See page 96 (3) Remote controller (Option parts) ......See page 110 2.4 ELECTRICAL WIRING (1) Indoor units (a) Ceiling cassette-4way type (FDT) ......See page 113 (b) Ceiling suspended type (FDEN) ......See page 114 2.5 NOISE LEVEL (1) Indoor units (a) Ceiling cassette-4way type (FDT) ......See page 126 (b) Ceiling suspended type (FDEN) ......See page 127 (2) Outdoor units ......See page 130 2.6 TEMPERATURE AND VELOCITY DISTRIBUTION (1) Indoor units (a) Ceiling cassette-4way type (FDT) ......See page 138 (b) Ceiling suspended type (FDEN) ......See page 141 2.7 PIPING SYSTEM ......See page 147 2.8 RANGE OF USAGE & LIMITATIONS ......See page 152 2.9 SELECTION CHART ......See page 156 2.10 APPLICATION DATE 2.10.1 Installation of indoor unit (1) Ceiling cassette-4way type (FDT) ......See page 180 (2) Ceiling suspended type (FDEN) ......See page 186 2.10.2 Installation of wired remote controller ......See page 202 2.10.3 Installation of outdoor unit (1) Model FDC71VN ......See page 213 (2) Models FDC100~140VN,100~140VS ......See page 221 (3) Models FDC200,250VS ......See page 229 (4) Method for connecting the accessory pipe (Models FDC200,250 only) ......See page 236 2.10.4 Electric wiring work installation ......See page 238 2.10.5 Instructions for branching pipe set (DIS-WA1, WB1, TA1, TB1) ...... See page 243

# 3. OPTION PARTS

# **CONTENTS**

3.1 WIRELESS KIT	274
3.1.1 FDTC Series (RCN-TC-24W-ER)	274
3.1.2 FDT Series (RCN-T-36W-E)	276
3.1.3 FDEN Series (RCN-E1R)	278
3.1.4 FDUM,FDU Series (RCN-KIT3-E)	282
3.2 SIMPLE WIRED REMOTE CONROLLER (RCH-E3)	284
3.3 FAN CONTROLLERT KIT (U-FCRA)	290
3.4 BASE HEATER KIT (CW-H-E)	291

# 3.1 WIRELES KIT

# 3.1.1 FDTC Series (RCN-TC-24W-ER)


Following functions of FDTC Type-D indoor unit series are not able to be set with this wireless remote control (RCN-TC-24W-ER)

1. Individual flap control system 2. 4-fan speed setting (P-Hi/Hi/Me/Lo)  $\rightarrow$  3-fan speed setting (Hi/Me/Lo)

# PJA012D758

# **⚠ WARNING**

- Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal. Loose connection or hold will cause abnormal heat generation or fire.

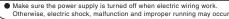




# **⚠** CAUTION

- DO NOT install the wireless kit at the following places in order to avoid malfunction

- (1) Places exposed to direct sunlight
   (2) Places near heat devices
   (3) High humidity places
   (4) Hot surface or cold surface enough to generate condensation
   (5) Places exposed to oil mist or steam directly
- (6) Uneven surface
- (7) Places affected by the direct airflow of the
- AC unit.
- (8) Places where the receiver is influenced by the fluorescent lamp (especially inverter type) or sunlight.

  (9) Places where the receiver is affected by infrared rays of any other communication
- devices (10)Places where some object may obstruct the
- communication with the remote controlle

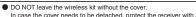

In case the cover needs to be detached, protect the receiver with a packaging box or bag in order to keep it away from water and dust.



#### Note

- Instruct the customer how to operate it correctly referring to the instruction manual.
- For the installation method of the air conditioner itself, refer to the installation manual enclosed in the package.

# (1) Accessories

Please make sure that you have all of the following accessories

Receiver		1	
Wireless remote controller	(A.D	1	
Parts set		1	

Remote controller holder		1
Wood screw for holder	Ø=	2
AAA dry cell battery (RO3)		2

#### ② How to install the receiver

The receiver can be installed by replacing with a corner panel on the applicable decorative panel.


#### Preparation before installation

- ① Attach the decorative panel onto the air conditioner according to the installation manual for

- © Remove the air return grille.

  © Remove a corner panel located on the refrigerant pipes side.

  © Remove two screws and detach the lid from the control box of the air conditioner.

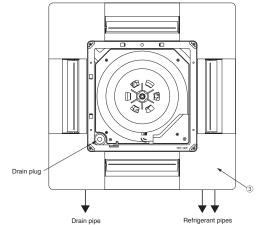


#### Setting on site

① PCB on the receiver has the following switches to set the functions. Default setting is shown


v	withinark.							
	S W 1	Customized signal setting to avoid mixed communication	ON: Normal OFF: Remote					
	S W 2	Receiver master/slave setting	ON : Master OFF : Slave					
	S W 3	Buzzer valid/Invalid	ON: Valid OFF: Invalid					
	S W 4	Auto restart	ON : Valid OFF : Invalid					

#### <To change the settings>

- Remove the cover by unscrewing two screws from the back of receiver
   Change the setting by the switch on PCB.

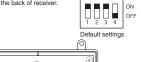

9998

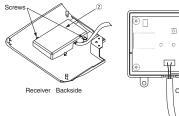

(4) When SW1 is turned to OFF position, change the corresponding remote controller setting as

How to change the remote controller setting
Pressing ACL switch with AIR FLOW button kept pressing or inserting the batteries with pressing  $\boxed{\text{AIR FLOW}}$  button will customize the signal.

#### Note

When the batteries are removed, the setting will return

when the batteries are removed, the setting will refu-te the default setting. Please make sure to reset it when the batteries are replaced.

#### Caution ~

- Instruct the customer to set the mentioned above when
- replacing the batteries.

  (How to set is also mentioned in the user's manual attached on the air conditioner.)



#### Installation of the receiver

- Attach the receiver to the panel according to the panel installation manual.


- O Attach the receiver to the panel according to the panel installation manual.

  Remove two screws and detach the lid from the control box.

  Put the wiring in the control box with other wiring as shown below.

  Connect the wiring to the terminal block (X,Y) provided in the control box.(Non-polarized) for kit the wiring with the clamp as shown below.


  Reattach the control box lid with 2 screws removed.
- X Note: Make sure wires not to be pinched by any other parts like panel and control box.

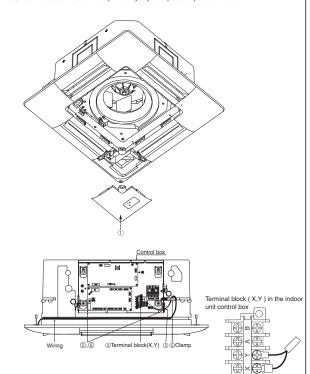

#### 3 Remote controller

#### Installation of the controller holder

- DO NOT install it on the following places 4. Hot surface or cold surface enough to generate
- Places exposed to direct sunlight
- 2. Places near heat devices 3. High humidity places
- condensation
  5. Places exposed to oil mist or steam directly.
- 6. Uneven surface

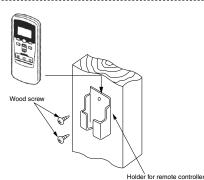

- Installation tips for the remote controller holder


  Adjust and keep the holder upright

  Tighten the screw to the end to avoid scratching the remote controller

  DO NOT attach the holder on plaster wall.

#### How to insert batteries

- Detach the back lid.
- Insert the batteries. (two AAA batteries)
   Reattach the back lid.

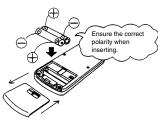

#### Control plural indoor units with one remote controller

Up to 16 indoor units can be connected.

- to for intool units can be coninected.

  Connect the XY terminal with 2-core wire. As for the size, refer to the following note.


  For Single packaged air conditioner series, set the indoor unit address with SW2 on the indoor unit PCB from [0] to [F] so as not to duplicate.

Restrictions on the thickness and length of wire (Maximun total extension 600m.)

Standard

Within 200m x 0.5 mm Within 300m x 0.75mm Within 400m x 1.25mm

Within 600m x 2.0 mm2

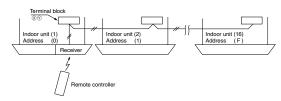

⑤ For VRF series, set the indoor unit address with SW1, SW2 and SW5-2 on the indoor unit PCB from [000] to [127] so as not to duplicate.

### Master/Slave setting when using plural remote controllers


Up to two receivers can be installed in one indoor unit group. When two receivers are used, it is necessary for a receiver to turn OFF SW2 on the receiver PCB to set it as slave.

(For the method of switching, please see Setting on site in the section of

② How to install the receiver in this manual.)

#### Wireless remote controller's operable area

(1) Standard reachable area of the signal [condition] Illuminance at the receiver: 300lux (when no lighting is installed within 1m of the receiver in an ordinary office.)

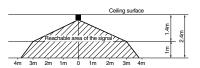

② Correlation between illuminance at the receive and reachable area of the signal in a plain The drawing in the right shows the The receivable area of the signal when the illuminance at the receiver is 300lux correlation between the reachable area of the signal and illuminance at the receiver when the remote controller is operated at 1m high under the condition of ceiling height of 2.4m. The receivable area of the signal when the illuminance at the receiver is 600lux

③ Installation tips when several receivers are installed close Minimum distance between the indoor units which can avoid cross communication is 5m under the condition of 300lux of illuminance at the receiver. (When no lighting is installed within 1m of the receiver in an ordinary office )

### 4 How to disable the Auto mode operation

VRF series (except heat recovery 3-pipe systems) cannot be operated

Make sure to set the remote controller for the models so as not to be able to choose Auto mode.

Pressing ACL switch with MODE button kept pressing or inserting the batteries with pressing MODE button will make auto mode

#### Note

When the batteries are removed, the setting will return to the default setting (Auto mode is valid).

#### Caution

Instruct the customer to set the mentioned above when replacing the batteries. (How to set is also mentioned in the user's manual attached on the air conditioner.)




# **5** Backup button

Even when the operation from the wireless remote controller is not possible (due to flat batteries, controller lost, or controller failure). still it possible to operate as temporary means

Press the button directly when operating it.

(1) The air conditioner starts the operation w
the condition of Auto mode, 23°C of set
point, High fan speed and horizontal louv position.

(2) The air conditioner stops the operation when the button is pressed when in operation

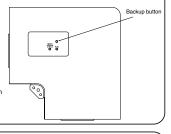

# 6 Cooling test run operation

- After safety confirmation, turn on the power.
   Transmit a cooling operation command with wireless remote controller, while the backup button on the receiver is pressed.
- the receiver is pressed.

  If the backup button on the receiver is pressed during a test run, it will end the test run.

  If you cannot operate the unit properly during a test run, please check by consulting with inspection guides on the wiring diagram of outdoor units.

# The to read the two-digit display

- On the receiver of a wireless kit, a two-digit (7-segment) display is provided.
  (1) An indication will be displayed for one hour after power on.
  (2) An indication will be displayed for 3.5 seconds after transmitting a "STOP" command from the wireless remote controller or the operation of the backup button to stop the unit.
- (3) An indication appearing in (1) or (2) above will go off as soon as the unit starts operation.
  (4) When there are no error records to indicate, addresses of all the connected units are displayed.
- (4) when there are no error records to indicate, addresses of all the connected units are displictly when there are some error records remaining, the error records are displayed.(6) Error records can be cleared by transmitting a "STOP" command from the wireless remote controller, while the backup button is pressed.

# 3.1.2 FDT Series (RCN-T-36W-E)

Following functions of FDT Type-D indoor unit series are not able to be set with this wireless remote control (RCN-TC-36W-E).

Individual flap control system
 4-fan speed setting (P-Hi/Hi/Me/Lo) → 3-fan speed setting (Hi/Me/Lo)

### PJF012D010

#### **⚠ WARNING**

- Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal Loose connection or hold will cause abnormal heat generation or fire





### **⚠** CAUTION

- DO NOT install the wireless kit at the following places in order to avoid malfunction.
- (1) Places exposed to direct sunlight (2) Places near heat devices (3) High humidity places
- (4) Hot surface or cold surface enough to
- generate condensation
  (5) Places exposed to oil mist or steam directly

- (7) Places affected by the direct airflow of the AC unit.
- (8) Places where the receiver is influenced by the fluorescent lamp (especially inverter type) or sunlight.

  (9) Places where the receiver is affected by infrared rays of any other communication
- devices
- (10)Places where some object may obstruct the communication with the remote controller
- DO NOT leave the wireless kit without the cover In case the cover needs to be detached, protect the receiver with a packaging box or bag in order to keep it away from water and dust.

#### Attention

Instruct the customer how to operate it correctly referring to the instruction manual.

1

2

2

OFF

Ø.

Receiver

Parts set

1 Accessories

Please make sure that you have all of the follow

- For the installation method of the air conditioner itself, refer to the installation manual enclosed in the package.

Remote controller holder

Wood screw for holder

AAA dry cell battery (RO3)

# When the batteries are removed, the setting will return to the default setting. Please make sure to reset it when the batteries are

How to change the remote controller setting

Pressing ACL and AIR FLOW button at the same time or

inserting the batteries with pressing AIR FLOW button will

Backside

<To change the settings>

② Remove the cover by unscrewing two screws from the back of receiver
③ Change the setting by the switch on PCB.

⊕ 🗆

③ When SW1 is turned to OFF position, change the corresponding remote controller setting as follows:

0 (0

8888

replaced.



customize the signal.

Instruct the customer to set the mentioned above when replacing the batteries.

(How to set is also mentioned in the user's manual

attached on the air conditioner.)



# 2 How to install the receiver


(10**0** 

The receiver can be installed by replacing with a corner panel on the applicable decorative panel.

#### Preparation before installation

- 1 Attach the decorative panel onto the air conditioner according to the installation manual for

- Attach the decorative panel onto the air conditioner according to the installation manual for the panel.
   Remove the air return grille.
   Remove a corner panel located on the refrigerant pipes side.
   Remove three screws and detach the cover (indicated as shadowed area) from the control box of the air conditioner.

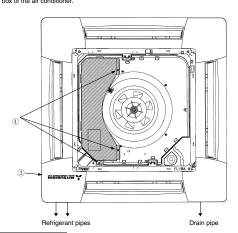

#### Setting on site

① PCB on the receiver has the following switches to set the functions. Default setting is shown with mark.


S W 1	Customized signal setting to avoid mixed communication	ON: Normal OFF: Remote				
S W 2	Receiver master/slave setting	ON: Master OFF: Slave				
S W 3	Buzzer valid/Invalid	ON : Valid OFF : Invalid				
S W 4	Auto restart	ON: Valid OFF: Invalid				

#### Installation of the receiver

- ① Loosen the bolts which fix the panel and make a gap between the panel and the indoor unit
- 2 Put the wiring of the receiver through the opening.

  3 Put the wiring on the notch on the control box so as not to be pinched by the control box and lid as shown below.


  4 Connect the wiring to the terminal block provided in the control box. (Non-polarized)
- Attach the receiver to the panel according to the panel installation manua
- (6) Fix the wiring with the clamp so that the wiring do not contact the edge of control box's metal sheet.
  ⑦ Reattach the control box lid with 3 screws removed.

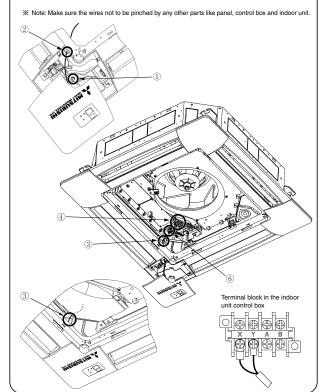

#### 3 Remote controller

#### Installation of the controller holder

- DO NOT install it on the following places 4. Hot surface or cold surface enough to generate 1. Places exposed to direct sunlight
- 2. Places near heat devices 3. High humidity places
- condensation
- Places exposed to oil mist or steam directly.
   Uneven surface

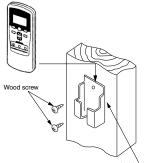

Holder for remote controller

- Installation tips for the remote controller holder


  Adjust and keep the holder upright

  Tighten the screw to the end to avoid scratching the remote controller.

  DO NOT attach the holder on plaster wall.

#### How to insert batteries

- Detach the back lid.
   Insert the batteries. (two AAA batteries)
   Reattach the back lid.

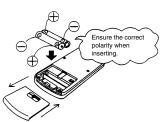

#### Control plural indoor units with one remote controller

Un to 16 indoor units can be connected


- up to 16 indoor units can be connected.

  ① Connect the XY terminal with 2-core wire. As for the size, refer to the following note.
  ② For Packaged air conditioner series, set the indoor unit address with SW2 on the indoor unit PCB from [0] to [F] so as not to duplicate.

Restrictions on the thickness and length of wire (Maximun total extension 600m.)

Within 100m x 0.3 mm Standard Within 200m x 0.5 mm

Within 300m x 0.75mm Within 400m x 1.25mm

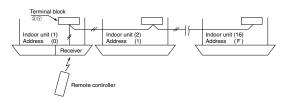

③ For VRF series, set the indoor unit address with SW1, SW2 and SW5-2 on the indoor unit PCB from [000] to [127] so as not to duplicate.

### Master/Slave setting when using plural remote controllers


Up to two receivers can be installed in one indoor unit group. When two receivers are used, it is necessary for a receiver to turn OFF SW2 on the receiver PCB to set it as slave.

(For the method of switching, please see Setting on site in the section of

2 How to install the receiver in this manual.)

# Wireless remote controller's operable area

① Standard reachable area of the signal [condition] Illuminance at the receiver: 300lux (when no lighting is installed within 1m of the receiver in an ordinary office.)

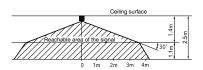

② Correlation between illuminance at the receiver and reachable area of the signal in a plain view. The drawing in the right shows the The drawing in the right shows the correlation between the reachable area of the signal and illuminance at the receiver when the remote controller is operated at 1.1m high under the condition of ceiling height of 2.5m. When the illuminance becomes double the area is narrowed down to two

ne receivable area of the gnal when the illuminance the receiver is 300lux 1m The receivable area of the signal when the illuminance at the receiver is 600lux

3 Installation tips when several receivers are installed close Minimum distance between the indoor units which can avoid cross communication is 5m under the condition of 300lux of illuminance at the receiver (When no lighting is installed within 1m of the receiver in an ordinary office )

# 4 How to disable the Auto mode operation

VRF system (except heat recovery 3-pipe systems) cannot be operated

In Auto mode.

Make sure to set the remote controller for the models so as not to be able to choose Auto mode.


Pushing [ACL] and [MODE] button at the same time or inserting the batteries with pressing [MODE] button will make auto mode operation.

#### Attention

When the batteries are removed, the setting will return to the

default setting (Auto mode is valid).

Instruct the customer to set the mentioned above when replacing the batteries. (How to set is also mentioned in the user's manual attached on the air conditioner.)

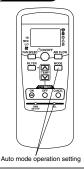


# ⑤ Backup button

A Backup button is provided on the receiver Even when the operation from the wireless remote controller is not possible (due to flat batteries, controller lost, or controller failure), still it possible to operate as

tost, or controller ratiner), suit it possible to operate as temporary means. Press the button directly when operating it.

(1) The air conditioner starts the operation with the condition of Auto mode, 23°C of set point, High fan speed and horizontal louver position.

(2) The air conditioner stops the operation when the button is pressed when in operation

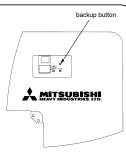

#### 6 Cooling test run operation

- After safety confirmation, turn on the power.
   Transmit a cooling operation command with wireless remote controller, while the backup button on the receiver is pressed.
- If the backup button on the receiver is pressed during a test run, it will end the test run.

  If you cannot operate the unit properly during a test run, please check by consulting with inspection guides on the wiring diagram of outdoor units.

# ① How to read the two-digit display

- On the receiver of a wireless kit, a two-digit (7-segment) display is provided. (1) An indication will be displayed for one hour after power on
- (2) An indication will be displayed for 3.5 seconds after transmitting a "STOP" command from the wireless remote controller or the operation of the backup button to stop the unit.

- wrieress remote controller or the operation of the backup button to stop the unit.

  (3) An indication appearing in (1) or (2) above will go off as soon as the unit starts operation.

  (4) When there are no error records to indicate, addresses of all the connected units are displayed.

  (5) When there are some error records remaining, the error records are displayed.

  (6) Error records can be cleared by transmitting a "STOP" command from the wireless remote controller, while the backup button is pressed.

# 3.1.3 FDEN Series (RCN-E1R)

#### Notes:

Following functions of FDEN Type-D indoor unit series are not able to be set with this wireless remote control (RCN-E1R).

PFA012D620

1. Flap control system 2. 4-fan speed setting (P-Hi/Hi/Me/Lo)  $\rightarrow$  3-fan speed setting (Hi/Me/Lo)

# **WARNING**

• Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal. Loose connection or hold will cause abnormal heat generation or fire.



Make sure the power supply is turned off when electric wiring work. Otherwise, electric shock, malfunction and improper running may occur.



# **⚠** CAUTION

• Install a receiver unit where it is not exposed to direct sunrays or intense light from lighting fixtures.



# 1 Accessories

Please make sure that you have all of the following accessories.

Remoto controller holder	AAA dry cell battery (RO3)	Wood screw for holder	Wireless remote controller
	(a)	• <b>••••</b> (X)	
1	2	2	1


# ② Installation of the controller holder

# $\triangle$ CAUTION DO NOT install it on the following places.

- 1. Places exposed to direct sunlight
- 2. Hot surface or cold surface enough to generate condensation
- 3. Places near heat devices
- 4. Places exposed to oil mist or steam directly.
- 5. High humidity places
- 6. Uneven surface


# Installation tips for the remote controller holder

- · Adjust and keep the holder up right.
- Tighten the screw to the end to avoid scratching the remote controller.
- DO NOT attach the holder on plaster wall.

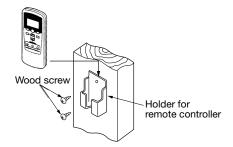

### How to insert batteries

- 1 Detach the back lid.
- 2 Insert the batteries. (two AAA batteries)
- ③ Reattach the back lid.

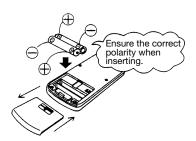

-278-

# 3 FDEN

#### Setting on site


PCB on the receiver has the following switches to set the function.

Default setting is shown with \_\_\_ mark.

SW1	Prevents interference during plural setting	ON: Normal (1ch) OFF: Customized (2ch)
SW2	Receiver master/slave setting	ON : Master OFF : Slave
SW3	Buzzer valid/Invalid	ON : Valid OFF : Invalid
SW4	Auto restart	ON : Valid

### To change setting

- 1. Remove the front panel.
- Remove four screws located on the back of the receiver and detach the board.
- 3. Change the setting by the switch on PCB.

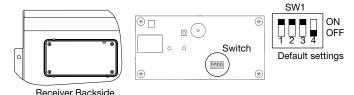

4. When switch 1 is turned to off position, change the wireless remote controller setting.

(For the method of changing the setting, refer to Setting to avoid mixed communication on page 4)

Refer to Wireless remote controller unit operation distance of 6 FDEN in case of plural setting.

# Master/Slave setting when using plural remote controllers


Up to two receiver or wired remote controller can be installed in one indoor unit group.


When two receivers or wired remote controller are used, it is necessary to change SW on the PCB to set it as slave.

#### Control plural indoor units with one remote controller

Up to 16 indoor units can be connected.

- ① Connect indoor units with each other with 2-core wires. As for size, refer to the following note.
- ② The receiver wires must be connected only with the indoor unit that will be operated by the remote controller directly.
- ③ Set the indoor unit address with SW2 on the indoor unit PCB from [0] to [F] so as not to duplicate.

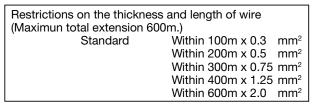

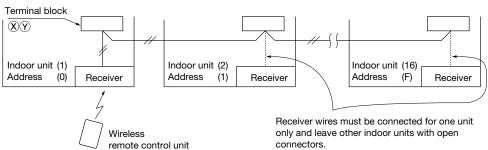

#### **\*ATTENTION**

In a system configured as shown above, up to two receivers are usable. If two receivers are used, it is necessary to designate one of them as a slave by setting SW2. (For the method of changing the setting, refer to Setting on site .) Since other receivers are not usable, do not couple the connectors for them. (Unless the connector is coupled for a receiver, the LED will not be able to make any indication)


# ③ FDEN (continued)

#### Wireless remote controller unit operation distance

① Standard signal receiving range

### [Condition]


Illuminance at the receiver area: 360 lux. (When no lighting fixture is located within 1m of indoor unit in an ordinary office)

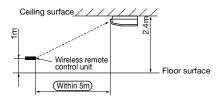


② Points for attention in connecting a plural number of indoor units

#### [Condition]

Illuminance at the receiver area: 360 lux. (When no lighting fixture is located within 1m of indoor unit in an ordinary office)
When the remote control unit is used with the aforementioned interference-prevention setting, a minimum distance guaranteeing the prevention of unintended unit responses is 5m.

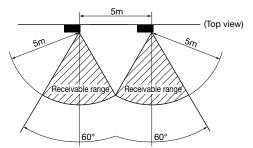

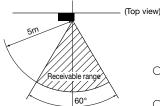

- OPlease operate remote control unit switches with the unit faced correctly toward the indoor unit's receiver section.
- OEffective operation distance can vary with the luminance around the receiver and the reflection from walls of the room.
- OWhen the receiver is exposed to intensive light such as from the direct sun or a strong light, it may become operable only from a short distance or unable to receive signals at all.

## Backup button


A backup switch is provided on the receiver section of the panel surface.

When operation from the wireless remote control unit is not possible (due to flat batteries, a mislaid unit, a unit failure), you can use it as an emergency means. You should operate this switch manually.

(1) If pressed while the air conditioner is in a halt, it will cause the air conditioner to start operation in the automatic mode.

Wind speed: Hi fan, Temperature setting: 23°C, Louver: horizontal

(2) If pressed while the air conditioner is in operation, it will stop the air conditioner.

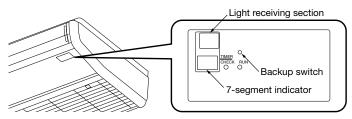

## Cooling test run operation

- After safety confirmation, turn on the power.
- Transmit a cooling operation command with the wireless remote control unit, while the backup switch on the receiver is depressed.
- If the backup switch on the receiver is pressed during a test run, it will end the test run.
- \*If you cannot operate the unit properly during a test run, please check wiring by consulting with inspection guides.

# **③ FDEN (continued)**

### How to read the two-digit display

A two-digit indicator (7-segment indicator) is provided on the receiver section.

- (1) An indication will be displayed for one hour after power on.
- (2) An indication appears for 3.5 seconds when a "Stop" command is sent from the wireless remote control unit while the air conditioner is not running.
- (3) An indication appearing in (1) or (2) above will go off as soon as the unit starts operation.
- (4) When there are no error records to indicate, addresses are displayed for all of the connected units.
- (5) When there are some error records remaining, the error records are displayed.
- (6) Error records can be cleared by transmitting a "Stop" command from the wireless remote control unit, while the backup switch is depressed.

# **4** Remote controller

#### Setting to avoid mixed communication


Pressing ACL and AIR FLOW button at the same time or inserting the batteries with pressing AIR FLOW button will customize the signal.

# Setting to disable the Auto mode operation

VRF system (except heat recovery 3-pipe system) cannot be operated in Auto mode.

Make sure to set the remote controller for the models so as not to be able to choose Auto mode.

Pushing ACL and MODE button at the same time or inserting the batteries with pressing MODE button will make auto mode operation.

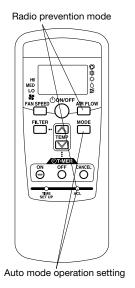

# **\*ATTENTION**

When the batteries are removed, the setting will return to the default setting.

Please make sure to reset it when the batteries are replaced.

### **⚠** Caution

Instruct the customer to set the mentioned above when replacing the batteries. (How to set is also mentioned in the user's manual attached on the air conditioner.)

# 3.1.4 FDUM, FDU Series (RCN-KIT3-E)

Read this manual together with the installation manual attached to the air conditioner

PJZ012D060 🛦


0

0

#### **⚠ WARNING**

- Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal. Loose connection or hold will cause abnormal heat generation or fire.
- Make sure the power supply is turned off when electric wiring work.

  Otherwise, electric shock, malfunction and improper running may occur

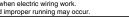

#### **⚠** CAUTION

type) or sunlight.

- DO NOT install the wireless kit at the following places in order to avoid malfunction. (8)Places where the receiver is influenced by the fluorescent lamp (especially in verter
- (1)Places exposed to direct sunlight (2)Places near heat devices (3) High humidity places
- (3) Ingin Intrinsity places

  (4) Hot surface or cold surface enough to generate condensation
  (5) Places where the receiver is affected by infrared rays of any other communication devices. devices.

  (10)Places where some object may obstruct the communication with the remote controller
- (6)Uneven surface
  (7)Places affected by the direct airflow of the AC unit.
- DO NOT leave the wireless kit without the cover. In case the cover needs to be detached, protect the receiver with a packaging box or bag in order to keep it away from water and dust.

#### Attention

- Instruct the customer how to operate it correctly referring to the instruction manual.
- User's manual of a wireless remote controller is attached to a indoor unit or a outside unit Read this together with a manual attached to this kit.

1 Accessories Please make sure that you have all of the following accessories.


① Receiver		1	] ,		Remote controller holder	Œ	1
② Wiring (3m)	69	1	1		② Screw for holder	đ	2
③ Parts set (A)		1	Ш		3 AAA dry cell battery (R03)	Q	2
Parts set (B)		1	<u> </u>		① Screw for receiver	€M	2
⑤ Parts set (C)		1	<u></u>		② Fixing band	D'ANCE	1
Wireless remote		1	1		③ Clamp	<b>1</b>	5
controller  (7) User's manual		1	1		Screw for clamp	Ø.	5
() Oser's manual	<u> </u>	L'	] [	-	<ol> <li>Receiver installation bracket</li> </ol>		1
					② Screw for the bracket	<b>್</b>	2
					③ Installation fitting	\$3	2

# 2 Wireless remote controller's operable area

#### (1) When installed on ceiling


1 Standard reachable area of the signal

condition Illuminance at the receiver : 300lux (when no lighting is installed within 1m of the receiver in an ordinary of ce.)

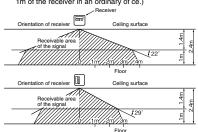

2 Correlation between illuminance at the receiver and reachable area of the signal in a plain

**condition** Correlation between the reachable area of the signal and illuminance at the receiver when the remote controller is operated at 1.1m high under the condition of ceiling height of 2.5m.

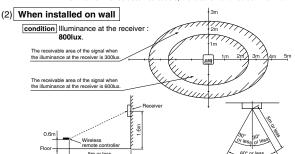

#### 3 How to install the receiver

The following two methods can be used to install the receiver onto a ceiling or a wall Select a method according to the installation position

#### <Installation position>

- (A) Direct installation onto the ceiling with wood screws.
- (B) Installation with accessory's bracket

#### (1) Drilling of the ceiling (ceiling opening)


Drill the receiver installation holes with the following dimensions at the ceiling position where wires can be connected.

(A) Direct installation onto the ceiling with wood screws.	88mm(H)×101mm(W)	
(B) Installation with enclosed bracket.	108mm(H)×108mm(W)	
		l w l

#### (2) Wiring connection of receiver

#### Caution

Do not connect the wiring to the power source of the terminal block. If it is connected, printed board will be damaged.

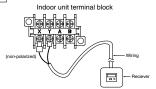


#### (3) Installation of the receiver

Remove the screw on the side of the receiver and sprit it into the upper case and lower case.Install the receiver with one of the two installation methods (A) or (B) shown below.

#### (A) Direct installation onto the ceiling with screws


Use this installation method when the ceiling is wooden, and there is no problem for strength in installing directly with wood screws

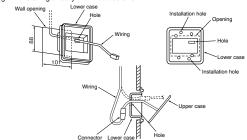

- ①Put through the wiring from the back side to the hole of the lower case.
- 2) Fit the lower case into the ceiling opening. Make sure that the clearance between the convex part of the back of the lower case and the ceiling opening must be as equal as possible on both sides.
- ③Using the two installation holes shown above, fix the lower case onto the ceiling with the enclosed wood screws. (The other four holes are not used.)
- **(4)** Connect the wiring with the wiring from the upper case by the connector. **(5)** Take out the connector to the backside from the hole of the lower case putting through the wiring at 1.
- 6Fit the upper case and the lower case, and tighten the screws.

#### (B) Installation with enclosed bracket

Use this method when installaing onto a gypsum board (7 to 18mm), etc

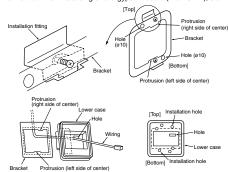

- 1) Catch the two protrusion of the enclosed bracket onto the tting as shown above, and temporarily fix with the screws. (The bracket has an up/down and front/back orientation. Con rm the top/bottom protrusion positions and the positional relation of the Ø 10 holes on the bracket and the installation hole on the lower case with the
- 2)Insert the end of the installation tting into the back of the ceiling from the opening, and tighten the screws to fix the bracket onto the ceiling.

  ③Pass the wiring from the rear side through the hole on the lower case.
- Fit the lower case onto the bracket, and fix the lower case to the bracket using the two installation holes shown above. (The other four holes are not used.)
- ⑤Follow step ① to ⑥ for (A) to complete the installation.

### 4 Remotecontroller

#### Installation of the controller holder

# DO NOT install it on the following places 1) Places exposed to direct sunlight 2) Places near heat devices

- 3) High humidity places
- 4) Hot surface or cold surface enough to generate condensation
- 5) Places exposed to oil mist or steam directly 6) Uneven surface

#### Installation tips for the remote controller holder


- · Adjust and keep the holder upright.
- Tighten the screw to the end to avoid scratching
- the remote controller.
- . DO NOT attach the holder to plaster wall.

#### How to insert batteries

- 1 Detach the back lid
- 2 Insert the batteries. (two AAA batteries)
- 3 Reattach the back lid.

#### **⑤** Cooling test run operation

- After safety con rmation, turn on the power.
- Transmit a cooling operation command with wireless remote controller, while the backup button on the receiver is pressed.
- •If the backup button on the receiver is pressed during a test run, it will end the test run.
- •If you cannot operate the unit properly during a test run, please check by consulting with inspection guides on the wiring diagram of outdoor units.

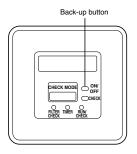

# 6 Setting of wireless remote controller and receiver

#### (A) Methods of avoiding the malfunction due to the mixed communication

Do both procedures ① and ②

This setting is to avoid the mixed communication with other household electric appliances or the mixed communication when two receivers are located closely.

#### ①Setting change of the wireless remote controller


Pressing ACL and AIRFLOW button at the same time or inserting the batteries with pressing AIRFLOW button will customize the signal.

Note \*When the batteries are removed, the setting will return to the default setting. Make sure to reset it when the batteries are replaced

2 Setting the PCB of the receiver

Turn SW1-1 off.

### † ●Wireless remote controller

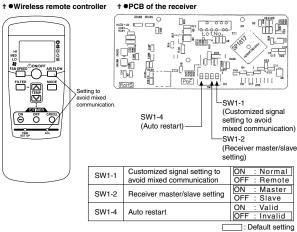


#### (B) Control plural indoor units with one remote controller

Up to 16 indoor units can be connected

- ①Connect the XY terminal with 2-core wire As for the size, refer to the following note.
- ②For Packaged air conditioner series, set the indoor unit address with SW2 on the indoor unit PCB from [0] to [F] so as not to duplicate


Restrictions on the thickness and length of wire (Maximun total extension 600m.) Within 100m x 0.3 mm<sup>2</sup>
Within 200m x 0.5 mm<sup>2</sup>
Within 300m x 0.75mm<sup>2</sup>
Within 400m x 1.25mm<sup>2</sup>
Within 600m x 2.0 mm<sup>2</sup> Standard

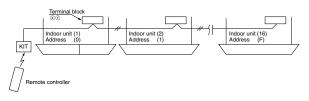

③For VRF series, set the indoor unit address with SW1, SW2 and SW5-2 on the indoor unit PCB from [000] to [127] so as not to duplicate

#### (C) Master/Slave setting when using plural remote controller

Up to two receivers can be installed in one indoor unit group

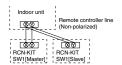

Switch	Setting	Function
SW1-2	ON	Master
3W 1-2	OFF	Slave

#### (D) Change setting of auto mode operation

Auto mode operation is prohibited to be selected for KX models (except for KXR

Therefore be sure to change setting of remote controller to disable the auto mode operation for these models according to the following procedure.

While pressing the MODE button, press the ACL switch, or while pressing the

MODE button, insert the batteries to the remote controller. Then the auto mode Attention

When the batteries are removed, it is returned to initial setting (Auto mode

Accordingly when replacing the batteries, be sure to perform the above operation

#### (E) Change setting of fan speed

While pressing the FAN SPEED button, press the ACL switch, or while pressing the FAN SPEED button, insert the batteries to the remote controller. Then the fan speed can be changed from 2-speed setting to 3-speed setting.

When changing fan speed setting of remote controller, be sure to perform the same fan speed setting as that of the indoor unit model to be used.

When the batteries are removed, it is returned to initial setting (Fan speed setting


Accordingly when replacing the batteries, be sure to perform the above operation once again

# 3.2 SIMPLE WIRED REMOTE CONTROLLER (RCH-E3)

#### Notes:

Following functions of Type-D indoor unit series are not able to be set with this simple wired remote control (RCH-E3).

- 1. Individual flap control system (for FDT/FDTC)
- 2. Flap control system (for FDEN)
- 3. 4-fan speed setting (P-Hi/Hi/Me/Lo) → 3-fan speed setting (Hi/Me/Lo) (for FDT/FDTC/FDUM/FDEN)

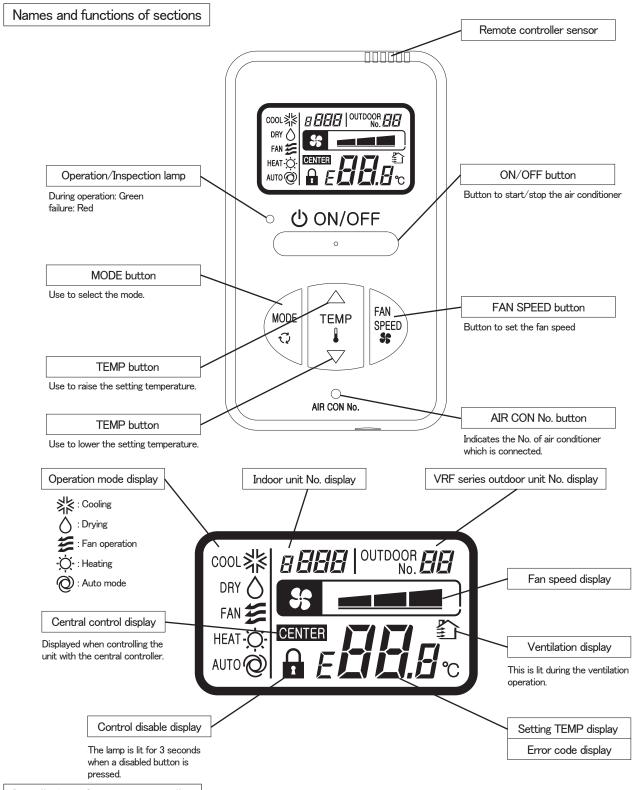


#### Installation of remote controller

- DO NOT install the remote controller at the following places in order to avoid malfunction.
- $\hbox{(1) Places exposed to direct sunlight}\\$
- (2) Places near heat devices
- (3) High humidity places
- (4) Hot surface or cold surface enough to generate condensation
- (5) Places exposed to oil mist or steam directly
- (6) Uneven surface


PJZ000Z272

# Remote control installation dimensions

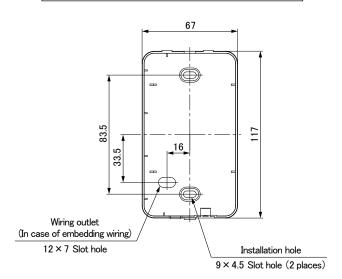


Note: Installation screw for remote controller M4 Screw (2 pieces)


# In case of exposing wiring

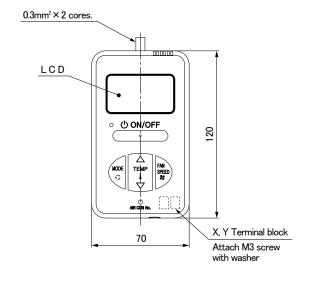


# In case of embedding wiring

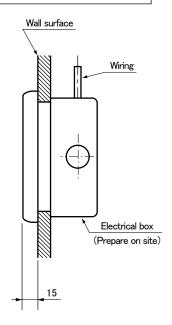


The remote controller wiring can be extracted from the upper center. After the thin part in the upper side of the remote controller upper case is scraped with a nipper or knife, remove burr with a file.

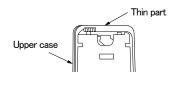

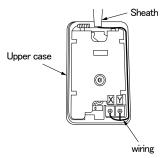

The peeling length of each wiring is as follows:

X wiring : 160mm Y wiring : 150mm

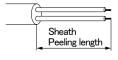

Unit:mm

# Wiring specifications

- (1) Wiring of remote controller should use  $0.3 \text{mm}^2 \times 2$  core wires or cables. (on–site configuration)
- (2) Maximum prolongation of remote controller wiring is 600m.

If the prolongation is over 100m, change to the size below.

But, the wiring in the remote controller case should be 0.3mm² (recommended) to 0.5mm².

Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire

connecting section. Be careful about contact failure.

Length	Wiring thickness
100 to 200m	0.5mm² × 2 cores
Under 300m	0.75mm <sup>2</sup> × 2 cores
Under 400m	1.25mm² × 2 cores
Under 600m	2.0mm <sup>2</sup> × 2 cores

Adapted to **RoHS** directive

# **Simple Remote Controller Installation Manual**

PJZ012D069

Read together with indoor unit's installation manual.

### **⚠WARNING**

Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.


Loose connection or hold will cause abnormal heat generation or fire.

Make sure the power supply is turned off when electric wiring work.
 Otherwise, electric shock, malfunction and improper running may occur.



# **⚠** CAUTION

- DO NOT install the remote controller at the following places in order to avoid malfunction.
  - (1) Places exposed to direct sunlight
- (4) Hot surface or cold surface enough to generate condensation
- (2) Places near heat devices
- (5) Places exposed to oil mist or steam directly
- (3) High humidity places
- (6) Uneven surface

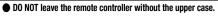

In case the upper cace needs to be detached, protect the remote controller with a packaging box or bag in order to keep it away from water and dust.



Accessories	Remote controller, wood screw ( $\phi$ 3.5 $ imes$ 16) 2 pieces
Prepare on site	Remote controller cord (2 cores) (Refer to [2. Installation and wiring of remote controller]) [In case of embedding cord] Electrical box, M4 screw (2 pieces)
	[In case of exposing cord] Cord clamp (if needed)

### 1. Installation procedure

#### In case of embedding cord


 Make certain to remove the screw on the bottom surface of the remote controller.




(2) Remove the upper case of the remote controller. Insert a flat-blade screwdriver to a concave portion of the bottom surface of the remote controller and slightly twist it, and the case is removed.




(3) Pre-bury the electrical box and remote controller cord.

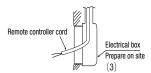

(4) Prepare two M4 screws (recommended length: 12 – 16mm), and install the lower case to the electrical box. Do not use a screw whose screw head is larger than the height of the wall around the screw hole.

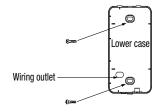

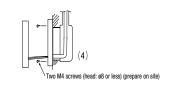


- (5) Connect the remote controller cord to the terminal block. Connect the terminals (X and Y) of the remote controller and the terminals (X and Y) of the indoor unit. (No polarity of X and Y)
- 6) Mount the upper case for restoring to its former state so as not to crimp the remote controller cord, and secure with the removed screw.

#### In case of exposing cord

 Make certain to remove a screw on the bottom surface of the remote controller.



(2) Remove the upper case of the remote controller. Insert a flat-blade screwdriver to a concave portion of the bottom surface of the remote control and slightly twist it, and the case is removed.

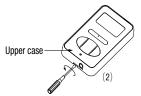


(3) The remote controller cord can be extracted from the upper center.

After the thin part in the upper side of the remote controller upper case is scraped with a nipper or knife, remove burr with a file.



(4) The lower case of the remote controller is mounted to a flat wall with two accessory wood screws.

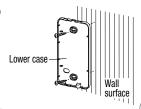

(5) Connect the remote controller cord to the terminal block. Connect the terminals (X and Y) of the remote controller and the terminals (X and Y) of the indoor unit. (No polarity of X and Y)

The wiring route is as shown in the right.



The wiring in the remote controller case should be 0.3  $\mathrm{mm}^2$  (recommended) to 0.5  $\mathrm{mm}^2$  at maximum.

Further, peel off the sheath.

The peeling length of each wiring is as follows:

X wiring : 160mm Y wiring : 150mm



- (6) Mount the upper case for restoring to its former state so as not to crimp the remote controller cord, and secure with the removed screw.
- (7) In the case of exposing installation, secure the remote controller cord to the wall surface with a cord clamp so as not to loosen the remote controller cord.

# 2. Installation and wiring of remote controller

- (1) Wiring of remote controller should use  $0.3 \text{mm}^2 \times 2$  core wires or cables. (on-site configuration)
- (2) Maximum prolongation of remote controller wiring is 600 m.


If the prolongation is over 100m, change to the size below.

But, the wiring in the remote controller case should be 0.3mm<sup>2</sup> (recommended) to 0.5mm<sup>2</sup>. Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire

connecting section. Be careful about contact failure.

#### 3. Master/ slave setting when more than one remote controller are used

(1) Up to two remote controllers can be connected to one unit (or one group) of indoor unit.

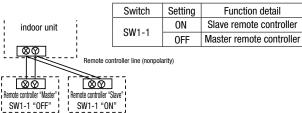

(2) Set the switch SW1-1 of the slave remote controller is "Slave" (ON). The factory default is set as "Master" (OFF). (Note) • The remote controller thermistor enabled setting can be set only to the master remote controller.

· Install the master remote controller at the position to detect room temperature.

The air conditioner operation follows the last operation of the remote controller in case of the master / slave setting.




#### 4. The indication when power source is supplied

 At the time of turning the power source on, after the light is on for the first 2 seconds, the display becomes as shown below.

The number displayed on the upper side of LCD in the remote control is the software number,

and this is not an error code.

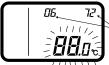

#### Software number

(The number in the left is one example. Another number may be shown.)

- (2) Then, "88.0 °C" blinks on the remote controller until the communication between the remote controller and the indoor unit is established.
- (3) In the case of connecting one remote controller with one unit (or one group) of indoor unit, make certain to set the master remote controller (factory default).

  If the slave remote control is set, a communication cannot be established.
- (4) If a state where the communication between the remote controller and the indoor unit cannot be established continues about for 30 minutes, "E" is displayed. Confirm the wiring of the indoor unit and the outdoor unit and master/slave setting of the remote controller.

# of E


### 5. Confirmation method for return air temperature

Return air temperature can be confirmed by the remote controller operation.

(1) Press AIR CON NO. button for over 5 seconds.

"88" blinks on the temperature setting indicator.

("88" blinks for approximately 2 seconds while data is read.)

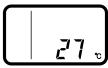

Then, the return air temperature is displayed.

(Example) return air temperature: "27 °C" (blinking)

(Note) For the return air temperature, in the normal case, the return air temperature of the indoor unit is displayed; however, in the case that the remote control thermistor is effective, detected temperature by the remote controller thermistor is displayed.

(2) Press ON/OFF button. End.

[In the case that the remote thermistor is ineffective and plural indoor units are connected to one remote controller ]

(1) Press AIR CON NO. button for over 5 seconds. indoor unit No. indicator: "U 000" (blinking) (Among the connected indoor units, the lowest

number is displayed.)

Press TEMP△ or TEMP▽ button.

Select the indoor unit No.



(3) Press C MODE button.

Dectder the indoor unit No.

(Example) indoor unit No. indicator: "U 000"

"88" blinks on the temperature setting indicator. (blinking for approximately 2 to 10 seconds while data is read) Then, the return air temperature is displayed. When AIR CON NO. is pressed, return to the indoor unit selection display (example, "U 000").

(4) Press <u>() ON/OFF</u> button. End.


### 6. Function setting

Each function of the remote controller and the indoor unit is automatically set to the initial setting, which is the standard use, on the occasion of connecting the remote controller with the indoor unit. In the case of the standard use, the setting change is unnecessary. However, if you whould like to change the initial setting "O", change the setting for only the item of the function number. Record the setting contents and stored them.

#### (1) Function setting item by switch on PCB

Switch No.	Setting	Setting detail	Initial setting
SW1-1	ON	Slave remote controller	
3W1-1	0FF	Master remote controller	0
SW1-2	ON	Remote controller thermistor enabled	
3W1-2	0FF	Remote controller thermistor disabled	0
SW1-3	ON	"MODE" button prohibited	
SW1-3	0FF	"MODE" button enabled	0
SW1-4 ON		"ON/OFF" button prohibited	
3W1-4	0FF	"ON/OFF" button enabled	0

Switch No.	Setting	Setting detail	Initial setting
SW1-5	ON	"TEMP" button prohibited	
3W1-3	0FF	"TEMP" button enabled	0
SW1-6	ON	"FAN SPEED" button prohibited	፠ Note 1
3W1-0	0FF	"FAN SPEED" button enabled	፠ Note 1
SW1-7	ON	Auto restart function enabled	
SW1-7	0FF	Auto restart function disabled	0
SW1-8, 9, 0	ON	Not used	
SW1-0, 9, U	0FF	Not used	

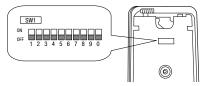

- As for the slave remote controller, function setting is impossible other than SW1-1.
- In the indoor unit with only one fan speed, "FAN SPEED" button cannot be enabled.

#### (2) Function setting item by button operation

Classification	Function No.	Function	Setting No.	Setting	Initial setting	
			01	Fan speed: three steps	፠ Note 1	The fan speed is three steps, * • • • • • • • • • • • • • • • • • •
01 Indoor unit fan speed	Indoor unit fan sneed	02	Fan speed: two steps (Hi-Lo)	※ Note 1	The fan speed is two steps, \$ ■■■ - \$ ■.	
	03	Fan speed: two steps (Hi-Me)		The fan speed is two steps, ** • • • • • • • • • • • • • • • • • •		
			04	Fan: one step	※ Note 1	The fan speed is fixed to one step.
			01	Remote controller thermistor: no offset	0	
			02	Remote controller thermistor: +3.0 °C		At the time of cooling, in the case of remote controller thermistor enabled, offset temperature at +3.0°C.
		Remote controller	03	Remote controller thermistor: +2.0 °C		At the time of cooling, in the case of remote controller thermistor enabled, offset temperature at +2.0°C.
	03	thermistor at the time	04	Remote controller thermistor: +1.0 °C		At the time of cooling, in the case of remote controller thermistor enabled, offset temperature at +1.0°C.
		of cooling	05	Remote controller thermistor: -1.0 °C		At the time of cooling, in the case of remote controller thermistor enabled, offset temperature at -1.0°C.
			06	Remote controller thermistor: -2.0 °C		At the time of cooling, in the case of remote controller thermistor enabled, offset temperature at -2.0°C.
Remote			07	Remote controller thermistor: -3.0 °C		At the time of cooling, in the case of remote controller thermistor enabled, offsett temperature at -3.0°C.
controller			01	Remote controller thermistor: no offset	0	
function			02	Remote controller thermistor: +3.0 °C		At the time of heating, in the case of remote controller thermistor enabled, offset temperature at +3.0°C.
		Remote controller	03	Remote controller thermistor: +2.0 °C		At the time of heating, in the case of remote controller thermistor enabled, offset temperature at +2.0°C.
	04	thermistor at the time	04	Remote controller thermistor: +1.0 °C		At the time of heating, in the case of remote controller thermistor enabled, offset temperature at +1.0°C.
		of heating	05	Remote controller thermistor: -1.0 °C		At the time of heating, in the case of remote controller thermistor enabled, offset temperature at -1.0°C.
			06	Remote controller thermistor: -2.0 °C		At the time of heating, in the case of remote controller thermistor enabled, offset temperature at -2.0°C.
			07	Remote controller thermistor: -3.0 °C		At the time of heating, in the case of remote controller thermistor enabled, offset temperature at -3.0°C.
			01	No ventilator connection	0	
	05	Ventilation setting	02	Ventilator links air-conditioner		In case of Single split series, by connecting ventilation device to CNT of the indoor printed circuit board (in case of VRF serie: connecting it to CND of the indoor printed circuit board), the operation of ventilation device is linked with the operation of indoor unit.
	06 "Auto" operation	"Auto" operation	01	"Auto" operation enabled	፠ Note 1	
00	00	setting	02	"Auto" operation disabled	፠ Note 1	"Auto" operation disabled
07 08	07	Operation permission/ prohibition	01	Disabled	0	
	07		02	Enabled		Operation permission/prohibition controller is enabled.
	00	External input	01	Level input	0	
	00		02	Pulse input		
	09 Fan speed setting	Fan speed setting	01	Standard	Note2	
			02	High speed 1	Note2	
		03	High speed 2	Note2		
			01	No remaining operation	0	After cooling stopped, no fan remaining operation
	10	Fan remaining operation at the time	02	0.5 hours		After cooling stopped, fan remaining operation for 0.5 hours
	10	of cooling	03	1 hour		After cooling stopped, fan remaining operation for 1 hour
		or cooming	04	6 hours		After cooling stopped, fan remaining operation for 6 hours
			01	No remaining operation	0	After heating stopped or after heating thermostat OFF, no fan remaining operation
	4.	Fan remaining	02	0.5 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 0.5 hours
	11	operation at the time of heating	03	2 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 2 hours
Indoor unit		of ficating	04	6 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 6 hours
function			01	No offset	0	
TUTICUOTI	40	Setting temperature	02	Setting temperature offset + 3.0 °C		The setting temperature at the time of heating is offset by +3.0 °C.
	12	offset at the time of heating	03	Setting temperature offset + 2.0 °C		The setting temperature at the time of heating is offset by +2.0 °C.
		licating	04	Setting temperature offset + 1.0 °C		The setting temperature at the time of heating is offset by +1.0 °C.
			01	Low fan speed	፠ Note 1	At the time of heating thermostat OFF, operate with low fan speed.
			02	Setting fan speed		At the time of heating thermostat OFF, operate with the setting fan speed.
13	Heating fan controller	03	Intermittent operation	፠ Note 1	At the time of heatingr thermostat OFF, intermittently operate.	
		04	Fan off		At the time of heating thermostat OFF, a fan will be stopped.  When the remote controller thermistor is enabled, automatically set to "Fan off". Do not set at the time of the indoor unit thermistor	
			01	No offset	0	
			02	Return air temperature offset +2.0 °C	Ī -	Offset the return air temperature of the indoor unit by +2.0 °C.
			03	Return air temperature offset +1.5 °C		Offset the return air temperature of the indoor unit by +1.5 °C.
	14	Return air temperature	04	Return air temperature offset +1.0 °C		Offset the return air temperature of the indoor unit by +1.0 °C.
	1	offset	05	Return air temperature offset -1.0 °C		Offset the return air temperature of the indoor unit by -1.0 °C.
			06	Return air temperature offset -1.5 °C		Offset the return air temperature of the indoor unit by -1.5 °C.
			07	Return air temperature offset -2.0 °C		Offset the return air temperature of the indoor unit by -2.0 °C.

Note 1: The symbol " \* " in the initial setting varies depending upon the indoor unit and the outdoor unit to be connected, and this is automatically determined as follows:

automatically determined as follows.				
Swith No. Function No.	Function	Setting	Product model	
	"FAN SPEED"	"FAN SPEED" button prohibited	Product model whose indoor fan speed is only one step	
SW1-6	button	"FAN SPEED" button enabled	Product model whose indoor fan speed is two steps or three steps	
		Fan speed: three steps	Product model whose indoor unit fan speed is three steps	
Remote controller function 01	Indoor unit fan	Fan speed: two steps (Hi-Lo)	Product model whose indoor unit fan speed is two steps	
hemote controller function of	speed	Fan speed: two steps (Hi-Me)		
		Fan: one step	Product model whose indoor unit fan speed is only one step	
Remote controller function 06	"Auto" operation	"Auto" operation enabled	Product model where "Auto" mode is selectable	
nemote controller function of	setting	"Auto" operation disabled	Product model without "Auto" mode	
Indoor unit function 13	Heating fan	Low fan speed	Product model except FDUS	
illuoor ullit luliction 13	control	Intermittent operation	FDUS	

Note 2: Fan speed of "High speed" setting

Fan speed setting	Indoor unit fan speed setting		
ran speed selling	Sc a al al - Sc a al - Sc a al al - Sc a al al - Sc a al		\$ = <b>11</b> - \$ = <b>1</b>
Standard	Hi — Mid — Lo	Hi — Lo	Hi — Mid
High speed 1 · 2	UHi — Hi — Mid	UHi — Mid	UHi — Hi

Initial setting of some indoor unit is "High speed".


Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit.

But only master indoor unit is received the setting change of indoor unit function "07 Operation permission/prohibition" and "08 External input".

### 7. How to set functions by button operation

(1) Stop air-conditioning, and simultaneously press AIR CON NO. and T MODE buttons at the same time for over three seconds.

The function number "01" blinks in the upper right.

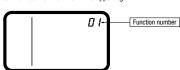


- (2) Press TEMP or TEMP button. Select the function number.
- (3) **Press MODE** button. Decide the function number.

#### (4) [In the case of selecting the remote controller function (01-06)]

① The current setting number of the selected function number blinks (Example)

Function number: "01" (lighting) Setting number: "01" (blinking)

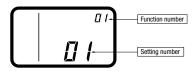


- ② Press TEMP△ or TEMP▽ button. Select the setting number.
- 3 Press MODE button.


The setting is completed.

Light is on for approximately 3 to 20 seconds while data of the decided function No. and setting No. is transmitted.

Function number: "01" (lighting for 3 to 20 seconds) Setting number: "01" (lighting for 3 to 20 seconds)

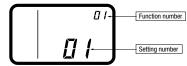

Then, the screen goes back to the function number blinking indication (1), if the setting is sequentially conducted, continue with the same procedures. If the setting is finished, proceed to (5).

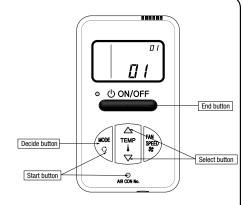


#### [In the case of selecting the indoor unit function (07-14)]

① "88" blinks on the temperature setting indicators.

(blinking for approximately 2 to 10 seconds while data is read)

After that, the current setting number of the selected function number blinks. (Example)

Function number: "07" (lighting) Setting number: "01" (blinking)

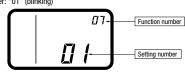


Proceed to ② .

#### [Note]

a. In the case of connecting one remote control to plural indoor units, the display will be as follows:

Indoor unit No. display: "U 000" (blinking)

(Display the lowest number among the connected indoor units.)

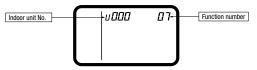

b. Press TEMP△ or TEMP▽ button.

Select the indoor unit No. to be set.

If "U ALL" is selected, the same setting can be set to all units.

c. Press 7 MODE button.

Decide the indoor unit No.

"88" blinks on the temperature setting indicators. (blinking for 2 to 10 seconds while data is read)

When AIR CON NO. button is pressed, go back to the indoor unit selection display (for example, "U 000" blinking).

② Press TEMP△ or TEMP▽ button.

Select the setting number


## $\begin{tabular}{ll} \hline \end{tabular} \begin{tabular}{ll} \textbf{ Press} \hline \end{tabular} \begin{tabular}{ll} \textbf{ MODE} \\ \hline \end{tabular} \begin{tabular}{ll} \textbf{ button.} \\ \hline \end{tabular}$

The setting is completed.

Light is on for approximately 3 to 20 seconds while data of the decided function No. and setting No. is transmitted.

(Example)

Indoor unit No.: "U 000" (lighting for 3 to 20 seconds) Function number: "07" (lighting for 3 to 20 seconds) Setting number: "01" (lighting for 3 to 20 seconds)

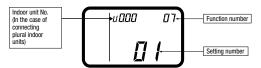

Then, the screen goes back to the function number blinking indication (1), if the setting is sequentially conducted, continue with the same procedures. If the setting is finished, proceed to (5).

- (5) Press ON/OFF button.
  - The setting is completed.
  - Even if ON/OFF button is pressed during setting, the setting is ended. However, any details where the setting has not been completed will be ineffective.
  - The setting contents are stored in the controller, and even if the power failure occur, this will not be lost.

[Confirmation method for current setting]

According to the operation, the "setting number" displayed first after selecting "function number" and pressing TMODE button is the currently set content. (However, in the case of selecting "U ALL" (all units), the setting number of the lowest number among the indoor units is displayed.)

# 3.3 FAN CONTROLLER KIT (U-FCRA)

PJD012D049

This manual instructs the way of installing the optional fan controller for high static pressure ducts. Install the controller in accordance with the following procedure.


### **⚠ WARNING**

- (1) Consult your dealer for the installation of the controller.
- (2) Only qualified electrician must install the controller.
- (3) Remove the control box before the installation.
- Before installing the product, take it out from the package and place it on the floor.
- (4) Be sure to turn off the power supply during installation.
- Unless the above precautions are observed, it could cause electrical shocks or fire.

#### 1. Applicable models and corresponding fan controller kit

Standard type	FDU200VD,250VD
Fan controller kit	U-FCRA (PJZ006A102A)

#### 2.Component parts list

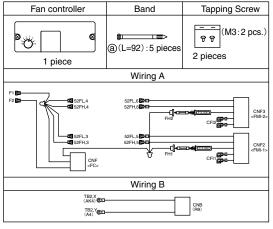

# <Pre><Pre>cautions for wiring>

- O Connect wires correctly as shown by the electric wiring diagram. Be sure to tighten set screws firmly to prevent them generating heat or causing other troubles after becoming loose.
- O Number of wires connected to the terminal block must be 2 wires or less. Never connect 3 more wires in any event.

#### 4. Installation procedure


- (1) Remove the lid from the control box.
- (2) Remove the wiring (fuse~CNF2,3) and wiring(TB\(\overline{\text{Y}}\) ~CNB).

⚠CAUTION Confirm that electricity has been dischaged before touching the capacitor terminals. There is risk of electric shocks.

(3) Install the fan controller.

Old

- (4) Referring to "3.Electric circuit diagram",connect wires as illustrated and fix with bands (a).
- (5) Reinstall the removed lid on the control box.

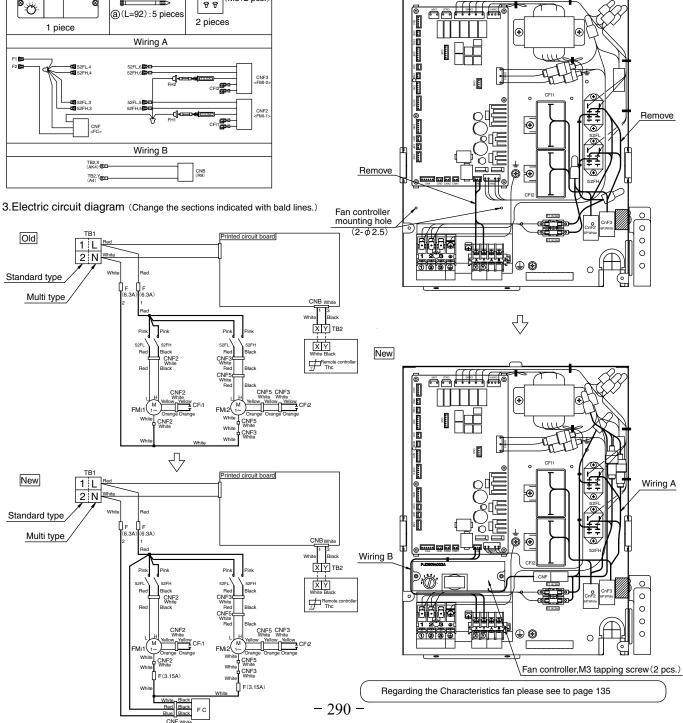

# 3.4 BASE HEATER KIT (CW-H-E)

PCZ012D007

Model Name: CW-H-E
Parts Number: 518325

### **⚠ WARNING**

- Follow the instruction and installation manual for outdoor unit when installing the heater.
- This heater must be installed by authorized personnel.
- Turn off the power supply when the kit is installed.

Failure to follow the above will result in serious accident like electrical shock or fire.

#### **AREAS TO BE APPLIED**

This kit is to be used in an area where the lowest temperature drops below zero.


⚠Caution: In case the heater is not applied on the unit which is installed in an area mentioned above, it may be regarded as installation failure and warranty may not be given.

#### **A** CAUTION

- Follow the law or regulation of the country where it is installed.
- Do not alter the heater.
- Lay down the heater so that the edge of the sheet metal does not damage the heater.
- Bending radius must be bigger than 25mm.
- Do not use the heater near flammable substances.
- Be sure to check the electrical insulation before use.
- Be sure to check the drain is not trapped by the heater.
- Do not leave refrigerant oil on the base.

# Components


- Heater : 1pc
  Bracket : 4pcs
  Tapping screw : 4pcs
  Plastic band with clip : 2pcs
- Plastic band : 5pcs

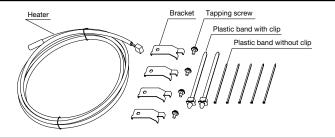

# Installation procedure


### Step 1

1. Remove the top panel of the outdoor unit (11 pcs of tapping screws).

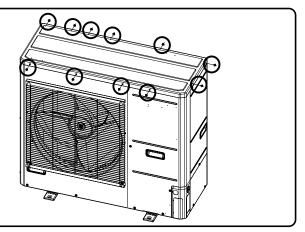

### Step 2

2. Remove the service panel (4 pcs of tapping screws).

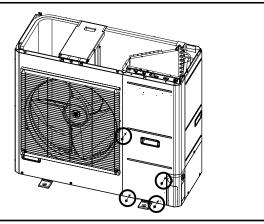


### Step 3

3. Remove the front panel

(11 pcs of tapping screws).

Pull the panel straightforward so that the panel doesn't touch the fan blade.

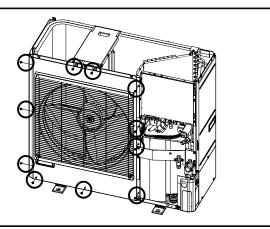


# Step 4

4. Remove the fan blade if necessary.

#### <Note>


Do not rotate the axis of fan motor when removing the fan blade.


It may cause malfunction of the fan motor.

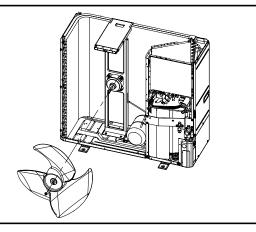

# Step 5


5. Lay down the drain pan heater on the base.

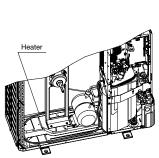


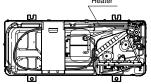



# Step 6

6. Put the heater underneath the heat exchanger and align the end of heater with the end plate of heat exchanger.

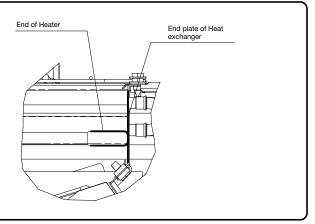

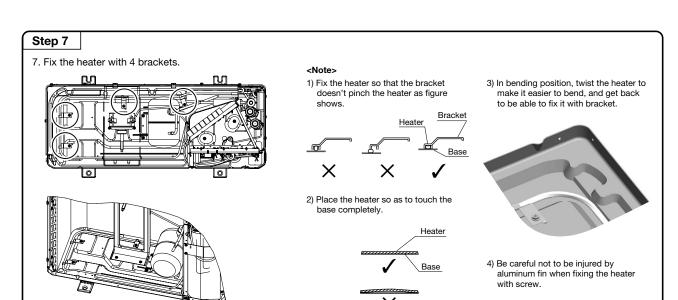

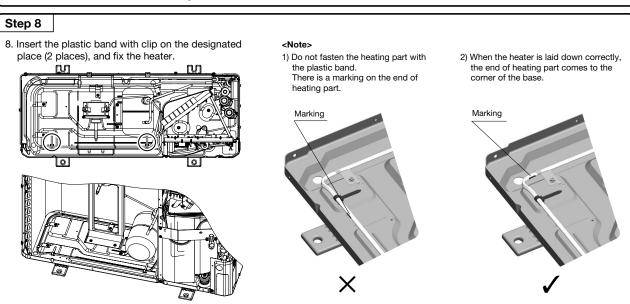

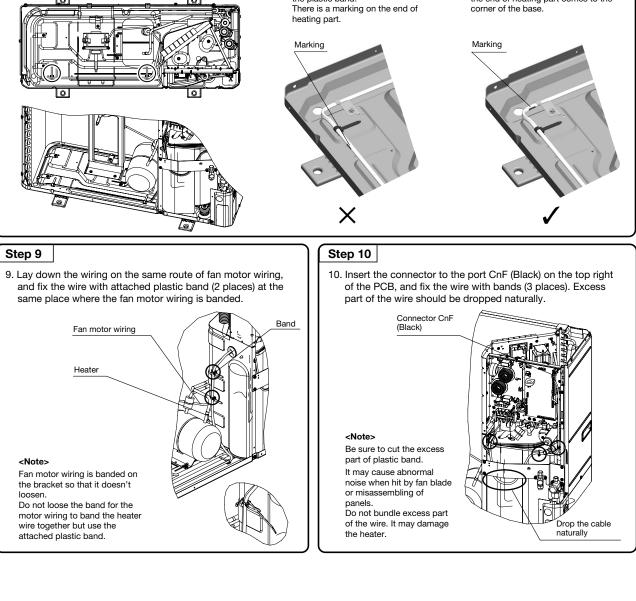


### Step 11

11. Reassemble the fan blade.

Take care to align the D-cut of motor shaft and the fan blade.  $\nabla$  mark on the center of the fan shows the position of D-cut.

#### <Note>

- 1. Tightening torque of the nut is 4.0-4.9 N·m.
- 2. Do not rotate the axis of fan motor when tightening the nut. It may cause malfunction of the fan motor.

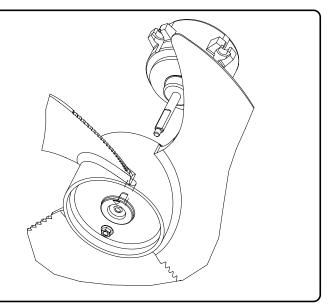


### Step 12

12. Reassemble the panels.


#### 1) Front panel

Use screw B for all places.

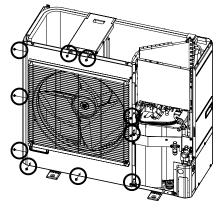



### 2) Service panel

Use screw B for all places.

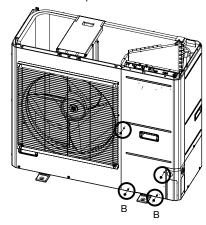

#### 3) Top panel

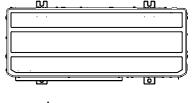

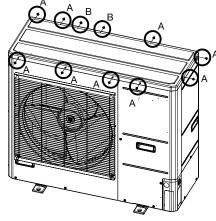

#### <Note>

- When reassembling the service panel, take care not to damage the front panel with the edge.
- There are two different length of screws.
   Be sure to use correct screw.
   Long screw A: used for Top panel other than fixing fan bracket.
   Short screw B: other place than A.



В



#### <Note>

- This heater should have bending radius of at least 25mm including non-heating part. Do not bundle the excess part of the wire. It may cause disconnection of the heater or insufficient capacity.
- Be sure to prevent the heater from touching any refrigerant piping.
   Especially, pay close attention not to make it touch with pipes which are close to the wiring route such as suction pipe, check valve and check joint.

# STANDARD INVERTER PACKAGED AIR-CONDITIONERS



# MITSUBISHI HEAVY INDUSTRIES, LTD.

Air-Conditioning & Refrigeration Systems Headquarters 16-5, 2-chome, Kounan, Minato-ku, Tokyo, 108-8215, Japan

Fax: (03) 6716-5926